

36" Recycler® Kit

for Mid-Size Mowers

MODEL NO. 30142

INSTALLATION INSTRUCTIONS

Loose Parts

Note: Use the chart below to identify parts for assembly.

DESCRIPTION	QTY.	USE
Baffle	1	
Bolt 5/16–18 x 5/8" (16 mm)	1	Install Recycler® baffle
Flange nut 5/16–18	6	
Blocker plate	1	
Bolt 3/8-16 x 1" (25 mm)	1	
Flange nut 3/8-16	1	Install blocker plate
Bolt 1/4-20 x 3/4" (19 mm)	2	
Flange nut 1/4-20	2	
Cover plate	1	
Bolt 3/8–16 x 3/4" (19 mm)	4	Cover discharge opening
Flange nut 3/8-16	4	
Kicker	2	
Bolt 5/16–18 x 5/8" (16 mm)	4	Install kickers
Flange nut 5/16-18	4	
Recycler® blade	2	Replace standard blades on mower

Preparing the Mower

- 1. Remove belt cover from top of mower.
- 2. Thoroughly clean underside of the mower. All debris must be removed to ensure that baffles and kickers will fit properly against the cutting chamber.
- **3.** Tilt the mower up and support with jack stands to ease installation of kit.
- **4.** Flip up discharge chute and remove the discharge baffle near discharge opening (Fig. 1).

Note: Replace hardware in top of mower when baffle is removed for safety and to save for use when using mower to side discharge.

DANGER

POTENTIAL HAZARD


• Open holes in the mower expose you and others to thrown debris.

WHAT CAN HAPPEN

• Debris thrown out of holes in the mower can cause injury.

HOW TO AVOID THE HAZARD

- Never operate the mower without hardware mounted in all holes in the mower.
- Install hardware in all open holes when the Recycler® kit is removed.

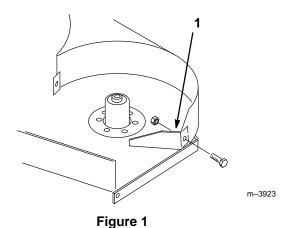

1. Discharge baffle

Installing the Baffle

1. Remove the (5) 5/16–18 x 5/8" (16 mm) carriage bolt and 3/8" locknuts from the holes where the baffles will be installed (Fig. 2).

Note: Save hardware for use when using mower to side discharge.

2. Place the baffle inside cutting chamber with studs through the top. Secure studs to top of mower with (5) 5/16-18 flange nuts and to the back baffle with a 5/16-18 x 5/8" (16 mm) bolt and 5/16-18 flange nut (Fig. 2).


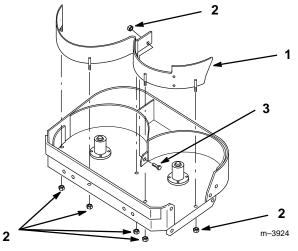


Figure 2

- 1. Baffle
- 2. flange nut 5/16-18
- 3. Bolt 5/16–18 x 5/8" (16 mm)
- 3. Place the blocker plate inside cutting chamber between the front and baffle. Secure blocker to the front of mower with 3/8–16 x 1" bolt and a 3/8–16 flange nut, replacing existing caster mounting hardware, and to the front of the baffle with (2) 1/4–20 x 5/8" (16 mm) bolt and (2) 1/4–20 flange nuts (Fig. 2).

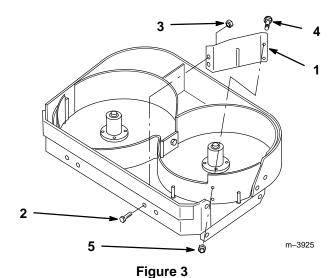

- 1. Blocker plate
- 2. Bolt 3/8-16 x 5/8" (16 mm)
- 3. Flange nut 3/8-16
- 4. Bolt 1/4-20 x 5/8" (16 mm)
- 5. flange nut 1/4-20

4. Place (4) 3/8-16 x 3/4" (19 mm) bolts, through from outside of discharge cover plate. Secure bolts with (4) 3/8-16 flange nuts (Fig. 4).

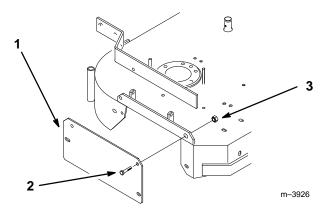


Figure 4

3. Flange nut 3/8-16

- Discharge cover plate
- 2. Bolt 3/8-16 x 3/4" (19 mm)
- 5. Tighten all mounting hardware securely.

Installing the Kickers

- 1. Measure from the spindle center lines, and locate kickers as shown (Fig. 5). Right spindles 7/16" (11 mm) off to the right and left spindle 1-7/8" (48 mm) off to the left (Fig. 5).
- **2.** Holding kickers tight against baffle, mark, center punch and drill (2) 11/32" (9 mm) holes for each kicker (Fig. 5).


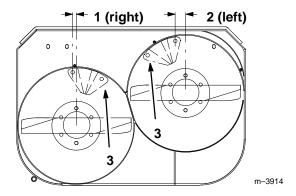


Figure 5

- 1. 7/16" (11 mm)
- 2. 1-7/8" (48 mm)
- 3. Mark, center punch and drill 11/32" (9 mm) holes

Place (2) kickers inside the mower over drilled holes. Secure each kicker with (2) 5/16–18 x 5/8" (16 mm) bolts, through from the bottom of the mower, and (2) 5/16–18 flange nuts (Fig. 6).

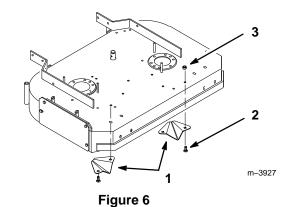

- 1. Kicker
- 2. Bolt 5/16–18 x 5/8" (16 mm)
- 3. Flange nut 5/16-16
- **3.** Tighten all mounting hardware securely.

Installing the Recycler® Blades

- 1. Remove the standard blades (Fig. 7). Refer to Operator's Manual.
- 2. Place the blade onto the bolt, over cone washer. Select proper number of spacer(s) for height-of-cut and slide bolt into spindle (Fig. 7).

IMPORTANT: The sail (curved part of the blade) must be pointing toward the inside of the mower to ensure proper cutting.

- **3.** Install remaining spacer(s) for proper height-of-cut and secure with thin washer and nut (Fig. 7).
- 4. Torque the blade bolt to 75–80 ft. lb. (101–108 N•m).
- **5.** Rotate the blades to ensure that there is at least 1/8" clearance between the blades and baffles.
- **6.** Remove jack stands and lower mower.

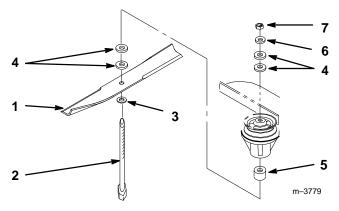


Figure 7

- 1. High-lift lade
- 2. Blade bolt
- 3. Cone washer
- 4. Spacer

- 5. Tube
- 6. Thin washer
- 7. Nut

Removing Baffles for Side Discharge Cutting

- 1. Thoroughly clean the mower.
- **2.** Tilt the mower up and support with jack stands to ease removal of kit.
- **3.** Remove the mounting hardware from the baffle, blocker plate, kickers and discharge cover plate.

Note: Save the hardware for use when installing the baffle.

A DANGER

POTENTIAL HAZARD

• Open holes in the mower expose you and others to thrown debris.

WHAT CAN HAPPEN

• Debris thrown out of holes in the mower can cause injury.

HOW TO AVOID THE HAZARD

- Never operate the mower without hardware mounted in all holes in the mower.
- Install hardware all open holes when the Recycler® is removed.
- 4. Install previously removed discharge baffle
- **5.** Install previously removed standard blades.
- **6.** Remove jack stands and lower mower.