



**Count on it.**

**Parts Catalog**

**76cm TurfMaster  
Walk-Behind Lawn Mower**

Model No. 22205TE—Serial No. 316000001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HP:** high pressure

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** low pressure

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard


**TAP:** self tapping

**TTH:** torx truss head

# Contents

Deck, Frame and Chute Assembly .....	4
Spindle and Blade Assembly .....	6
Side Discharge Chute Assembly .....	8
Grass Bag Assembly .....	10
Brake Assembly .....	12
Engine and Fuel Tank Assembly .....	14
Front Bumper and Wheel Assembly .....	16
Traction and Height-of-Cut Assembly .....	18
Handle Assembly .....	20
Brake Cable and Control Bar Assembly .....	22
Attachments and Accessories .....	24

# Deck, Frame and Chute Assembly

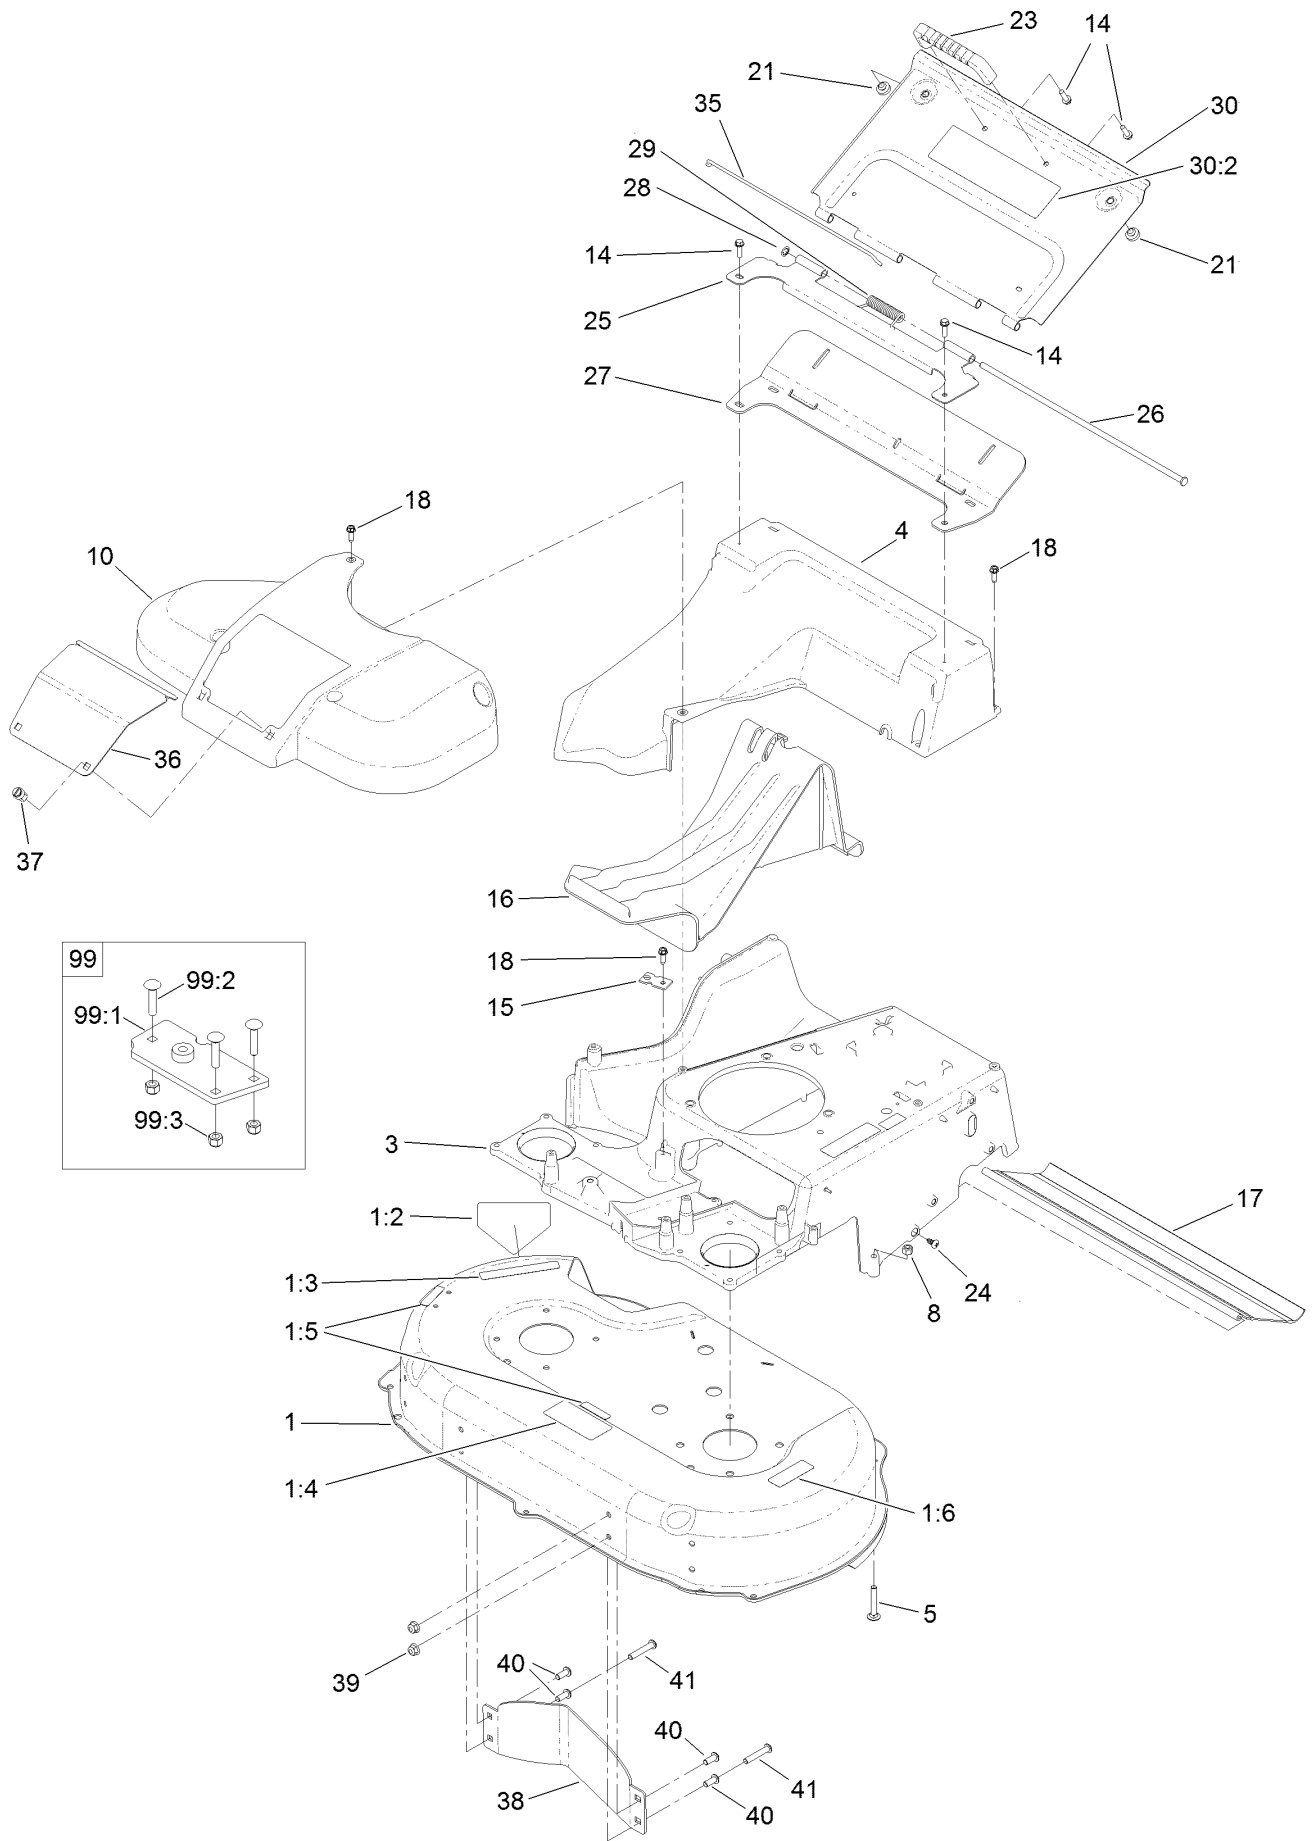


## Deck, Frame and Chute Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-4544	1	Deck-30 Inch	25	116-6351-03	1	Bracket-Hinge
1:2	112-8760	1	Decal-Danger	26	116-6933	1	Pin-Hinge
1:3	93-7009	1	Decal-Danger	27	116-6229	1	Seal-Door
1:4	116-8528	1	Decal	28	32151-72	1	Ring-Retaining
1:5	120-9570	2	Decal-Warning	29	116-7573	1	Spring-Torsion, Cover
1:6	121-1449	1	Decal-Warning, Block	30	116-8355	1	Rear Door ASM
3	127-6859-01	1	Frame	30:2	116-7583	1	Decal-Warning
4	120-3336	1	Chute	35	116-6966	1	Clip-Seal
5	127-6841	2	Screw-CARR	36	121-5793-03	1	Door-Access
8	3296-29	2	Nut-Lock, NI	37	121-5840	2	Fastener
10	121-5810	1	Cover-Belt	38	130-2352-01	1	Baffle-Control
14	46-8091	4	Screw-HWH	39	104-8300	4	Nut-Flange, NI
15	107-7497	1	Bracket-Cable, Traction	40	3274-55	2	Screw-HSBH
16	120-5225	1	Plug-Mulch	41	125-7977	2	Screw-HSBH
17	121-5841	1	Shield-Trailing	99	125-5072	1	Frame Plate Kit (Service) ●
18	49-2040	9	Screw-HWHTF	99:1	125-2542	1	Plate Frame ASM ●
21	1-513658	2	Bumper	99:2	3229-3	3	Screw-CARR ●
23	65-5100	1	Handle-Door	99:3	3296-42	3	Nut-Lock, NI ●
24	117-1092	2	Screw-PTH				

● Not illustrated


# Spindle and Blade Assembly

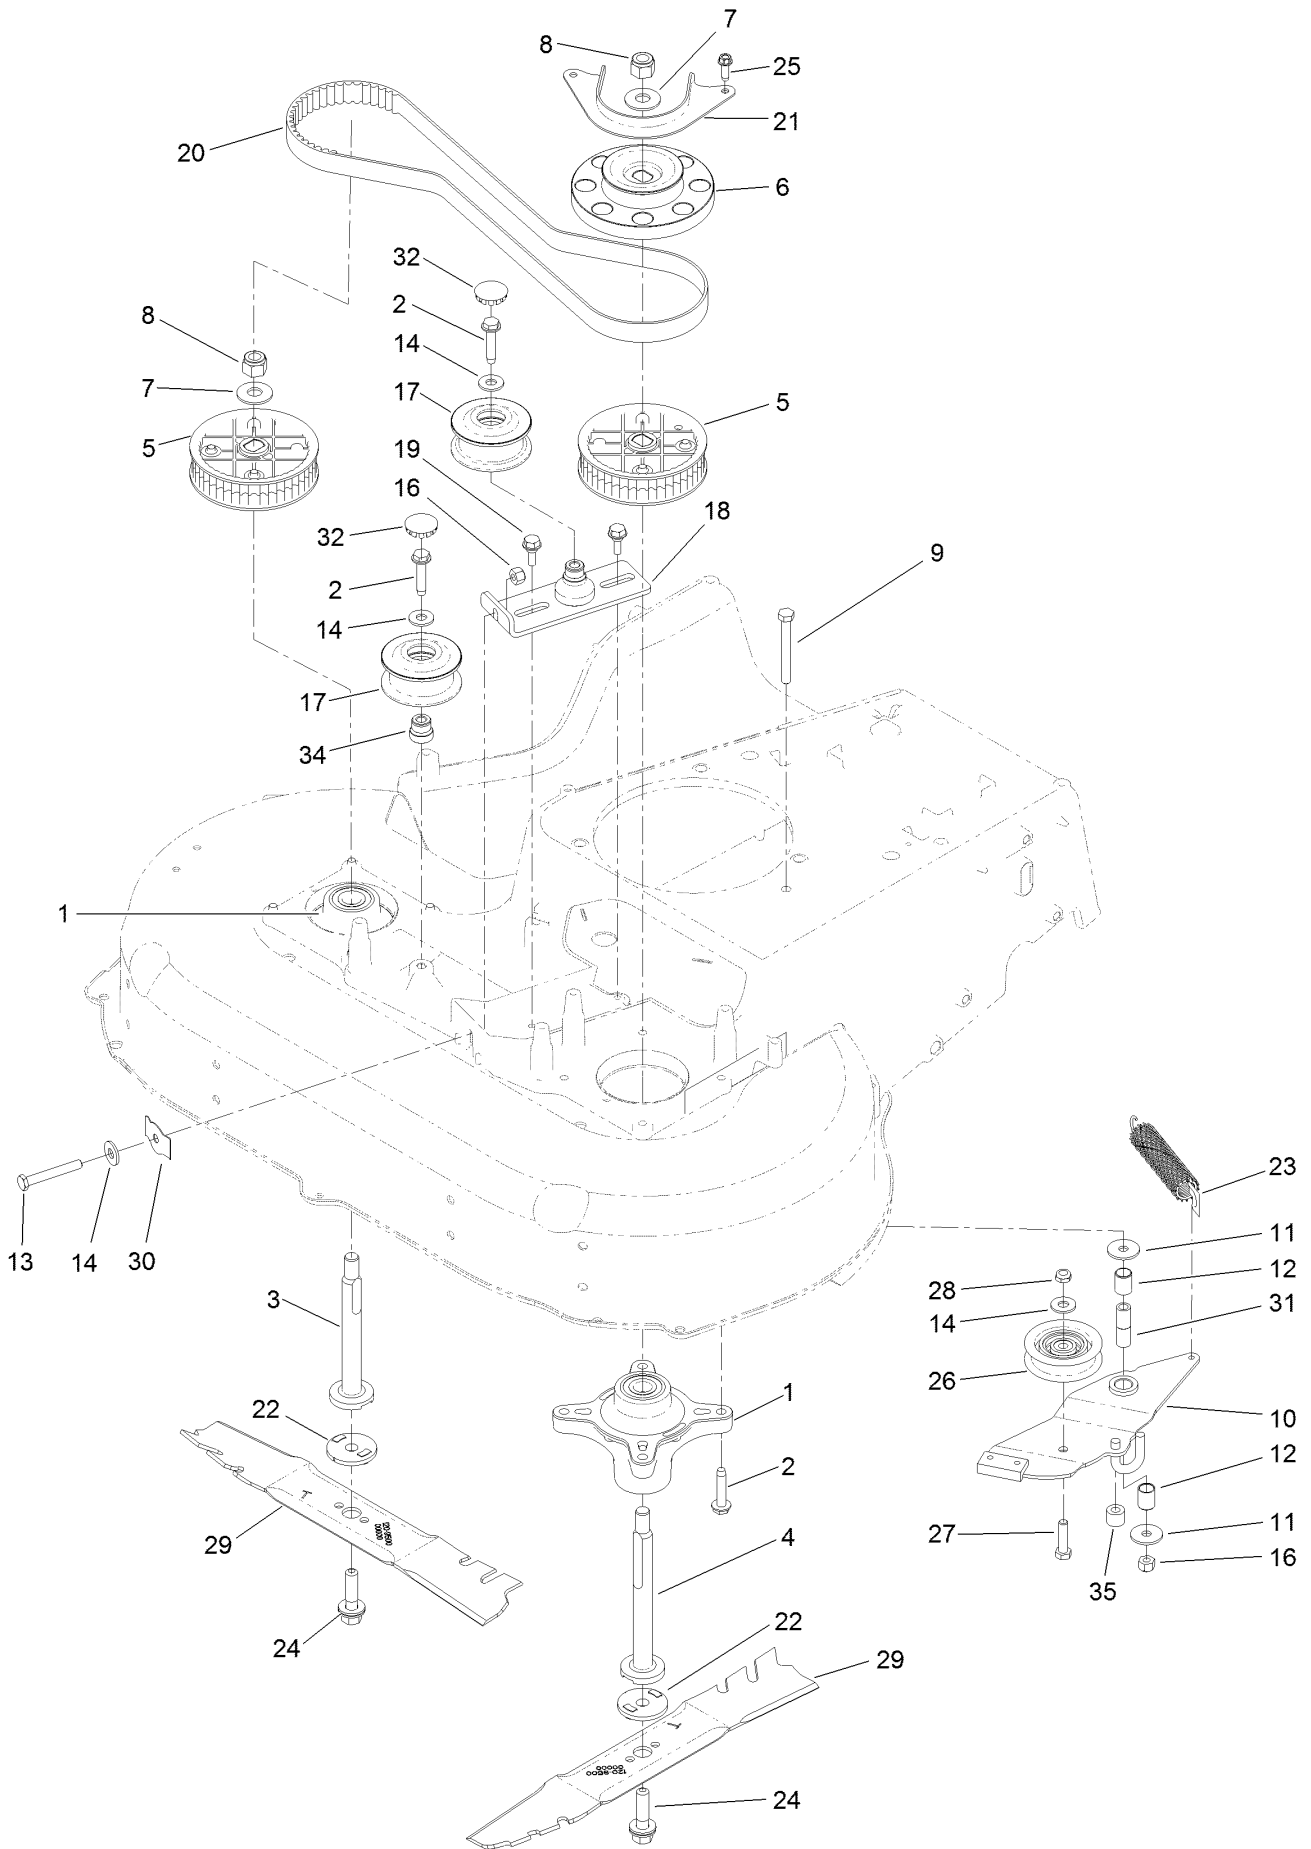

## Spindle and Blade Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-9107	2	Spindle	19	120-7024	2	Screw-Shoulder, HHF
2	32144-57	10	Screw	20	120-3335	1	Belt-Synchronous
3	120-5234	1	Shaft-Spindle	21	120-5245-03	1	Guide-Belt, Spindle
4	120-5235	1	Shaft-Spindle	22	120-5236	2	Adapter-Blade
5	121-9100	2	Sprocket	23	121-5808	1	Spring-Extension, Brake
6	130-6664	1	Pulley-Brake, Spindle	24	125-2466	2	Bolt-Blade
7	109-9505	2	Washer-Spring	25	49-2040	2	Screw-HWHTF
8	3296-19	2	Nut-Hex	26	120-7082	1	Pulley-Idler
9	322-13	1	Screw-HH	27	322-6	1	Screw-HH
10	133-2610	1	Brake Arm ASM	28	3296-47	1	Nut-Lock, NI
11	5-4460	2	Washer-Pivot	29	120-9500-03	2	Blade-Atomic, 15.4In
12	131-0819	2	Bushing-Sleeve	30	121-2336	1	Spring-Flat
13	9114524	1	Bolt-TAP, HH	31	131-0823	1	Spacer-Brake
14	3256-3	4	Washer-Flat	32	126-7151	2	Plug-Button
16	3296-29	2	Nut-Lock, NI	34	131-4504	1	Adapter-Bore
17	126-7892	2	Flat Idler Pulley ASM	35	133-1964	1	Hose-Coolant
18	126-6453	1	Bracket-Idler				

# Side Discharge Chute Assembly

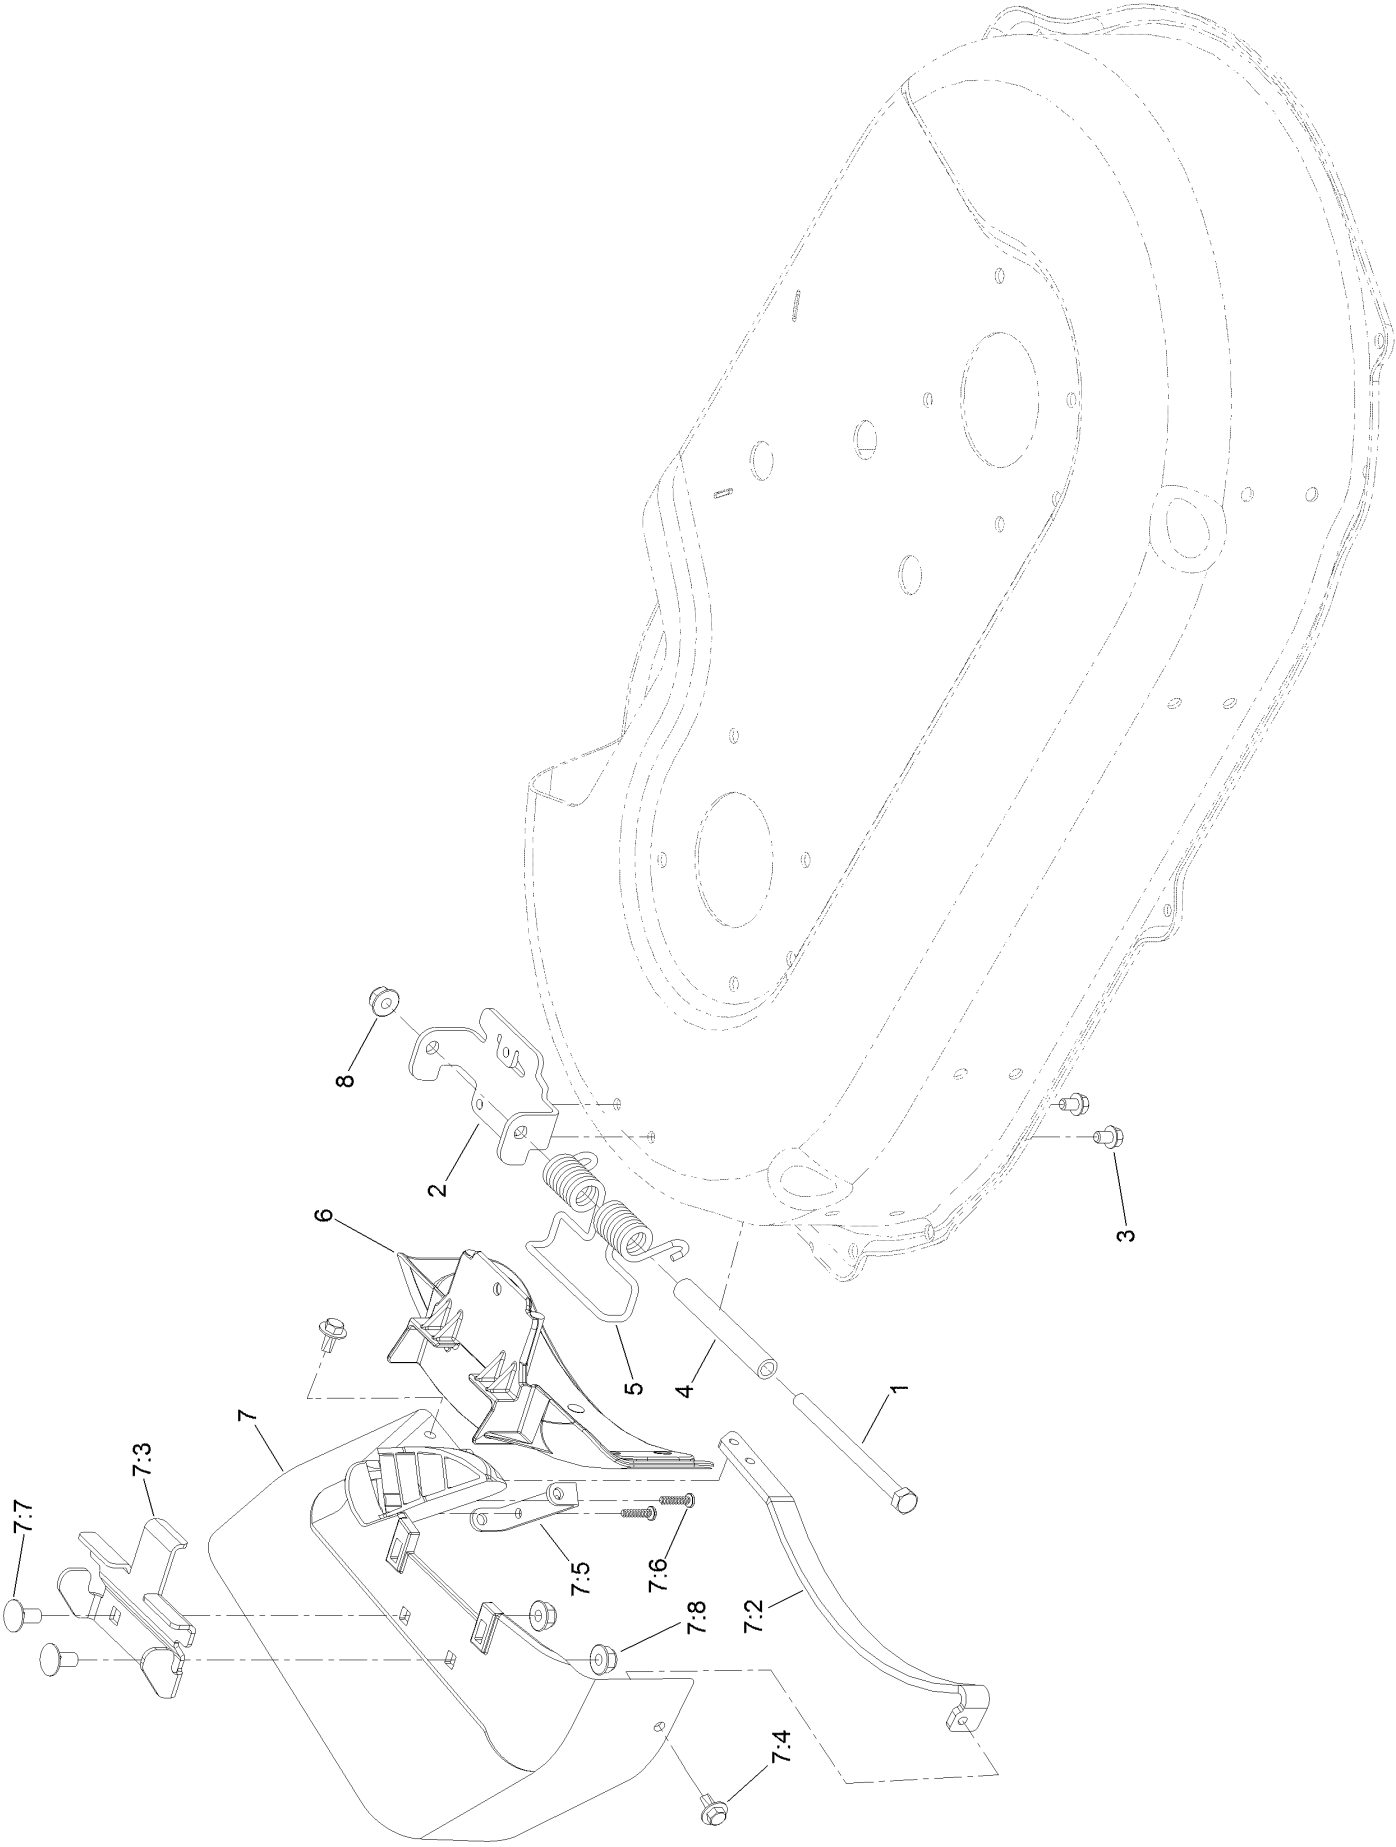




## Side Discharge Chute Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	322-38	1	Screw-HH	7:3	121-9196	1	Bracket-Chute
2	121-9195	1	Hinge	7:4	46-8560	2	Screw-HHFTF
3	99-8445	2	Screw-HWH	7:5	112-6416	1	Bracket-Cover
4	125-2478	1	Spacer	7:6	94-4496	2	Screw-PPH
5	121-9193	1	Spring-Torsion	7:7	3230-18	2	Screw-CARR
6	125-5093-01	1	Cover-Discharge	7:8	104-8300	2	Nut-Flange, NI
7	116-9754	1	Side Discharge Chute ASM	8	104-8300	1	Nut-Flange, NI
7:2	116-9752-03	1	Guard-Chute				


# Grass Bag Assembly

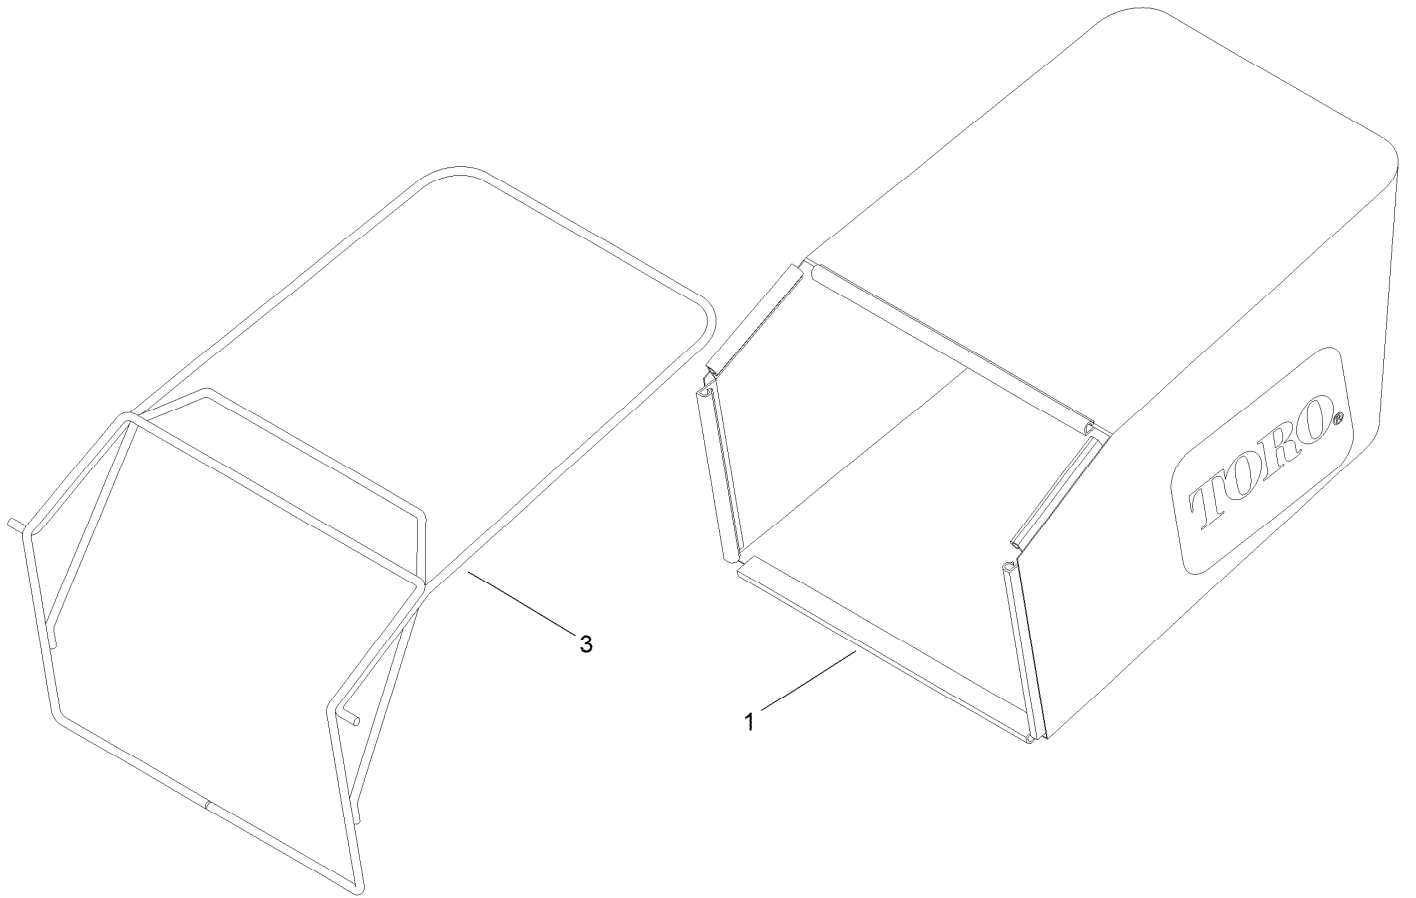

## Grass Bag Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-5775	1	Grass Bag ASM
3	116-5596-03	1	Frame-Bag


# Brake Assembly

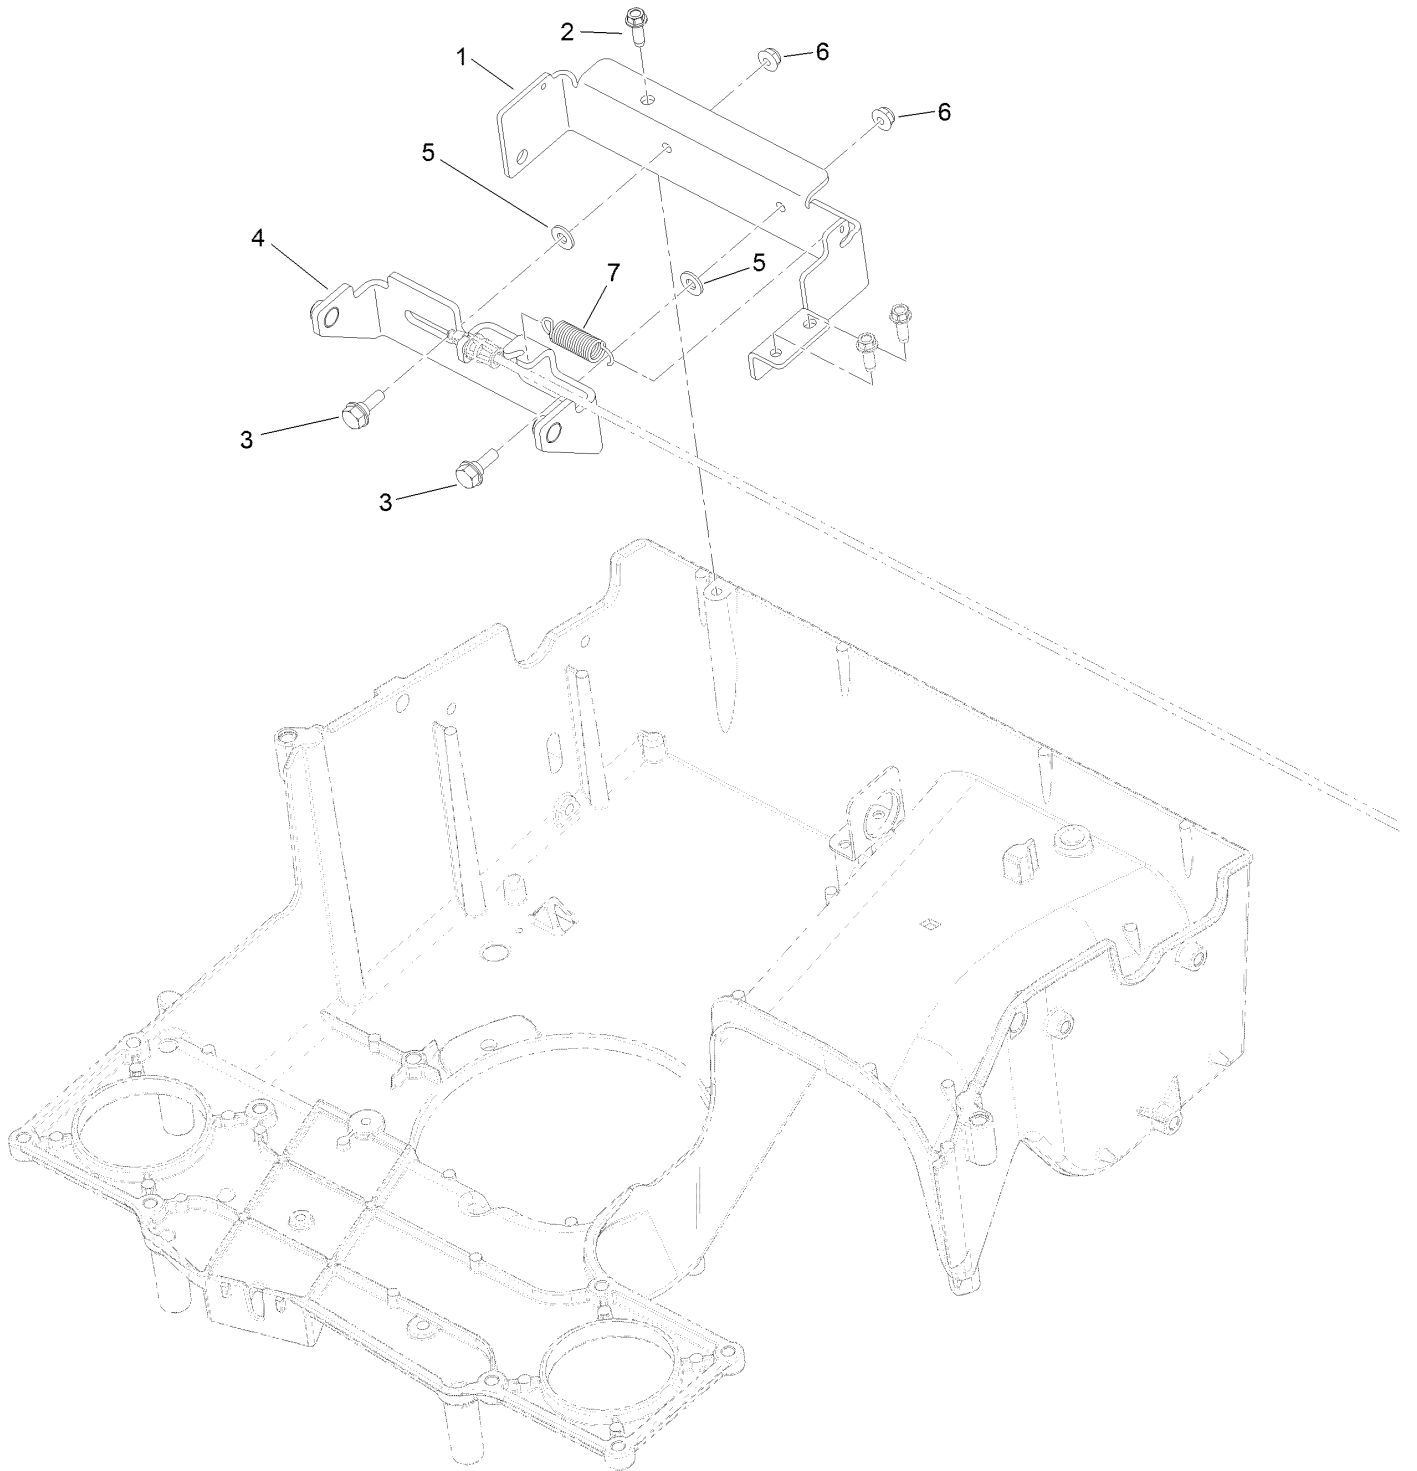

## Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-9655	1	Bracket	5	3256-22	2	Washer-Flat
2	49-2040	1	Screw-HWHTF	6	104-7201	2	Nut-Flange, NI
3	120-7024	2	Screw-Shoulder, HHF	7	80-4600	1	Spring-Extension
4	131-9656	1	Brake ASM				

# Engine and Fuel Tank Assembly

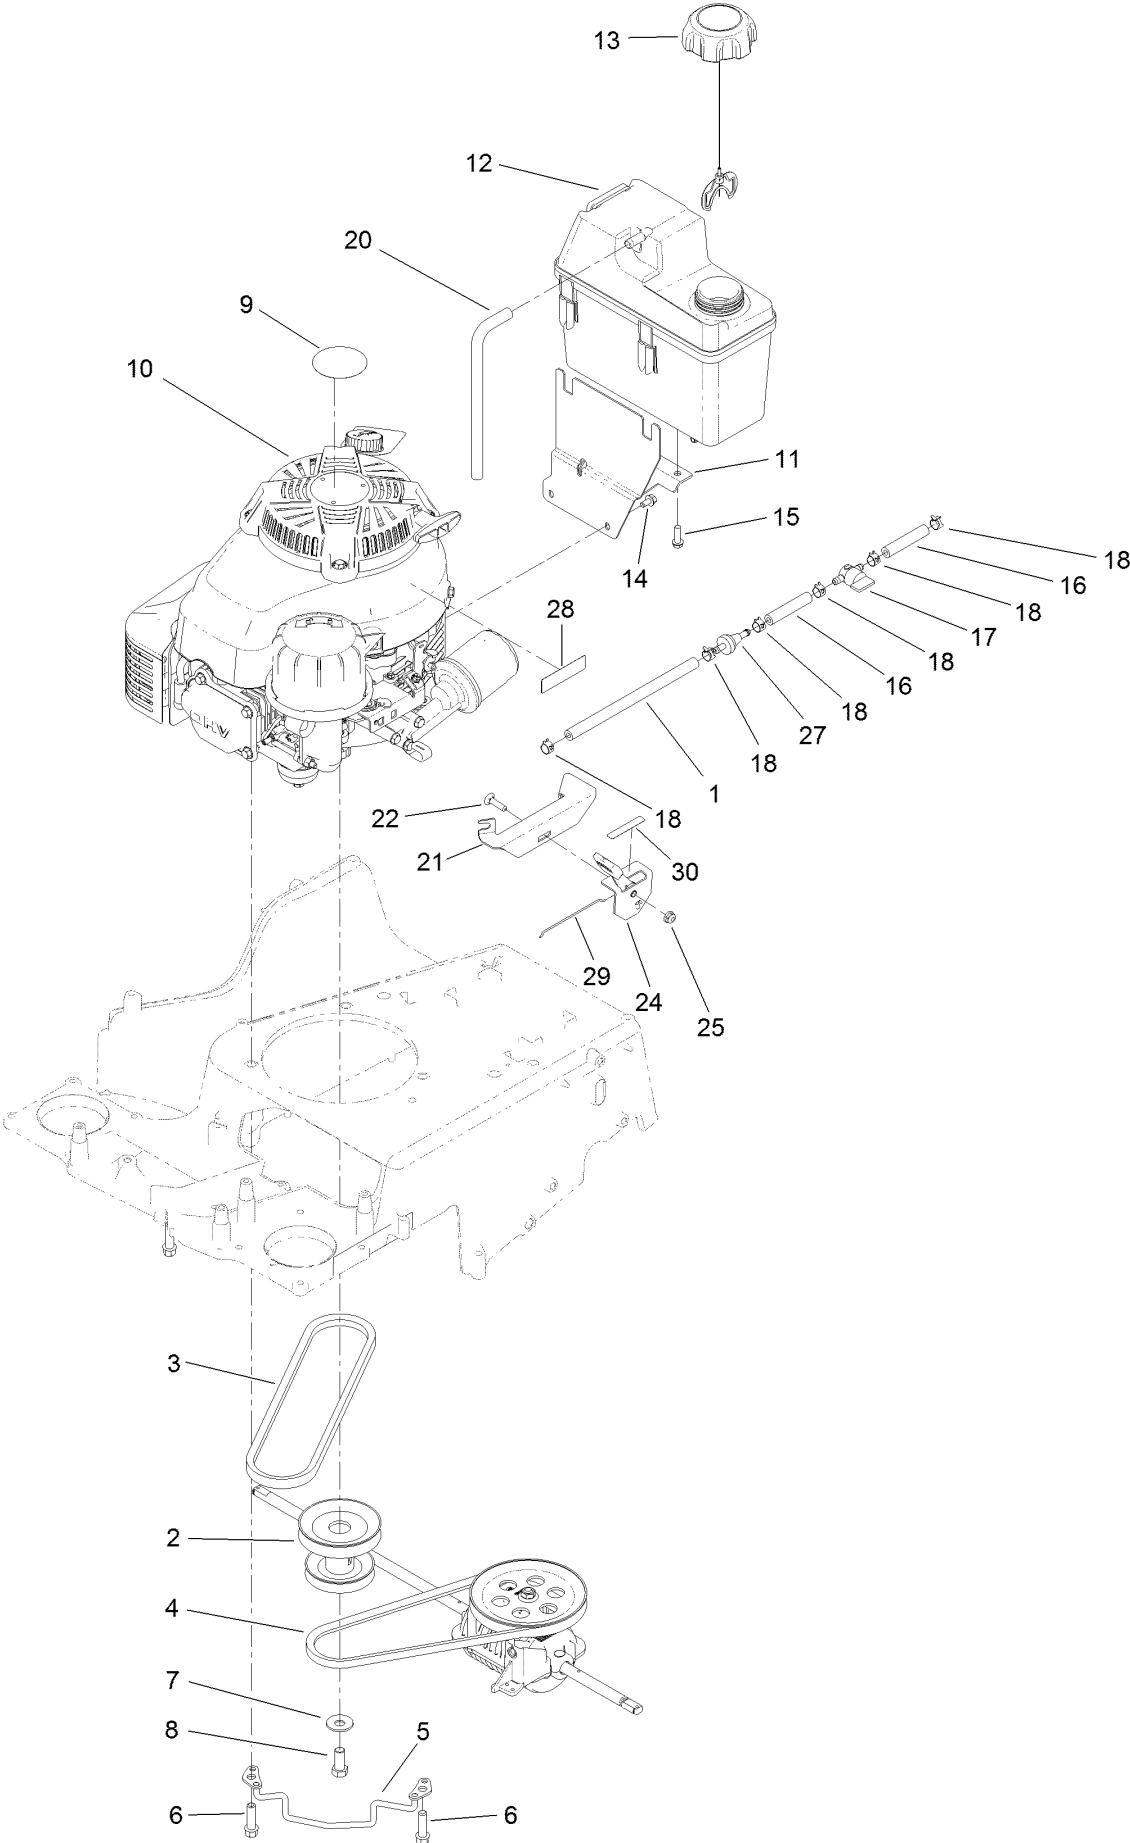

## Engine and Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-1892	1	Hose-Fuel	15	46-8091	2	Screw-HWH
2	116-7013	1	Pulley-Engine	16	109-0304	2	Hose-Fuel
3	121-5765	1	V-Belt	17	1-603770	1	Valve-Fuel
4	116-7116	1	Belt	18	2412-98	6	Clamp-Hose
5	120-7077	1	Guide-Belt	20	115-0962	1	Hose-Vent, Canister
6	95-1727	3	Screw-Taptite	21	130-6440-03	1	Bracket-Mount, Throttle
7	3290-465	1	Washer-Belleville	22	3229-30	1	Screw-CARR
8	3212-4	1	Screw-HH	24	130-9655	1	Control-Throttle
9	109-6528	1	Decal-Recoil	25	104-7201	1	Nut-Flange, NI
10		1	Engine-Fj180V Kaw BBC ●■	27	71-9280	1	Filter-Fuel
11	115-0954-03	1	Mount-Tank	28	116-9313	1	Decal-Warning, Engine
12	114-0280	1	Tank-Fuel	29	130-9654	1	Wire-Control
13	115-7788	1	Cap-Fuel	30	130-9656	1	Decal-Throttle, Choke
14	116-8929	3	Screw-HWH				

● Not serviced separately

■ Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)






## Front Bumper and Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	104-8300	11	Nut-Flange, NI	14	3274-55	5	Screw-HSBH
3	121-5781	4	Bushing-Front	15	3296-42	4	Nut-Lock, NI
4	321-7	4	Screw-HH	16	3230-23	6	Screw-CARR
5	104-8301	2	Nut-Flange, NI	17	94-2413	1	Nut-U
6	131-0826	1	Axle-Front	18	121-2337	1	Spring-Torsion
7	125-1080	2	Wheel	19	127-6864	1	Decal-HOC, Front
8	125-2488	1	Front Bumper ASM	21	125-2486	1	Spacer
8:2	121-5847	1	Decal	22	121-9187-03	1	Shield
8:3	116-7581	1	Decal-Warning	23	117-0871	1	Decal
9	121-9168-03	2	Brace	24	3256-22	2	Washer-Flat
10	131-9690	1	Mandrell-Spring	25	321-8	2	Screw-HH
11	94-5780	1	Screw-HWH	26	104-7201	2	Nut-Flange, NI
12	125-2483	1	Lock-Height, Adjustment	27	323-13	2	Screw-HH
13	120-9465	1	Spring-Torsion	28	74-1671	2	Spacer-Cover, Wheel


# Traction and Height-of-Cut Assembly

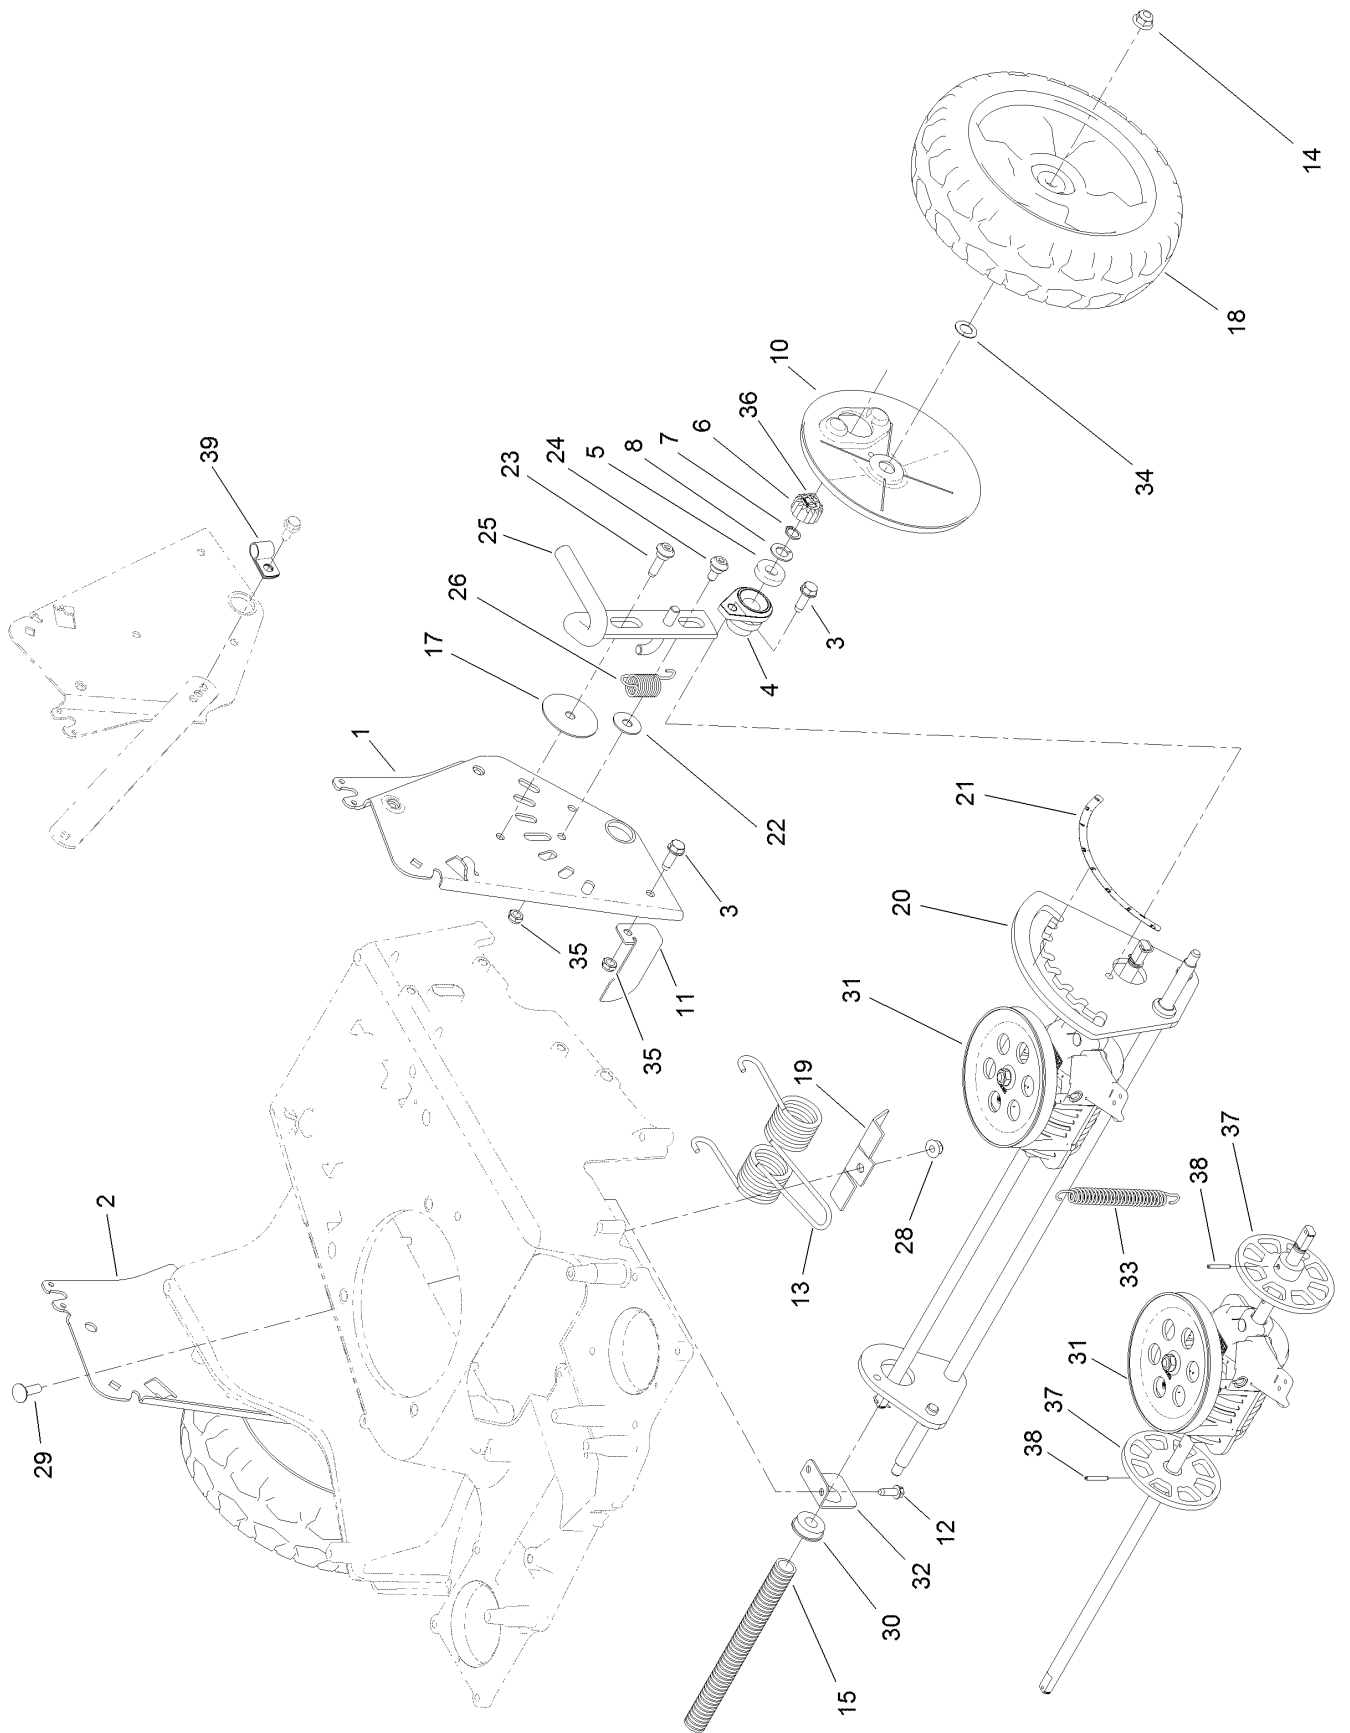

## Traction and Height-of-Cut Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-2394-03	1	LH HOC Plate ASM	21	127-6865	1	Decal-HOC, Rear
2	121-2395-03	1	RH HOC Plate ASM	22	52-2860	1	Washer
3	701243	7	Screw-HWHTF	23	119-2267	1	Screw-Shoulder, BHTF
4	131-5364	2	Retainer-Bearing	24	120-9471	1	Bolt-Shoulder
5	109-8020	2	Bearing-Ball	25	120-7090	1	Lock-Height, Adjust
6	131-5399	2	Gear-Pinion, 15T	26	120-9452	1	Spring-Extension
7	32151-61	1	Ring-Retaining	28	104-8300	1	Nut-Flange, NI
8	110-7191	2	Washer-Thrust	29	3230-2	1	Bolt-CARR
10	125-2480	2	Cover-Gear	30	104-8699	1	Bearing-Ball
11	121-5821	1	Bracket-Stop	31	131-9662	1	Transmission
12	49-2040	2	Screw-HWHTF	32	120-7008	1	Mount-Bearing
13	121-2368	1	Spring-Torsion	33	120-7027	1	Spring-Extension
14	104-8301	2	Nut-Flange, NI	34	36-4780	2	Washer-Plain
15	121-5799	1	Conduit-Convolutd	35	3296-47	2	Nut-Lock, NI
17	125-2540	1	Washer-Plain	36	130-2369	2	Pin-Snap
18	133-2699	2	10.5 Inch Wheel ASM	37	131-9652	2	Rotor ASM
19	121-2397	1	Bracket	38	933156	2	Pin-Roll
20	131-4516	1	Axle-Rear	39	2412-138	1	R-Clamp


# Handle Assembly

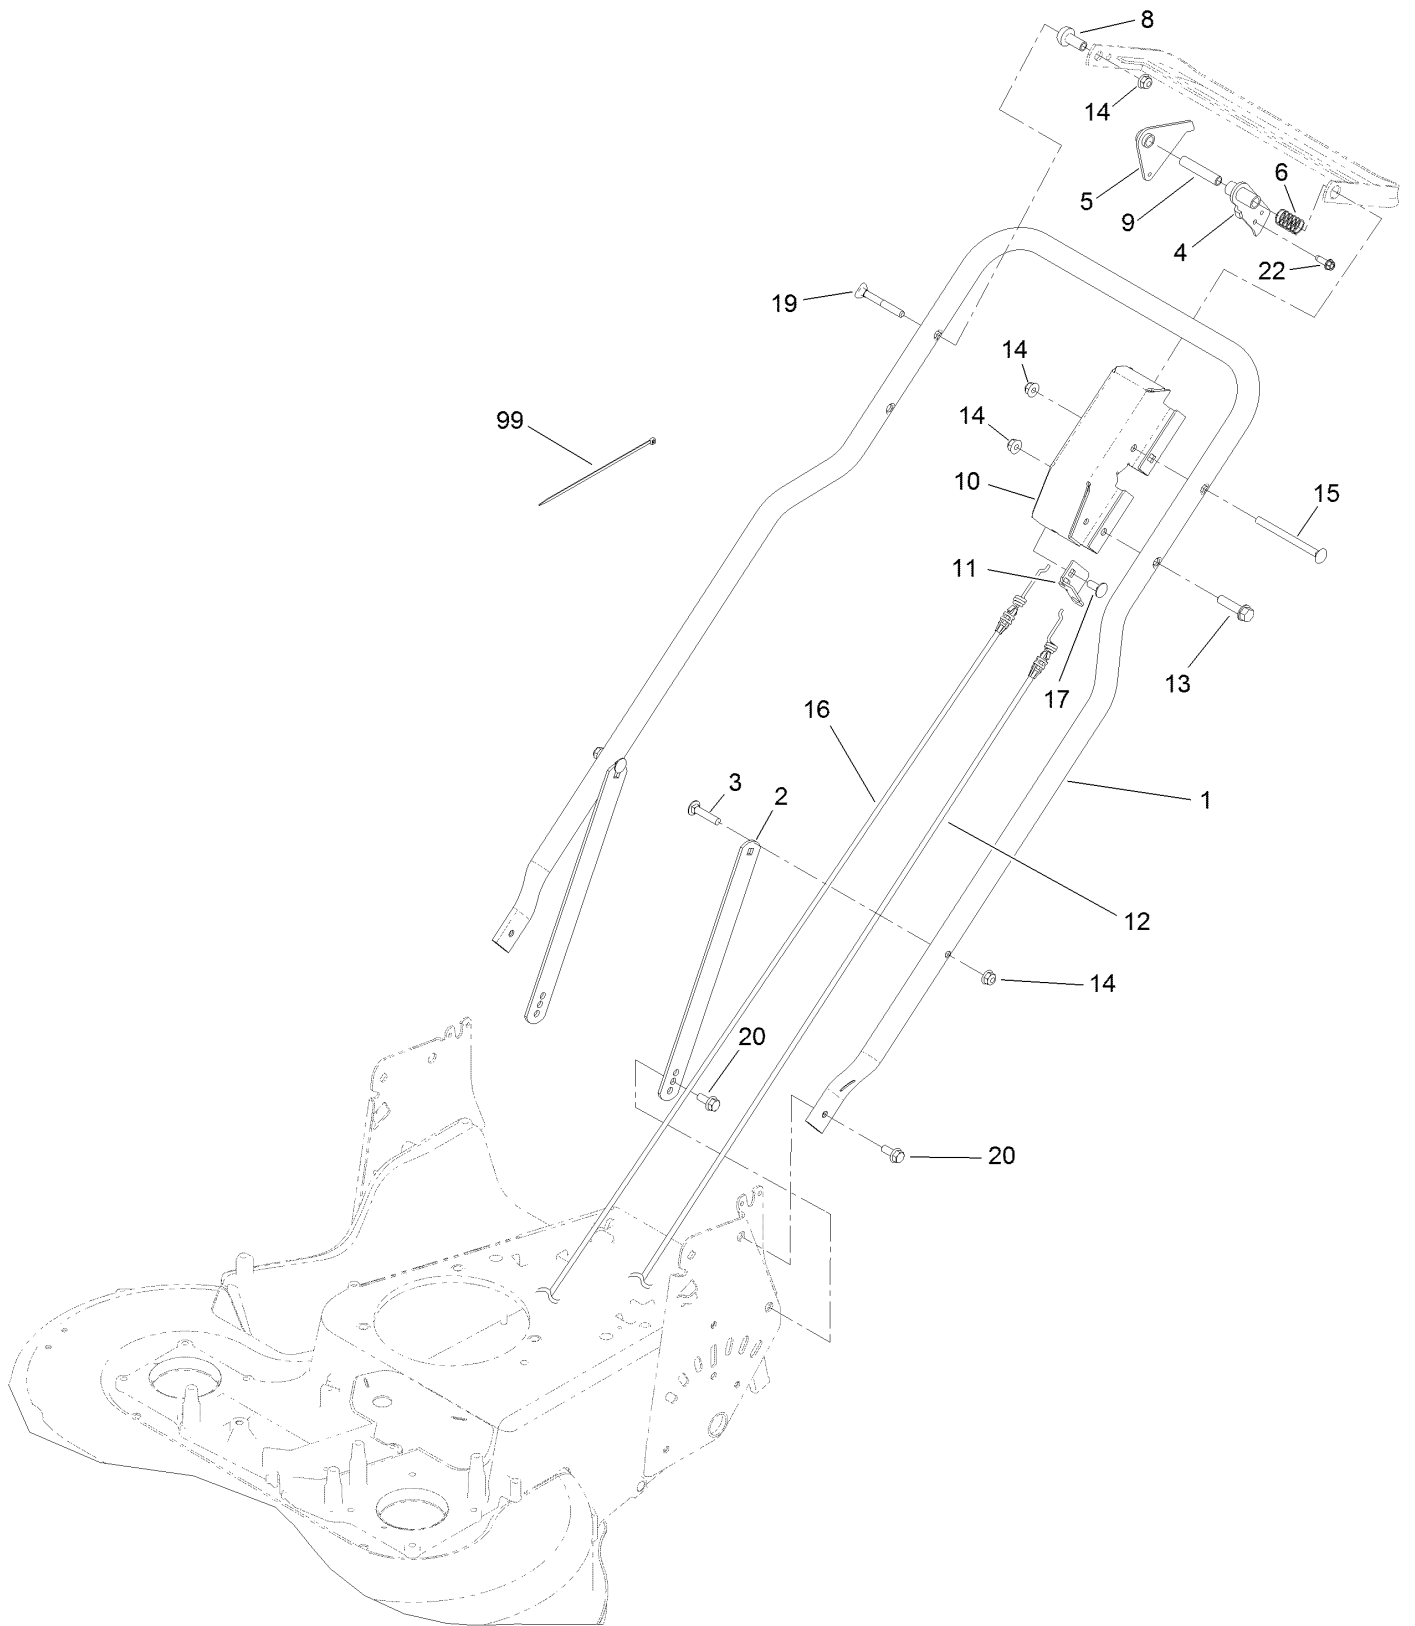

## Handle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-5827-03	1	Handle	12	121-5787	1	Cable-Brake
2	116-8208-03	2	Support-Handle	13	32144-102	1	Screw-HWH
3	3230-4	2	Screw-CARR	14	104-8300	5	Nut-Flange, NI
4	121-5831	1	BBC Lever ASM	15	106-9758	1	Screw-CARR
5	121-9136	1	Lever-Traction	16	127-6868	1	Cable-Traction
6	85-6750	1	Spring-Control	17	3230-23	1	Screw-CARR
8	49-1631	1	Spacer-Support	19	17-9427	1	Screw
9	84-9030	1	Spacer-Bracket, Control	20	116-7230	4	Screw-HHF
10	121-5789-03	1	Bracket-Control	22	49-2040	1	Screw-HWHTF
11	121-9166	1	Bracket	99	614249	3	Tie-Cable

# Brake Cable and Control Bar Assembly

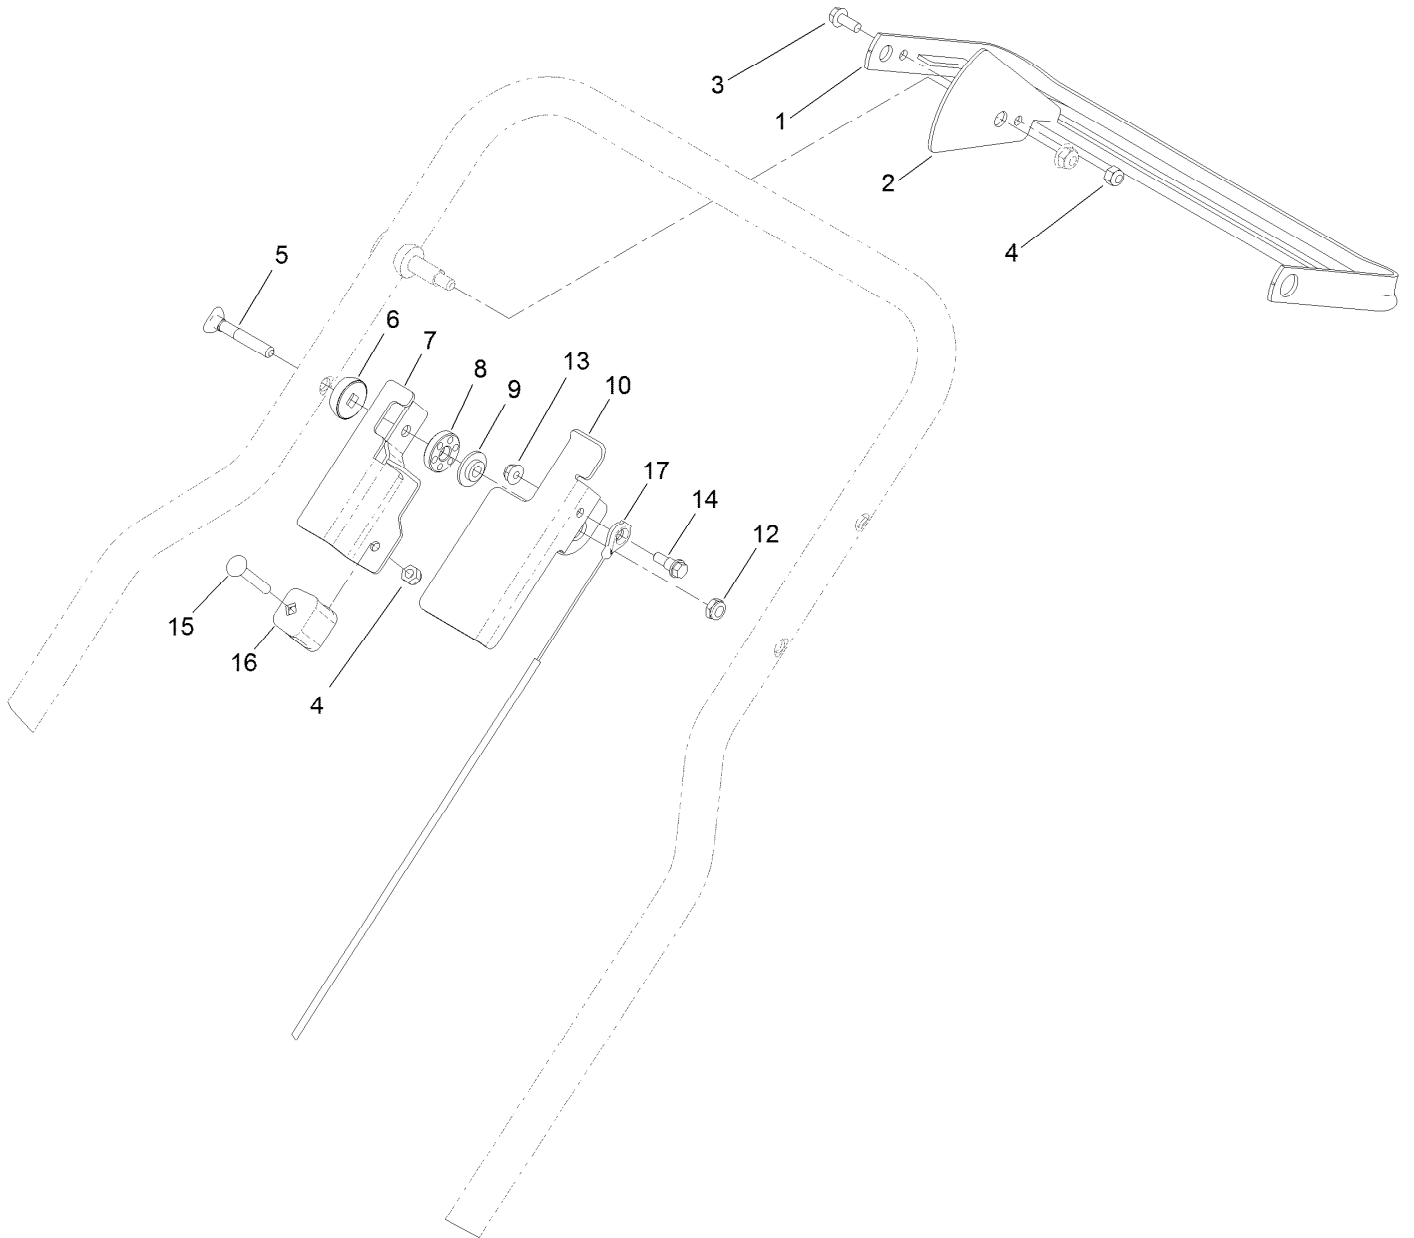

## Brake Cable and Control Bar Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-9660-03	1	Bar-Control	9	105-3006	1	Washer-Stepped
2	131-9670-03	1	Stop	10	131-9668-03	1	Lever-Brake
3	32144-85	1	Screw-HWH	12	3296-47	1	Nut-Lock, NI
4	3296-73	2	Nut-Lock, NI	13	104-7201	1	Nut-Flange, NI
5	17-9428	1	Screw-Handle	14	42-3560	1	Bolt-Shoulder
6	106-7260	1	Washer-Curved	15	3229-5	1	Screw-CARR
7	131-9669-03	1	Bracket-Anchor, Cable	16	106-6801	1	Anchor-Cable
8	92-4890	1	Washer	17	131-9661	1	Cable-Brake, Parking

# Attachments and Accessories

## For 22205TE 76cm TurfMaster Walk-Behind Lawn Mower

<b>Product Name</b>	<b>Model/Part</b>
Atomic Blade 15.4in.....	120-9500-03
Mulching Kit.....	125-5064
Idler Pulley Kit.....	126-7890



**Notes:**

**Notes:**

**Notes:**



**Count on it.**