




**Count on it.**

**Parts Catalog**

**Deck Ski Kit  
Brush Cutter**

Model No. 137-7608



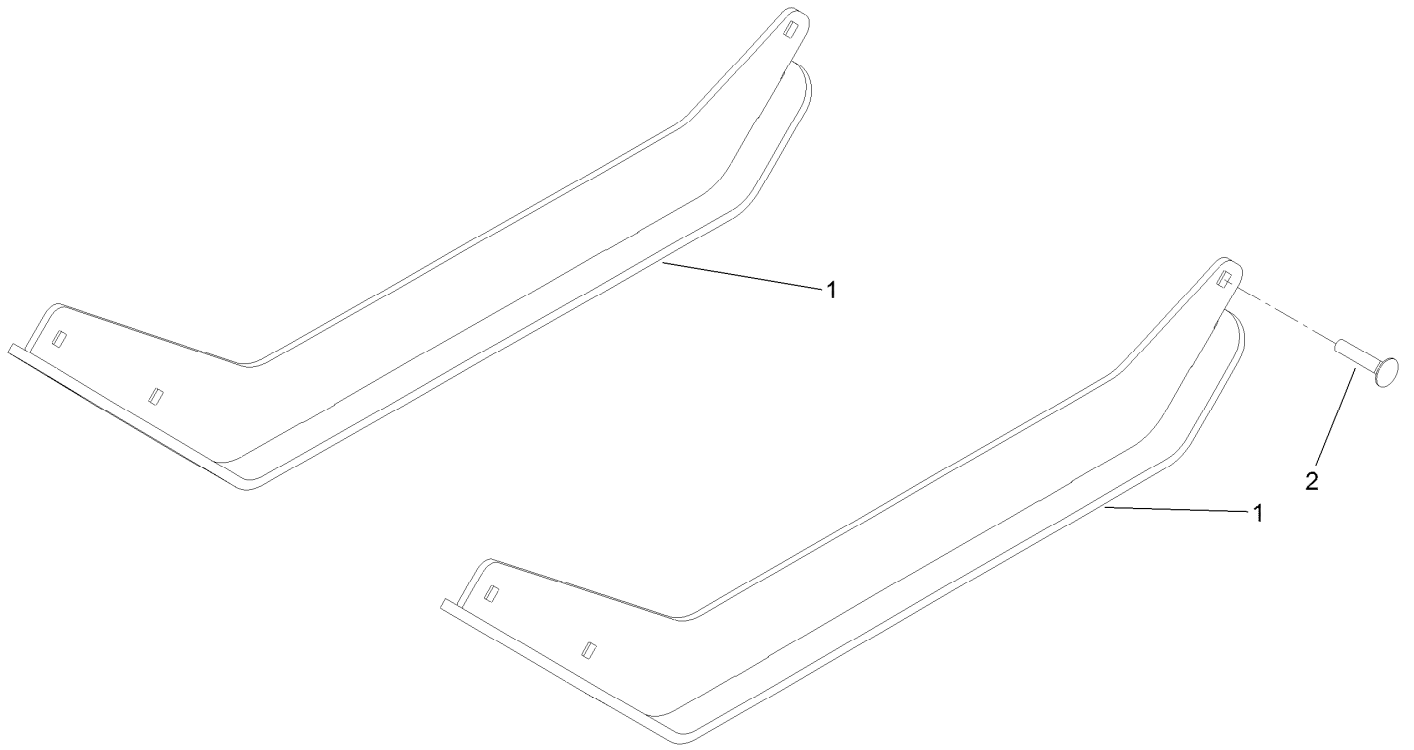

## Deck Ski Assembly No. 137-7608

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-0650	2	Ski-Deck
2	3230-27	6	Screw-CARR