



Z-Master
48" Collection System OFZ
Model No. 79434 – 891637 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Plenum And Discharge Bracket	1	Grass Bin And Chute Asm	4
Blower Assembly	2	Note:	
Bumper Asm	3		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form X (Y). X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

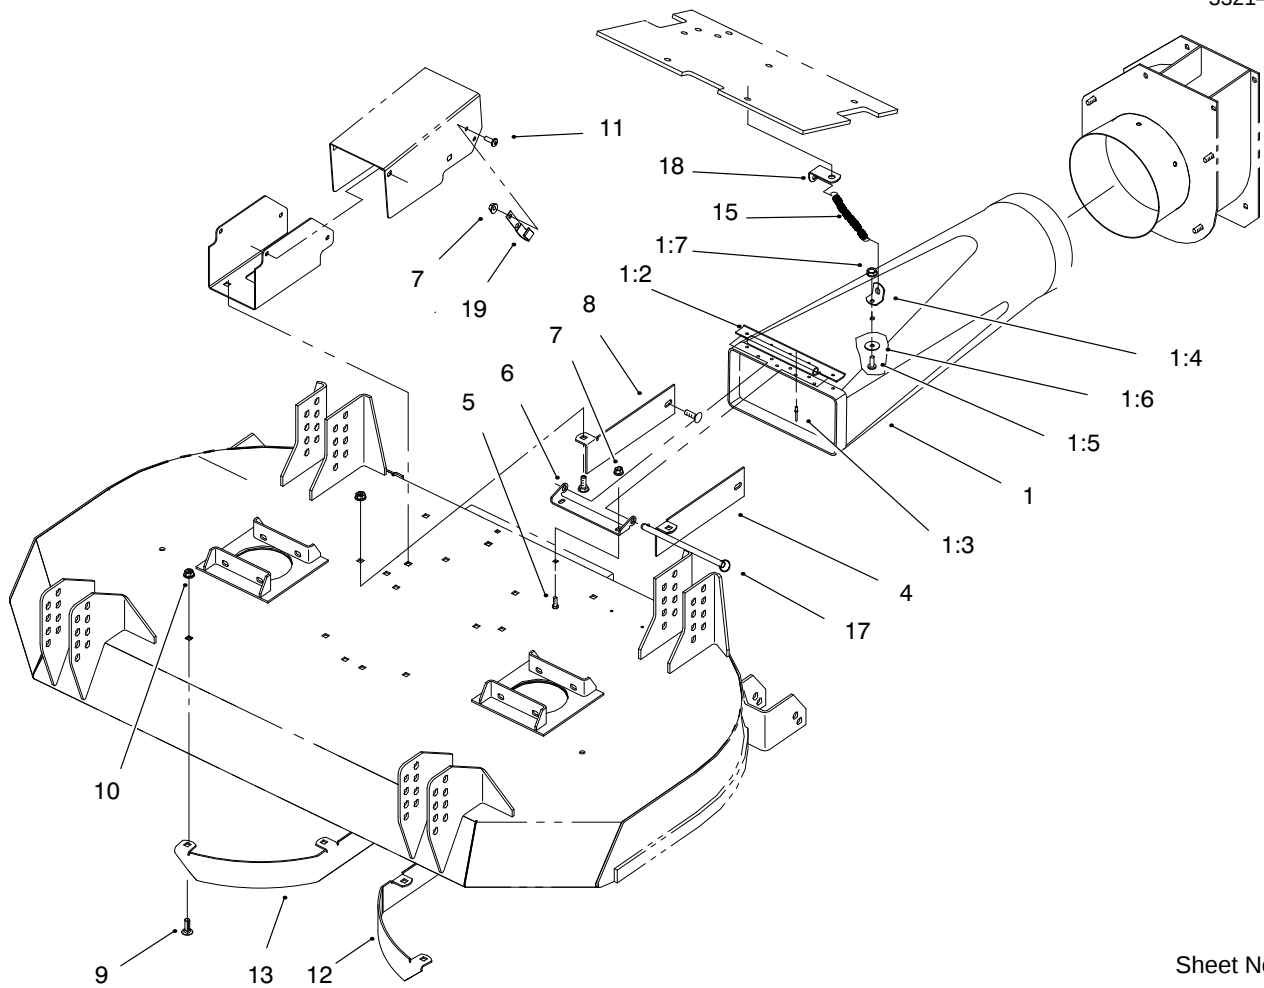

Sheet No.: 19

Plenum And Discharge Bracket

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-0266	1	Plenum ASM				
1:2	99-0255	1	Bracket-Plenum				
1:3	3269-25	9	Rivet-Pop				
1:4	98-3035	1	Bracket-Spring				
1:5	3250-32	1	Screw-PPH				
1:6	3256-58	1	Washer-Flt				
1:7	32128-32	1	Nut-Hex Flange				
4	98-3002	1	Bracket-Discharge				
5	3229-25	2	Screw-CARR				
6	99-0252	1	Bracket-Hinge				
7	32128-32	4	Nut-Hex Flange				
8	98-3003	1	Bracket-Discharge				
9	3230-23	10	Bolt-CARR				
10	32128-13	10	Nut-Lock Flange				
11	3250-32	2	Screw-PPH				
12	98-3015	1	Baffle-LH				
13	98-3016	1	Baffle-RH				
15	98-4399	1	Spring-Extension				
17	99-0261	1	Pin-Locking				
18	98-4398	1	Bracket-Spring				
19	99-0270	1	Clip-Cable				

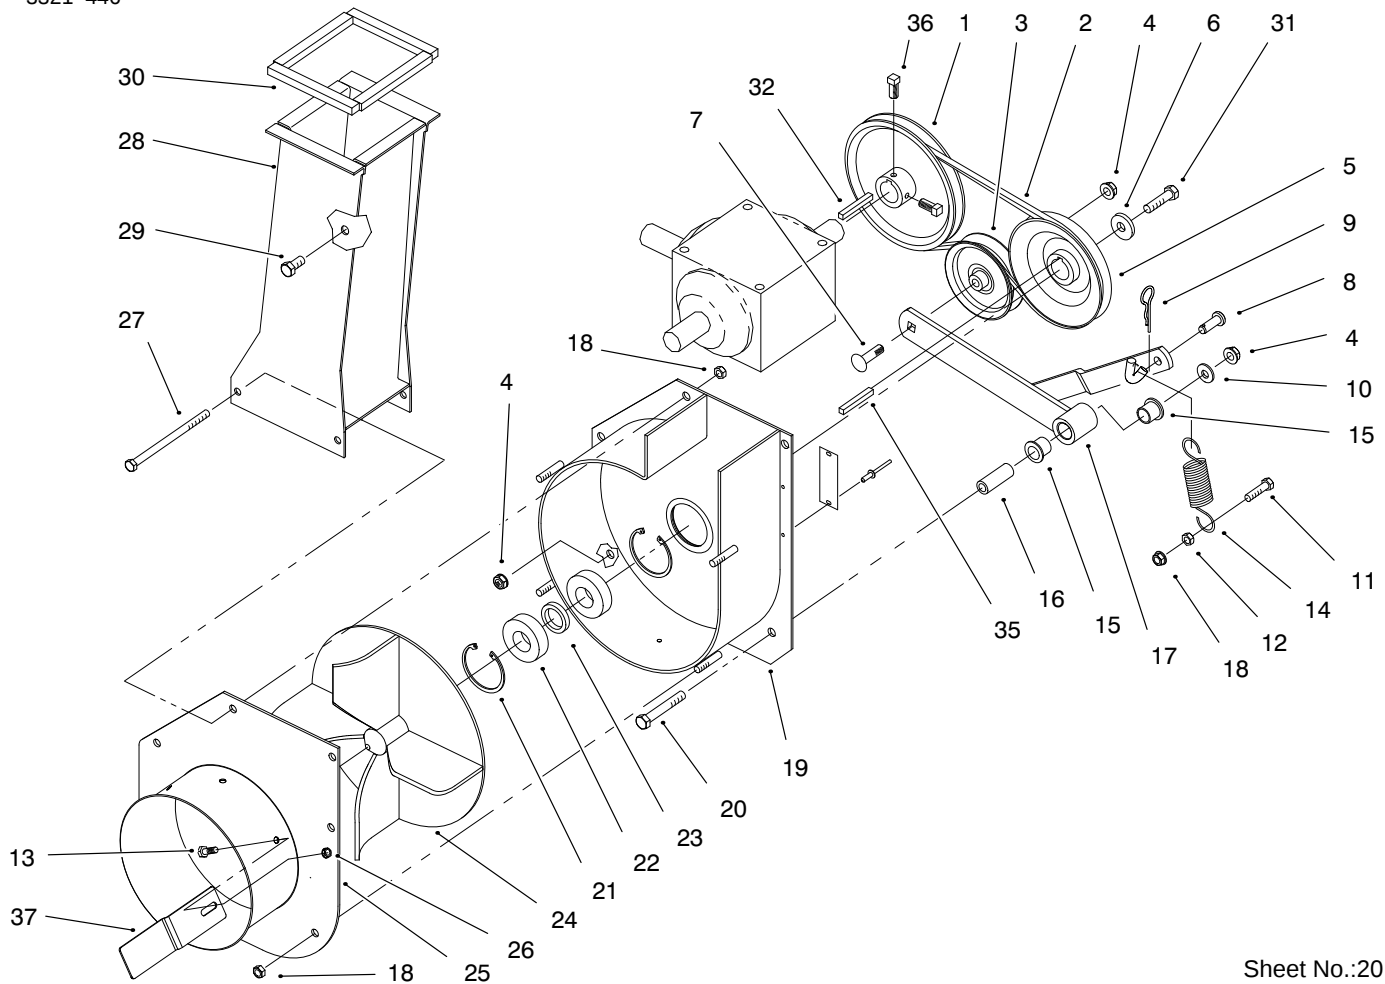


Sheet No.:20

Blower Assembly

Ref. No.	Part No.	Qty.	Description
1	94-4630	1	Pulley—Cast
2	19-2650	1	V—Belt
3	56-4920	1	Pulley—Idler
4	32128-21	4	Nut—HF
5	95-6438	1	Pulley—Impeller
6	65-8680	1	Washer
7	3231-4	1	Bolt—CARR
8	283-2	1	Pin—Clevis
9	3290-467	1	Pin—Hair
10	3256-3	1	Washer—Flat
11	322-6	1	Screw—HH
12	3217-6	1	Nut—Hex
13	3250-32	3	Screw—PPH
14	67-1440	1	Spring—Ext
15	256-90	2	Bushing—Flange
16	95-6448	1	Spacer
17	95-6437	1	Idler Arm
18	32128-25	7	Nut—Hex Flange
19	95-6435	1	Housing
20	323-12	1	Screw
21	32120-8	2	Snap Ring (N5000-206)
22	251-82	2	Bearing—Ball
23	95-6427	1	Spacer—Bearing
24	95-6434	1	Impeller
25	95-6436	1	Cover


Ref. No.	Part No.	Qty.	Description
26	32128-32	3	Nut—Hex Flange
27	322-29	2	Screw—HH
28	95-4345	1	Impeller Chute
29	323-4	1	Screw—HH
30	98-0824	4	Strip—Foam
31	323-5	1	Screw—HH
32	67-7490	1	Key
35	10-7070	1	Key—Square
36	3242-4	2	Screw—Set
37	99-0251-03	3	Guide—Plenum

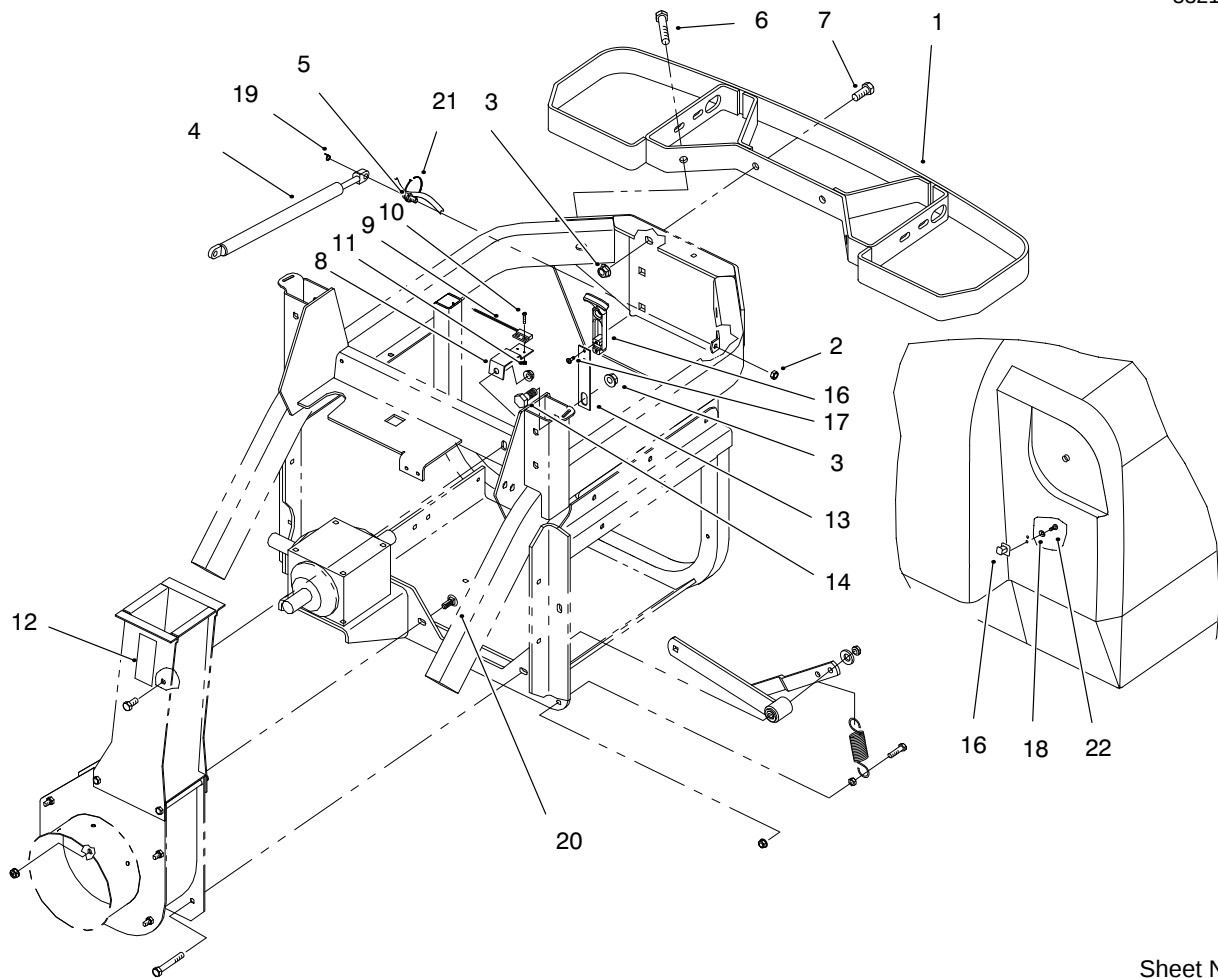

Sheet No.: 21

Bumper Asm

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-6414	1	Bumper ASM				
2	32152-1	2	Nut-Lock				
3	32128-23	5	Nut-Lock				
4	98-3043	1	Spring-Gas				
5	88-6770	2	Stud-Ball				
6	325-11	2	Screw-HH				
7	325-5	2	Screw-HH				
8	98-0823	1	Bracket-Switch				
9	95-7669	1	Switch-Reed				
10	3290-313	2	Screw-PH				
11	3296-52	2	Nut-Lock				
12	79-0360	1	Decal-Danger				
13	98-3032	1	Bracket-Latch				
14	325-4	1	Screw-HH				
16	94-5626	1	Latch-Draw				
17	3290-359	2	Screw-Rd				
18	3256-21	1	Washer-Flat				
19	98-3044	2	Clip-Safety				
20	3231-2	1	Screw-CARR				
21	3290-378	1	Tie-Cable				
22	3290-134	1	Screw-HH				

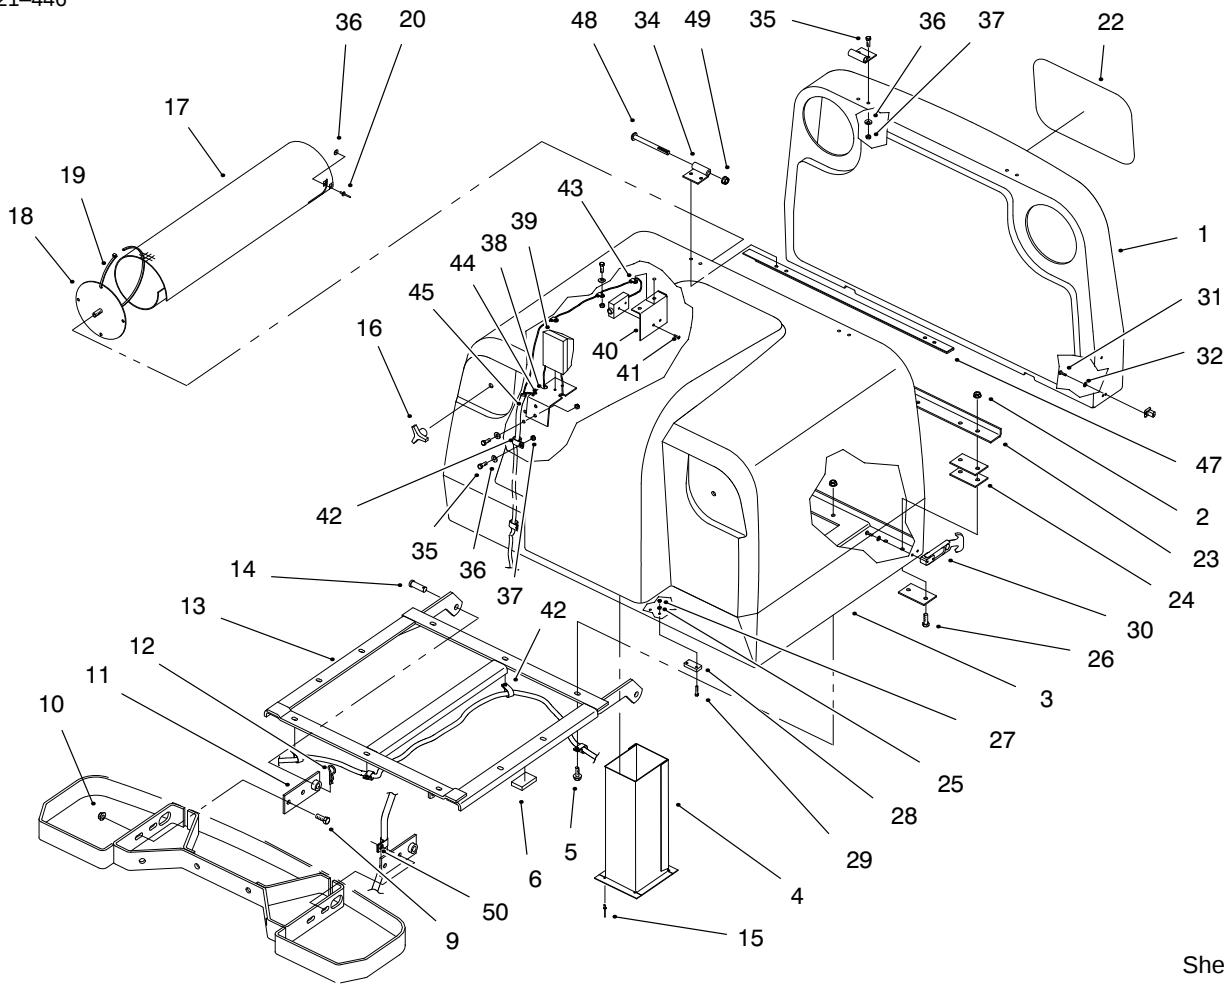

Sheet No.:22

Grass Bin And Chute Asm

Ref. No.	Part No.	Qty.	Description
1	95-6423	1	Cover-Bin
2	32128-25	14	Nut-Hex Flange
3	95-6422	1	Bin-Grass
4	95-6482	1	Chute ASM
5	3234-17	10	Screw-Hfh
6	98-3031	2	Cushion
9	323-6	4	Screw-HH
10	32128-21	4	Nut-HF
11	95-6431	2	Pivot ASM
12	3290-355	2	Pin-Hair
13	95-6418	1	Frame ASM
14	283-68	2	Pin-Clevis
15	98-7310	4	Rivet
16	233-52	2	Knob-Black
17	95-6441	2	Screen
18	95-6444	2	Plate ASM
19	3290-378	8	Tie-Cable
20	3290-412	8	Pop Rivet-.25
22	67-7310	1	Decal-Toro Logo
23	98-0849	1	Flange-Bin
24	98-3004	6	Spacer
25	3256-12	2	Washer-Flat
26	322-6	4	Screw-HH
27	3296-9	2	Nut-Lock
28	98-3006	1	Actuator
29	3290-124	2	Screw-HH

Ref. No.	Part No.	Qty.	Description
30	94-5626	2	Latch-Draw
31	3290-134	6	Screw-HH
32	3256-21	6	Washer-Flat
34	98-3027	4	Hinge
35	321-4	16	Screw-HH
36	3256-22	20	Washer-Flat
37	3296-42	16	Nut-Lock
38	98-3000	1	Bracket-Receiver
39	98-2367	1	Module-Obstruction Detec
40	98-3001	1	Bracket-Emitter
41	3250-19	4	Screw-Phm
42	2412-93	6	R-Clamp
43	2412-127	3	Clip
44	3290-381	3	Tie-Cable
45	98-3009	1	Conduit-Convulated
47	98-3036	1	Angle-Bin
48	3274-102	2	Screw-HSH
49	3296-59	2	Nut-Lock
50	2412-138	1	Clamp-R

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
10-7070	2	35	1	Key-Square
19-2650	2	2	1	V-Belt
56-4920	2	3	1	Pulley-Idler
65-8680	2	6	1	Washer
67-1440	2	14	1	Spring-Ext
67-7310	4	22	1	Decal-Toro Logo
67-7490	2	32	1	Key
79-0360	3	12	1	Decal-Danger
88-6770	3	5	2	Stud-Ball
94-4630	2	1	1	Pulley-Cast
94-5626	3	16	1	Latch-Draw
94-5626	4	30	2	Latch-Draw
95-4345	2	28	1	Impeller Chute
95-6414	3	1	1	Bumper ASM
95-6418	4	13	1	Frame ASM
95-6422	4	3	1	Bin-Grass
95-6423	4	1	1	Cover-Bin
95-6427	2	23	1	Spacer-Bearing
95-6431	4	11	2	Pivot ASM
95-6434	2	24	1	Impeller
95-6435	2	19	1	Housing
95-6436	2	25	1	Cover
95-6437	2	17	1	Idler Arm
95-6438	2	5	1	Pulley-Impeller
95-6441	4	17	2	Screen
95-6444	4	18	2	Plate ASM
95-6448	2	16	1	Spacer
95-6482	4	4	1	Chute ASM
95-7669	3	9	1	Switch-Reed
98-0823	3	8	1	Bracket-Switch
98-0824	2	30	4	Strip-Foam
98-0849	4	23	1	Flange-Bin
98-2367	4	39	1	Module-Obstruction Detec
98-3000	4	38	1	Bracket-Receiver
98-3001	4	40	1	Bracket-Emitter
98-3002	1	4	1	Bracket-Discharge
98-3003	1	8	1	Bracket-Discharge
98-3004	4	24	6	Spacer
98-3006	4	28	1	Actuator
98-3009	4	45	1	Conduit-Convoluted
98-3015	1	12	1	Baffle-LH
98-3016	1	13	1	Baffle-RH
98-3027	4	34	4	Hinge
98-3031	4	6	2	Cushion
98-3032	3	13	1	Bracket-Latch
98-3035	1	1:4	1	Bracket-Spring
98-3036	4	47	1	Angle-Bin
98-3043	3	4	1	Spring-Gas
98-3044	3	19	2	Clip-Safety
98-4398	1	18	1	Bracket-Spring
98-4399	1	15	1	Spring-Extension
98-7310	4	15	4	Rivet
99-0251-03	2	37	3	Guide-Plenum
99-0252	1	6	1	Bracket-Hinge
99-0255	1	1:2	1	Bracket-Plenum
99-0261	1	17	1	Pin-Locking
99-0266	1	1	1	Plenum ASM
99-0270	1	19	1	Clip-Cable
233-52	4	16	2	Knob-Black
2412-93	4	42	6	R-Clamp
2412-127	4	43	3	Clip

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
2412-138	4	50	1	Clamp-R
251-82	2	22	2	Bearing-Ball
256-90	2	15	2	Bushing-Flange
283-2	2	8	1	Pin-Clevis
283-68	4	14	2	Pin-Clevis
321-4	4	35	16	Screw-HH
322-6	2	11	1	Screw-HH
322-6	4	26	4	Screw-HH
322-29	2	27	2	Screw-HH
323-4	2	29	1	Screw-HH
323-5	2	31	1	Screw-HH
323-6	4	9	4	Screw-HH
323-12	2	20	1	Screw
325-4	3	14	1	Screw-HH
325-5	3	7	2	Screw-HH
325-11	3	6	2	Screw-HH
3217-6	2	12	1	Nut-Hex
3229-25	1	5	2	Screw-CARR
3230-23	1	9	10	Bolt-CARR
3231-2	3	20	1	Screw-CARR
3231-4	2	7	1	Bolt-CARR
3234-17	4	5	10	Screw-Hfh
3242-4	2	36	2	Screw-Set
3250-19	4	41	4	Screw-Phm
3250-32	1	1:5	1	Screw-PPH
3250-32	2	13	3	Screw-PPH
3256-3	2	10	1	Washer-Flat
3256-12	4	25	2	Washer-Flat
3256-21	3	18	1	Washer-Flat
3256-21	4	32	6	Washer-Flat
3256-22	4	36	20	Washer-Flat
3256-58	1	1:6	1	Washer-Flt
3269-25	1	1:3	9	Rivet-Pop
3274-102	4	48	2	Screw-HSH
3290-124	4	29	2	Screw-HH
3290-134	3	22	1	Screw-HH
3290-134	4	31	6	Screw-HH
3290-313	3	10	2	Screw-PH
3290-355	4	12	2	Pin-Hair
3290-359	3	17	2	Screw-Rd
3290-378	3	21	1	Tie-Cable
3290-378	4	19	8	Tie-Cable
3290-381	4	44	3	Tie-Cable
3290-412	4	20	8	Pop Rivet-.25
3290-467	2	9	1	Pin-Hair
3296-9	4	27	2	Nut-Lock
3296-42	4	37	16	Nut-Lock
3296-52	3	11	2	Nut-Lock
3296-59	4	49	2	Nut-Lock
32120-8	2	21	2	Snap Ring (N5000-206)
32128-13	1	10	10	Nut-Lock Flange
32128-21	2	4	4	Nut-HF
32128-21	4	10	4	Nut-HF
32128-23	3	3	5	Nut-Lock
32128-25	2	18	7	Nut-Hex Flange
32128-25	4	2	14	Nut-Hex Flange
32128-32	1	1:7	1	Nut-Hex Flange
32128-32	2	26	3	Nut-Hex Flange
32152-1	3	2	2	Nut-Lock

*Not Illustrated