



KPS-18T

Trouble shooting

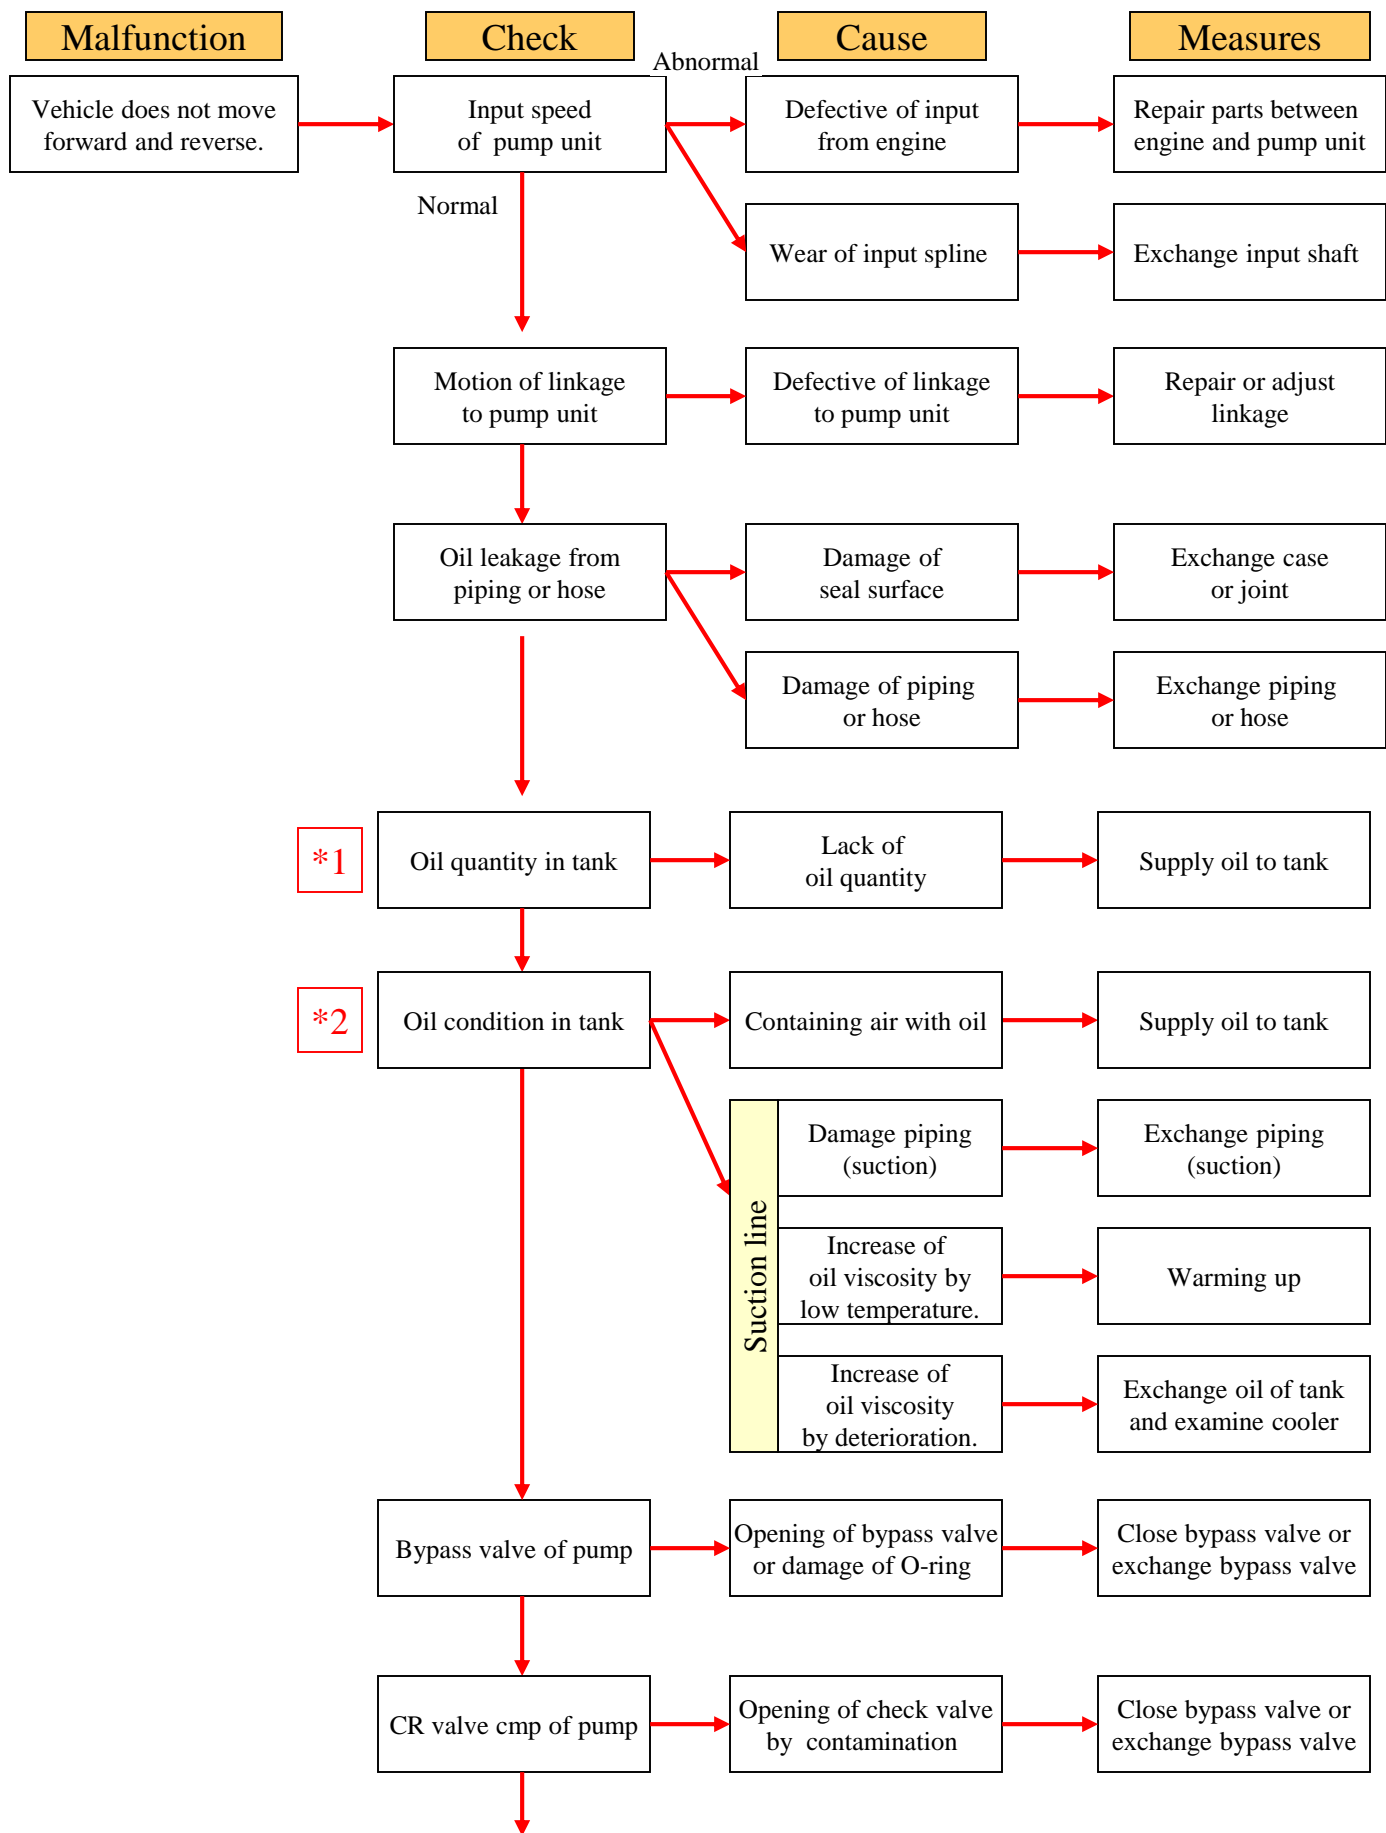

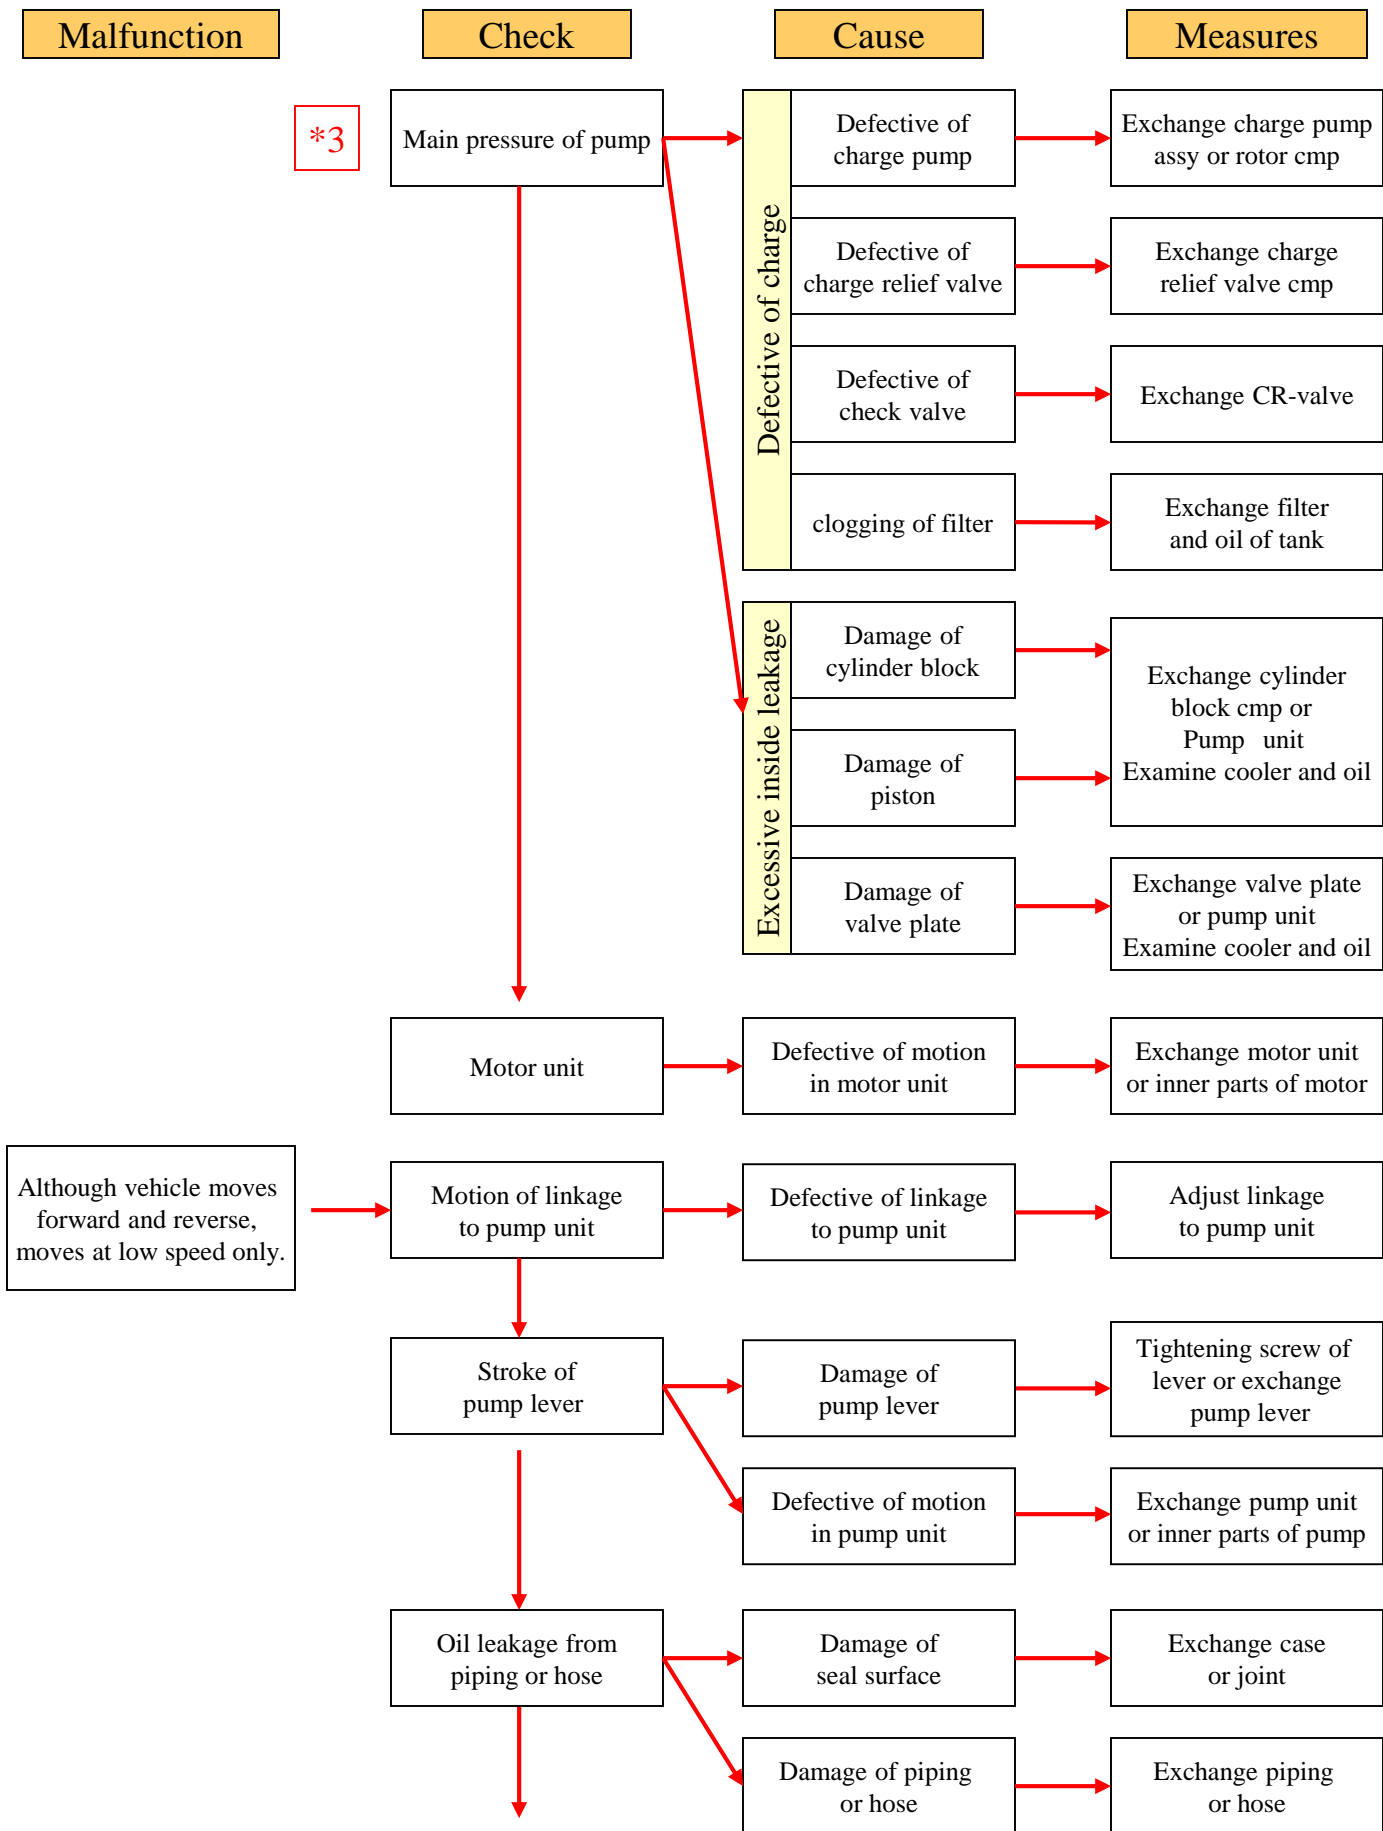

Malfunction

Check

Cause

Measures

*1

*2

Bypass valve of pump

Opening of bypass valve or damage of O-ring

Close bypass valve or exchange bypass valve

CR valve cmp of pump

Opening of check valve by contamination

Close bypass valve or exchange bypass valve

*3

Motor unit

Defective of motion in motor unit

Exchange motor unit or inner parts of motor

Vehicle does not stop when lever of vehicle is neutral position.

Remove linkage from pump lever

Defective of linkage

Repair or adjust vehicle linkage

Difference of neutral adjustment

Adjust pump lever to neutral position

Defective of lever

Tightening screw of lever or exchange pump lever

Abnormal sound, abnormal vibration

Piping or linkage

contacting of piping or linkage

Repair or adjust or exchange piping or linkage

*1

*2

