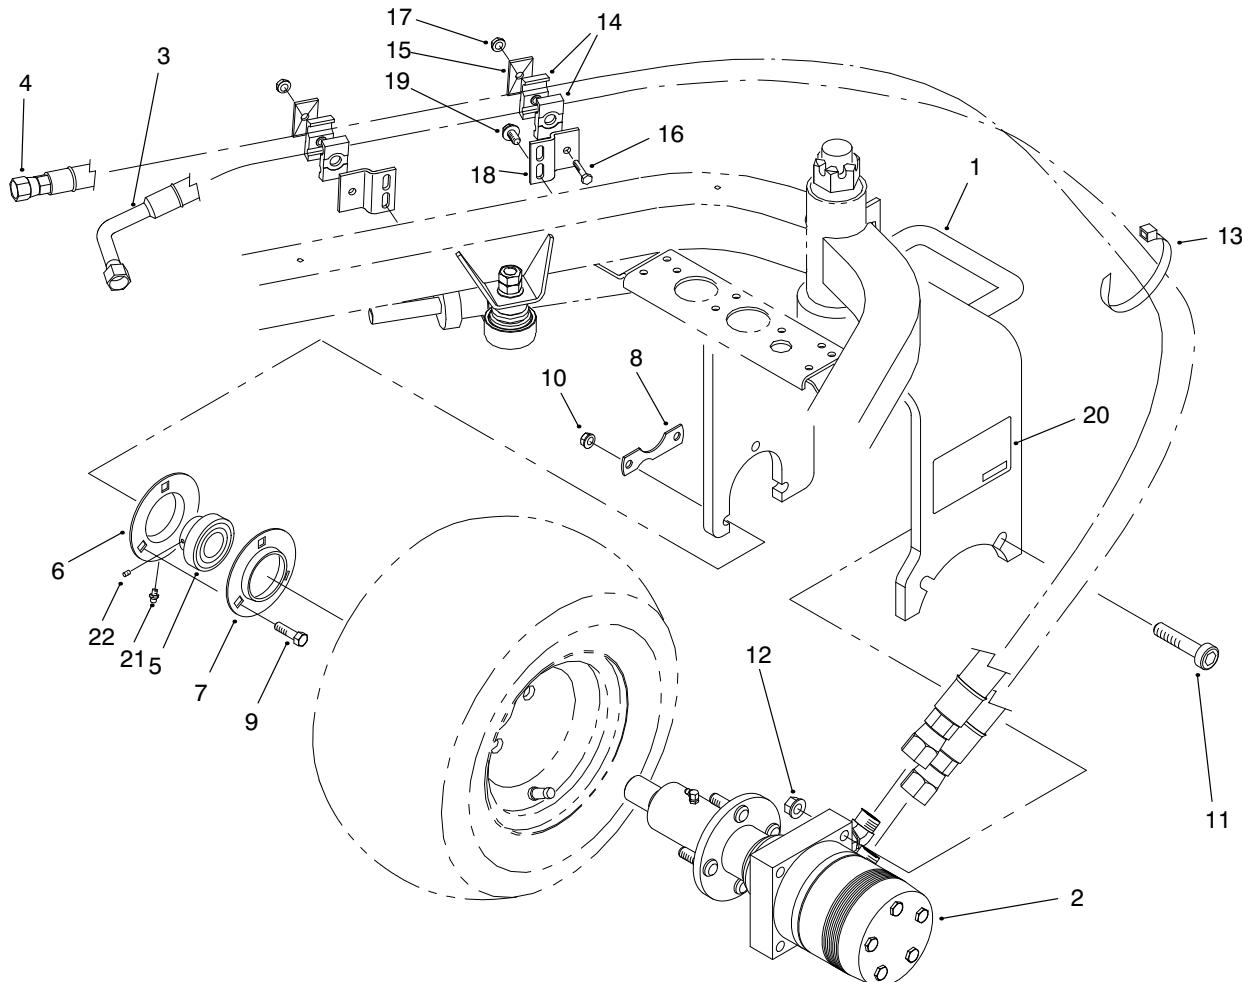


TORO[®]


MODEL NO. 04550

PARTS
CATALOG3-WHEEL DRIVE KIT
GREENSMASTER[®] 3200/3200D

T-2534

DRIVE MOTOR INSTALLATION ASSEMBLY

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|-----------------------------------|----------|----------|----------|------------------|----------|
| 1 | 95-0513 | Fork - Castor (Incl. Ref. #20) | 1 | 11 | 3274-93 | Screw - HSH | 2 |
| 2 | 95-0514 | Asm. - Hyd. Motor & Hub | 1 | 12 | 3296-23 | Nut - Lock | 2 |
| 3 | 95-0517 | Hose - Hydraulic | 1 | 13 | 3290-378 | Tie - Cable | 1 |
| 4 | 95-0518 | Hose - Hydraulic | 1 | 14 | 56-7974 | Clamp - Tube | 4 |
| 5 | 251-352 | Bearing (Incl. Ref. #21) | 1 | 15 | 69-9761 | Plate - Cover | 2 |
| 6 | 85-8940 | Flangette - Relube | 1 | 16 | 42-9510 | Screw - HH | 2 |
| 7 | 85-8950 | Flangetter - Std. | 1 | 17 | 33024-00 | Nut - Lock | 2 |
| 8 | 88-8350 | Tab - Bearing | 1 | 18 | 95-0516 | Bracket - Clamp | 2 |
| 9 | 323-29 | Screw - HH | 3 | 19 | 32144-14 | Screw - HWHTF | 4 |
| 10 | 3296-39 | Nut - Lock | 3 | 20 | 92-9752 | Decal - 3 WD | 2 |
| | | | | 21 | 302-5 | Fitting - Grease | 1 |
| | | | | 22 | | Screw - Set | 2 |

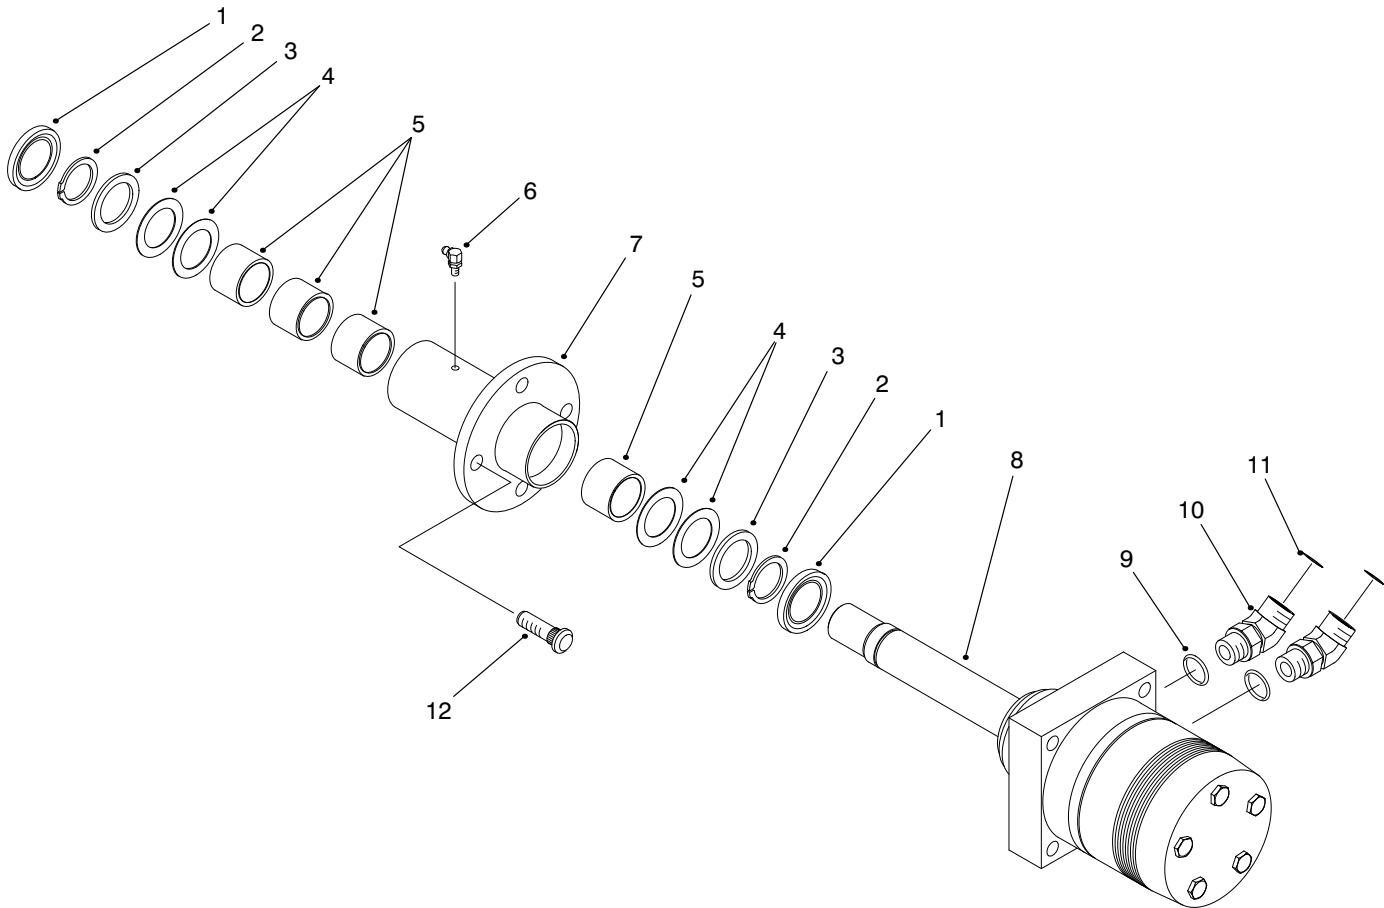


T-2556

HYDRAULIC MOTOR & HUB ASSEMBLY NO. 95-0514

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--------------------------|----------|
| 1 | 92-9165 | Seal - Grease | 2 |
| 2 | 32151-10 | Ring - Retaining | 2 |
| 3 | 92-9159 | Washer | 2 |
| 4 | 92-9166 | Washer - Thrust | 4 |
| 5 | 92-9167 | Bearing - Clutch, Roller | 4 |
| 6 | 302-40 | Fitting - Grease | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-------------------------|----------|
| 7 | 92-9152 | Hub | 1 |
| 8 | 95-2902 | Motor - Hydraulic | 1 |
| 9 | 237-80 | O-Ring | 2 |
| 10 | 340-14 | Fitting - Hydraulic 45° | 2 |
| 11 | 237-65 | O-Ring | 2 |
| 12 | 10-6830 | Stud - Drive | 4 |

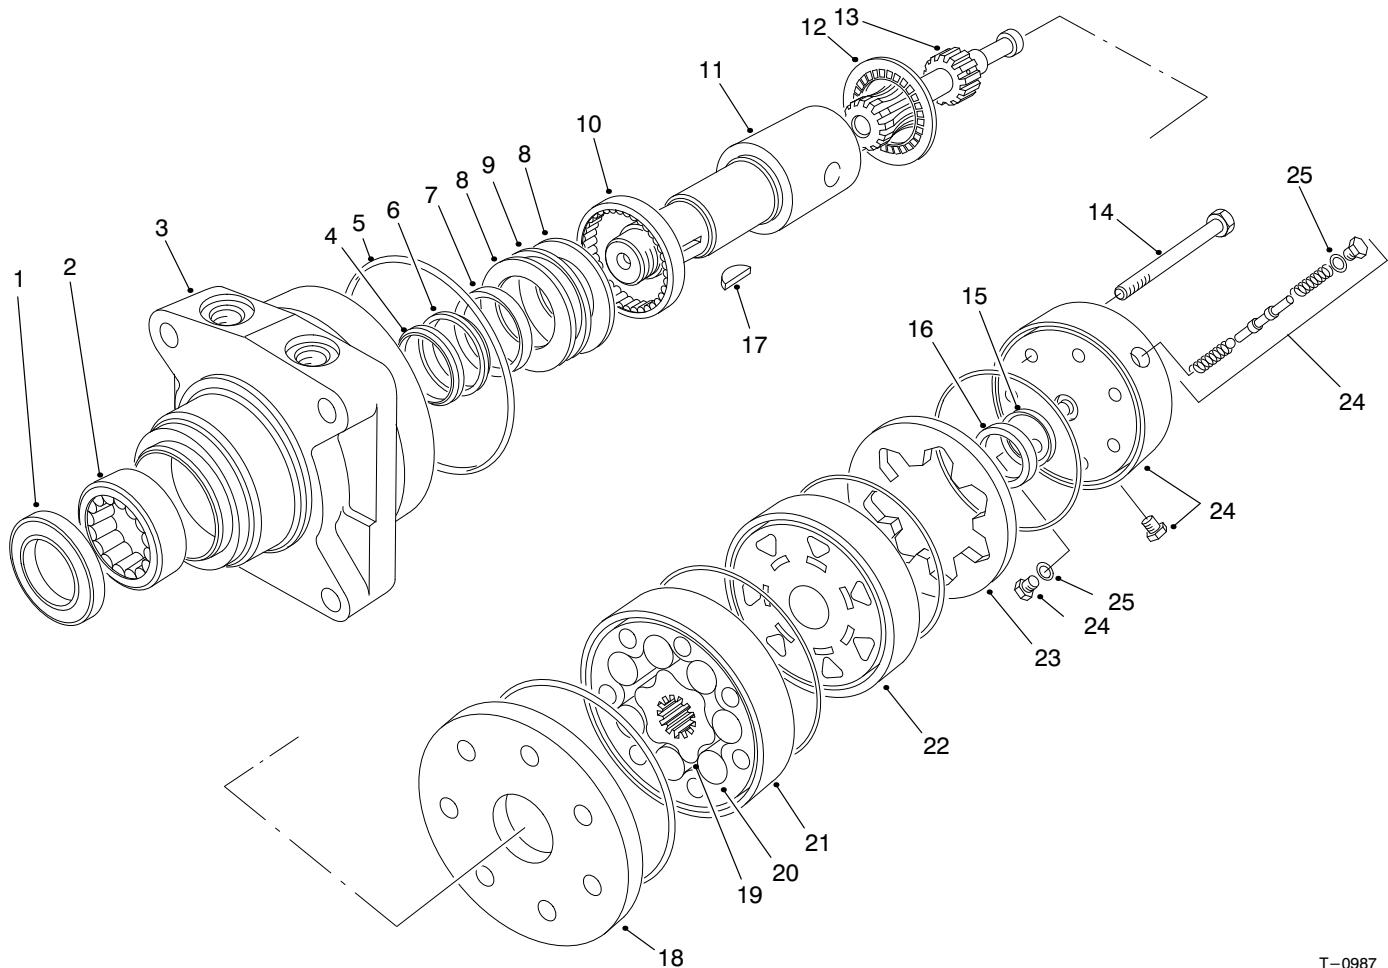


T-0987

HYDRAULIC DRIVE MOTOR NO.95-2902

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|---------------------|----------|----------|----------|---|----------|
| 1 | | Seal – Dirt & Water | 1 | 17 | 3257-42 | Key – Woodruff | 1 |
| 2 | | Bearing | 1 | 18 | 92-9754 | Plate – Wear | 1 |
| 3 | | Housing | 1 | 19 | | Rotor | 1 |
| 4 | | Washer – Backup | 1 | 20 | | Vane | 7 |
| 5 | | Seal Rings | 5 | 21 | | Stator | 1 |
| 6 | | Washer – Backup | 1 | 22 | 92-9755 | Manifold | 1 |
| 7 | | Seal – Inner | 1 | 23 | | Ring – Commutator | 1 |
| 8 | | Washer – Thrust | 2 | 24 | 92-9759 | Asm. – End Cover | 1 |
| 9 | | Bearing – Thrust | 1 | * | 92-9757 | Rotor Set (Incl. Ref. #19-21) | 1 |
| 10 | | Bearing | 1 | * | 95-2904 | Asm. – Commutator (Incl. Ref. #15-16 & 23) | 1 |
| 11 | 92-9760 | Shaft – Coupling | 1 | * | 94-8178 | Seal Kit (Incl. Ref. #1, 4-7 & 15) | 1 |
| 12 | 76-0850 | Bearing – Thrust | 1 | * | 92-9753 | Asm. – Housing (Incl. Ref. #2, 3 & 8-10) | 1 |
| 13 | 92-9758 | Link – Drive | 1 | | | | |
| 14 | 92-9756 | Screw – HH | 7 | | | | |
| 15 | | Seal – Commutator | 1 | | | | |
| 16 | | Communtator | 1 | | | | |

*Not Illustrated

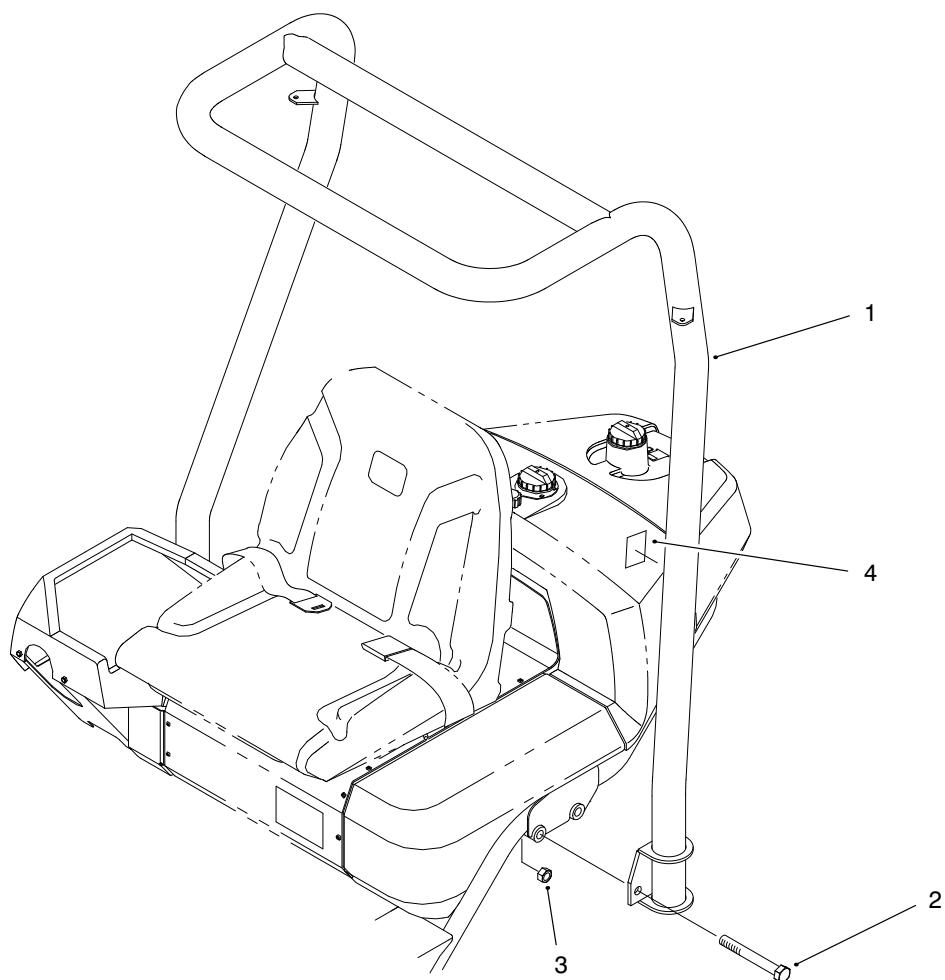


T-2549-2

ROLL OVER PROTECTION SYSTEM – MODEL NO. 04552

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-------------------|----------|
| 1 | 94-5400 | Frame – ROPS Asm. | 1 |
| 2 | 327-23 | Screw – HH | 4 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--------------|----------|
| 3 | 3296-53 | Nut – Hex. | 4 |
| 4 | 95-2928 | Decal – ROPS | 1 |

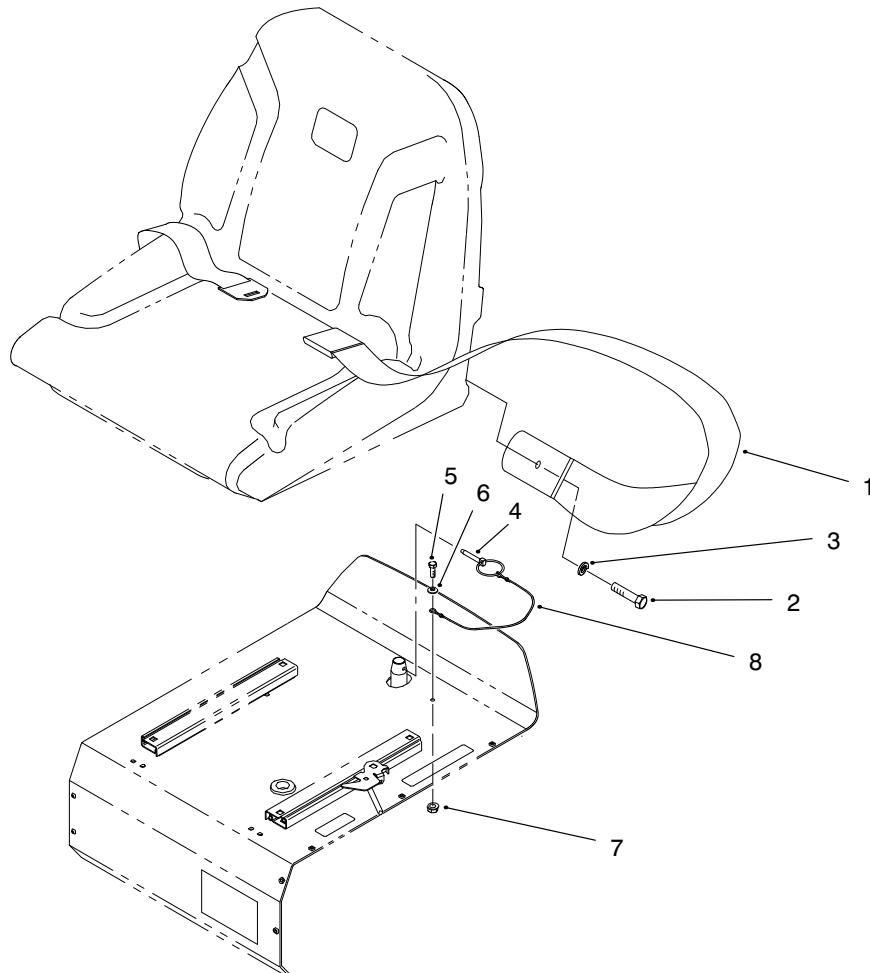

T-2548-1

ROLL OVER PROTECTION SYSTEM – SEAT BELT ASM.

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---------------------------------------|----------|
| 1 | 72-9390 | Belt – Seat | 1 |
| 2 | 3212-4 | Screw – HH | 2 |
| 3 | 3253-6 | Washer – Lock | 2 |
| 4 | 77-3780 | Lynch Pin Assembly (Incl. Ref. #8) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|-----------|---------------|----------|
| 5 | 33113-016 | Screw – HH | 1 |
| 6 | 3256-16 | Washer – Flat | 1 |
| 7 | 33023-00 | Nut – Lock | 1 |
| 8 | 28-8070 | Lanyard | 1 |

TORO PART NUMBER INDEX

| Part No. | Description | Pg. Ref. No. | No. | Qty. | Part No. | Description | Pg. Ref. No. | No. | Qty. |
|----------|--------------------------|-----------------|-----|------|-----------|-------------------------|-----------------|-----|------|
| 10-6830 | Stud – Drive | 2 | 12 | 4 | 95-0516 | Bracket – Clamp | 1 | 18 | 2 |
| 28-8070 | Lanyard | 5 | 8 | 1 | 95-0517 | Hose – Hydraulic | 1 | 3 | 1 |
| 42-9510 | Screw – HH | 1 | 16 | 2 | 95-0518 | Hose – Hydraulic | 1 | 4 | 1 |
| 56-7974 | Clamp – Tube | 1 | 14 | 4 | 95-2902 | Motor – Hydraulic | 2 | 8 | 1 |
| 69-9761 | Plate – Cover | 1 | 15 | 2 | 95-2904 | Asm. – Commutator | 3 | * | 1 |
| 72-9390 | Belt – Seat | 5 | 1 | 1 | 95-2928 | Decal – ROPS | 4 | 4 | 1 |
| 76-0850 | Bearing – Thrust | 3 | 12 | 1 | 237-65 | O-Ring | 2 | 11 | 2 |
| 77-3780 | Lynch Pin Assembly | 5 | 4 | 1 | 237-80 | O-Ring | 2 | 9 | 2 |
| 85-8940 | Flangette – Relube | 1 | 6 | 1 | 251-352 | Bearing | 1 | 5 | 1 |
| 85-8950 | Flangetter – Std. | 1 | 7 | 1 | 302-5 | Fitting – Grease | 1 | 21 | 1 |
| 88-8350 | Tab – Bearing | 1 | 8 | 1 | 302-40 | Fitting – Grease | 2 | 6 | 1 |
| 92-9152 | Hub | 2 | 7 | 1 | 323-29 | Screw – HH | 1 | 9 | 3 |
| 92-9159 | Washer | 2 | 3 | 2 | 327-23 | Screw – HH | 4 | 2 | 4 |
| 92-9165 | Seal – Grease | 2 | 1 | 2 | 3212-4 | Screw – HH | 5 | 2 | 2 |
| 92-9166 | Washer – Thrust | 2 | 4 | 4 | 3253-6 | Washer – Lock | 5 | 3 | 2 |
| 92-9167 | Bearing – Clutch, Roller | 2 | 5 | 4 | 3256-16 | Washer – Flat | 5 | 6 | 1 |
| 92-9752 | Decal – 3 WD | 1 | 20 | 2 | 3257-42 | Key – Woodruff | 3 | 17 | 1 |
| 92-9753 | Asm. – Housing | 3 | * | 1 | 3274-93 | Screw – HSH | 1 | 11 | 2 |
| 92-9754 | Plate – Wear | 3 | 18 | 1 | 3290-378 | Tie – Cable | 1 | 13 | 1 |
| 92-9755 | Manifold | 3 | 22 | 1 | 3296-23 | Nut – Lock | 1 | 12 | 2 |
| 92-9756 | Screw – HH | 3 | 14 | 7 | 3296-39 | Nut – Lock | 1 | 10 | 3 |
| 92-9757 | Rotor Set | 3 | * | 1 | 3296-53 | Nut – Hex. | 4 | 3 | 4 |
| 92-9758 | Link – Drive | 3 | 13 | 1 | 32144-14 | Screw – HWHTF | 1 | 19 | 4 |
| 92-9759 | Asm. – End Cover | 3 | 24 | 1 | 32151-10 | Ring – Retaining | 2 | 2 | 2 |
| 92-9760 | Shaft – Coupling | 3 | 11 | 1 | 33023-00 | Nut – Lock | 5 | 7 | 1 |
| 94-5400 | Frame – ROPS Asm. | 4 | 1 | 1 | 33024-00 | Nut – Lock | 1 | 17 | 2 |
| 94-8178 | Seal Kit | 3 | * | 1 | 33113-016 | Screw – HH | 5 | 5 | 1 |
| 95-0513 | Fork – Castor | 1 | 1 | 1 | 340-14 | Fitting – Hydraulic 45° | 2 | 10 | 2 |
| 95-0514 | Asm. – Hyd. Motor & Hub | 1 | 2 | 1 | | | | | |

MAINTENANCE RECORD

| Date | | | | | | | | |
|------|--|--|--|--|--|--|--|--|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |

