



Horizon Control Module

For 96in Air Cool Z Master® Professional Riding Mower











Model No. 74090—Serial No. 40000000 and Up

Software Guide




 



 






Read this information carefully to learn how to operate and maintain your product properly and to avoid injury and product damage. You are responsible for operating the product properly and safely. Read your *Operator's Manual* for more information.





Screen Icons

The information screen uses the following icons:

 <p>Gauge and Meters</p>	 <p>Processing</p>
 <p>Advanced Settings</p>	 <p>Language</p>
 <p>Maintenance and Service</p>	 <p>Battery Voltage</p>
 <p>Fuel Level</p>	 <p>Engine Hours</p>
 <p>PTO</p>	 <p>Cancel/Exit</p>



 <p>Parking brake</p>	 <p>Toggle Between Screens</p>
 <p>Neutral Lock</p> <p>*Located in top row of the Information Screen</p>	 <p>Enter/Return</p>
 <p>Operator Presence Control (OPC)</p>	 <p>Previous</p>
 <p>Maximum Engine Speed</p>	 <p>Next</p>
 <p>Efficient Engine Speed</p>	 <p>Reset</p>
 <p>Low Engine Speed</p>	 <p>Play/Start</p>
 <p>Transmission Oil Maintenance</p>	 <p>Pause/Stop</p>

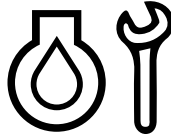  <p>Engine Oil Temperature</p>	 <p>Increase</p>
 <p>Engine Oil Maintenance</p>	 <p>Decrease</p>
<p>Y</p> <p>Yes</p>	<p>N</p> <p>No</p> <p>*Located on bottom row of some menu screens</p>

Product Overview

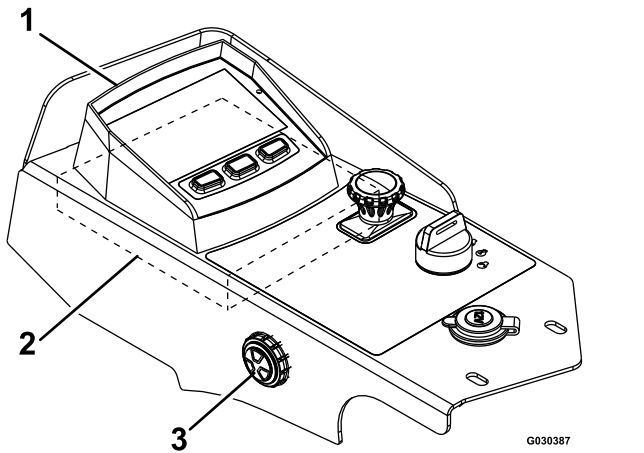


Figure 1

- 1. LDU (Logic Display Unit)
- 2. MCU (Master Control Unit)
- 3. Audible alarm

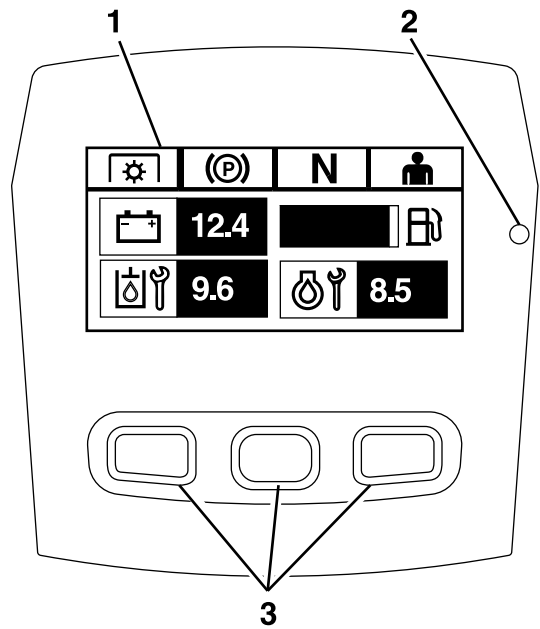


Figure 2

LDU (Logic Display Unit)

- 1. Screen
- 2. LED status light
- 3. Buttons

Screen

The screen displays icons and information relative to machine operation and is backlit for viewing in low light situations. The screen is located above the buttons.

Refer to the [Screen Icons \(page 1\)](#) section for icon descriptions.

LED Status Light

The LED status light is multi-colored to indicate the system status and is located on the right side of the panel. During startup, the LED illuminates red to orange to green to verify functionality.

- **Solid Green:** indicates normal operating activity
- **Blinking Red:** indicates that a fault is active
- **Blinking Green and Orange:** indicates that a clutch reset is required

Buttons

The multi-functional buttons are located at the bottom of the panel. The icons displayed on the information screen above the buttons indicate the current function. The buttons allow you to select the engine speed and navigate through system menus.

Alarm

If an error occurs, an error message displays, the LED turns red, and the alarm sounds audibly as follows:

- A fast chirp sound indicates critical errors.
- A slow chirping sound indicates less critical errors, such as required maintenance or service intervals.

Note: During startup, the alarm sounds briefly to verify functionality.

Information Screens

The main information screens are as follows:

- [Startup Screen \(page 4\)](#)
- [Engine-Off Screen \(page 4\)](#)
- [Engine-On Screen \(page 4\)](#)

Startup Screen

During startup, the screen displays a startup graphic for 1 second, sounds the alarm, and illuminates the LED, changing from red to orange to green.

Engine Screens

Engine-Off Screen

When the key is on without the engine running, the Engine-Off screen displays ([Figure 3](#)).

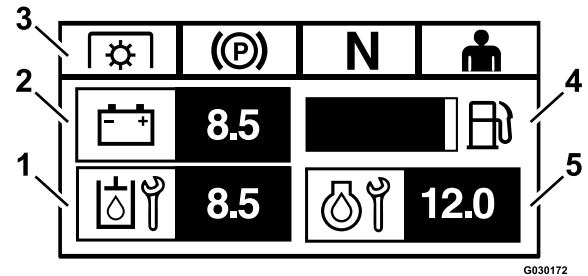


Figure 3

1. Hours remaining until transmission oil maintenance is required
2. Battery voltage display
3. Safety interlock status indicators
4. Fuel-level gauge (if fuel sender is available)
5. Screen toggles between hours remaining until engine oil maintenance and non-resettable engine hour counter

Engine-On Screen

When the engine is running, the Engine-On screen displays ([Figure 4](#)).

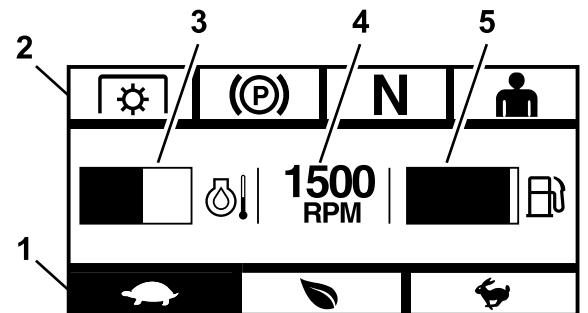


Figure 4

1. Engine speed mode
2. Safety interlock status indicators
3. Engine temperature
4. Engine speed
5. Fuel level gauge (if fuel sender is available)

Engine Speed Mode

3 modes are available: LOW, EFFICIENT, and MAXIMUM.

- **Low:** Low transport speed/Low idle for reducing deck packing in wet mowing conditions.
- **EFFICIENT:** Medium transport speed and maximum fuel economy and normal mowing conditions.
- **MAX:** Maximum transport speed/High idle for extreme mowing conditions.

The panel illuminates showing the current engine speed mode (Low is selected in [Figure 4](#)).

Safety Interlock Status Indicators

These illuminate when each control is in the starting position (i.e., PTO disengaged, parking brake engaged, motion-control levers in the NEUTRAL-LOCK position, and the operator is present).

- The PTO must be disengaged, brake engaged, and motion-control levers out (NEUTRAL-LOCK position) to start the engine. (You do not need to be in the seat to start the engine.)

Note: The starter cranks with the PTO switch in the ON (pulled up) position; however, the system disengages the PTO and a PTO reset error occurs. Engaging the PTO requires you to reset the PTO switch by turning it OFF (pushed down) and ON.

- You must be in the seat while the PTO is engaged, the parking brake must be disengaged, or the motion-control levers must be moved inward; otherwise, the engine shuts off.
- The engine shuts off if either the left, the right, or both levers are moved from NEUTRAL-LOCK position while the parking brake is engaged.

Note: Refer to the machine *Operator's Manual* to check the safety interlock system.

Engine Temperature

A bar graph displays the engine temperature. When the temperature is high and approaching an overheat condition, the bar graph flashes. When the engine has overheated, the bar graph fills completely.

Engine Speed

Displays the speed of the engine.

Fuel Level (if fuel sender is available)

The fuel level is shown on a bar display. An error appears when the fuel level is low (approximately 1 gallon remaining in the tank).

Menu Selection Screen

The Menu Selection Screen displays when you place the motion-control levers in the NEUTRAL-LOCK position and press and hold the 2 outside LDU buttons.

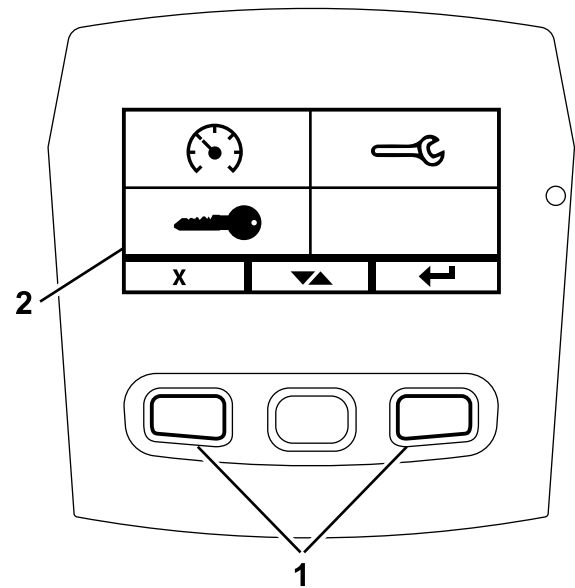


Figure 5

1. Outside buttons
2. Menu selection screen

g228165

The Menu Selection Screen allows you to cycle through the different menu options by pressing the toggle button. When the desired menu option is highlighted, press the enter button to select it.

Note: All menu options are locked if the motion-control levers are not in the NEUTRAL-LOCK position.

Press and hold the 2 outside buttons to return to the default screen.

The menu selection screen allows you to cycle through the following screens.

- [Maintenance and Service Menu \(page 6\)](#)
- [Gauges and Meters Menu \(page 8\)](#)
- [Advanced Settings Menu \(page 10\)](#)

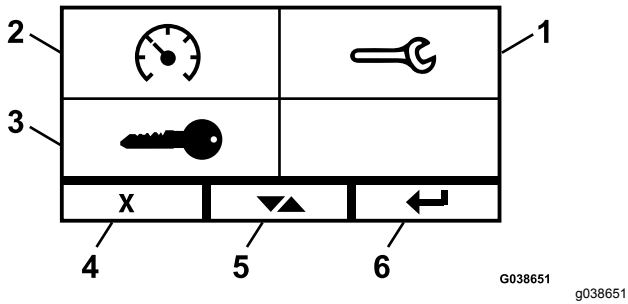


Figure 6

- | | |
|----------------------------|---------------------------|
| 1. Maintenance and Service | 4. Cancel/Exit |
| 2. Gauges and Meters | 5. Toggle between screens |
| 3. Advanced Settings | 6. Enter/Return |

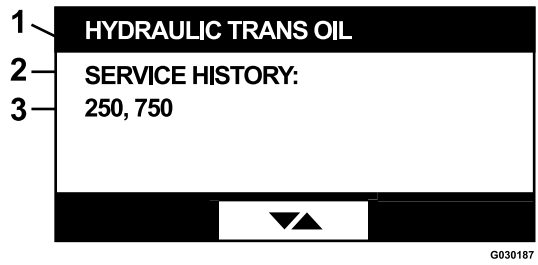


Figure 8

1. Hydraulic Trans Oil
2. Service History display
3. Service reminder reset was performed (e.g., 250 and 750 engine hours)

Maintenance and Service Menu

You can scroll between the following screens in the Maintenance and Service menu:

- [Hydraulic Transmission Oil \(page 6\)](#)
- [Engine Oil \(page 6\)](#)
- [Current Error Messages \(page 7\)](#)
- [Status of Inputs \(page 7\)](#)
- [Status of Outputs \(page 7\)](#)
- [Machine Information \(page 8\)](#)
- [Module Information \(page 8\)](#)

Hydraulic Transmission Oil

This service reminder screen displays the hours until the hydraulic transmission oil maintenance is due.

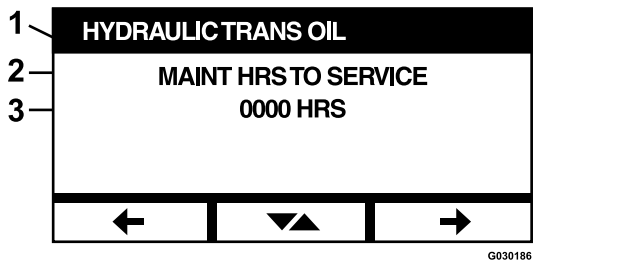


Figure 7

1. Hydraulic Trans Oil
2. Reminder display
3. Engine hours remaining until the service is due

Press the toggle button to also display the engine hours at which every service reminder reset was performed.

Engine Oil

This service reminder screen displays the hours until the engine oil maintenance is due.

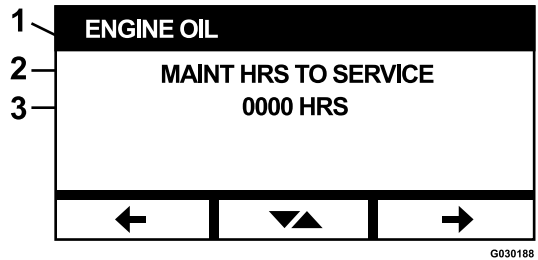


Figure 9

1. Engine Oil
2. Reminder display
3. Engine hours remaining until the service is due

Press the toggle button to also display the engine hours at which every service reminder reset was performed.

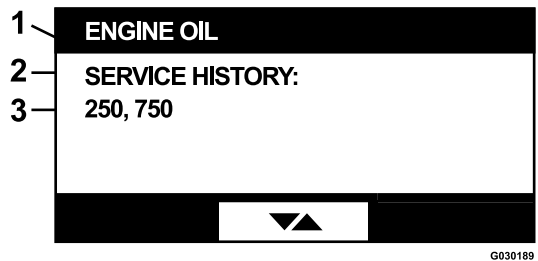


Figure 10

1. Engine oil
2. Service History display
3. Service reminder reset was performed (e.g., 250 and 750 engine hours)

Current Error Messages

This screen displays the current error as text with the engine hours at which the error occurred. The toggle button allows you to scroll between screens if multiple errors are active. If only 1 error occurs, the toggle button does not change screens.

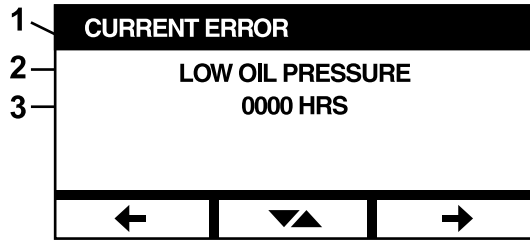


Figure 11

1. Current Error
2. Error display (e.g., Low Oil Pressure)
3. Engine hours when the error occurred

- Seat switch (highlights if on)
- Oil-pressure switch (highlights if on)
- Engine temperature (shows temperature)
- Wing Deck (if applicable—highlights if the wing decks are down and ready to mow)

Status of Outputs

This screen lists all of the outputs from the system and highlights which one is currently active. Outputs with numerical values display the current value.

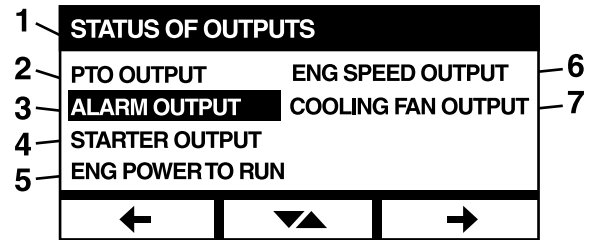


Figure 13

1. Status of outputs
2. PTO output
3. Alarm output
4. Starter output
5. Engine power to run
6. Engine speed output
7. Cooling fan output

Status of Inputs

This screen lists all of the inputs to the system and highlights which is currently active. Inputs with numerical values display the current value.

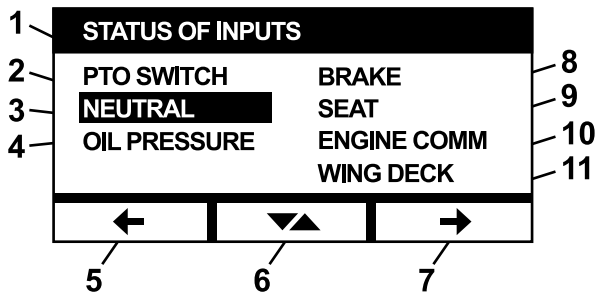


Figure 12

1. Status of Inputs
2. PTO switch
3. Neutral
4. Oil pressure
5. Previous
6. Toggle between screens
7. Next
8. Brake
9. Seat
10. Engine communication
11. Wing deck (if applicable)

The following are a list of items available in the Status of Outputs screen:

- PTO output (highlights if on)
- Alarm (highlights if on)
- Starter (highlights if on)
- Engine shutdown output (highlights if on)
- Engine speed signal shows voltage signal sent from the Horizon system to the engine ECU.
- Cooling fan output (if applicable)

The following are a list of items available in the Status of Inputs screen:

- System voltage
- Engine communication (highlights if module is communicating with the engine ECU)
- PTO switch (highlights if on)
- Fuel sender voltage (shows voltage)
- Neutral switch (highlights if on)
- Brake switch (highlights if on)

Machine Information

The screen displays the serial number and model number of the machine.

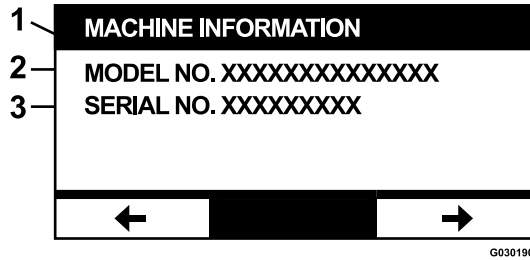


Figure 14

1. Machine Information
2. Model number
3. Serial number

Module Information

The screen displays the current installed version of software and hardware for both the LDU (Logic Display Unit) and the MCU (Master Control Unit). Select the toggle button to see the MCU screen.

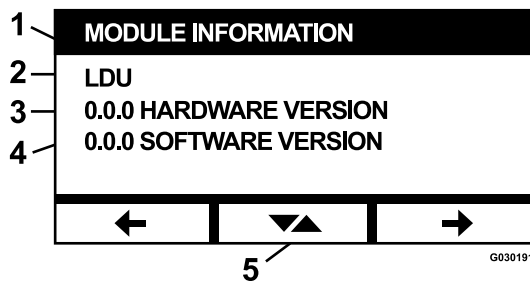


Figure 15

1. Module Information
2. LDU
3. Hardware Version
4. Software Version
5. Toggle



Figure 16

1. Module Information
2. MCU
3. Hardware Version
4. Software Version

To exit the screen, press the previous or next arrow keys. Pressing the enter button takes you back to the Menu Selection screen.

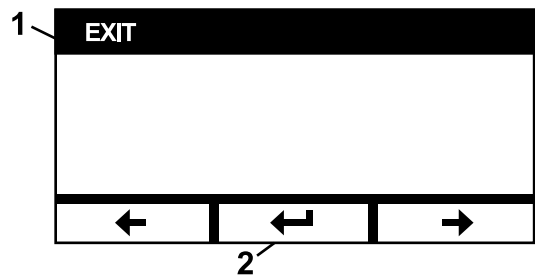


Figure 17

1. Exit
2. Enter/Return

Gauges and Meters Menu

You can scroll between the following screens in the Gauges and Meters menu:

- [Engine Hours \(page 8\)](#)
- [PTO Hours \(page 9\)](#)
- [Fuel Used \(page 9\)](#)
- [Fuel Economy \(page 9\)](#)
- [Trip Statistics \(page 9\)](#)

Engine Hours

This screen displays a non-resettable, total engine hour counter and resettable trip counter.

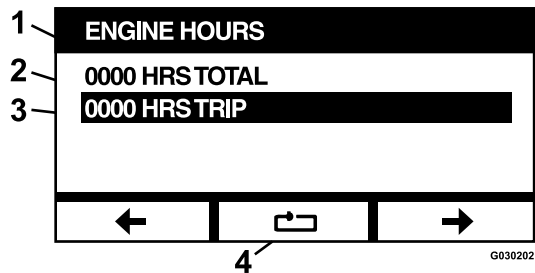


Figure 18

1. Engine Hours
2. Total hours
3. Trip hours
4. Reset trip hours

To reset the Trip hour meter, highlight the Trip hour meter and press the Reset button; to confirm the reset, press Y (yes) or N (no) to cancel (Figure 19).

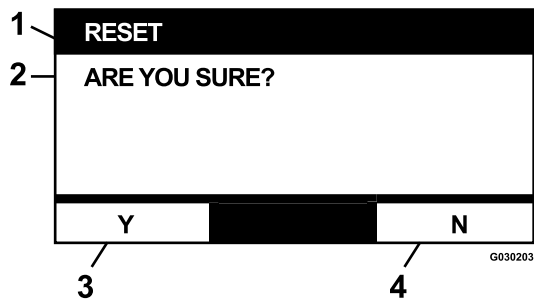


Figure 19

- 1. Reset
- 2. Are you sure?
- 3. Y (yes)
- 4. N (no)

Fuel Economy

This screen displays the US gallons/liters of fuel used per engine hour.

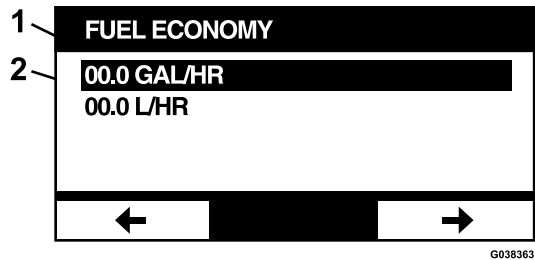


Figure 22

- 1. Fuel Economy
- 2. Displays US gallons/liters per hour

PTO Hours

This screen displays a non-resettable, total PTO hour counter and a resettable trip PTO counter.

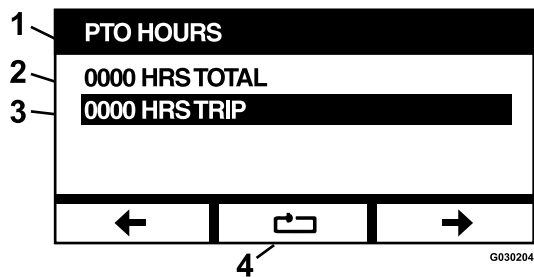


Figure 20

- 1. PTO Hours
- 2. Total hours
- 3. Trip hours
- 4. Reset trip hours

Trip Statistics

There are 5 trip statistics screens to scroll through and view.

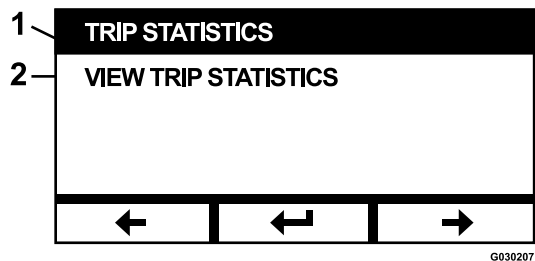


Figure 23

- 1. Trip Statistics
- 2. View trip statistics

To reset the Trip hour meter, highlight the Trip hour meter and press the Reset button; to confirm the reset, press Y (yes) or N (no) to cancel (Figure 19).

Fuel Used

This screen displays the total US gallons/liters of fuel used from the last time it was reset. Press the reset button to reset the fuel used counter.

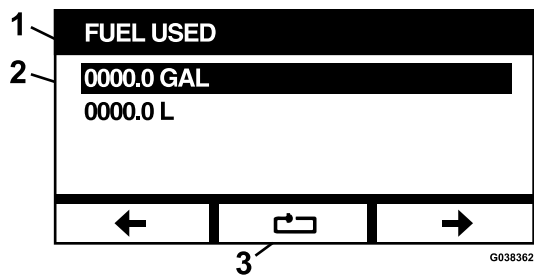


Figure 21

- 1. Fuel Used
- 2. Displays US gallons/liters used
- 3. Reset

Each screen features resettable counters for the following parameters: Engine Hours, PTO Hours, and total US gallons/liters of fuel used.

You can pause or stop the collection of statistics and play or start the collection of trip statistics. For example, when Trip Statistics 1 is paused, the statistics are highlighted and the reset button is available. Pressing the reset button resets all 3 parameters. Pressing the play button starts data collection.

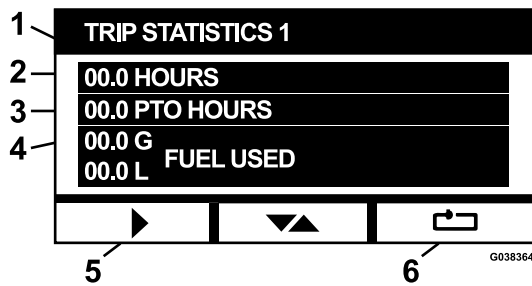


Figure 24

- | | |
|--------------------------|---------------------------------------|
| 1. Trip Statistics 1 | 4. Displays US gallons/liters of fuel |
| 2. Displays engine hours | 5. Play/Start |
| 3. Displays PTO hours | 6. Reset |

When a trip statistic is playing, the statistics are not highlighted and the reset button is blacked out and not available. Pressing the pause button stops the collection of data.

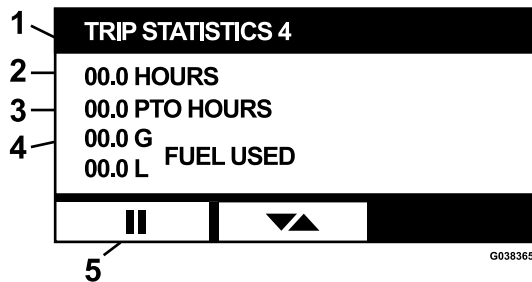


Figure 25

- | | |
|--------------------------|---------------------------------------|
| 1. Trip Statistics 4 | 4. Displays US gallons/liters of fuel |
| 2. Displays engine hours | 5. Pause/Stop |
| 3. Displays PTO hours | |

Press the toggle button on the Trip Statistics 5 screen to go back to the main Trip Statistics screen.

Advanced Settings Menu

When the advanced settings menu is selected, the module prompts you for a 4 digit passcode. The default digits on the display screen are 0 0 0 0.

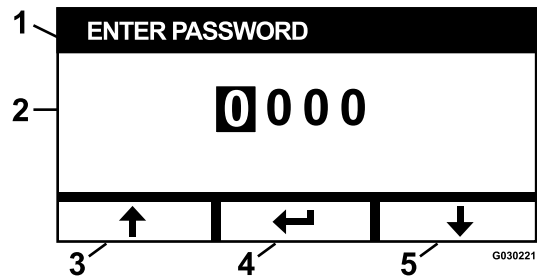


Figure 26

- | | |
|-------------------|-----------------|
| 1. Enter password | 4. Enter/Return |
| 2. Active digits | 5. Decrease |
| 3. Increase | |

The passcode is **1 9 8 2**. When the active digit is highlighted, press the increase or decrease buttons to scroll through digits from 0 to 9. Press enter to select the highlighted digit.

If you enter the incorrect password, the module takes you back to the menu select screen. When the correct password is entered, you can scroll between the following screens:

- [Hydraulic Transmission Oil \(page 10\)](#)
- [Engine Oil \(page 11\)](#)
- [Historical Error \(page 11\)](#)
- [Alarms \(page 11\)](#)
- [Engine Settings \(page 12\)](#)
- [Calibrate Engine Settings \(page 12\)](#)
- [Factory Defaults \(page 13\)](#)

Hydraulic Transmission Oil

After performing the necessary maintenance, this screen allows you to reset the number of hours until the hydraulic transmission oil service is due.

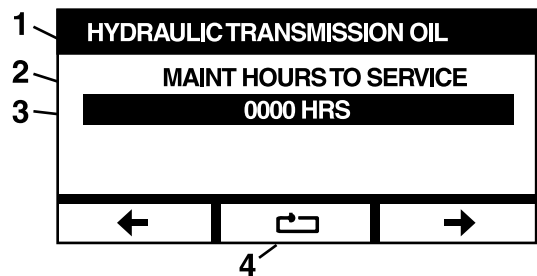


Figure 27

- | | |
|------------------------|----------------------------------|
| 1. Hydraulic Trans Oil | 3. Remaining hours until service |
| 2. Reminder display | 4. Reset |

Pressing the reset button brings up a screen asking to select a reset option.

Every time you reset the hydraulic transmission oil service reminder, the module prompts you to select whether the machine was serviced with Toro Premium Hydraulic Oil. Pressing Y (yes) or N (no) determines the correct maintenance schedule.

Engine Oil

After performing the necessary maintenance, this screen allows you to reset the number of hours until the engine oil service is due.

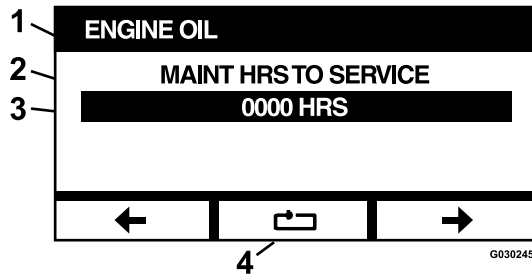


Figure 28

- | | |
|---------------------|----------------------------------|
| 1. Engine Oil | 3. Remaining hours until service |
| 2. Reminder display | 4. Reset |

Pressing the reset button brings up a screen asking to confirm the reset reminder.

Historical Error

This screen displays errors that are no longer active. The log keeps a running count of the number of times the error has occurred during the life of the machine and the engine hour at which the last occurred. The log displays the errors starting with the most recent occurrence.

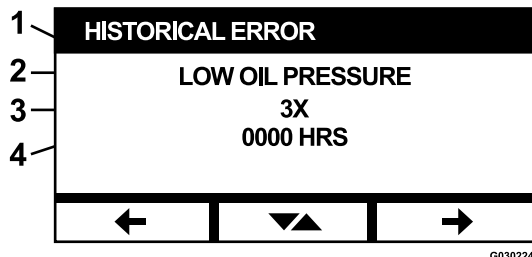


Figure 29

- | | |
|--|---|
| 1. Historical Error | 3. Number of times the error occurred during life of machine (e.g., 3X) |
| 2. Current error (e.g. Low Oil Pressure) | 4. Engine hour at which the error last occurred |

Alarms

The alarms screen allows you to activate and deactivate the audible alarm for individual errors. Press the Enter button to access individual error alarm settings.

Note: Not all audible alarms can be deactivated.

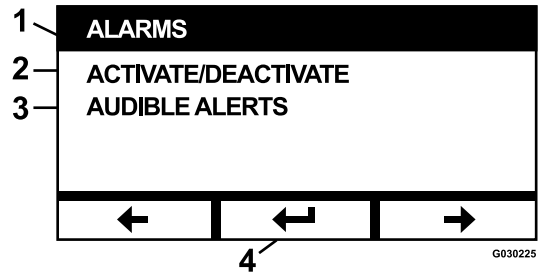


Figure 30

- | | |
|------------------------|-------------------|
| 1. Alarms | 3. Audible Alerts |
| 2. Activate/Deactivate | 4. Enter |

The highlighted error name indicates that the audible alarm is active. Pressing enter modifies the status of the audible alarm to On or Off.

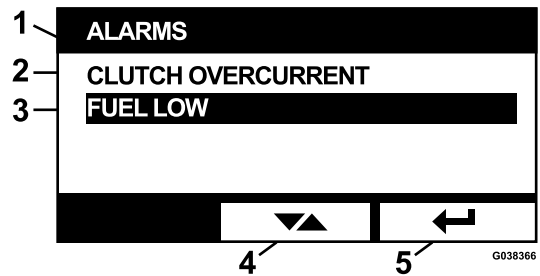


Figure 31


- | | |
|-----------------------|-----------|
| 1. Alarms | 4. Toggle |
| 2. Clutch Overcurrent | 5. Enter |
| 3. Fuel Low | |

You can deactivate the audible warning for the following errors:

- Service Air Filter
- Service Engine Oil
- Service Transmission Oil
- Trans Over Temp
- Fuel Low
- Clutch Overcurrent
- Clutch Reset Required
- Engine Error Codes
- System Overvoltage>16VDC
- System Undervoltage<9VDC
- System Voltage Low
- Anti-Stall

Engine Settings

This screen allows you to adjust the engine speed at the **Maximum**, **Efficient**, and **Low** set points for both transport (clutch disengaged) and mow (clutch engaged) modes in 50 rpm increments.

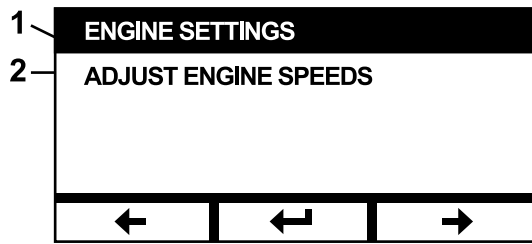


G030227

g030227

Figure 32

1. Engine Settings
2. Adjust Engine Speeds

Pressing the up arrow increases the engine speed while pressing the down arrow decreases the engine speed. Pressing the Enter button confirms the speed and automatically moves you to the next screen/engine speed set point.

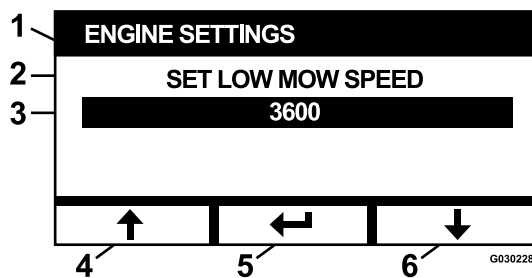

G030228

g030228

Figure 33

1. Engine Settings
2. Set Low Mow Speed
3. Engine speed in rpm (e.g., 3,600 rpm)
4. Up arrow—Increase
5. Enter
6. Down arrow—Decrease


The system does not allow the following to occur:

- The efficient speed cannot be set higher than the maximum speed.
- The low speed cannot be set higher than the efficient speed.

Note: You can set the maximum speed equal to the efficient mow speed to use the efficient mode while mowing.

Calibrate Engine Settings

This screen allows the calibration of the actual engine speed to match the commanded engine speed. The enter button blacks out if the blades are not disengaged, the parking brake is not engaged, and the motion-control levers are not in the NEUTRAL-LOCK position. Once they are, press the Enter button to start the calibration process.

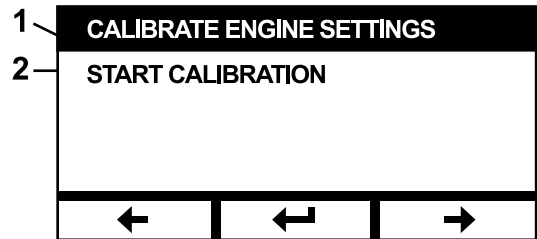


G030234

g030234

Figure 34

1. Calibrate Engine Settings
2. Start Calibration

An animated hourglass appears indicating the calibration is in process.

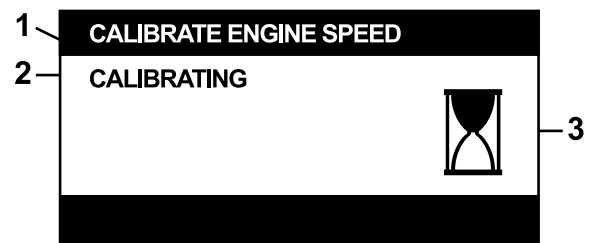


G030235

g030235

Figure 35

1. Calibrate Engine Speed
2. Calibrating
3. Processing

Once the calibration is complete, you can toggle back to the primary Calibrate Engine Speed screen.

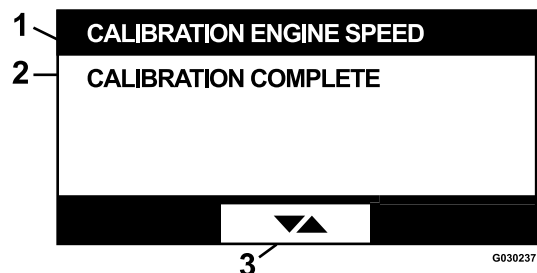

G030237

g030237

Figure 36

1. Calibration Engine Speed
2. Calibration Complete
3. Toggle between screens

Factory Defaults

This screen allows you to reset system settings back to the factory default settings. Pressing the Enter button brings up confirmation screen; press Y (yes) to reset or N (no) to cancel.

Note: Resetting the system returns the engine speed settings and alarm settings back to the factory default settings.

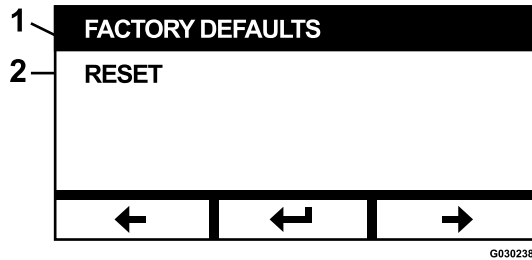


Figure 37

1. Factory Defaults
2. Reset

When the exit screen appears, press the enter button to go back to the Menu Selection screen.

Returning to the Default Screen (Engine-On or Engine-Off)

There are 3 ways to return to the default screen:

- Press the previous or next arrow keys until the Exit screen appears then press the Enter button to return to the Menu Selection screen.
- Turn the ignition key to the OFF position and either restart the engine or turn the key to the ON position.
- Press and hold the 2 outside buttons.

Setting Engine Speeds

At startup, the system defaults to the Low engine speed. The icon on the information screen is highlighted.

- Press the button below the Efficient Speed Mode icon to increase the engine speed to the Efficient engine speed.
The Efficient Speed Mode icon is highlighted.
- Press the button below the Maximum Speed Mode icon to increase the engine speed to the maximum engine speed.
The Maximum Speed Mode icon is highlighted.

Note: If you engage the PTO switch at any speed setting, the engine speed increases to the mow speed.

Adjusting the Electronically-Controlled Low Mode Speed Adjustment

When operating in low mow mode, press and hold the Low Speed Mode button reduce the engine speed (minimum of 2,250 rpm). Press the Low Speed Mode button again to return the engine to the default setting.

Auto Idle Down Mode

If the operator leaves the seat and the safety interlocks allow the engine to remain running, the system enters the auto idle mode and automatically set the engine speed to the low transport speed. When you return to the seat, the system automatically returns to the previously selected engine speed mode. If you select another engine speed setting, the system exits the auto idle mode and the engine runs at the selected speed.

Error Messages

If an error occurs, a message displays in place of the engine temperature, engine speed, and fuel level. In addition to displaying the fault as text, the system turns the LED red and sounds the audible alarm.

- The system is capable of displaying the following errors:
 - **Service Engine Oil:** engine oil maintenance is required.
 - **Service Transmission Oil:** transmission oil maintenance is required.
 - **Low Oil Pressure:** low engine oil pressure is detected.
 - **Fuel Low:** fuel level is low
 - **Engine Over Temperature:** engine over temperature detected.
 - **System Overvoltage>16VDC:** system voltage is too high (greater than 16 V).
 - **System Undervoltage<9VDC:** system voltage is too low (greater than 9 V).
 - **Clutch Overcurrent:** cutting clutch current is too high.
 - **Clutch Reset Required:** indicates that the PTO switch must be turned off and then on to reactivate the PTO clutch. It may also indicate that the wing deck switch has been tripped (if applicable).

- **Engine Error Codes:** the system displays engine error codes provided by the engine manufacturer.
- **Clutch Output Fault:** clutch output is open or shorted.
- **System Voltage Low:** voltage is too low (less than 12.3 V).
- **Engine Communication Error:** communication lost between the engine and module.
- **Module Communication Error:** communication is lost between the LDU and MCU modules.
- **Anti-Stall Active:** the mower deck has been disengaged in order to prevent the engine stalling.
- **Wing Deck Interlock Fault (applicable models):** the signal from the deck sensors indicates that the wing deck has not been fully lowered.
- You can acknowledge and silence some of the errors listed above. Move the motion-control levers to the NEUTRAL-LOCK position and press and hold the middle button.

Acknowledging an error removes the error message from the engine temperature, engine speed, or fuel level icon area and silence the audible alarm. However, the error continues to display on the active error screen in the Maintenance and Service Menu and the status LED continues to be illuminated red.

- The following errors emit a slow chirping sound that you can acknowledge and silence:
 - ◇ **Service Engine Oil**
 - ◇ **Service Transmission Oil**
 - ◇ **Fuel Low**
 - ◇ **Clutch Overcurrent**
 - ◇ **Clutch Reset Required**
 - ◇ **Engine Error Codes**
 - ◇ **Anti-Stall Active**
- The following errors emit a fast chirping sound and can be acknowledged and silenced:
 - ◇ **System Overvoltage>16VDC**
 - ◇ **System Undervoltage<9VDC**
- The following error codes emit a fast chirping sound and cannot be acknowledged or silenced.
 - ◇ **Low Oil Pressure**
 - ◇ **Engine Over Temperature**
 - ◇ **Engine Communication Error**
 - ◇ **Module Communication Error**

◇ **Clutch Output Failure**

- In order to protect the system components from exceeding threshold limits, the system limits the engine speed and/or disengages the clutch, which allows you to drive the machine onto a trailer or return to a service area.

These are the following errors that may occur:

1. **Clutch Overcurrent**

If an overcurrent event occurs, the system limits the engine speed to the Efficient Transport Mode speed and places the machine in Safe Transport Mode. Safe Transport Mode limits the engine speed, locks out the PTO, and disengages the clutch; a Clutch Overcurrent error message will display. Cycling the key switch to the OFF and then to the ON position clears the fault.

2. **System Overvoltage>16VDC**

If the voltage exceeds 16 V, the system will disengage the clutch and displays a System Overvoltage>16VDC error message.

3. **System Undervoltage<9VDC**

If the voltage is less than 9 V, the system will not allow clutch engagement and display the error System Undervoltage<9VDC. If the clutch was engaged before the error occurred, the system allows the clutch to remain engaged; however, low voltage may cause the clutch to disengage itself.

4. **Low Oil Pressure**

If low engine-oil pressure is detected, the system limits engine speed to the Efficient Transport Mode speed and places the machine in Safe Transport Mode. Safe Transport Mode limits the engine speed, locks out the PTO, and disengages the clutch; a Low Oil Pressure message will display. Cycling the key switch to the OFF and then to the ON position clears the fault.

5. **Engine Over Temperature**

When the engine begins to overheat, the system flashes the engine temperature bar graph and chirps the audible alarm. If the temperature rises above the upper limit, the system limits the engine speed to the Efficient Transport Mode speed and places the machine in Safe Transport Mode. Safe Transport Mode limits the engine speed, locks out the PTO, and disengages the clutch; an Engine Over Temperature message displays. The fault clears once the temperature falls below a safe limit.

Troubleshooting

System Error Message	Status LED	System Actions	Issue Description	Recommended Corrective Action
Service the Engine Oil	Blink Red		The engine oil service is due.	Replace the engine oil and filter. Follow the reset procedure; refer to Engine Oil (page 11) .
Service the Transmission Oil	Blink Red		The transmission oil service is due.	Replace the transmission oil and filter(s). Follow the reset procedure; refer to Hydraulic Transmission Oil (page 10)
Low Oil Pressure	Blink Red	Safe Transport Mode—engine limited to Efficient mode and the PTO is disengaged.	The engine-oil pressure is below limit.	Cycle the key switch to clear the fault. Check the oil level. Contact an Authorized Service Dealer.
	Green	Single alarm chirp and engine temperature display flashes.	The engine temperature is high.	Check the oil level. Clean debris from the engine. Inspect the engine fan. Contact an Authorized Service Dealer.
Engine Over Temperature	Blink Red	Safe Transport Mode—engine limited to Efficient mode and the PTO is disengaged.	The engine temperature is above limit.	Check the oil level. Clean debris from the engine. Inspect the engine fan. Contact an Authorized Service Dealer.
Fuel Low	Blink Red		The fuel level is low.	Check the fuel level and add fuel as necessary.
System Overvoltage >16VDC	Blink Red	Disallow clutch engagement/ Disengage the clutch.	The system voltage is excessive (above 16 V).	Check the battery and engine charging system. Contact an Authorized Service Dealer.
System Voltage Low	Blink Red		System voltage below 12.3 V.	Check the battery and engine charging system. Contact an Authorized Service Dealer.
System Under voltage <9VDC	Blink Red	Disallow clutch engagement/ Disengage clutch.	The system voltage is below the lower limit of 9 V.	Check the battery and engine charging system. Contact an Authorized Service Dealer.
Clutch Overcurrent	Blink Red	Safe Transport Mode—engine limited to Efficient mode and the PTO is disengaged.	The clutch current is above the limit.	Cycle the key switch to clear the fault. Check the PTO clutch condition and the related wiring. Contact an Authorized Service Dealer.
Clutch Reset Required	Alternating green/orange		The PTO switch is engaged and the module has latched the clutch output Off.	Cycle the PTO switch to the OFF position and back to the ON position to engage the clutch.
Clutch Output Fault	Blink Red		The clutch output has a short or is open.	If the clutch is stuck in the ON position, discontinue use and contact an Authorized Service Dealer. Check the clutch connection and associated wiring for an open circuit.
Engine MIL Errors	Blink Red		The ECU has detected a fault.	See the engine owner's manual for the error description and troubleshooting information.
Engine Communication Error	Blink Red		The communication between the module and the engine ECU has been lost.	Check the electrical connections at the module, interconnect between the engine wire harness, and chassis harness. Check the connections at the engine ECU. Contact an Authorized Service Dealer.

System Error Message	Status LED	System Actions	Issue Description	Recommended Corrective Action
Module Communication Error	Blink Red	Safe Transport Mode—engine limited to Efficient mode and the PTO is disengaged.	The communication between the LDU module and MCU module has been lost.	Check the electrical connections at the LDU and MCU module.
Anti-Stall Active	Blink Red	PTO disengaged, error displayed.	Engine speed drops below operating limit.	Wait for the engine speed to recover, then cycle the PTO switch to the OFF position and then to the ON position to engage the clutch. If the problem persists, turn the key to the OFF position and inspect the mower deck and engine for debris.
Wing Deck Interlock Fault (for applicable models)	Blink Red	Disallow clutch engagement / Disengage clutch	Wing deck not fully deployed.	Deploy the wing deck, then cycle the PTO switch to the OFF position and then to the ON position to engage the clutch. Contact an Authorized Service Dealer.