



Form No. 3439-211 Rev A

**Count on it.**

# Parts Catalog

## **Groundsmaster® 360**

**4-Wheel Drive Multi-Purpose Machine with Cab**

Model No. 31202—Serial No. 405700000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

 
For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                                        |    |
|------------------------------------------------------------------------|----|
| Frame and Rear Axle Assembly .....                                     | 5  |
| Lift Shaft and Linkage Assembly .....                                  | 6  |
| Hydraulic Cylinder Assembly No. 110-9834 .....                         | 7  |
| Rear Frame Components Assembly .....                                   | 8  |
| 4 Wheel Drive Steering Assembly .....                                  | 9  |
| Front Cover Assembly .....                                             | 10 |
| Front Axle and Tie Rod Assembly .....                                  | 12 |
| Front Axle Assembly No. 125-2825 .....                                 | 14 |
| Hydraulic Cylinder Assembly No.125-2835 .....                          | 15 |
| Rear Steering Assembly .....                                           | 16 |
| Steering Column Assembly .....                                         | 18 |
| Steering Column Assembly No. 117-3371 .....                            | 19 |
| Steering Valve Assembly No. 130-7948 .....                             | 20 |
| Fuel Tank Assembly .....                                               | 21 |
| Fuel Tank Assembly No. 131-1920 .....                                  | 22 |
| Seat Plate Assembly .....                                              | 23 |
| 4 Wheel Drive Control Panel Assembly .....                             | 24 |
| Brake Pedal Assembly .....                                             | 26 |
| Wheel and Brake Assembly .....                                         | 28 |
| Left Hand Brake Assembly No. 120-0235 .....                            | 29 |
| Right Hand Brake Assembly No. 120-0233 .....                           | 30 |
| 4 Wheel Drive Hydraulic Motor and Fitting Assembly .....               | 31 |
| Hydraulic Motor Assembly No. 120-6718 (CCW) .....                      | 32 |
| Hydraulic Motor Assembly No. 120-6719 (CW) .....                       | 33 |
| Cab Wire Harness Assembly .....                                        | 34 |
| Electrical Assembly .....                                              | 36 |
| Wire Harness Assembly No. 122-1427 .....                               | 38 |
| Wire Harness Assembly No. 119-4375 .....                               | 40 |
| Engine Assembly .....                                                  | 42 |
| Transmission Component Assembly .....                                  | 43 |
| Charge Pump Housing Assembly Transmission Assembly No. 125-9290 .....  | 44 |
| Center Section Assembly Transmission Assembly No. 125-9290 .....       | 46 |
| Gear Case and Clutch Assembly Transmission Assembly No. 125-9290 ..... | 48 |
| Driveshaft Assembly No. 110-3575 .....                                 | 50 |
| Radiator Component Assembly .....                                      | 51 |
| Radiator and Cooler Assembly .....                                     | 52 |
| Muffler Component Assembly .....                                       | 53 |
| Battery and Fuel Delivery Assembly .....                               | 54 |
| Air Cleaner Assembly .....                                             | 55 |
| Traction Pedal Assembly .....                                          | 56 |
| Neutral System Assembly .....                                          | 58 |
| Hood Assembly .....                                                    | 60 |
| Deck Lift Valve and Hydraulic Fitting Assembly .....                   | 62 |
| Hydraulic Gear Pump Assembly No. 115-0375 .....                        | 64 |
| Valve Assembly No. 131-1934 .....                                      | 65 |
| 4 Wheel Drive Hydraulic Hose Assembly .....                            | 66 |
| Hydraulic Valve Assembly .....                                         | 68 |
| Steering Selector Valve Assembly No. 115-0280 .....                    | 69 |
| Cross-Trax Traction Valve Assembly No. 117-2247 .....                  | 70 |
| Steering and Traction Hose Assembly .....                              | 71 |
| Cab Mounting Assembly .....                                            | 72 |
| Foam Assembly .....                                                    | 74 |
| Yanmar Air Conditioner Assembly .....                                  | 76 |
| Seat Assembly .....                                                    | 78 |

## Contents (continued)


|                                                           |     |
|-----------------------------------------------------------|-----|
| Seat Assembly No. 117-3096 .....                          | 80  |
| Cloth Air Ride Seat Assembly No. 117-3097 .....           | 82  |
| Cab Cable Tie Assembly .....                              | 84  |
| A/C Compressor Guard Assembly .....                       | 86  |
| Cab Frame, Mount and Seal Assembly .....                  | 88  |
| Cab Headliner Assembly .....                              | 90  |
| Air Conditioning Duct Assembly No. 132-3468 .....         | 92  |
| Fan Panel Assembly No. 132-3488 .....                     | 94  |
| Window Assembly .....                                     | 96  |
| Tier 4 Engine Hose Routing Assembly .....                 | 98  |
| Pre-Filter Screen Assembly .....                          | 100 |
| Rear Window Assembly .....                                | 102 |
| Door Assembly .....                                       | 104 |
| LH Door Assembly .....                                    | 106 |
| RH Door Assembly .....                                    | 108 |
| Half Door Assembly .....                                  | 110 |
| Roof and Headliner Assembly .....                         | 112 |
| Headliner Wire Harness and Control Assembly .....         | 114 |
| Mixing Box Mounting Bracket and Water Tray Assembly ..... | 116 |
| Blower Fan and Evaporator Core Assembly .....             | 118 |
| Heat/Air Conditioner Housing Assembly .....               | 120 |
| Air Diverter and Expansion Valve Assembly .....           | 122 |
| Air Diverter Assembly No. 121-8369 .....                  | 124 |
| Cylinder Block Assembly .....                             | 126 |
| Gear Housing Assembly .....                               | 128 |
| Flywheel Housing and Oil Sump Assembly .....              | 129 |
| Cylinder Head and Cover Assembly .....                    | 130 |
| Suction Manifold Assembly .....                           | 132 |
| Exhaust Manifold Assembly .....                           | 133 |
| Diesel Particulate Filter Assembly .....                  | 134 |
| Camshaft and Driving Gear Assembly .....                  | 136 |
| Crankshaft and Piston Assembly .....                      | 138 |
| Lubrication and Oil System Assembly .....                 | 139 |
| Cooling Water System Assembly .....                       | 140 |
| Fuel System Assembly .....                                | 142 |
| Fuel Injection Valve Assembly .....                       | 144 |
| Fuel Pipe Assembly .....                                  | 145 |
| Starting Motor Assembly .....                             | 146 |
| Generator Assembly .....                                  | 148 |
| Electronic Control Unit Assembly .....                    | 150 |
| Electric Parts Assembly .....                             | 151 |
| Gasket Set .....                                          | 152 |
| Attachments and Accessories .....                         | 154 |

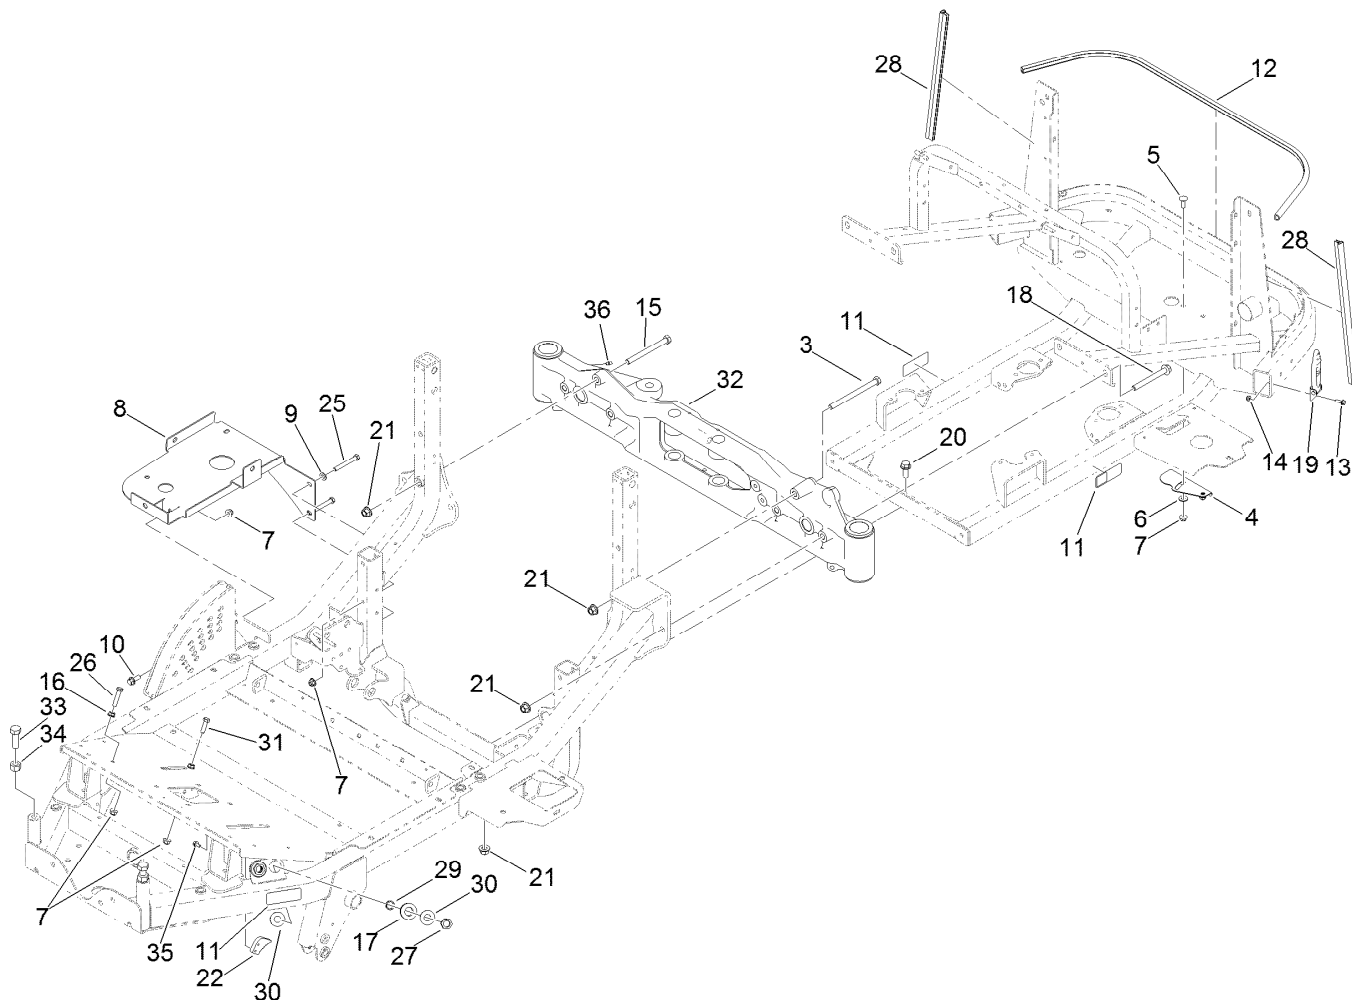

## Frame and Rear Axle Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 3    | 325-33      | 1    | Screw-HH                |
| 4    | 117-3190    | 1    | Cover-Lower             |
| 5    | 3231-22     | 2    | Screw-CARR              |
| 6    | 66-2920     | 2    | Washer-Friction         |
| 7    | 104-8301    | 7    | Nut-HF, NI              |
| 8    | 117-3385-0P | 1    | Bracket-Tank, Hydraulic |
| 9    | 3256-24     | 2    | Washer-Flat             |
| 10   | 3234-24     | 1    | Screw-HHF               |
| 11   | 106-9206    | 4    | Decal-Torque, Wheel     |
| 12   | 117-3311    | 1    | Seal-Bulb               |
| 13   | 3234-4      | 2    | Screw-HHF               |
| 14   | 104-7201    | 2    | Nut-HF                  |
| 15   | 325-22      | 1    | Screw-HH                |
| 16   | 3290-357    | 2    | Nut-HHF, Whiz           |
| 17   | 240-4       | 2    | Grommet-Rubber          |
| 18   | 117-3176    | 4    | Screw-HHF               |

 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 19   | 103-2898    | 2    | Latch-Rubber   |
| 20   | 3234-38     | 3    | Screw-HHF      |
| 21   | 99-5107     | 9    | Nut-Lock       |
| 22   | 99-7214     | 1    | Pawl-Brake     |
| 25   | 323-14      | 2    | Screw-HH       |
| 26   | 323-53      | 1    | Screw-HH       |
| 27   | 340-70      | 2    | Nut-Lock       |
| 28   | 107-2269    | 2    | Seal-Bulb      |
| 29   | 69-8970     | 2    | Spacer         |
| 30   | 69-8940     | 4    | Washer         |
| 31   | 323-7       | 1    | Screw-HH       |
| 32   | 131-1931    | 1    | Rear Axle ASM  |
| 33   | 327-6       | 2    | Screw-HH       |
| 34   | 3217-11     | 2    | Nut-Hex        |
| 35   | 3234-13     | 2    | Screw-HHF      |
| 36   | 302-5       | 2    | Fitting-Grease |

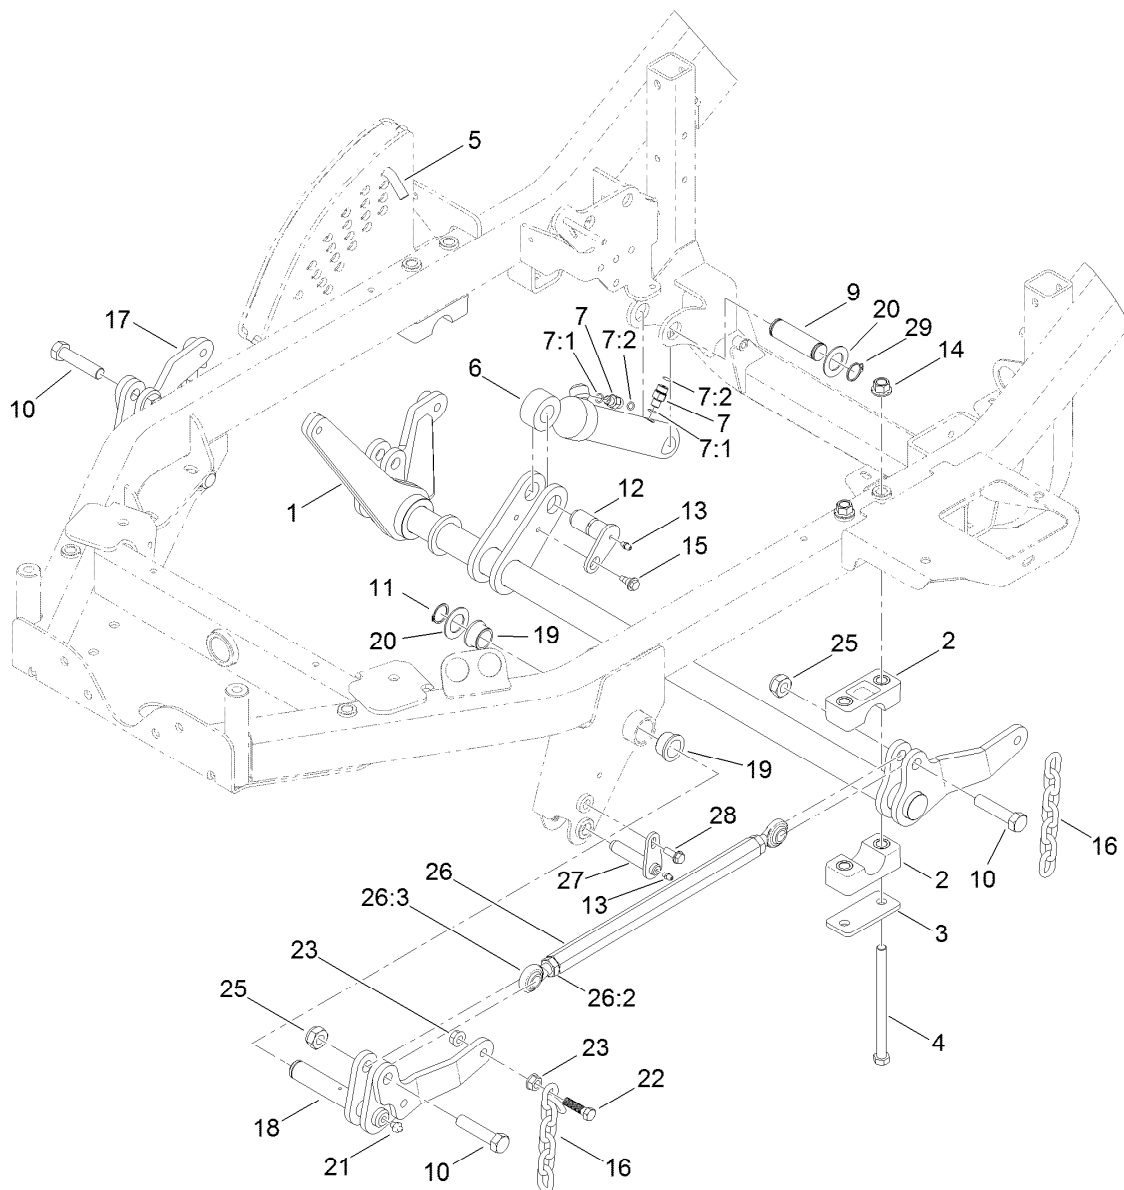

## Lift Shaft and Linkage Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 115-0190-03 | 1    | Shaft-Lift           |
| 2    | 115-0491    | 4    | Cap-Bearing          |
| 3    | 117-2903    | 2    | Plate-Bearing        |
| 4    | 325-37      | 4    | Screw-HH             |
| 5    | 112-9544    | 1    | Pin-HOC              |
| 6    | 110-9834    | 1    | HYD Cylinder ASM     |
| 7    | 340-92      | 2    | Fitting-Straight     |
| 7:1  | 237-78      | 1    | O-Ring               |
| 7:2  | 237-21      | 1    | O-Ring               |
| 9    | 115-0183    | 1    | Shaft-Cylinder, Lift |
| 10   | 327-8       | 4    | Screw-HH             |
| 11   | 32151-29    | 2    | Ring-Retaining       |
| 12   | 125-1910    | 1    | Pin-Pivot            |
| 13   | 302-5       | 3    | Fitting-Grease       |
| 14   | 99-5107     | 4    | Nut-Lock             |
| 15   | 99-5105     | 1    | Screw-Shoulder       |

 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 16   | 119-1385    | 4    | Chain-HOC           |
| 17   | 119-1380-03 | 1    | Lift-RH             |
| 18   | 119-1383-03 | 1    | Lift-LH             |
| 19   | 114-5680    | 4    | Bushing-Flange      |
| 20   | 69-9010     | 4    | Washer              |
| 21   | 302-2       | 2    | Fitting-Grease      |
| 22   | 103-1898    | 4    | Screw-HH            |
| 23   | 32128-37    | 8    | Nut-HF              |
| 25   | 3296-61     | 4    | Nut-Lock            |
| 26   | 114-4059    | 2    | Link ASM            |
| 26:2 | 3220-6      | 2    | Nut-Jam             |
| 26:3 | 1-633029    | 2    | Balljoint-Spherical |
| 27   | 112-1602    | 2    | Pin-Retainer        |
| 28   | 32144-41    | 2    | Screw-Taptite       |
| 29   | 32151-36    | 2    | Ring-Retaining      |

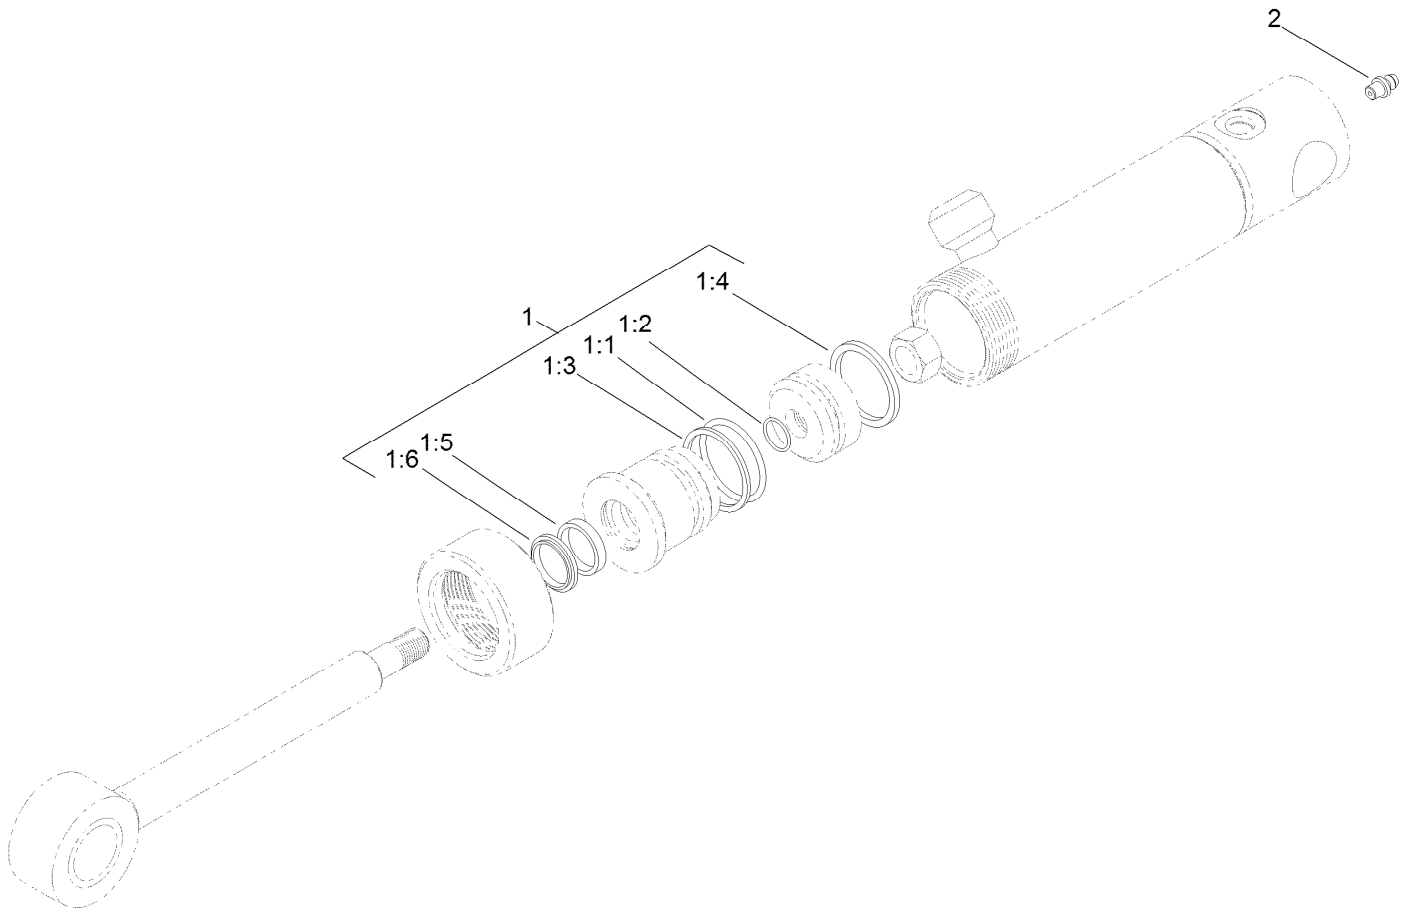

## Hydraulic Cylinder Assembly No. 110-9834

| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 1    | 112-6353    | 1    | Seal Kit       |
| 1:1  |             | 1    | O-Ring ●       |
| 1:2  |             | 1    | O-Ring ●       |
| 1:3  |             | 1    | Backup ●       |
| 1:4  |             | 1    | Seal-Bp ●      |
| 1:5  |             | 1    | Seal-Rod ●     |
| 1:6  |             | 1    | Seal-Dust ●    |
| 2    | 302-60      | 1    | Fitting-Grease |

 
● Not serviced separately

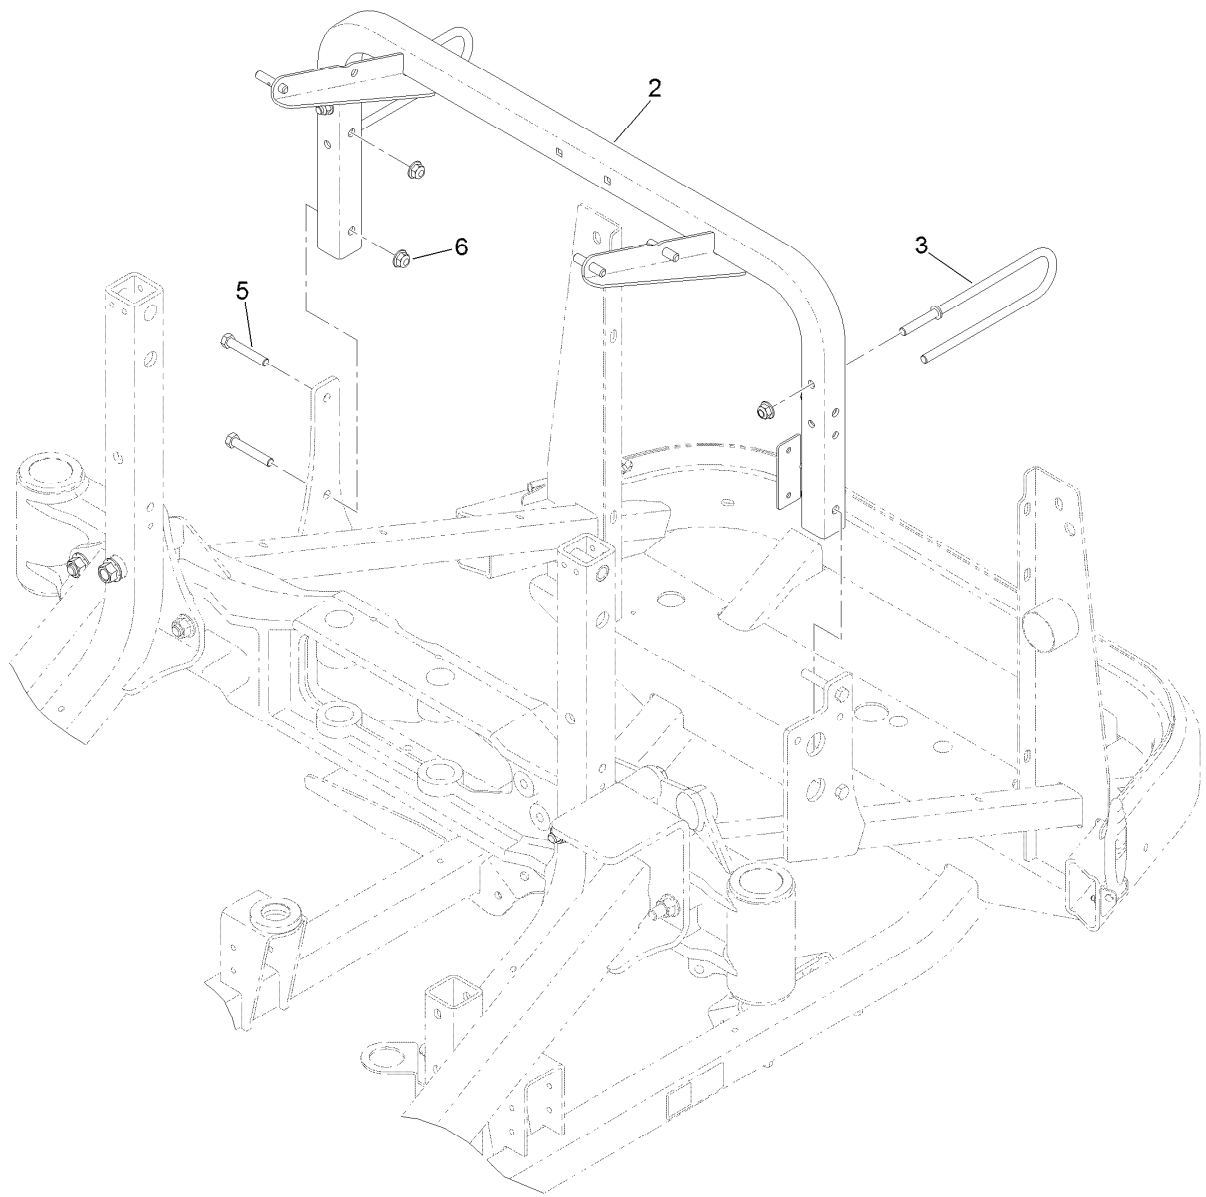

## Rear Frame Components Assembly
 
| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 2    | 125-9202-03 | 1    | Tube-Cross  |
| 3    | 127-4853    | 2    | Guide-Hose  |
| 5    | 323-45      | 4    | Screw-HH    |
| 6    | 104-8301    | 6    | Nut-HF, NI  |



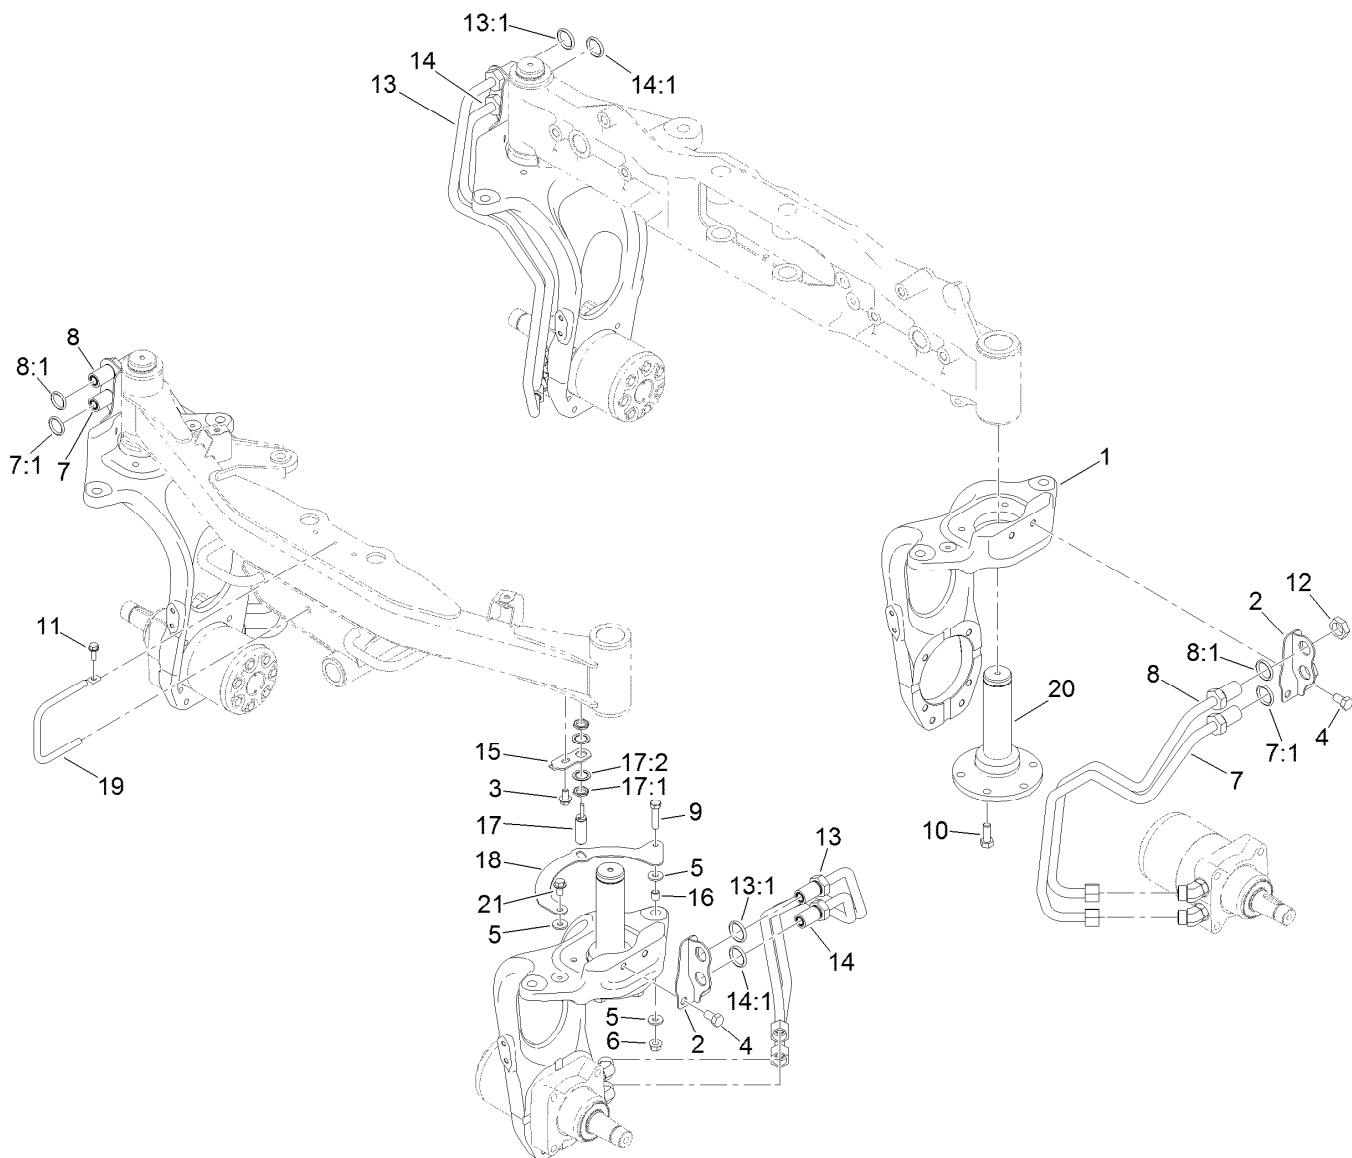


## 4 Wheel Drive Steering Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 117-2951    | 4    | Base-Fork, Steer   |
| 2    | 132-6556-03 | 4    | Bracket-Bulkhead   |
| 3    | 110-9380    | 1    | Screw-HWH          |
| 4    | 325-3       | 8    | Screw-HH           |
| 5    | 5-0838      | 3    | Washer             |
| 6    | 32128-21    | 1    | Nut-HF Lock        |
| 7    | 117-2948    | 2    | Upper Tube ASM     |
| 7:1  | 237-65      | 1    | O-Ring             |
| 8    | 117-2949    | 2    | Lower Tube ASM     |
| 8:1  | 237-65      | 1    | O-Ring             |
| 9    | 323-8       | 1    | Screw-HH           |
| 10   | 117-3266    | 20   | Screw-HH           |
| 11   | 32144-41    | 1    | Screw-Taptite      |
| 12   | 340-74      | 8    | Nut-Lock, Bulkhead |

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 13   | 117-2946    | 2    | Upper Tube ASM              |
| 13:1 | 237-65      | 1    | O-Ring                      |
| 14   | 117-2947    | 2    | Lower Tube ASM              |
| 14:1 | 237-65      | 1    | O-Ring                      |
| 15   | 119-1413    | 1    | Bracket-Sensor              |
| 16   | 103-1166    | 1    | Spacer-Tube, Pump Link      |
| 17   | 115-5300    | 1    | Proximity Switch ASM        |
| 17:1 | 117-3207    | 2    | Nut-Hex                     |
| 17:2 | 117-3208    | 2    | Washer-Lock, Internal Tooth |
| 18   | 117-2216-03 | 1    | Bracket-Target              |
| 19   | 117-3178    | 1    | Rod-Guide                   |
| 20   | 117-3361    | 4    | Spindle-Steer               |
| 21   | 3234-47     | 1    | Screw-HHF                   |
 
# Front Cover Assembly

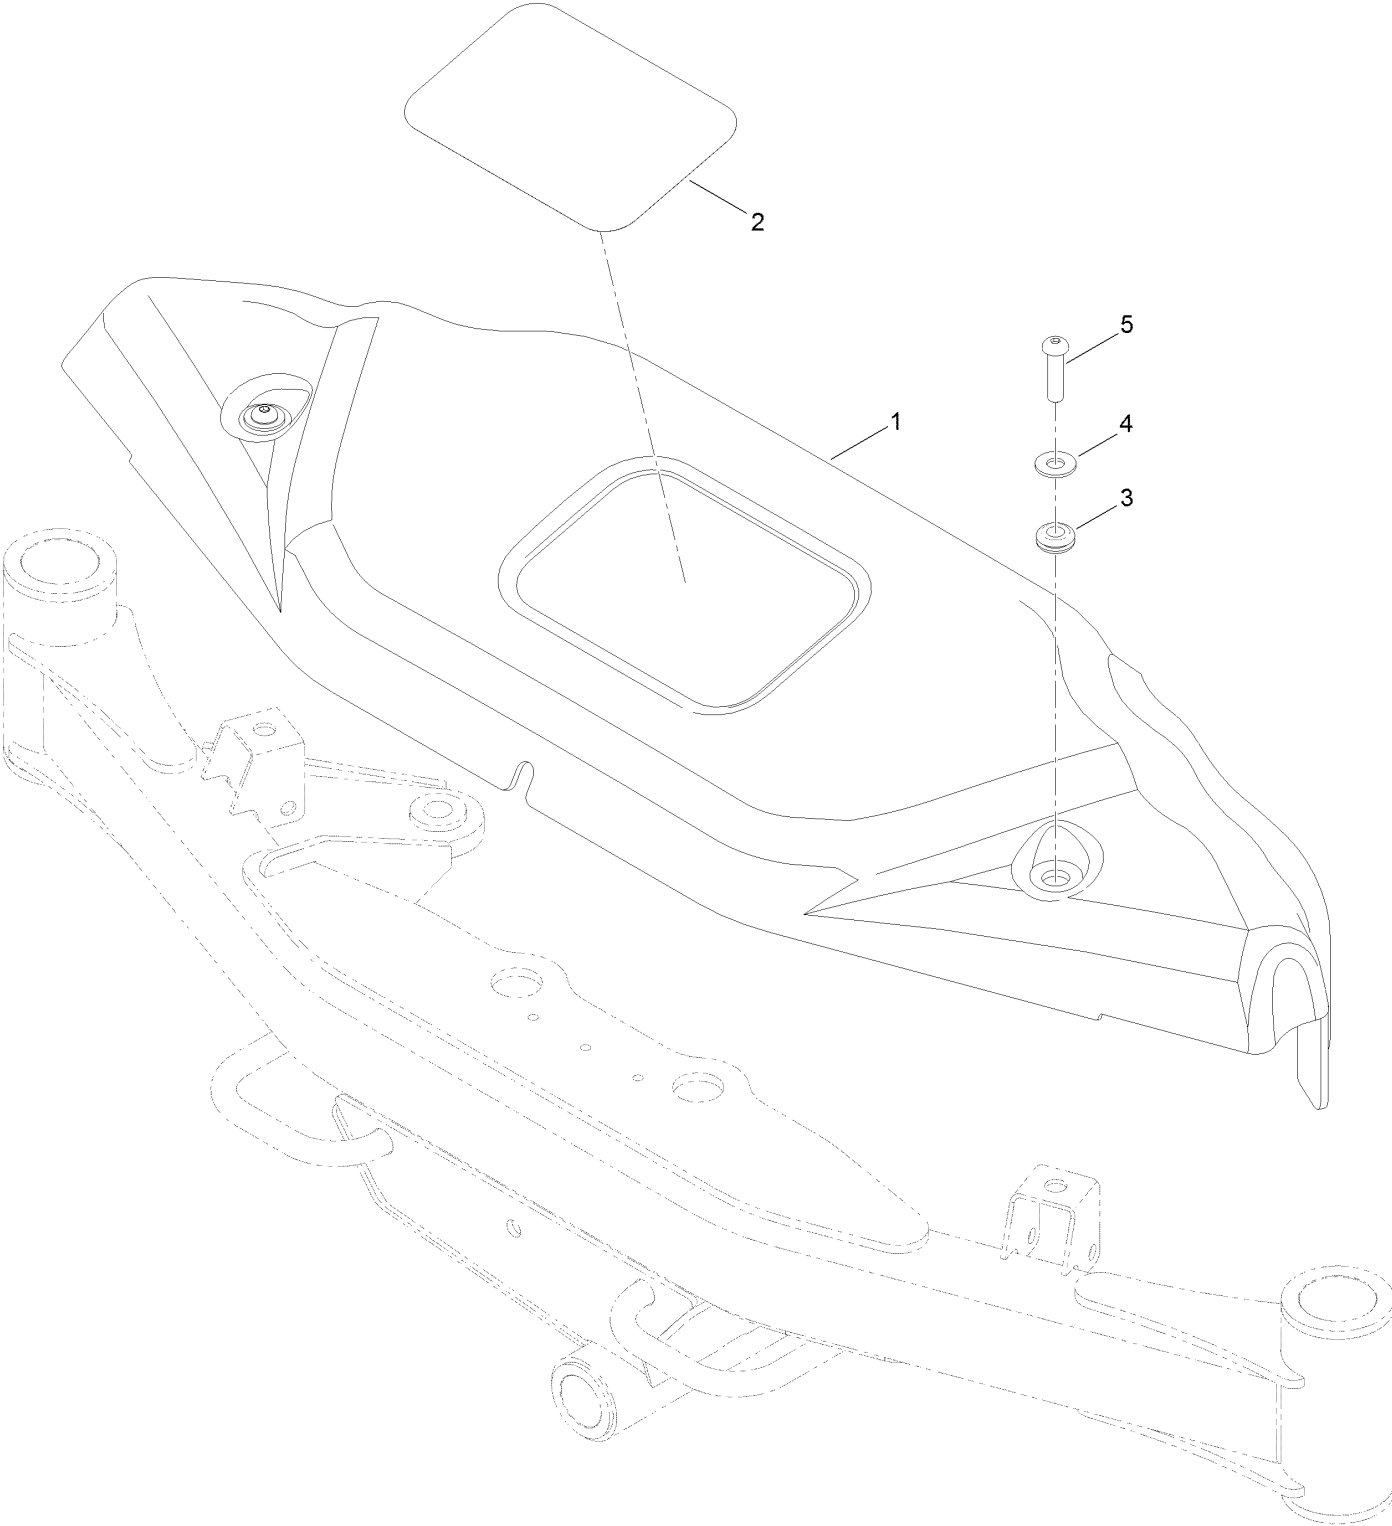


## Front Cover Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-4878           | 1           | Cover-Front        |
| 2           | 104-7213           | 1           | Decal              |
| 3           | 1-633630           | 2           | Grommet            |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 4           | 100-7403           | 2           | Washer-Flat        |
| 5           | 95-3857            | 2           | Screw-HSBH         |

 
# Front Axle and Tie Rod Assembly

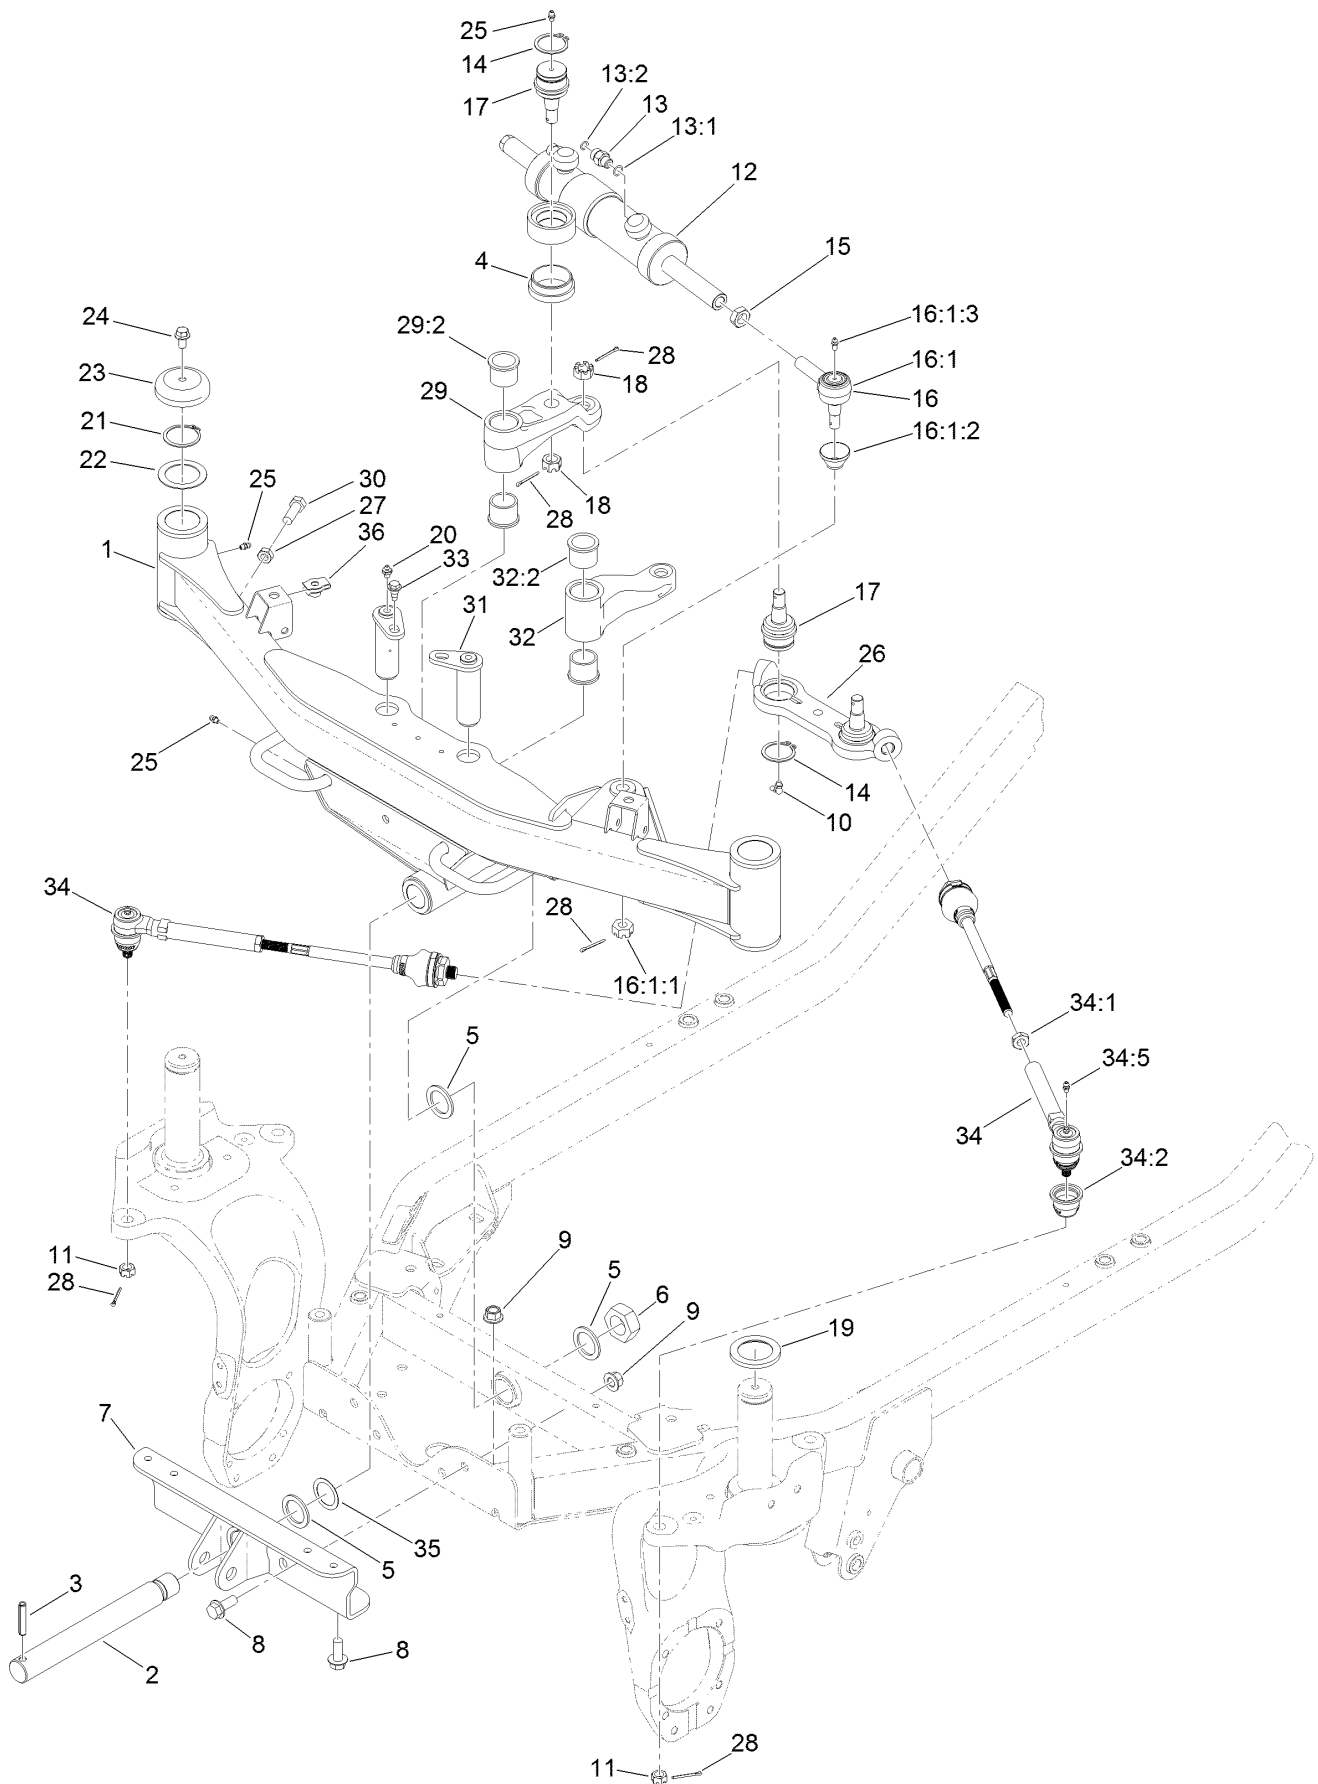

## Front Axle and Tie Rod Assembly (continued)


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 125-2825           | 1           | Front Axle ASM           | 19          | 100-2508           | 2           | Washer-Thrust      |
| 2           | 119-1376           | 1           | Shaft-Pivot              | 20          | 302-2              | 2           | Fitting-Grease     |
| 3           | 32121-110          | 1           | Pin-Roll, Slotted        | 21          | 100-4196           | 2           | Ring-Retaining     |
| 4           | 120-0238           | 1           | Spacer-Cylinder          | 22          | 115-0169           | 2           | Washer-Thrust      |
| 5           | 98-1452            | 3           | Washer-Thrust            | 23          | 100-3362           | 2           | Cap-Spindle        |
| 6           | 3296-68            | 1           | Nut-Lock, NI             | 24          | 3234-12            | 2           | Screw-HHF          |
| 7           | 117-2920-03        | 1           | Support-Axle             | 25          | 302-5              | 4           | Fitting-Grease     |
| 8           | 3234-38            | 6           | Screw-HHF                | 26          | 117-2986           | 1           | Centerlink         |
| 9           | 99-5107            | 6           | Nut-Lock                 | 27          | 3218-5             | 2           | Nut-Jam            |
| 10          | 302-60             | 2           | Fitting-Grease           | 28          | 3272-12            | 6           | Pin-Cotter         |
| 11          | 32136-3            | 2           | Nut-SHH                  | 29          | 120-0391           | 1           | Front LH Arm ASM   |
| 12          | 125-2835           | 1           | HYD Cylinder ASM         | 29:2        | 94-8947            | 2           | Bushing-Flange     |
| 13          | 340-2              | 2           | Fitting-Straight         | 30          | 325-6              | 2           | Screw-HH           |
| 13:1        | 237-22             | 1           | O-Ring                   | 31          | 117-3167           | 2           | Front Pin ASM      |
| 13:2        | 237-42             | 1           | O-Ring                   | 32          | 120-0390           | 1           | Front RH Arm ASM   |
| 14          | 32151-104          | 3           | Ring-Retaining, External | 32:2        | 94-8947            | 2           | Bushing-Flange     |
| 15          | 84-5300            | 1           | Nut-Jam                  | 33          | 99-5105            | 2           | Screw-Shoulder     |
| 16          | 71-4740-03         | 1           | RH Tie Rod End ASM       | 34          | 117-2983           | 2           | Rod-Tie, Front     |
| 16:1        |                    | 1           | End-Rod, Tie (RH)●       | 34:1        | 42-9650            | 1           | Nut-Hex, Jam       |
| 16:1:1      | 105-7941           | 1           | Nut-Hex, Slotted         | 34:2        | 117-3287           | 1           | Dust Boot          |
| 16:1:2      | 105-7835           | 1           | Seal                     | 34:5        | 302-5              | 1           | Fitting-Grease     |
| 16:1:3      | 302-5              | 1           | Fitting-Grease           | 35          | 93-4628            | 1           | Washer             |
| 17          | 106-6774           | 3           | Joint-Ball               | 36          | 105-4886           | 2           | Nut-Tinnerman      |
| 18          | 32136-2            | 3           | Nut-SHH                  |             |                    |             |                    |

 ● Not serviced separately

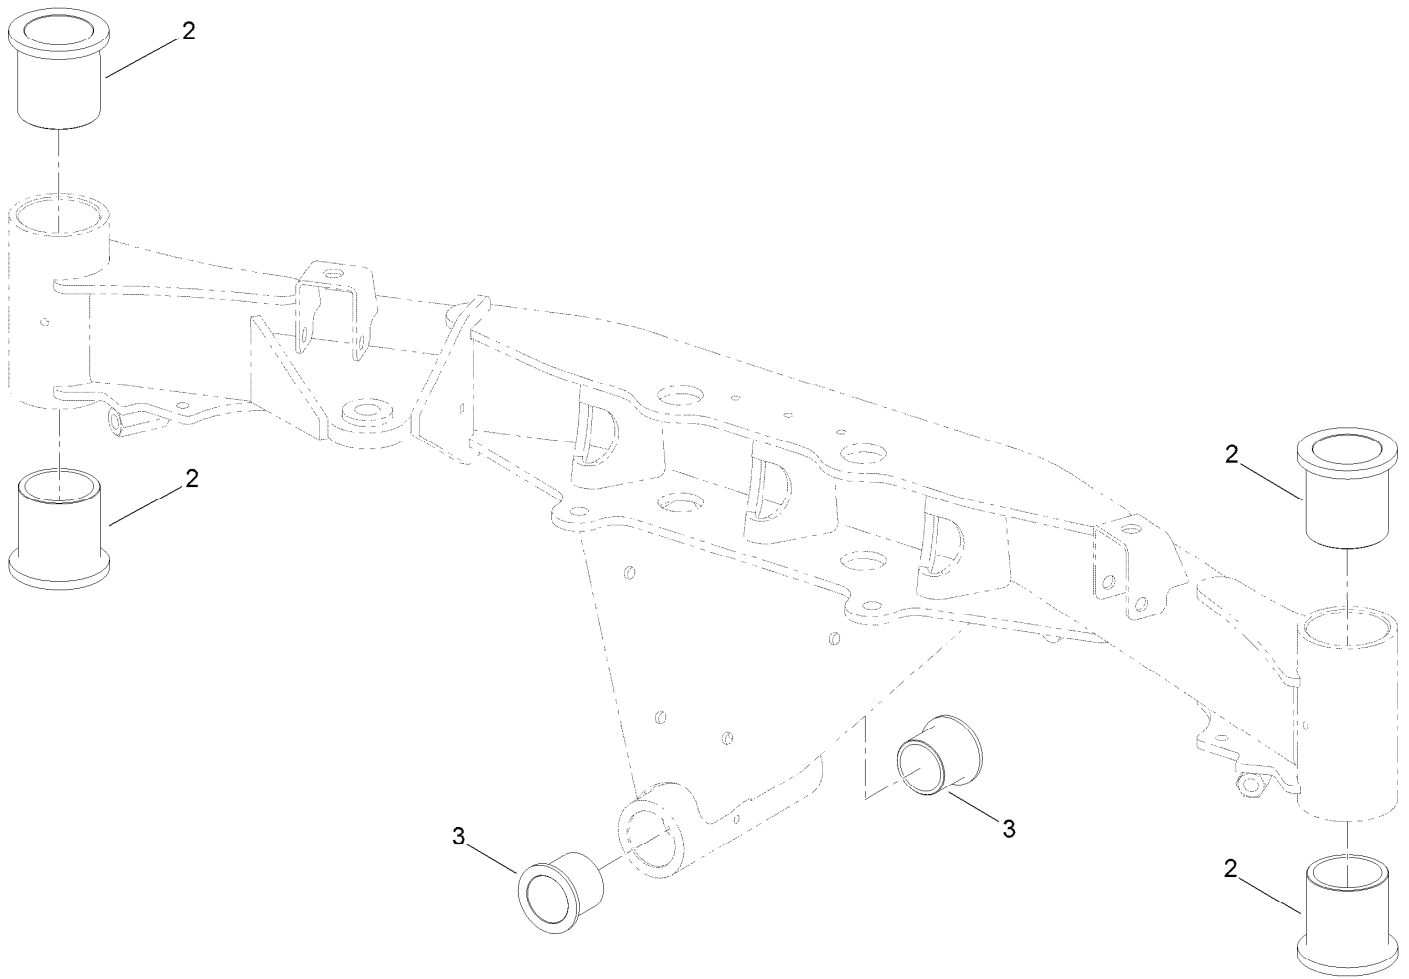

## Front Axle Assembly No. 125-2825

 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 2    | 125-4386    | 4    | Bushing-Castor |
| 3    | 69-6470     | 2    | Bushing-Caster |

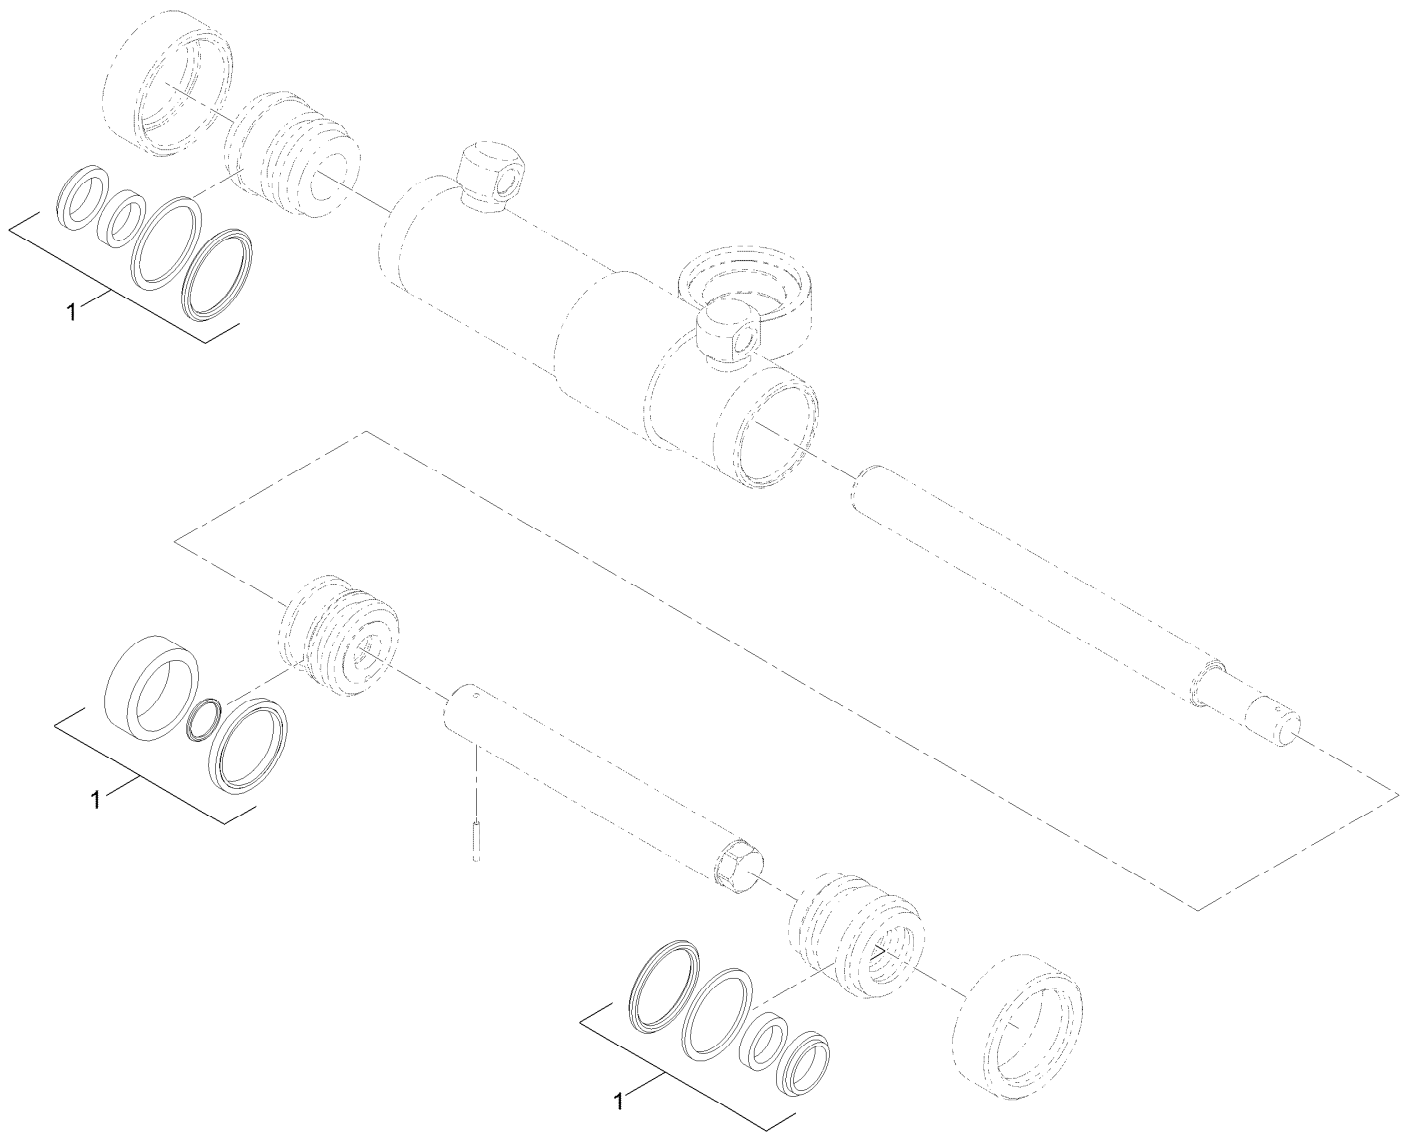

## Hydraulic Cylinder Assembly No.125-2835

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 120-2557           | 1           | Seal Kit           |
 
# Rear Steering Assembly

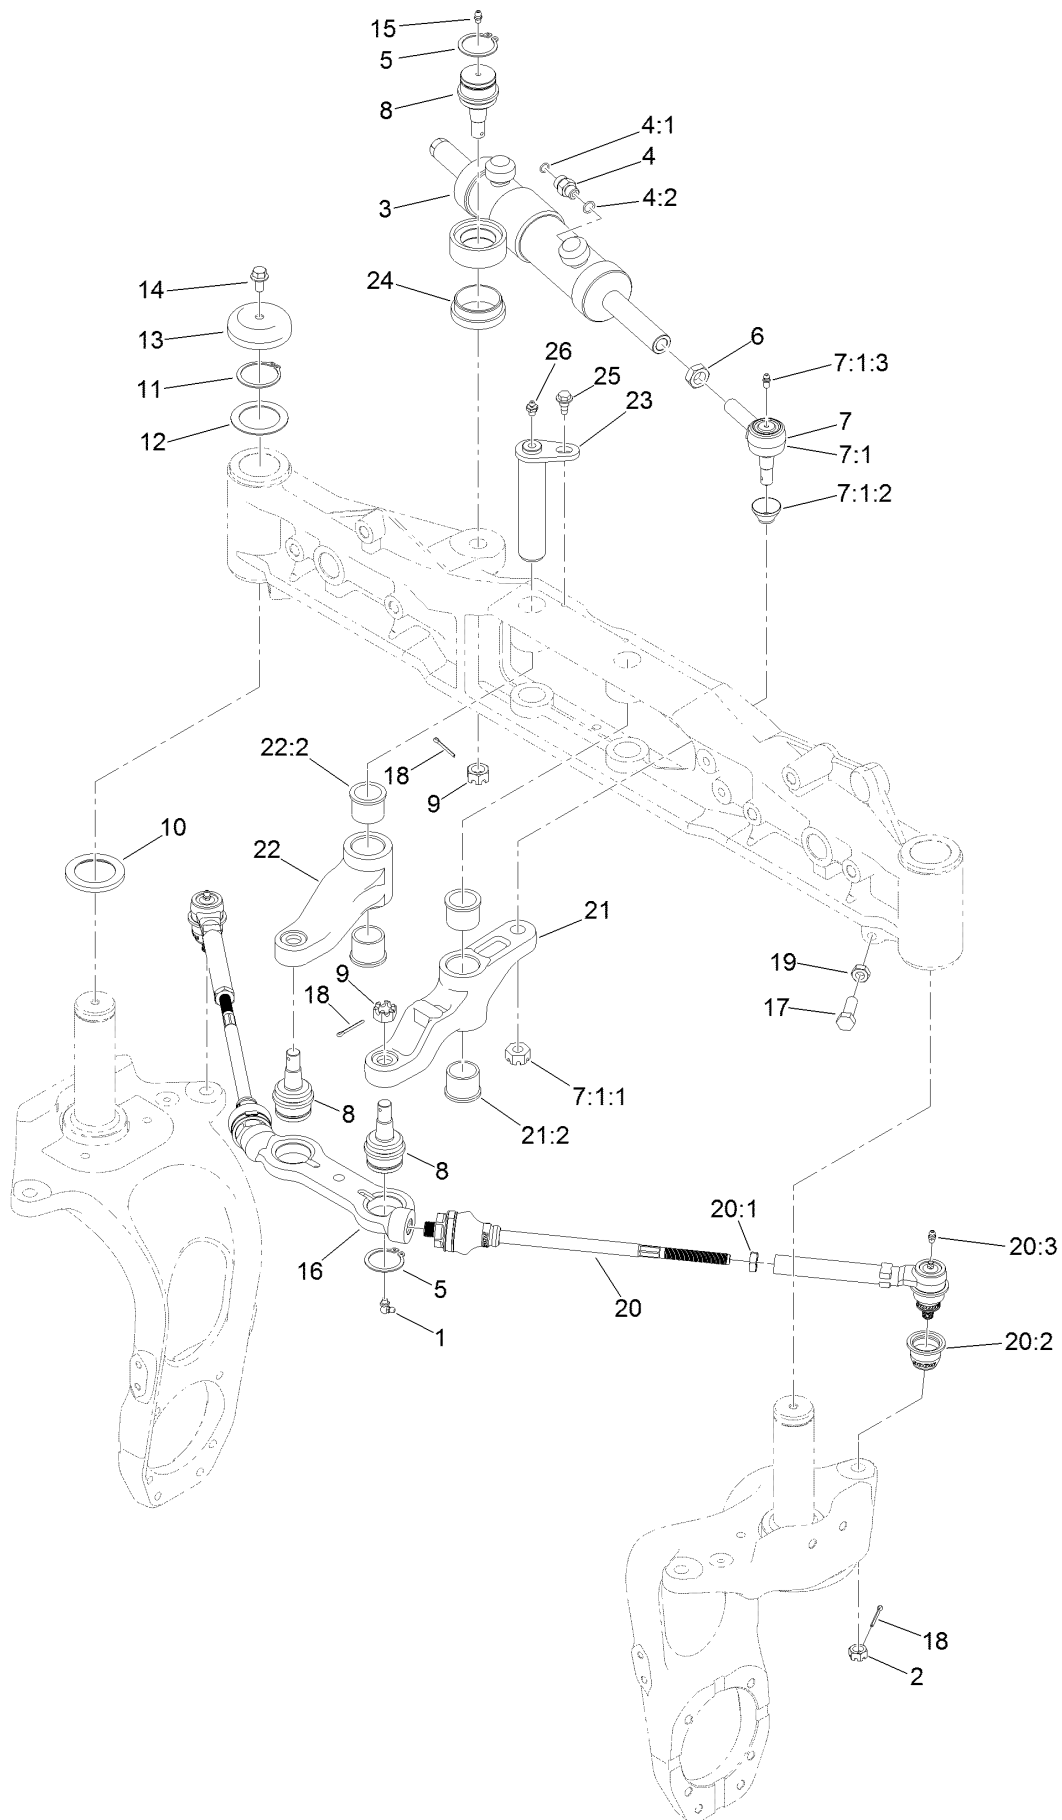




## Rear Steering Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 302-60             | 2           | Fitting-Grease           | 14          | 3234-12            | 2           | Screw-HHF          |
| 2           | 32136-3            | 2           | Nut-SHH                  | 15          | 302-5              | 1           | Fitting-Grease     |
| 3           | 125-2835           | 1           | HYD Cylinder ASM         | 16          | 117-2986           | 1           | Centerlink         |
| 4           | 340-2              | 2           | Fitting-Straight         | 17          | 325-6              | 2           | Screw-HH           |
| 4:1         | 237-22             | 1           | O-Ring                   | 18          | 3272-12            | 6           | Pin-Cotter         |
| 4:2         | 237-42             | 1           | O-Ring                   | 19          | 3218-5             | 2           | Nut-Jam            |
| 5           | 32151-104          | 3           | Ring-Retaining, External | 20          | 117-2984           | 2           | Rod-Tie, Rear      |
| 6           | 84-5300            | 1           | Nut-Jam                  | 20:1        | 42-9650            | 1           | Nut-Hex, Jam       |
| 7           | 71-4740-03         | 1           | RH Tie Rod End ASM       | 20:2        | 117-3287           | 1           | Dust Boot          |
| 7:1         |                    | 1           | End-Rod, Tie (RH) ●      | 20:3        | 302-5              | 1           | Fitting-Grease     |
| 7:1:1       | 105-7941           | 1           | Nut-Hex, Slotted         | 21          | 125-2832           | 1           | Rear LH Arm ASM    |
| 7:1:2       | 105-7835           | 1           | Seal                     | 21:2        | 94-8947            | 2           | Bushing-Flange     |
| 7:1:3       | 302-5              | 1           | Fitting-Grease           | 22          | 120-0392           | 1           | Rear RH Arm ASM    |
| 8           | 106-6774           | 3           | Joint-Ball               | 22:2        | 94-8947            | 2           | Bushing-Flange     |
| 9           | 32136-2            | 3           | Nut-SHH                  | 23          | 117-3137           | 2           | Pin ASM            |
| 10          | 100-2508           | 2           | Washer-Thrust            | 24          | 120-0238           | 1           | Spacer-Cylinder    |
| 11          | 100-4196           | 2           | Ring-Retaining           | 25          | 99-5105            | 2           | Screw-Shoulder     |
| 12          | 115-0169           | 2           | Washer-Thrust            | 26          | 302-2              | 2           | Fitting-Grease     |
| 13          | 100-3362           | 2           | Cap-Spindle              |             |                    |             |                    |

 
● Not serviced separately

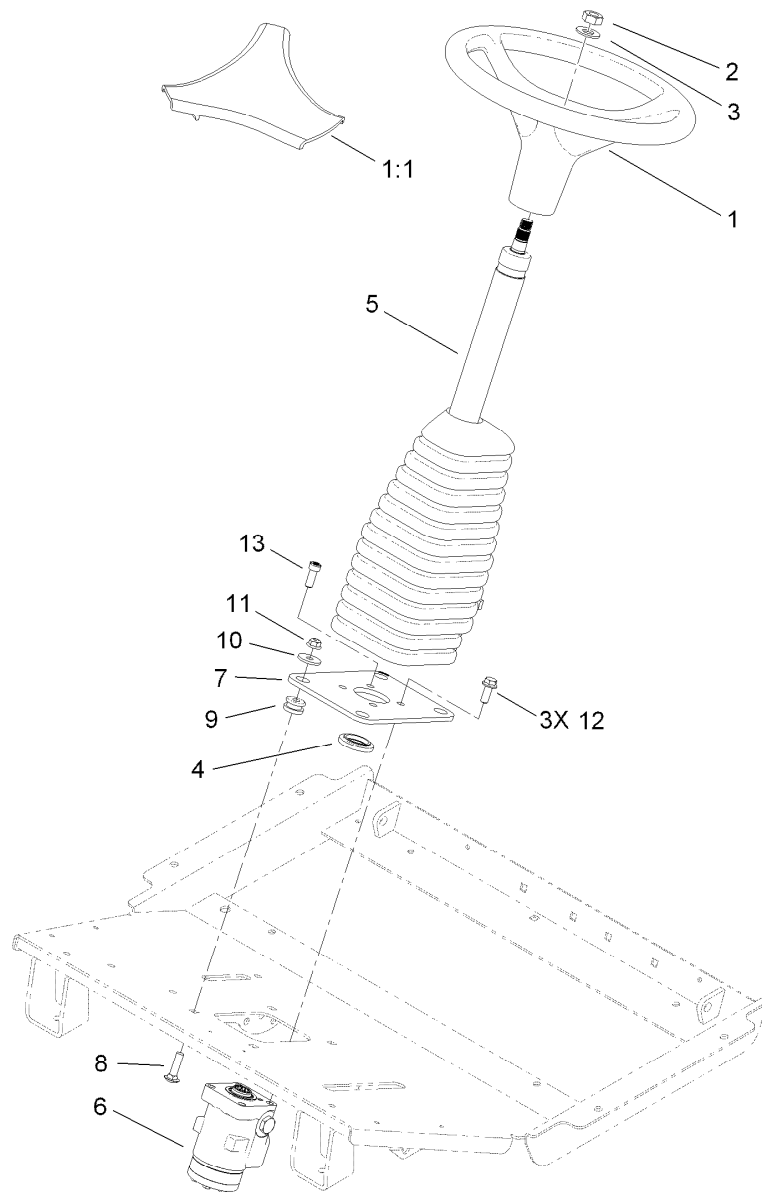

## Steering Column Assembly


| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 98-1471     | 1    | Wheel-Steering          |
| 1:1  | 98-1468     | 1    | Cover-Wheel, Steering ● |
| 2    | 3296-33     | 1    | Nut-Lock, NI            |
| 3    | 3256-27     | 1    | Washer-Flat             |
| 4    | 117-3373    | 1    | Bushing-Alignment       |
| 5    | 117-3371    | 1    | Column-Steering         |
| 6    | 130-7948    | 1    | Valve-Control, Steering |
| 7    | 117-3234-03 | 1    | Plate-Steering          |
| 8    | 3231-26     | 4    | Screw-CARR              |
| 9    | 63-9750     | 4    | Mount                   |
| 10   | 63-8410     | 4    | Washer                  |
| 11   | 104-8301    | 4    | Nut-HF, NI              |
| 12   | 108-1531    | 3    | Screw-HHF               |
| 13   | 3273-41     | 1    | Screw-HSH               |

 ● Not illustrated

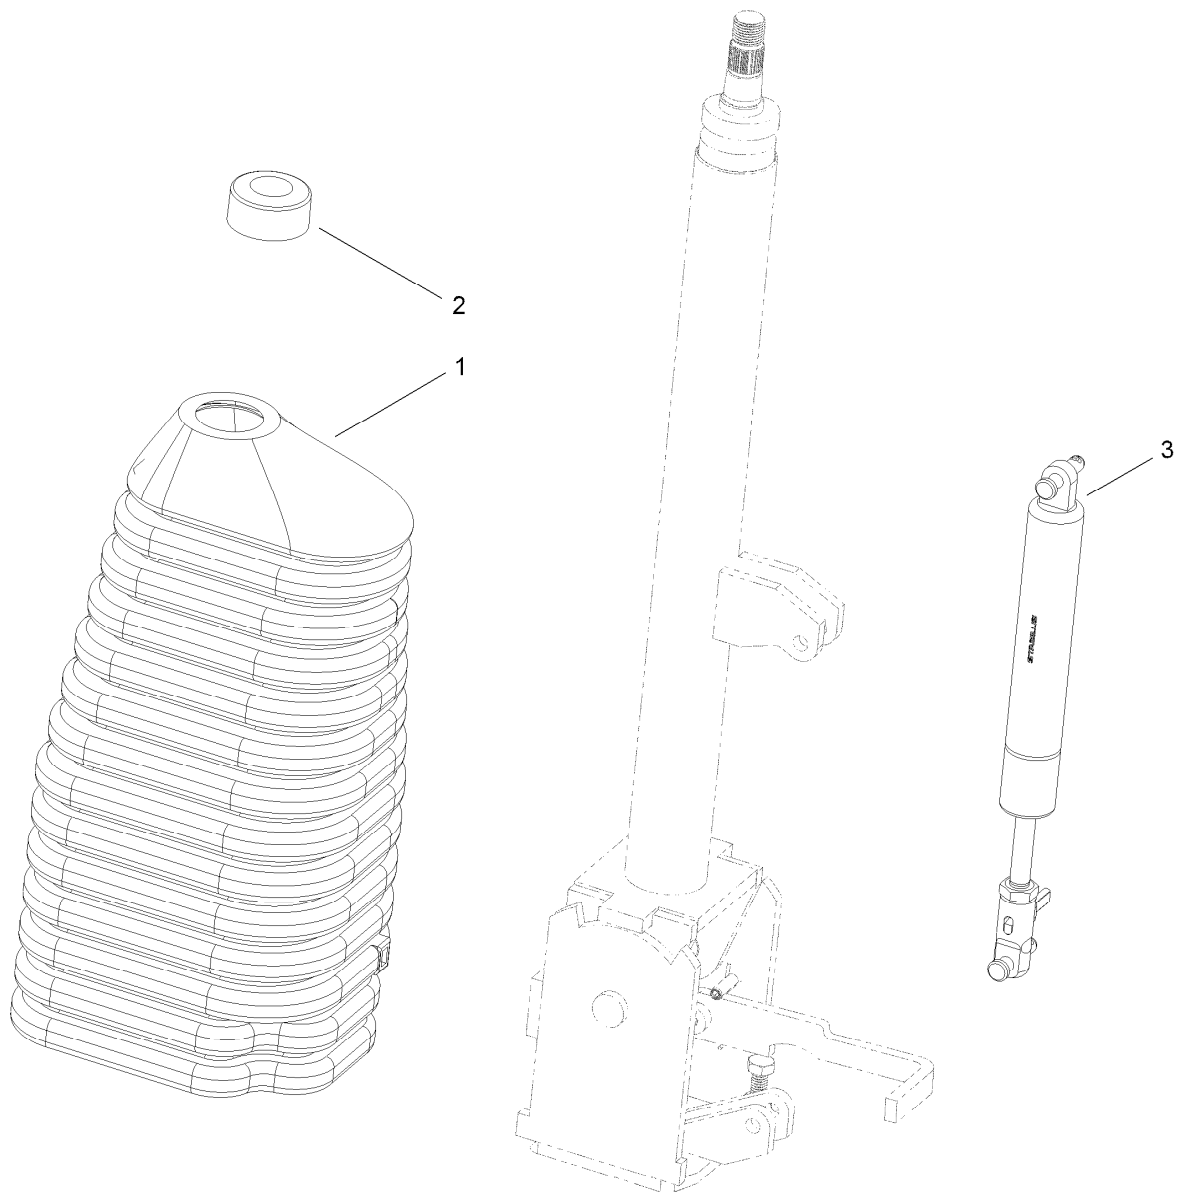


## Steering Column Assembly No. 117-3371
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 120-2592    | 1    | Boot-Rubber, Column  |
| 2    | 120-2593    | 1    | Boot-Rubber, Bearing |
| 3    | 120-2594    | 1    | Gas Spring ASM       |

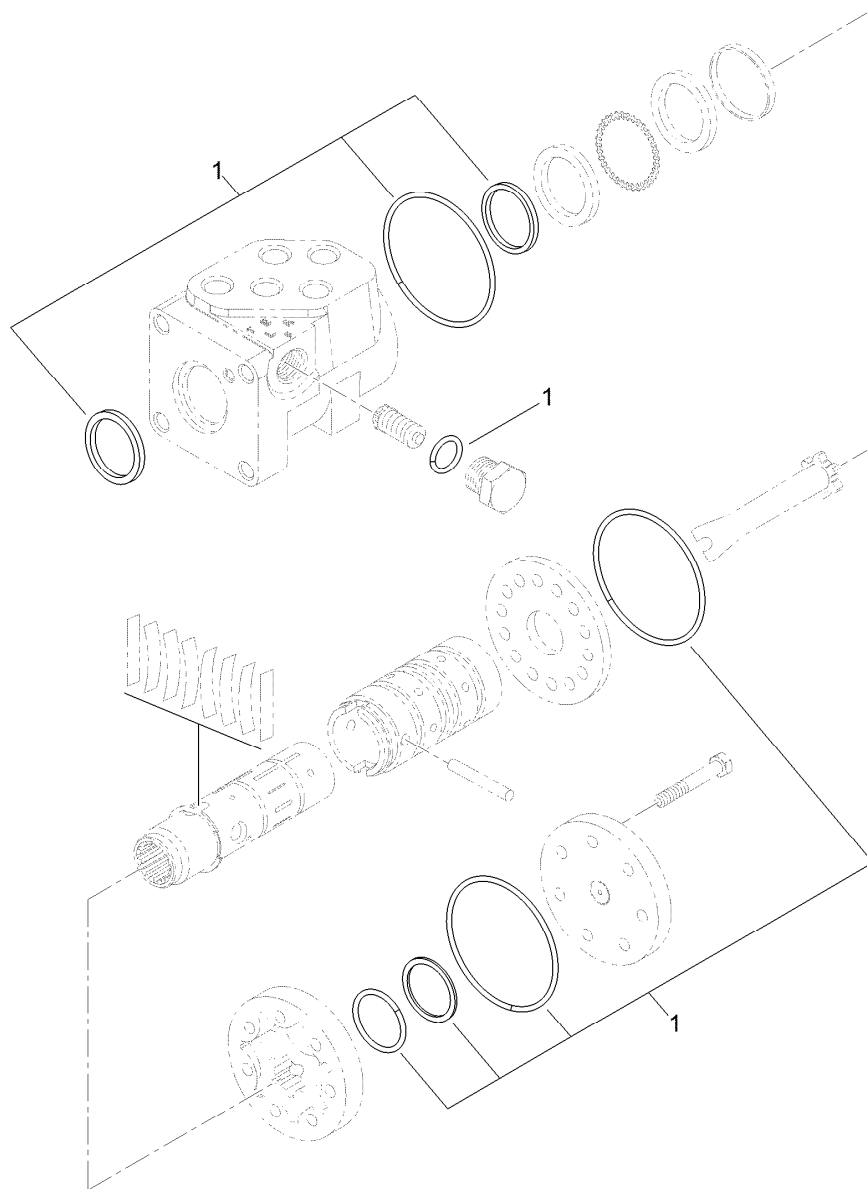

## Steering Valve Assembly No. 130-7948

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 130-8357           | 1           | Seal Kit           |

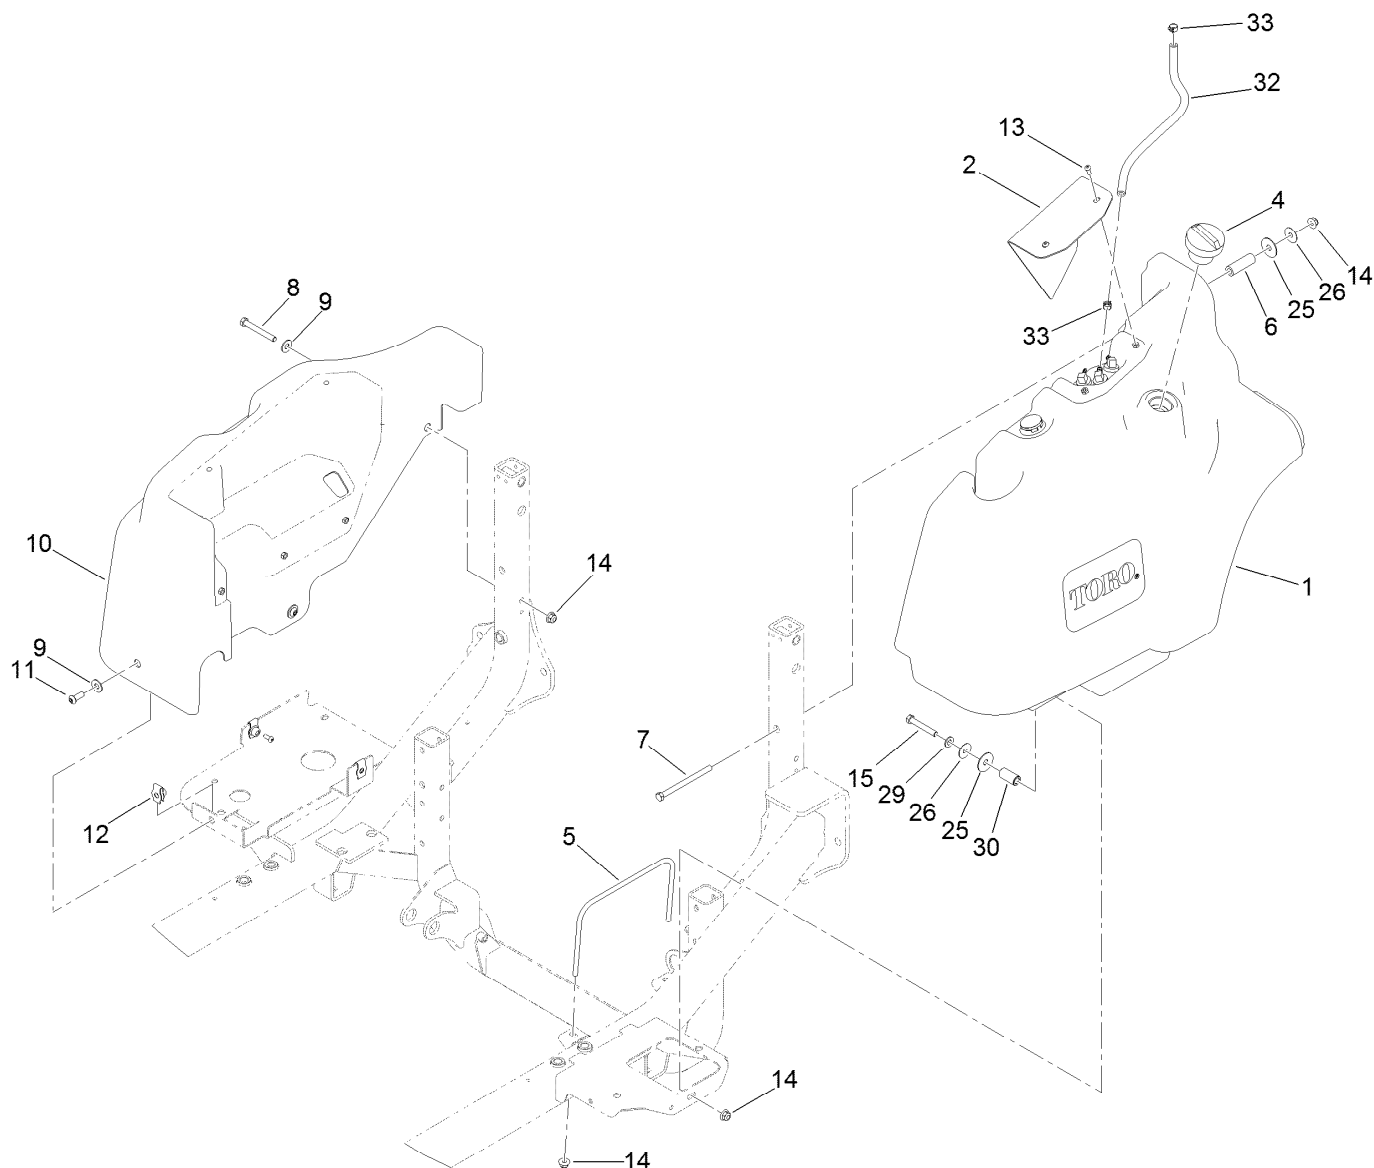

## Fuel Tank Assembly


| Ref. | Part Number | Qty. | Description                         |
|------|-------------|------|-------------------------------------|
| 1    | 131-1920    | 1    | Fuel Tank ASM                       |
| 2    | 117-3359-03 | 1    | Plate-Cover                         |
| 4    | 125-9170    | 1    | Cap-Fuel, Diesel (Ultra Low Sulfur) |
| 5    | 117-3394    | 1    | Bracket-Tank                        |
| 6    | 117-3387    | 1    | Tube-Spacer                         |
| 7    | 323-39      | 1    | Screw-HH                            |
| 8    | 323-14      | 1    | Screw-HH                            |
| 9    | 100-7403    | 4    | Washer-Flat                         |
| 10   | 132-6550    | 1    | Cover-Tank, Hydraulic               |
| 11   | 3274-94     | 3    | Screw-HSBH                          |
 
| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 12   | 105-4886    | 3    | Nut-Tinnerman |
| 13   | 3274-31     | 2    | Screw-HSBH    |
| 14   | 104-8301    | 5    | Nut-HF, NI    |
| 15   | 323-12      | 1    | Screw-HH      |
| 25   | 95-1905     | 2    | Washer-Rubber |
| 26   | 105-6814    | 2    | Washer-Plain  |
| 29   | 3256-24     | 1    | Washer-Flat   |
| 30   | 110-3726    | 1    | Spacer        |
| 32   | 110-4101    | 1    | Hose-Fuel     |
| 33   | 92-2379     | 2    | Clamp-Hose    |

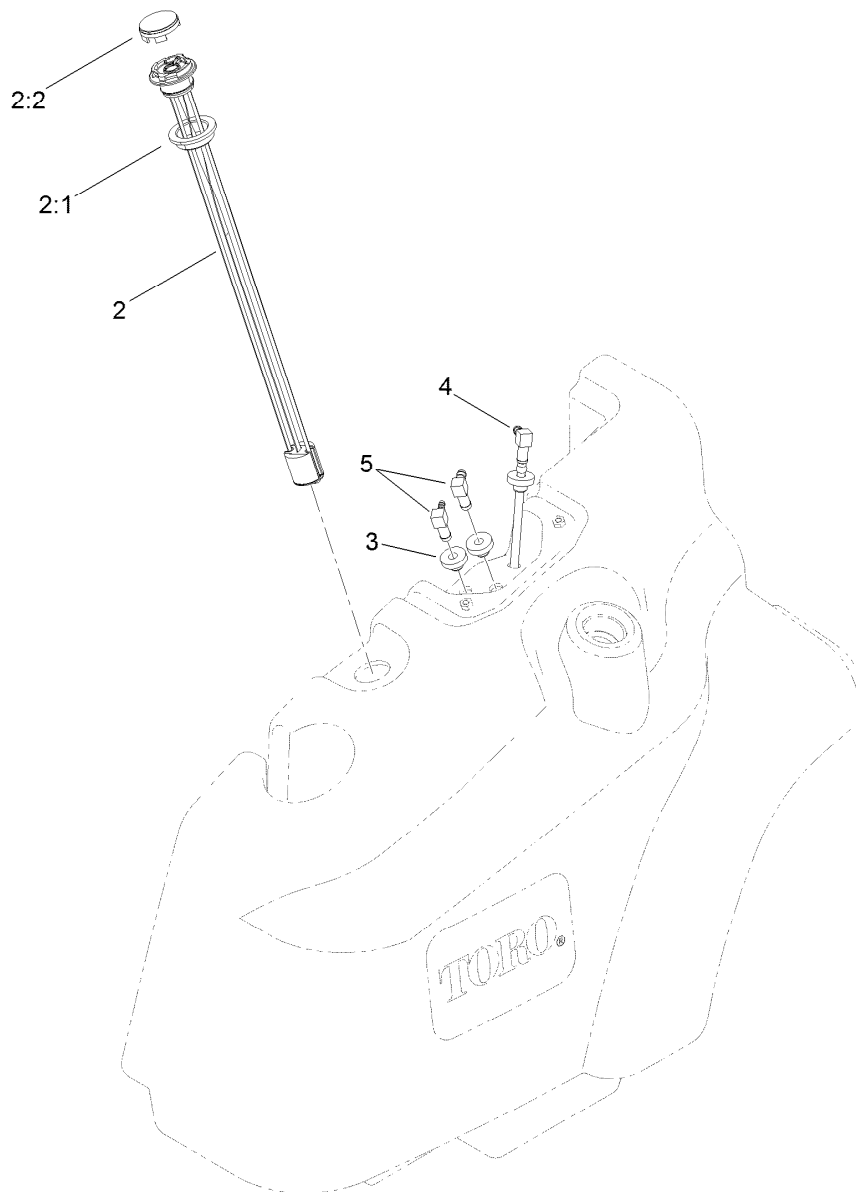

## Fuel Tank Assembly No. 131-1920
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 2    | 117-3238    | 1    | Gauge-Fuel            |
| 2:1  | 119-0508    | 1    | Seal                  |
| 2:2  | 117-8404    | 1    | Dial-Gauge            |
| 3    | 46-6560     | 3    | Bushing               |
| 4    | 117-3370    | 1    | Pipe-Stand            |
| 5    | 46-6550     | 2    | Fitting-Elbow, 90 DEG |

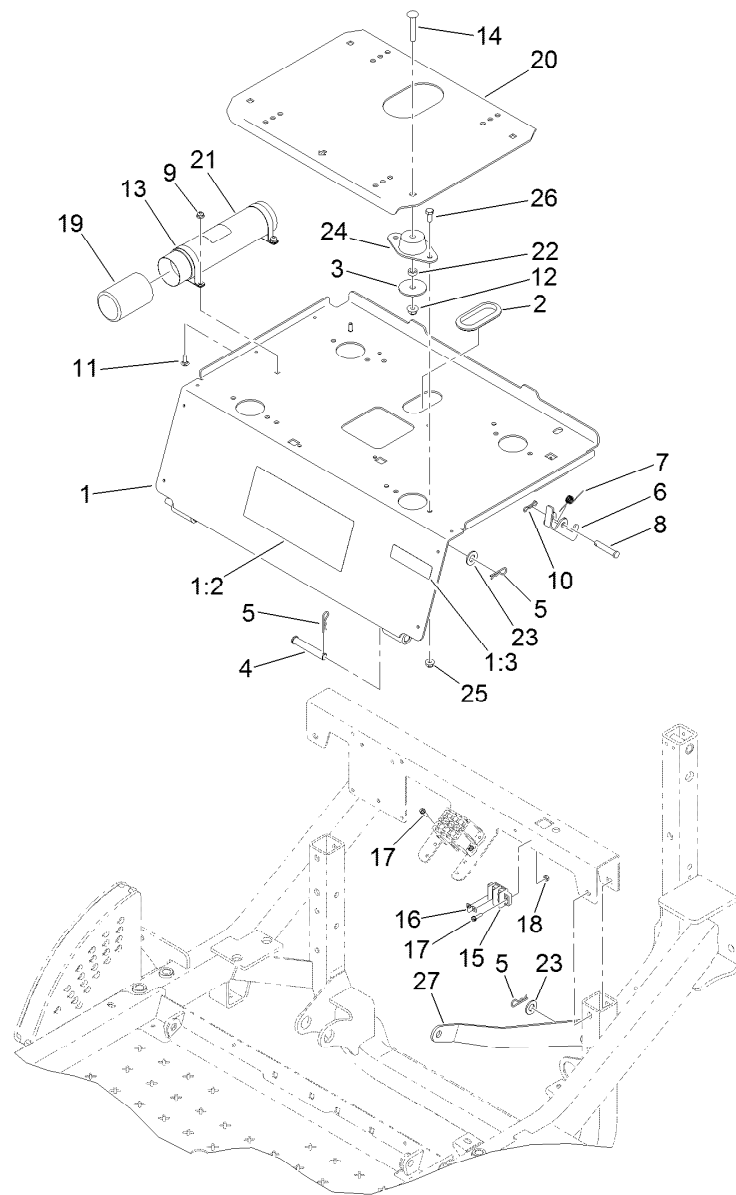


## Seat Plate Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 120-0244    | 1    | Seat Plate ASM           |
| 1:2  | 117-3273    | 1    | Decal-Operation, Warning |
| 1:3  | 133-8062    | 1    | Decal-Arrestor, Spark    |
| 2    | 237-164     | 1    | Grommet                  |
| 3    | 83-1040     | 4    | Washer-Flat              |
| 4    | 283-55      | 2    | Pin-Clevis               |
| 5    | 3290-467    | 4    | Pin-Hair                 |
| 6    | 117-3067    | 1    | Latch-Seat               |
| 7    | 104-4821    | 1    | Spring-Torsion           |
| 8    | 283-82      | 1    | Pin-Clevis               |
| 9    | 104-7201    | 2    | Nut-HF                   |
| 10   | 119-1415    | 1    | Pin-Cotter, Locking      |
| 11   | 3229-1      | 2    | Screw-CARR               |
| 12   | 104-8301    | 4    | Nut-HF, NI               |
| 13   | 107-1865    | 2    | R-Clamp                  |

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 14   | 3231-40     | 4    | Bolt-CARR              |
| 15   | 42862       | 1    | Block-Terminal, Ground |
| 16   | 42863       | 1    | Strip-Jumper           |
| 17   | 32105-13    | 2    | Screw-HWH              |
| 18   | 3296-2      | 2    | Nut-Lock, NI           |
| 19   | 104-7048    | 1    | Cap-Housing            |
| 20   | 117-3065-03 | 1    | Plate-Seat             |
| 21   | 104-7050    | 1    | Tube-Manual            |
| 22   | 83-1050     | 4    | Spacer                 |
| 23   | 3256-26     | 2    | Washer-Flat            |
| 24   | 121-9076    | 4    | Mount-Engine           |
| 25   | 104-8300    | 8    | Nut-HF, NI             |
| 26   | 322-3       | 8    | Screw-HH               |
| 27   | 120-0242-0P | 1    | Strap-Prop             |
 
# 4 Wheel Drive Control Panel Assembly

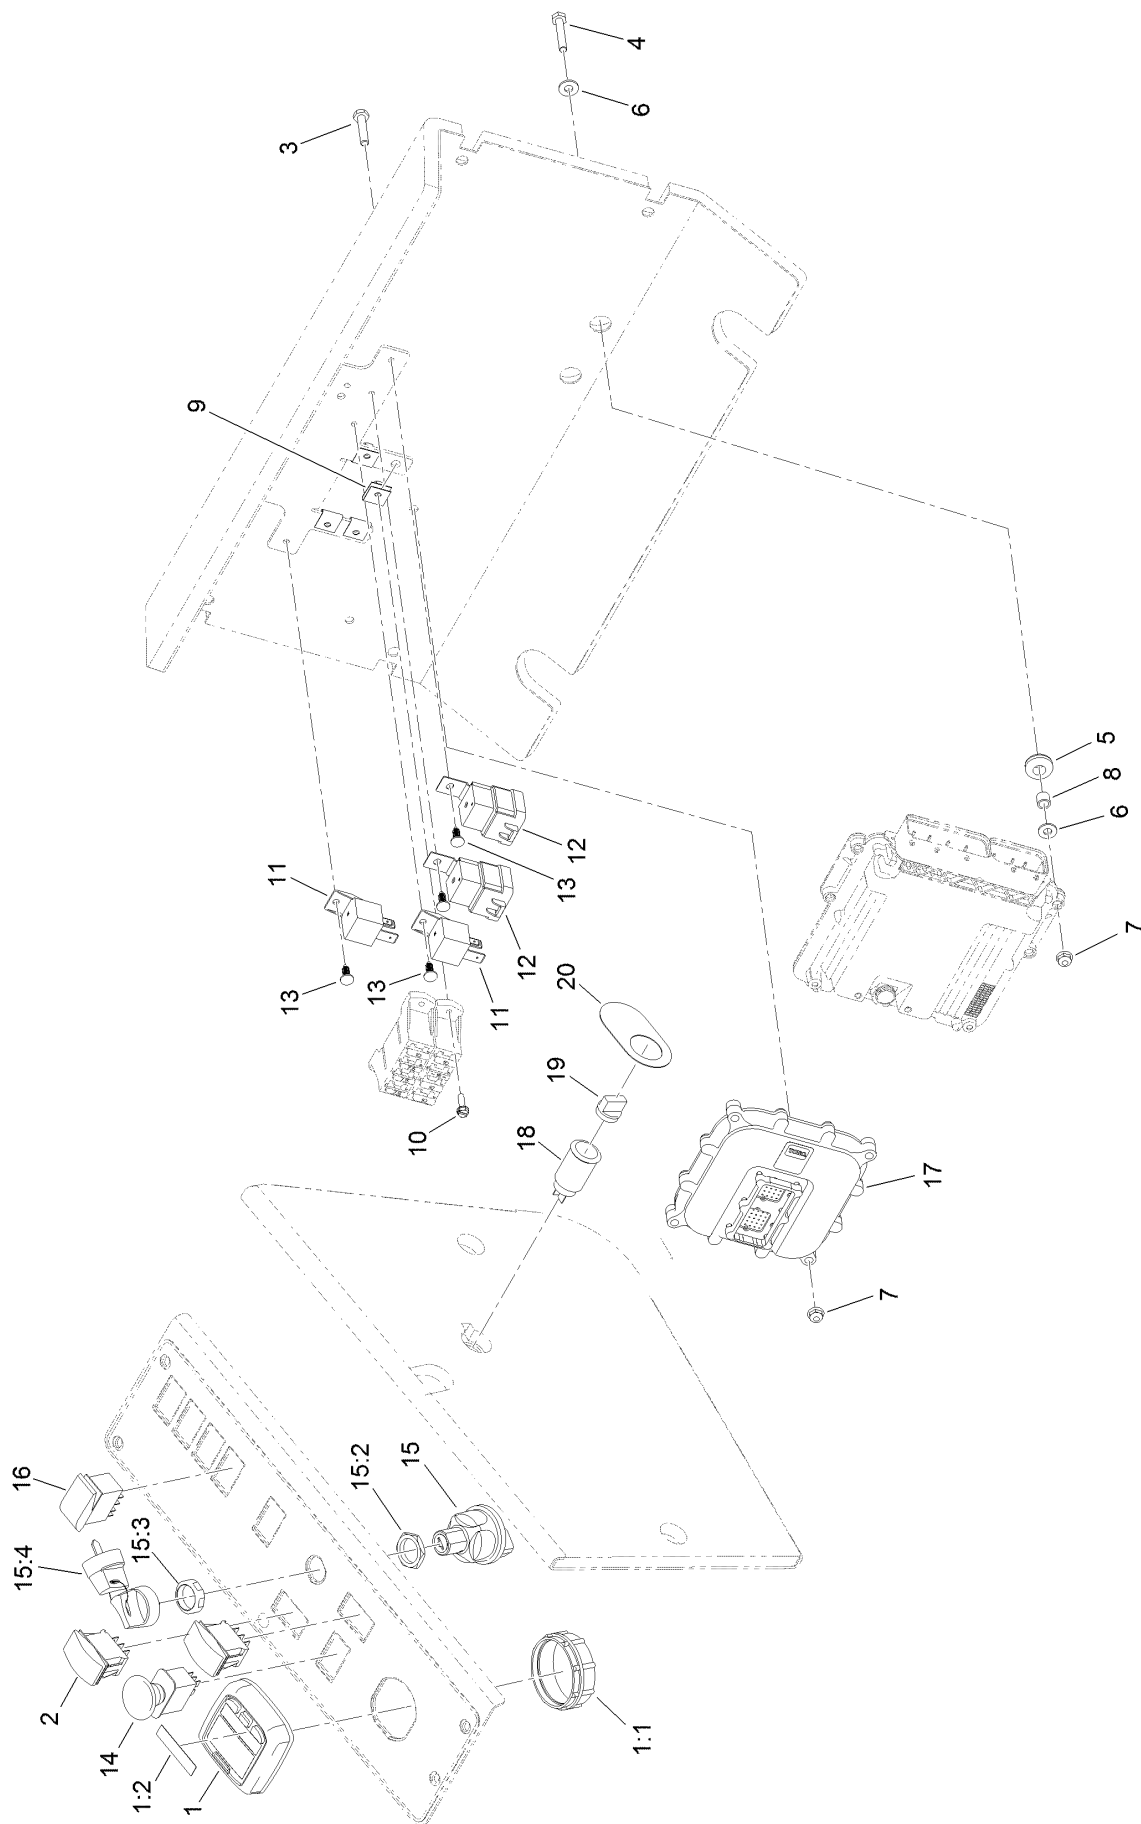




## 4 Wheel Drive Control Panel Assembly (continued)


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>              | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>           |
|-------------|--------------------|-------------|---------------------------------|-------------|--------------------|-------------|------------------------------|
| 1           | 120-6310           | 1           | LCD Display ASM                 | 12          | 99-7430            | 2           | Relay-Mini                   |
| 1:1         | 120-4630           | 1           | Nut-Display                     | 13          | 120-6737           | 4           | Plug-Plastic                 |
| 1:2         | 120-6311           | 1           | Decal-Display                   | 14          | 95-4108            | 1           | Switch-PTO, On-On-None       |
| 2           | 100-1535           | 2           | Switch-Rocker,<br>(On)-Off-(On) | 15          | 121-5159           | 1           | Ignition Switch ASM          |
| 3           | 321-8              | 4           | Screw-HH                        | 15:2        | 121-5160           | 1           | Nut-Hex                      |
| 4           | 321-9              | 4           | Screw-HH                        | 15:3        | 121-5161           | 1           | Nut-Face                     |
| 5           | 1-633630           | 4           | Grommet                         | 15:4        | 121-5162           | 1           | Set-Key, Ignition            |
| 6           | 3256-22            | 8           | Washer-Flat                     | 16          | 100-8490           | 1           | Switch-Rocker,<br>On-None-On |
| 7           | 104-7201           | 8           | Nut-HF                          | 17          | 115-1900           | 1           | Controller                   |
| 8           | 1-633545           | 4           | Spacer                          | 18          | 99-7411            | 1           | Point-Power                  |
| 9           | 125-4384           | 4           | Nut-Speed, U-Type               | 19          | 99-7416            | 1           | Cap                          |
| 10          | 32105-13           | 4           | Screw-HWH                       | 20          | 106-2353           | 1           | Decal-Powerpoint             |
| 11          | 99-7435            | 2           | Relay                           |             |                    |             |                              |
 
# Brake Pedal Assembly

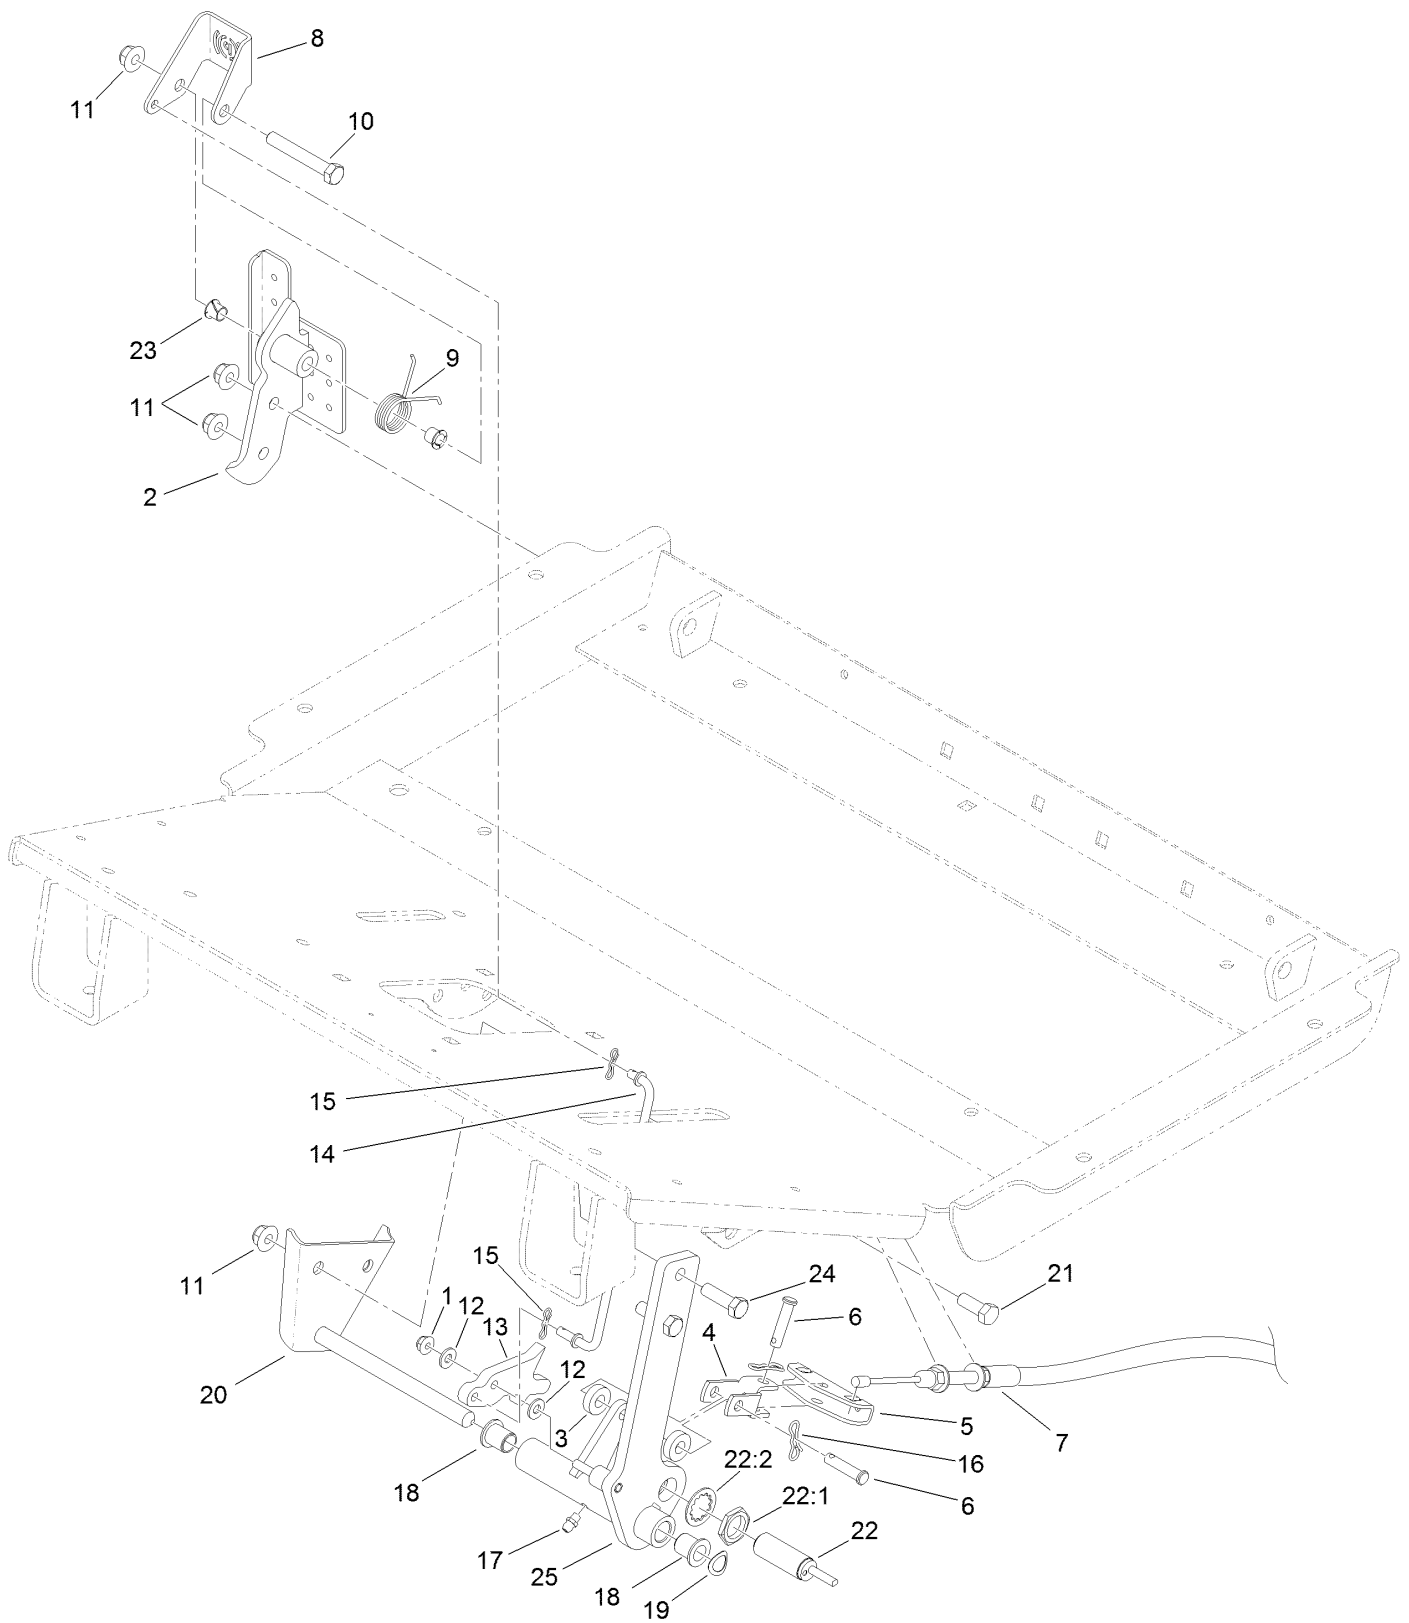

## Brake Pedal Assembly (continued)

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>          |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|-----------------------------|
| 1           | 104-7201           | 1           | Nut-HF               | 15          | 119-1414           | 2           | Pin-Cotter, Locking         |
| 2           | 119-1403-03        | 1           | Pedal-Brake          | 16          | 119-1415           | 2           | Pin-Cotter, Locking         |
| 3           | 26-4840            | 2           | Spacer-Pin, Mounting | 17          | 302-5              | 1           | Fitting-Grease              |
| 4           | 115-8060           | 1           | Clevis-Double        | 18          | 125-8775           | 2           | Bushing-Flange              |
| 5           | 115-8059           | 1           | Yoke-Cable           | 19          | 3290-221           | 1           | Washer-Spring               |
| 6           | 283-14             | 2           | Pin-Clevis           | 20          | 119-1388           | 1           | Pin-Brake                   |
| 7           | 117-3214           | 2           | Cable-Brake          | 21          | 323-6              | 2           | Screw-HH                    |
| 8           | 119-1407           | 1           | Pedal-Park           | 22          | 115-5300           | 1           | Proximity Switch ASM        |
| 9           | 99-7140            | 1           | Spring-Torsion       | 22:1        | 117-3207           | 2           | Nut-Hex                     |
| 10          | 323-12             | 1           | Screw-HH             | 22:2        | 117-3208           | 2           | Washer-Lock, Internal Tooth |
| 11          | 104-8301           | 5           | Nut-HF, NI           | 23          | 52-2891            | 2           | Bushing-Flanged, Nylon      |
| 12          | 3256-22            | 2           | Washer-Flat          | 24          | 323-7              | 2           | Screw-HH                    |
| 13          | 119-1406           | 1           | Detent-Brake         | 25          | 119-1400-03        | 1           | Lever-Brake                 |
| 14          | 119-1405           | 1           | Rod-Brake Pawl       |             |                    |             |                             |

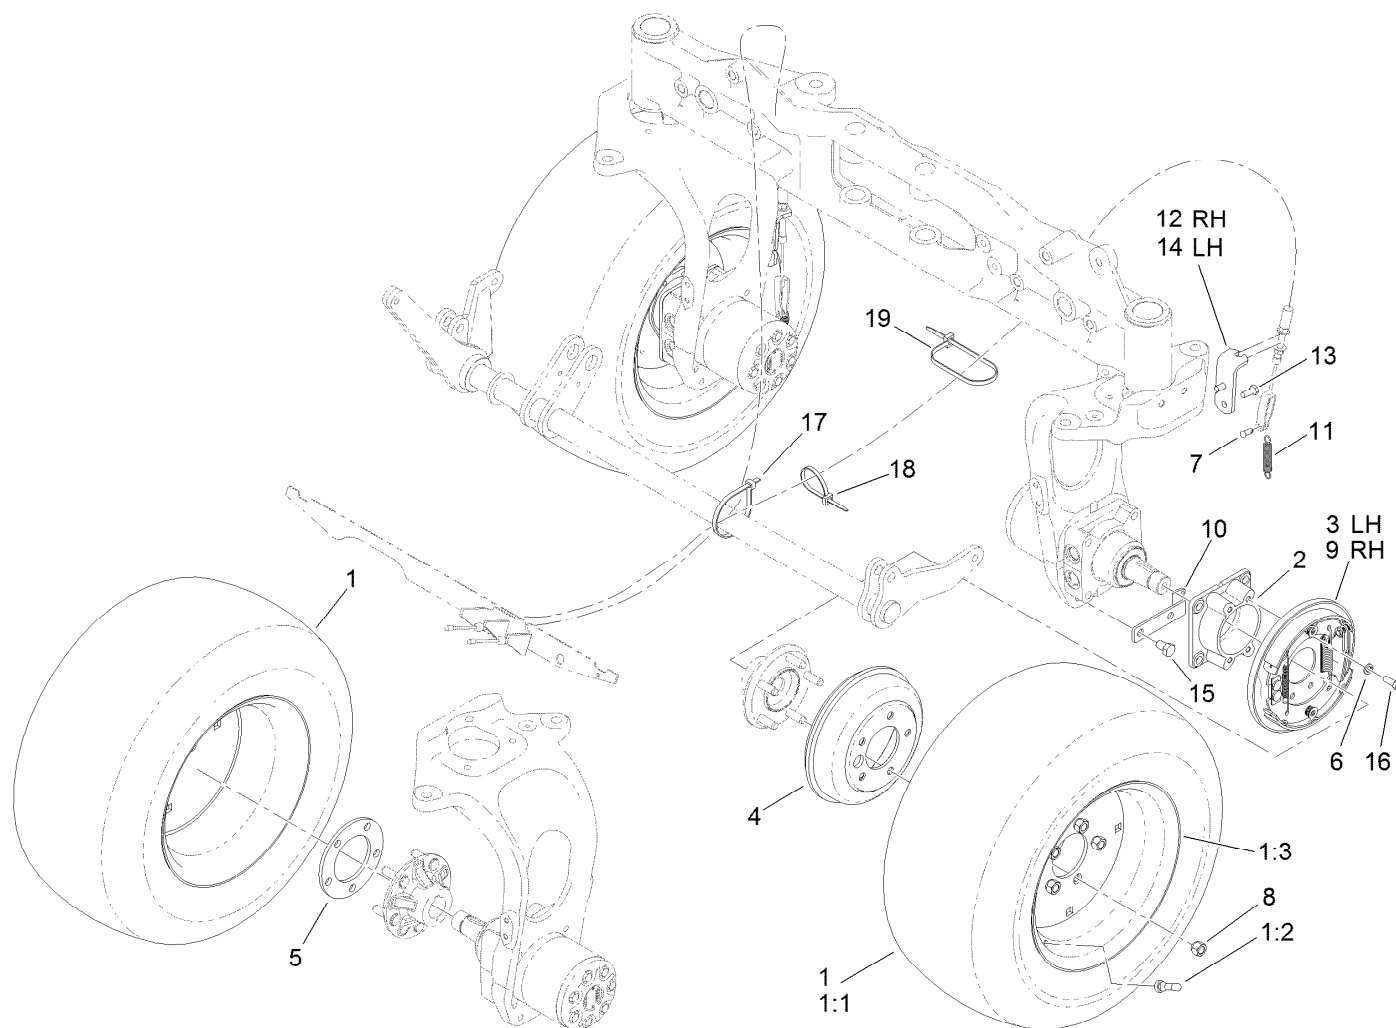

## Wheel and Brake Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 117-2900    | 4    | Tire And Wheel ASM |
| 1:1  | 117-2901    | 1    | Tire               |
| 1:2  | 232-27      | 1    | Stem-Valve         |
| 1:3  | 117-2902    | 1    | Rim                |
| 2    | 120-0248-0P | 2    | Adapter-Brake      |
| 3    | 120-0235    | 1    | LH Brake ASM       |
| 4    | 114-8864    | 2    | Drum-Brake         |
| 5    | 115-0199-0P | 2    | Spacer-Wheel       |
| 6    | 3253-21     | 8    | Washer-Lock        |
| 7    | 283-62      | 2    | Pin-Clevis         |
| 8    | 242-50      | 10   | Nut-Lug            |

 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 9    | 120-0233    | 1    | RH Brake ASM            |
| 10   | 115-0132    | 2    | Bracket-Spring, Return  |
| 11   | 87-4020     | 2    | Spring-Extension        |
| 12   | 119-1352-03 | 1    | Bracket-Brake Cable, RH |
| 13   | 325-2       | 4    | Screw-HH                |
| 14   | 119-1449-03 | 1    | Bracket-Brake Cable, LH |
| 15   | 323-5       | 4    | Screw-HH                |
| 16   | 323-6       | 8    | Screw-HH                |
| 17   | 3334-945    | 1    | Tie-Cable               |
| 18   | 3290-378    | 1    | Tie-Cable               |
| 19   | 250-5       | 1    | Tie-Cable               |

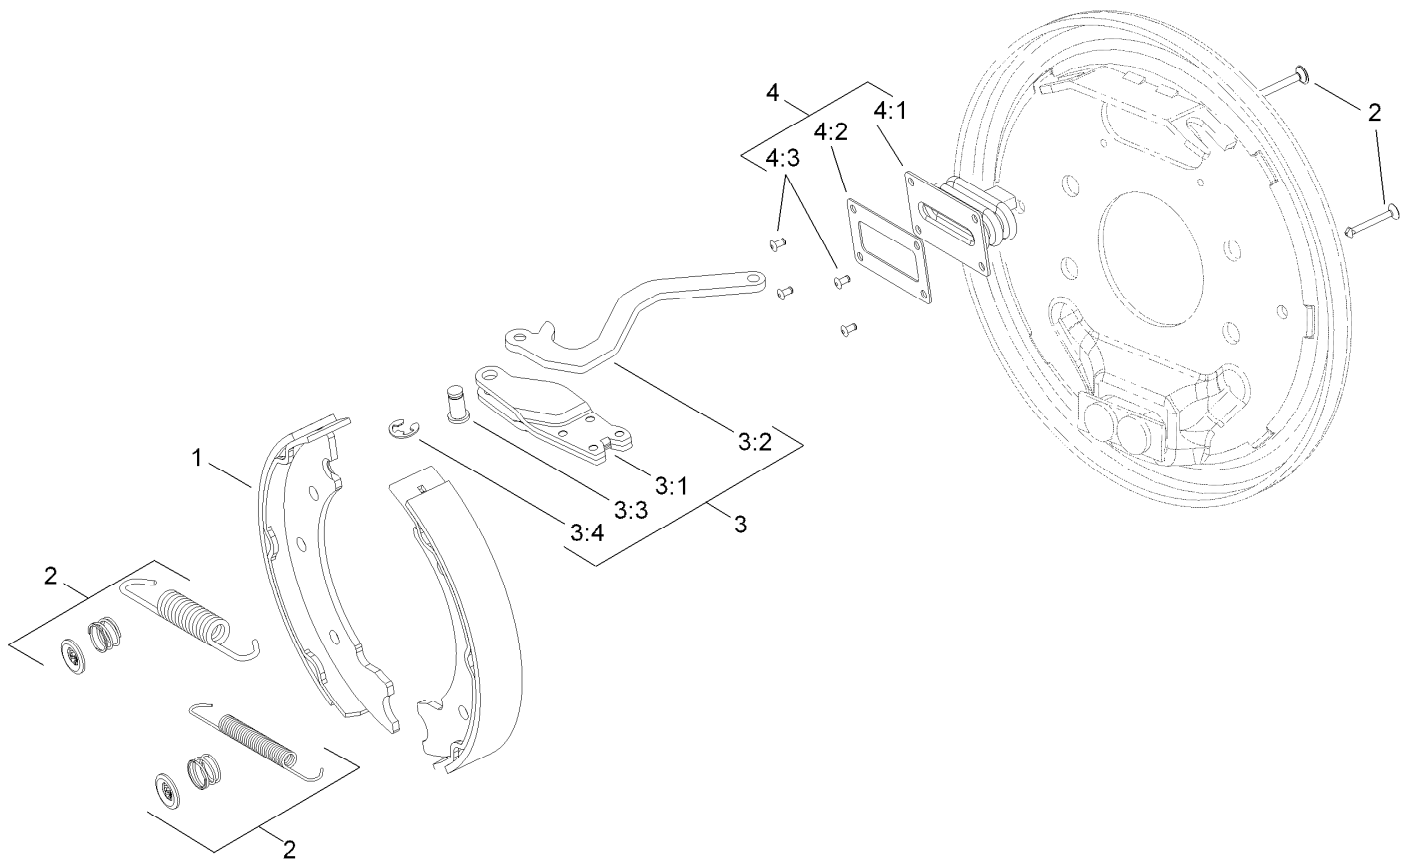

## Left Hand Brake Assembly No. 120-0235

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 139-5950    | 1    | Brake Shoe Kit     |
| 2    | 108-6983    | 1    | Brake Hardware Kit |
| 3    | 120-0236    | 1    | LH Actuator Kit    |
| 3:1  |             | 1    | Housing ●          |
| 3:2  |             | 1    | Lever-LH ●         |
| 3:3  |             | 1    | Pin-Pivot ●        |
| 3:4  |             | 1    | E-Ring ●           |
| 4    | 110-8885    | 1    | Dust Boot Kit      |
| 4:1  |             | 1    | Boot ●             |
| 4:2  |             | 1    | Plate-Back Up ●    |
| 4:3  |             | 2    | Rivet ●            |

 
● Not serviced separately

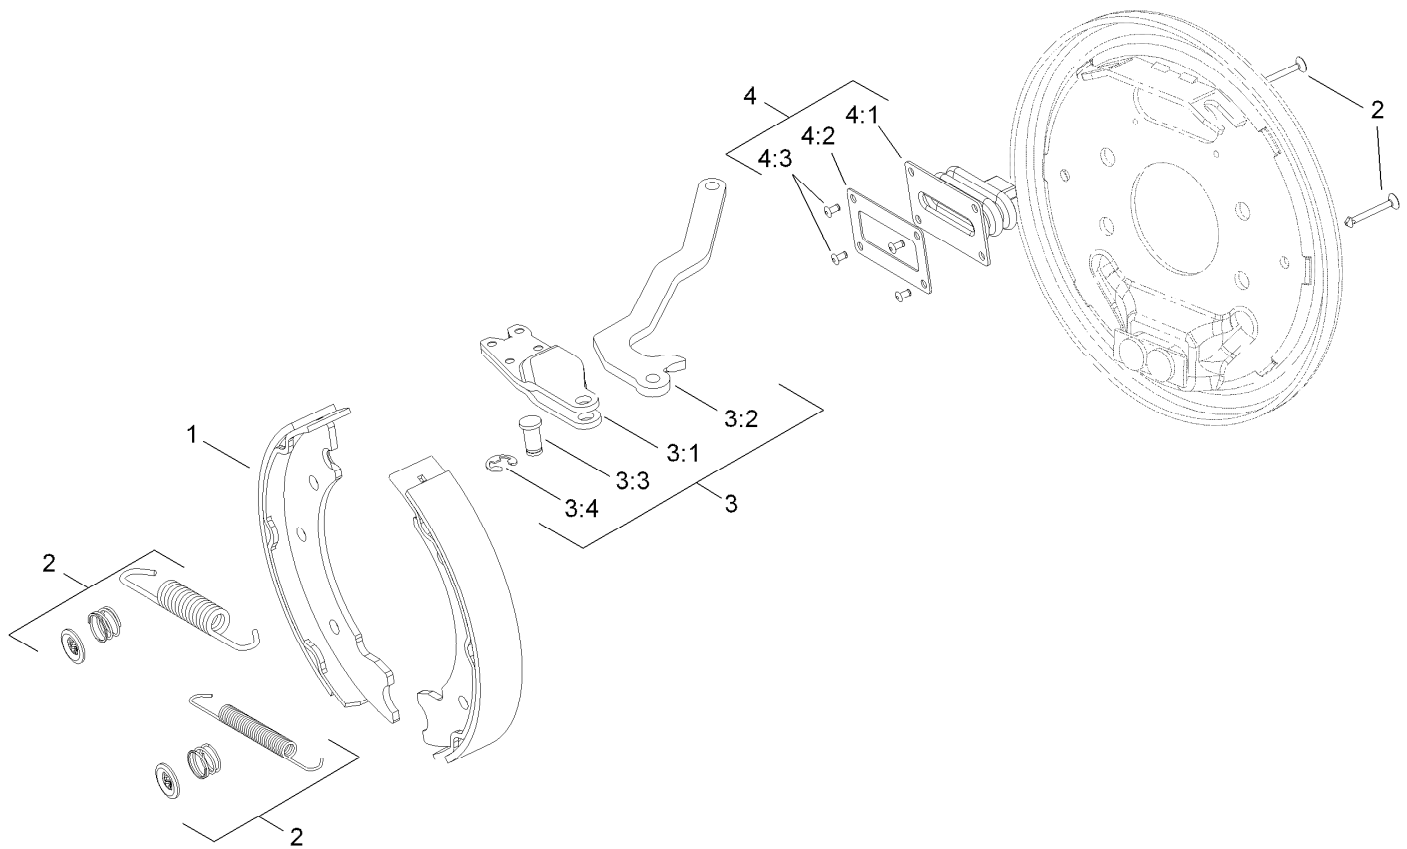

## Right Hand Brake Assembly No. 120-0233


| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 139-5950    | 1    | Brake Shoe Kit     |
| 2    | 108-6983    | 1    | Brake Hardware Kit |
| 3    | 120-0234    | 1    | RH Actuator Kit    |
| 3:1  |             | 1    | Housing ●          |
| 3:2  |             | 1    | Lever-RH ●         |
| 3:3  |             | 1    | Pin-Pivot ●        |
| 3:4  |             | 1    | E-Ring ●           |
| 4    | 110-8885    | 1    | Dust Boot Kit      |
| 4:1  |             | 1    | Boot ●             |
| 4:2  |             | 1    | Plate-Back Up ●    |
| 4:3  |             | 2    | Rivet ●            |

 ● Not serviced separately

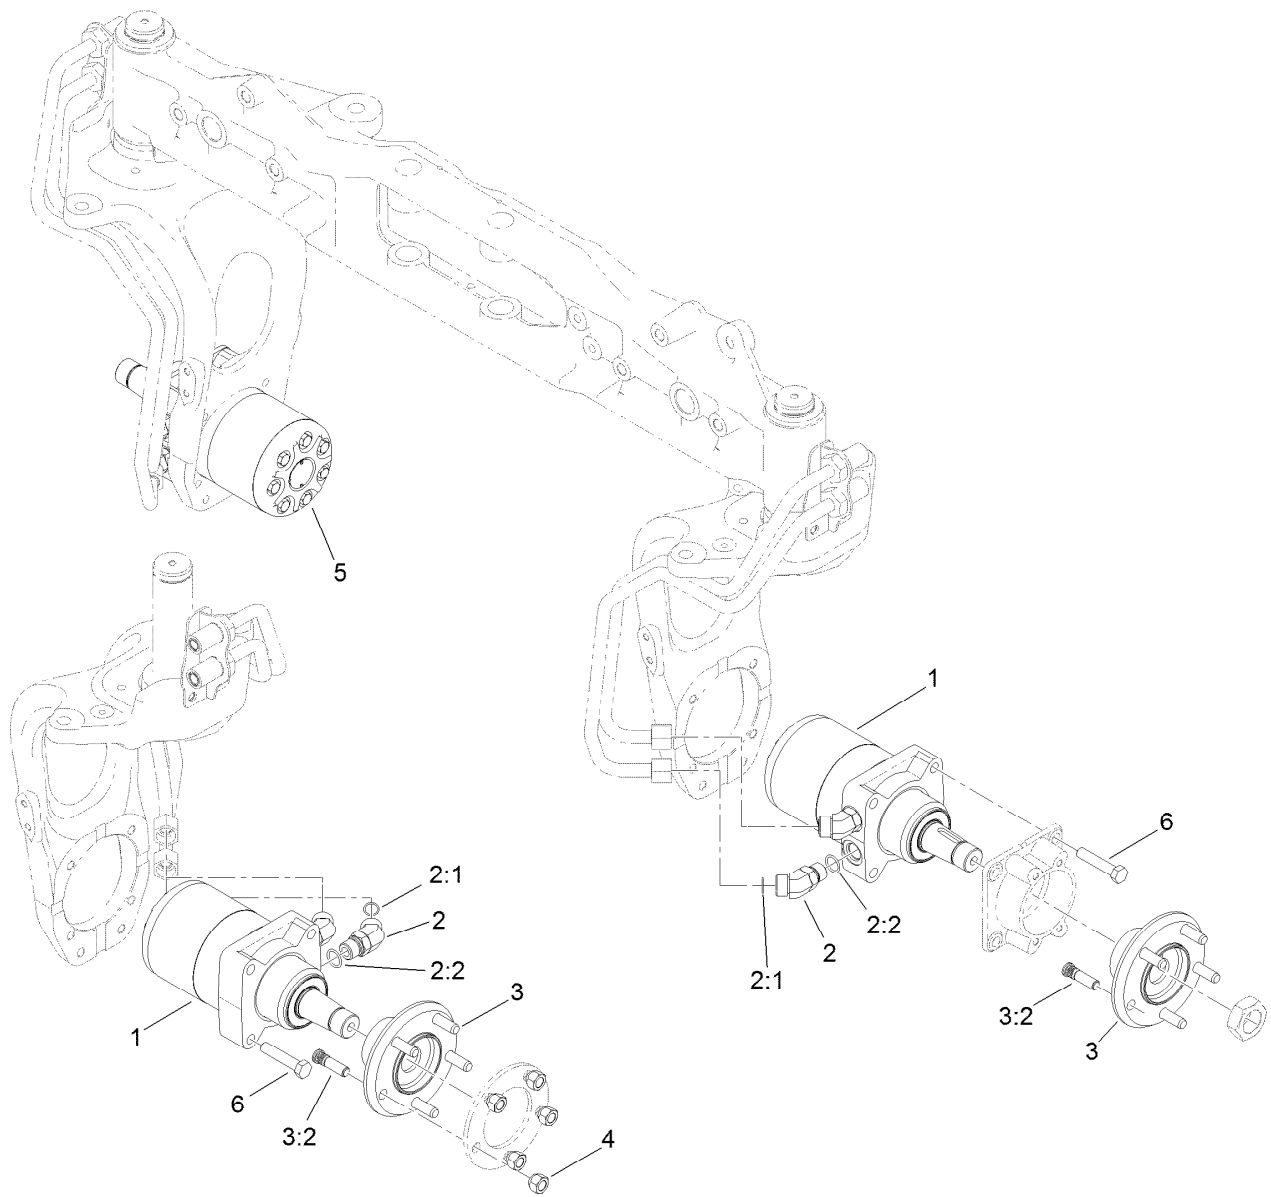

## 4 Wheel Drive Hydraulic Motor and Fitting Assembly

 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 120-6718    | 2    | HYD Motor ASM (335 CCW) |
| 2    | 340-14      | 8    | Fitting-HYD, 45 DEG     |
| 2:1  | 237-65      | 1    | O-Ring                  |
| 2:2  | 237-80      | 1    | O-Ring                  |
| 3    | 121-5492    | 4    | Wheel Hub ASM           |
| 3:2  | 114-3918    | 5    | Stud-Wheel              |
| 4    | 242-50      | 10   | Nut-Lug                 |
| 5    | 120-6719    | 2    | HYD Motor ASM (335 CW)  |
| 6    | 325-34      | 16   | Screw-HH                |

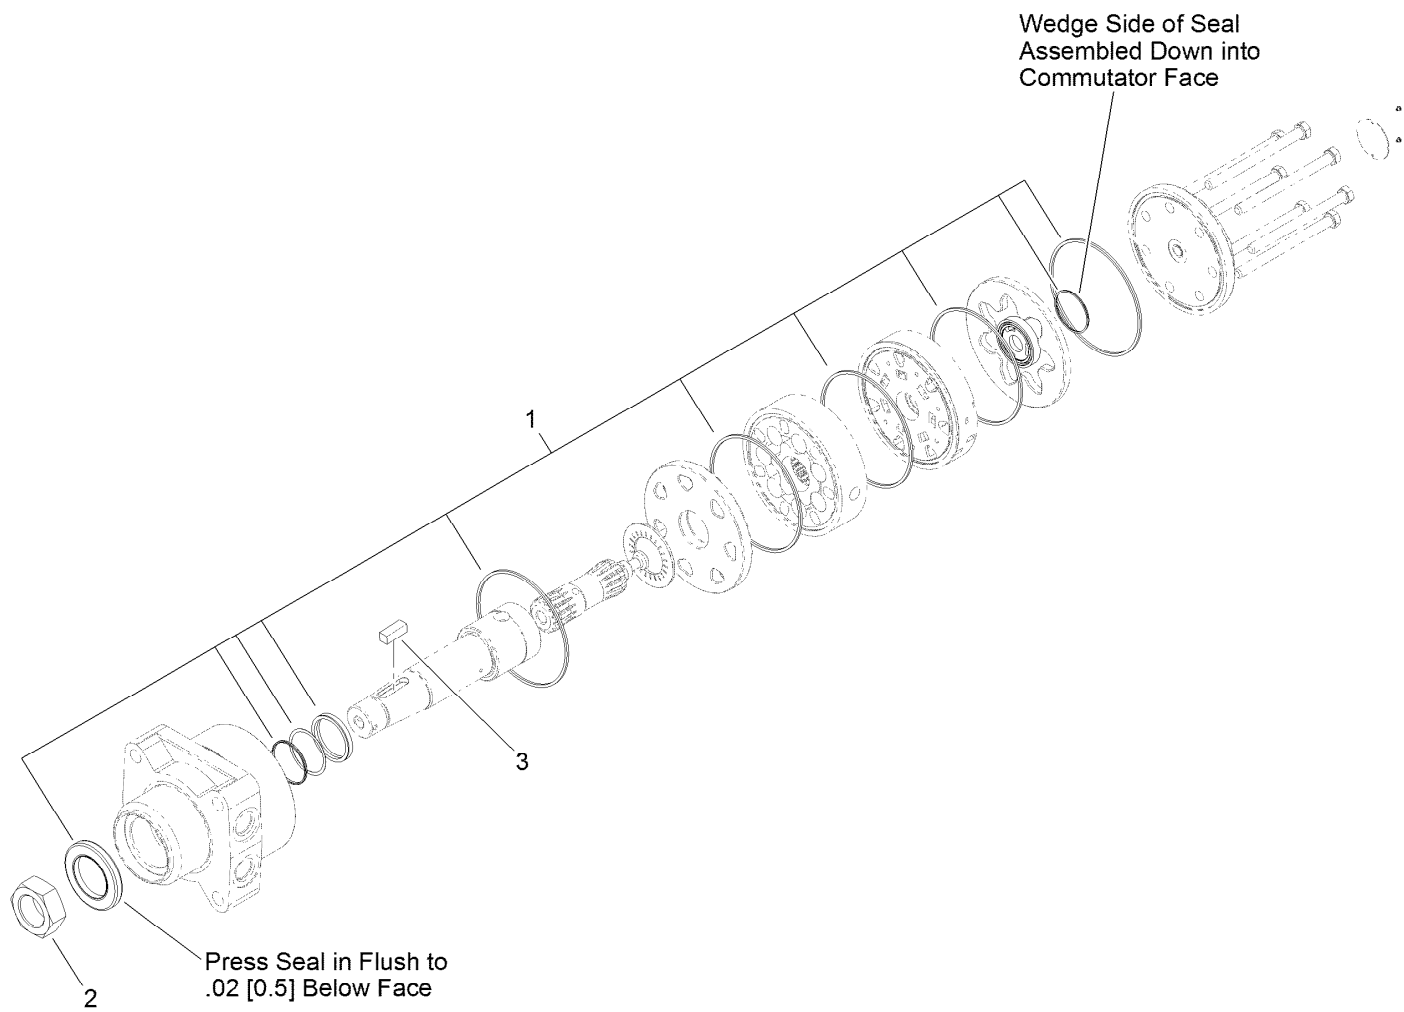

## Hydraulic Motor Assembly No. 120-6718 (CCW)
 
| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 1    | 121-5397    | 1    | Seal Kit    |
| 2    | 117-3290    | 1    | Nut-Hex     |
| 3    | 117-5198    | 1    | Key-Square  |





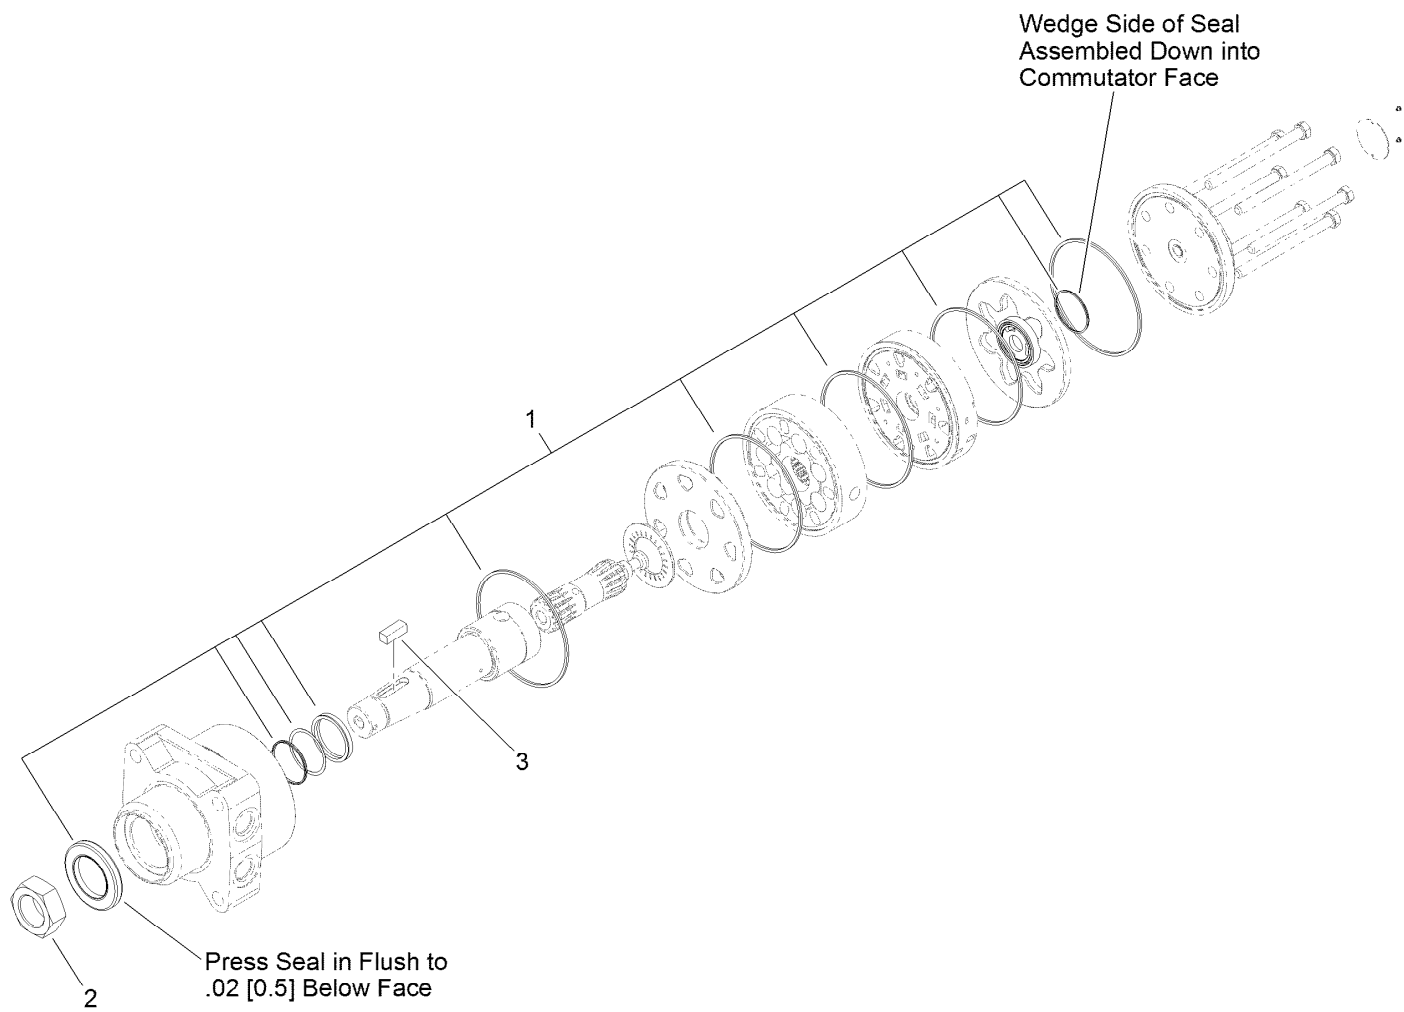

## Hydraulic Motor Assembly No. 120-6719 (CW)

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 1    | 121-5397    | 1    | Seal Kit    |
| 2    | 117-3290    | 1    | Nut-Hex     |
| 3    | 117-5198    | 1    | Key-Square  |
  
# Cab Wire Harness Assembly

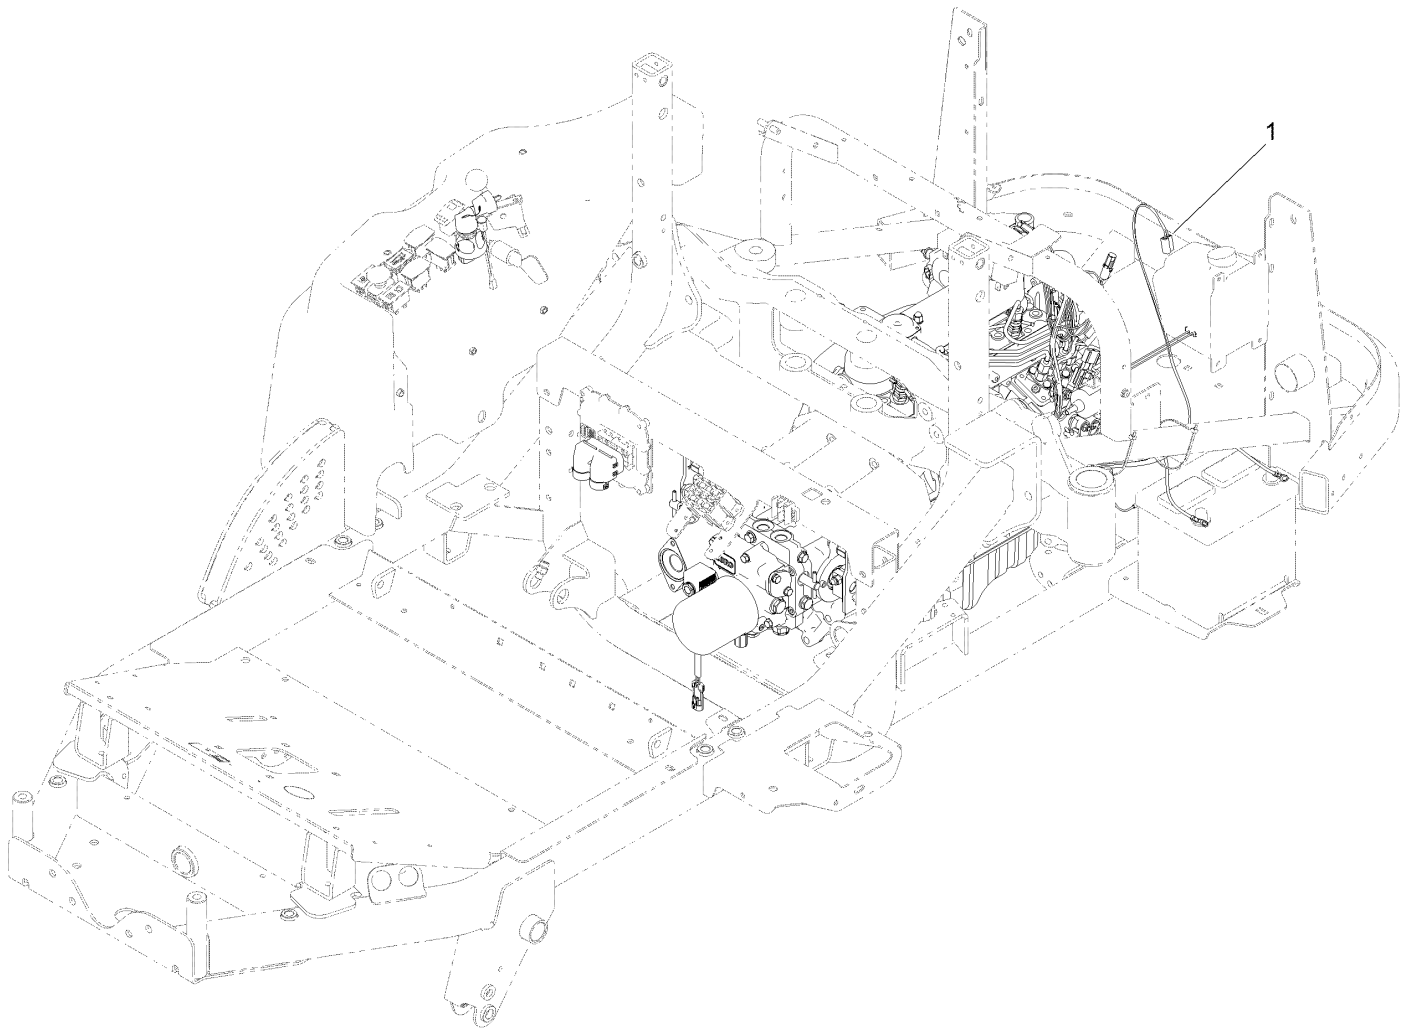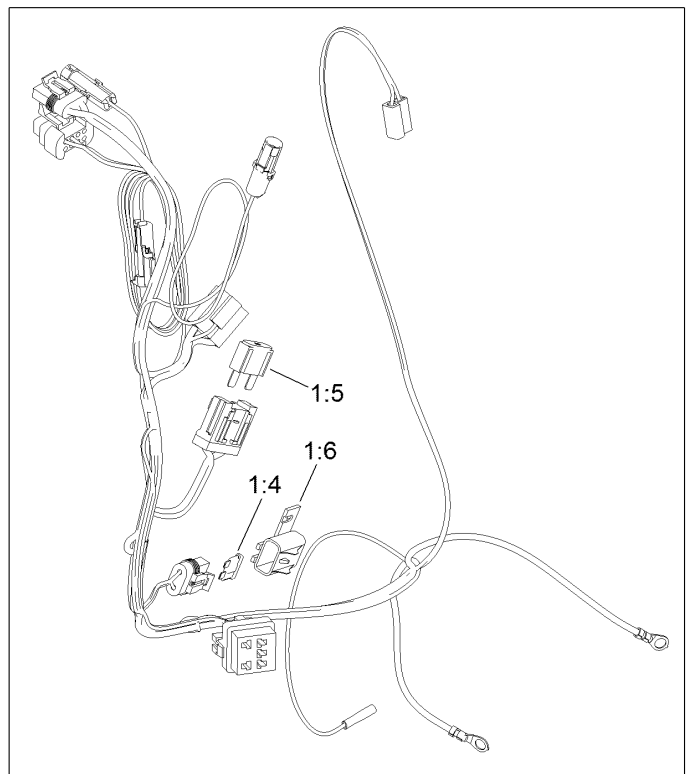


## Cab Wire Harness Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 1           | 122-1349           | 1           | Harness-Wire, Power |
| 1:4         | 218-578            | 1           | Fuse-Blade, 10 Amp  |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1:5         | 114-3342           | 1           | Fuse-Maxi, 60 Amp  |
| 1:6         | 32180-019          | 1           | Cover-Fuse, Single |

 
# Electrical Assembly

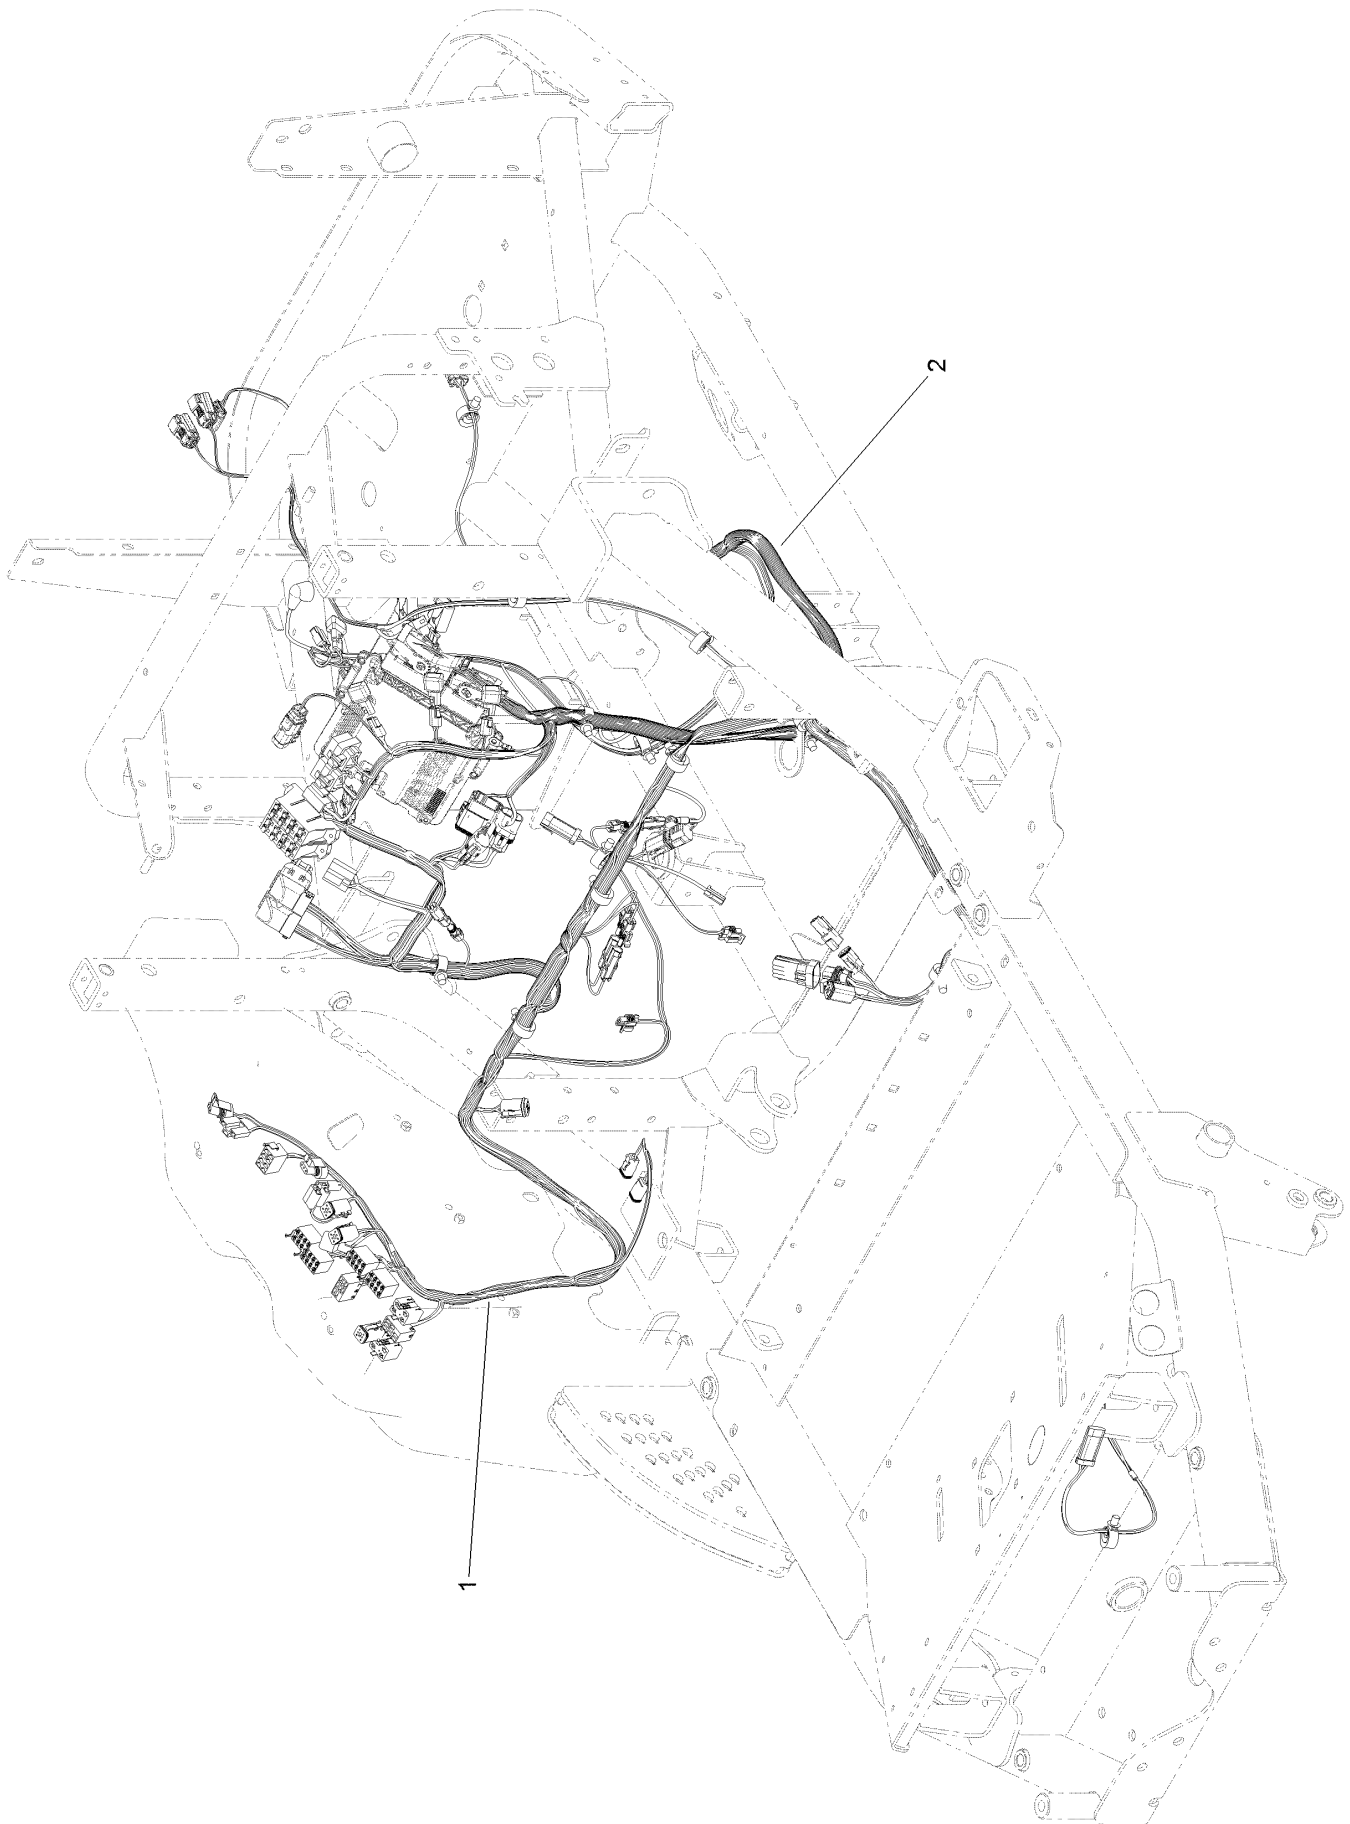

## Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 122-1427           | 1           | Harness-Wire       |
| 2           | 119-4375           | 1           | Harness-Engine     |

 
Wire Harness Assembly No. 122-1427

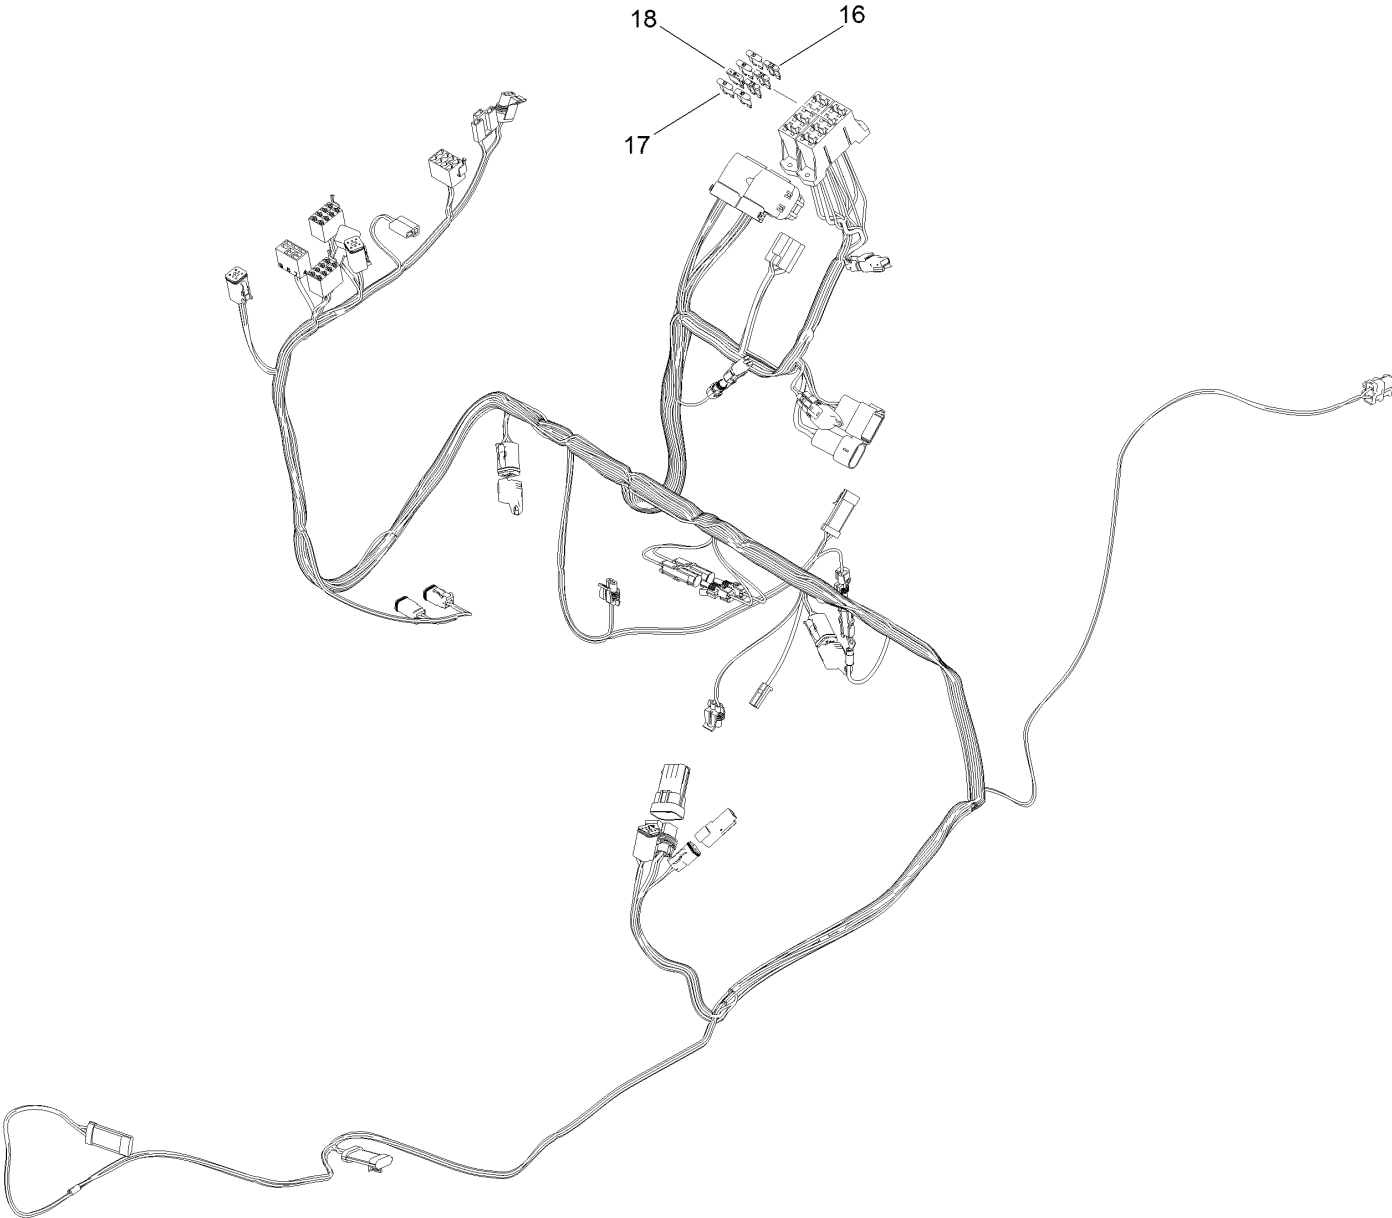

## Wire Harness Assembly No. 122-1427 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 16          | 114241             | 3           | Fuse-Blade, 7.5 Amp |
| 17          | 218-578            | 4           | Fuse-Blade, 10 Amp  |
| 18          | 109355             | 1           | Fuse-Blade, 15 Amp  |

 Wire Harness Assembly No. 119-4375

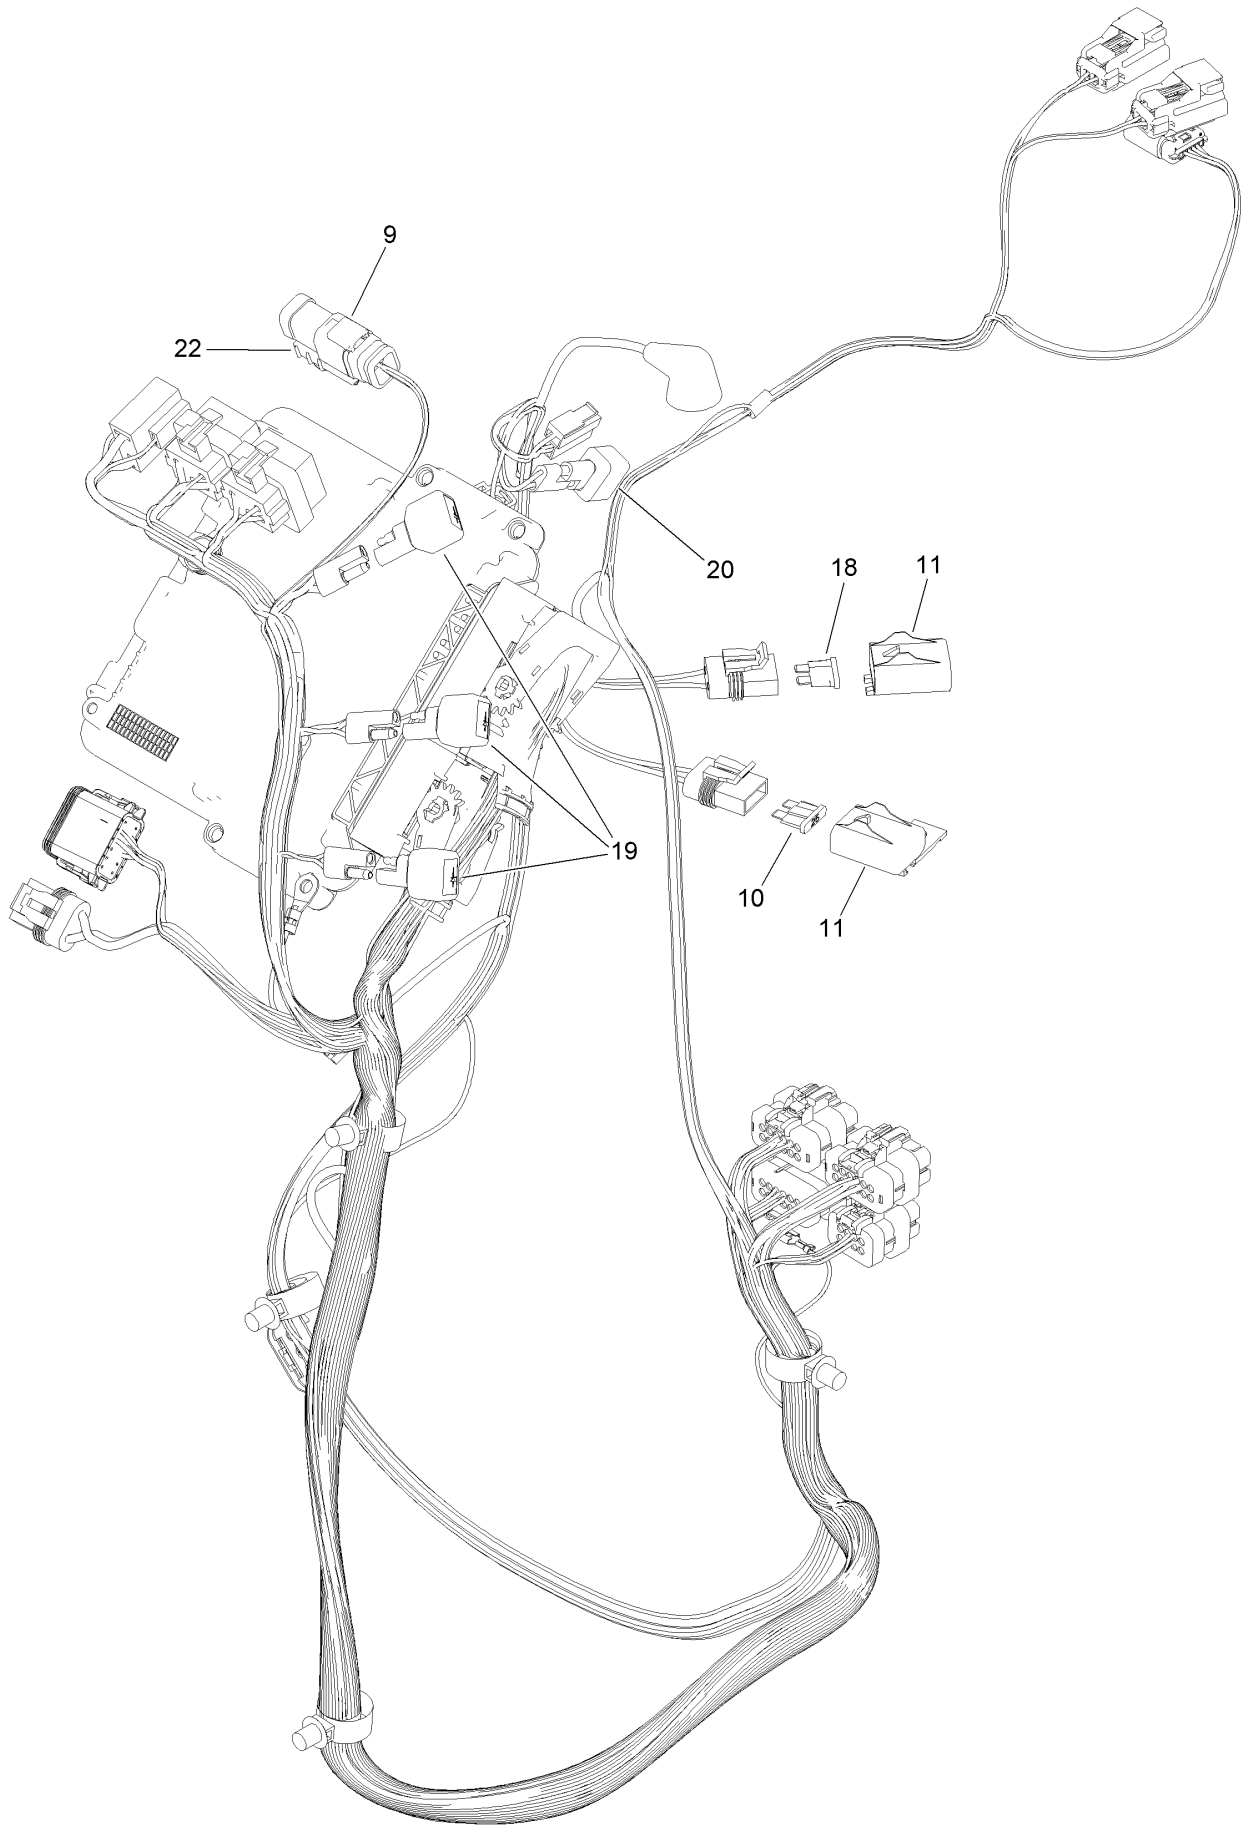




## Wire Harness Assembly No. 119-4375 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 9           | 32160-359          | 1           | Connector (6M)     |
| 10          | 109102             | 1           | Fuse-Blade, 25 Amp |
| 11          | 32180-019          | 2           | Cover-Fuse, Single |
| 18          | 94-6710            | 1           | Fuse-2 Amp         |

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 19          | 100-4918           | 3           | Diode               |
| 20          | 121-8891           | 1           | Resistor (1.6K Ohm) |
| 22          | 32180-103          | 1           | Clip-Connector      |

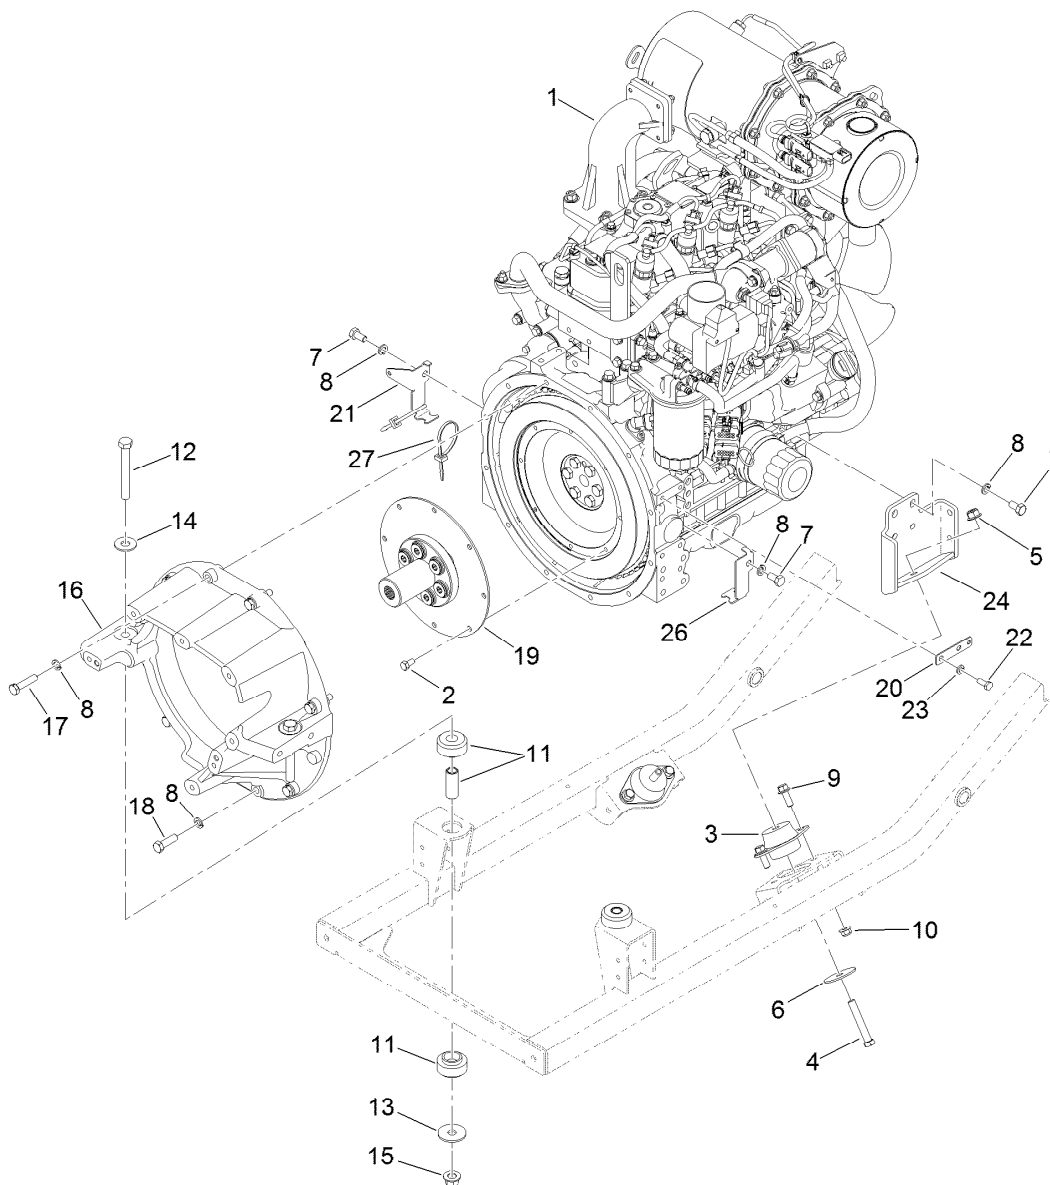

## Engine Assembly

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 138-6920    | 1    | Engine-Yanmar   |
| 2    | 99-5132     | 8    | Bolt            |
| 3    | 130-2486    | 2    | Mount           |
| 4    | 324-11      | 2    | Screw-HH        |
| 5    | 114-8417    | 2    | Nut-HF, NI      |
| 6    | 87-5100     | 2    | Washer-Snubbing |
| 7    | 33115-020   | 10   | Screw-HH        |
| 8    | 48-9590     | 19   | Washer-Lock     |
| 9    | 3234-42     | 4    | Screw-HHF       |
| 10   | 104-8301    | 4    | Nut-HF, NI      |
| 11   | 120-9168    | 2    | Mount-Rubber    |
| 12   | 325-17      | 2    | Screw-HH        |
| 13   | 86-1990     | 2    | Washer-Thrust   |

 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 14   | 3256-6      | 2    | Washer-Flat         |
| 15   | 99-5107     | 2    | Nut-Lock            |
| 16   | 125-2836    | 1    | Housing-Flywheel    |
| 17   | 33115-045   | 7    | Screw-HH            |
| 18   | 33115-035   | 2    | Screw-HH            |
| 19   | 120-9131    | 1    | Coupling-Flywheel   |
| 20   | 121-5636    | 1    | Tab-Harness         |
| 21   | 127-2774    | 1    | Bracket-Harness, RH |
| 22   | 33114-020   | 2    | Screw-HH            |
| 23   | 3253-4      | 2    | Washer-Lock         |
| 24   | 125-2841-0P | 1    | Mount-LH            |
| 26   | 127-2773    | 1    | Bracket-Harness, LH |
| 27   | 3290-378    | 4    | Tie-Cable           |

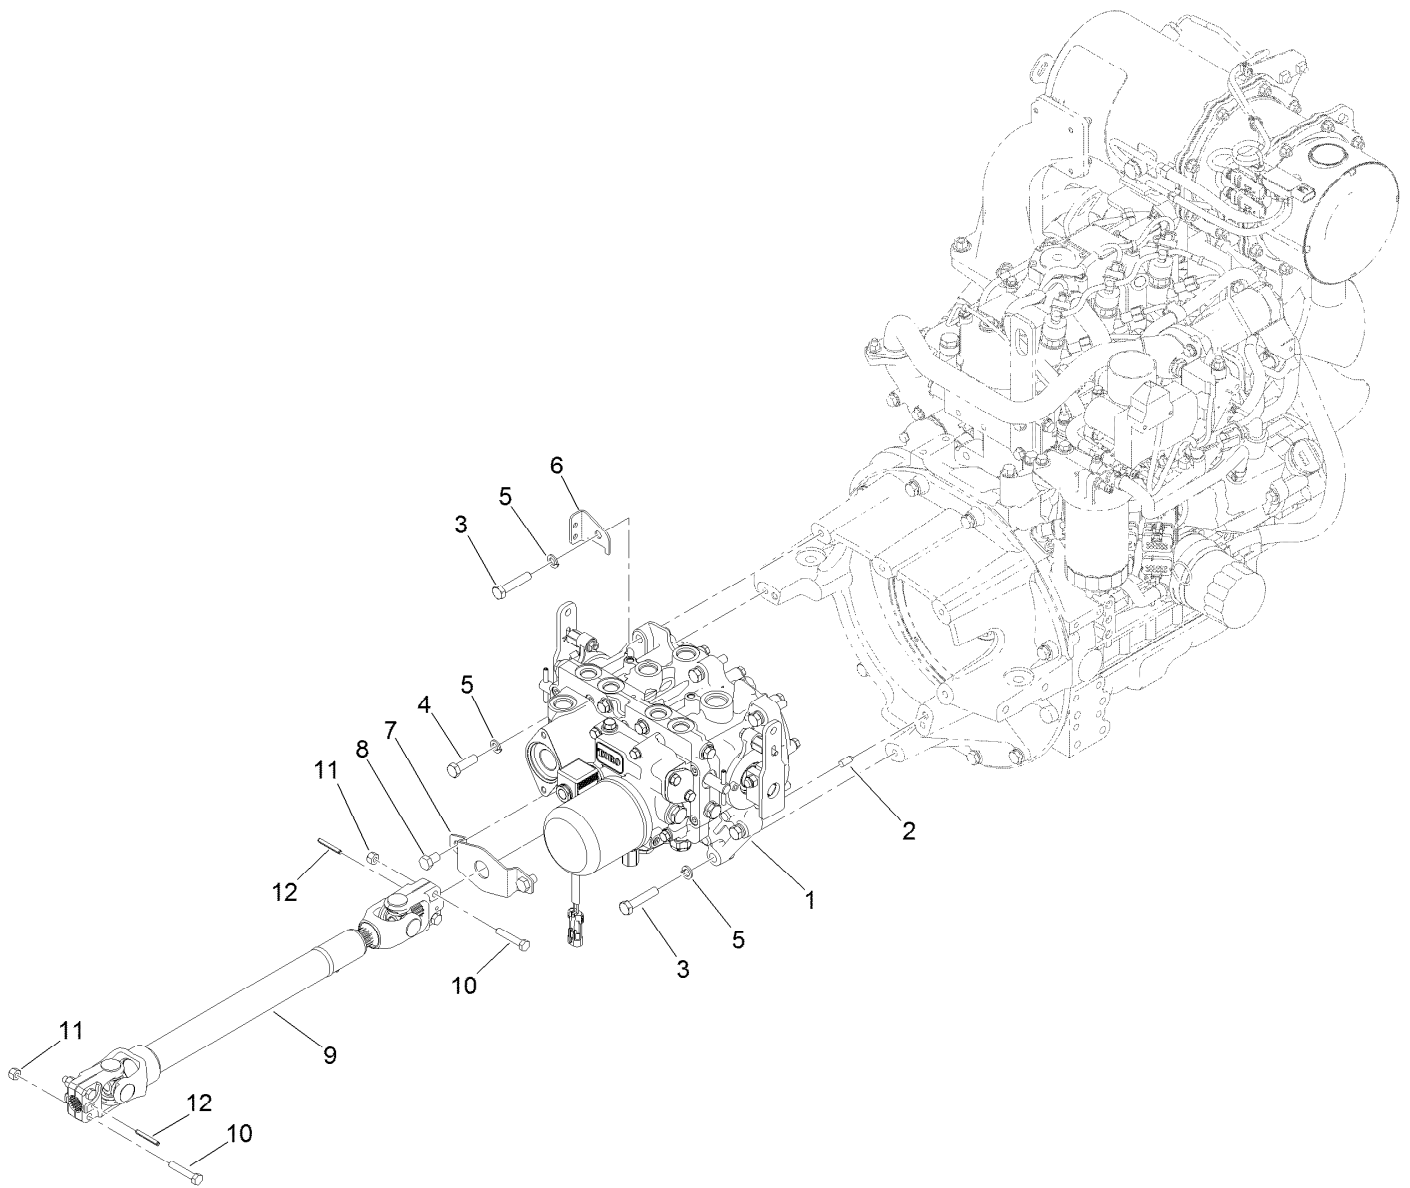

## Transmission Component Assembly

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 125-9290    | 1    | Transmisson ASM |
| 2    | 87-1910     | 2    | Pin-Dowel       |
| 3    | 33115-050   | 6    | Screw-HH        |
| 4    | 33115-035   | 1    | Screw-HH        |
| 5    | 48-9590     | 7    | Washer-Lock     |
| 6    | 120-0239    | 1    | Support-Tube    |
| 7    | 114-4088    | 1    | Shield-Seal     |
| 8    | 33115-016   | 2    | Screw-HH        |
| 9    | 110-3575    | 1    | Driveshaft ASM  |
| 10   | 322-9       | 4    | Screw-HH        |
| 11   | 3296-29     | 4    | Nut-Lock, NI    |
| 12   | 32121-34    | 2    | Pin-Roll        |
 
# **Charge Pump Housing Assembly** **Transmission Assembly No. 125-9290**

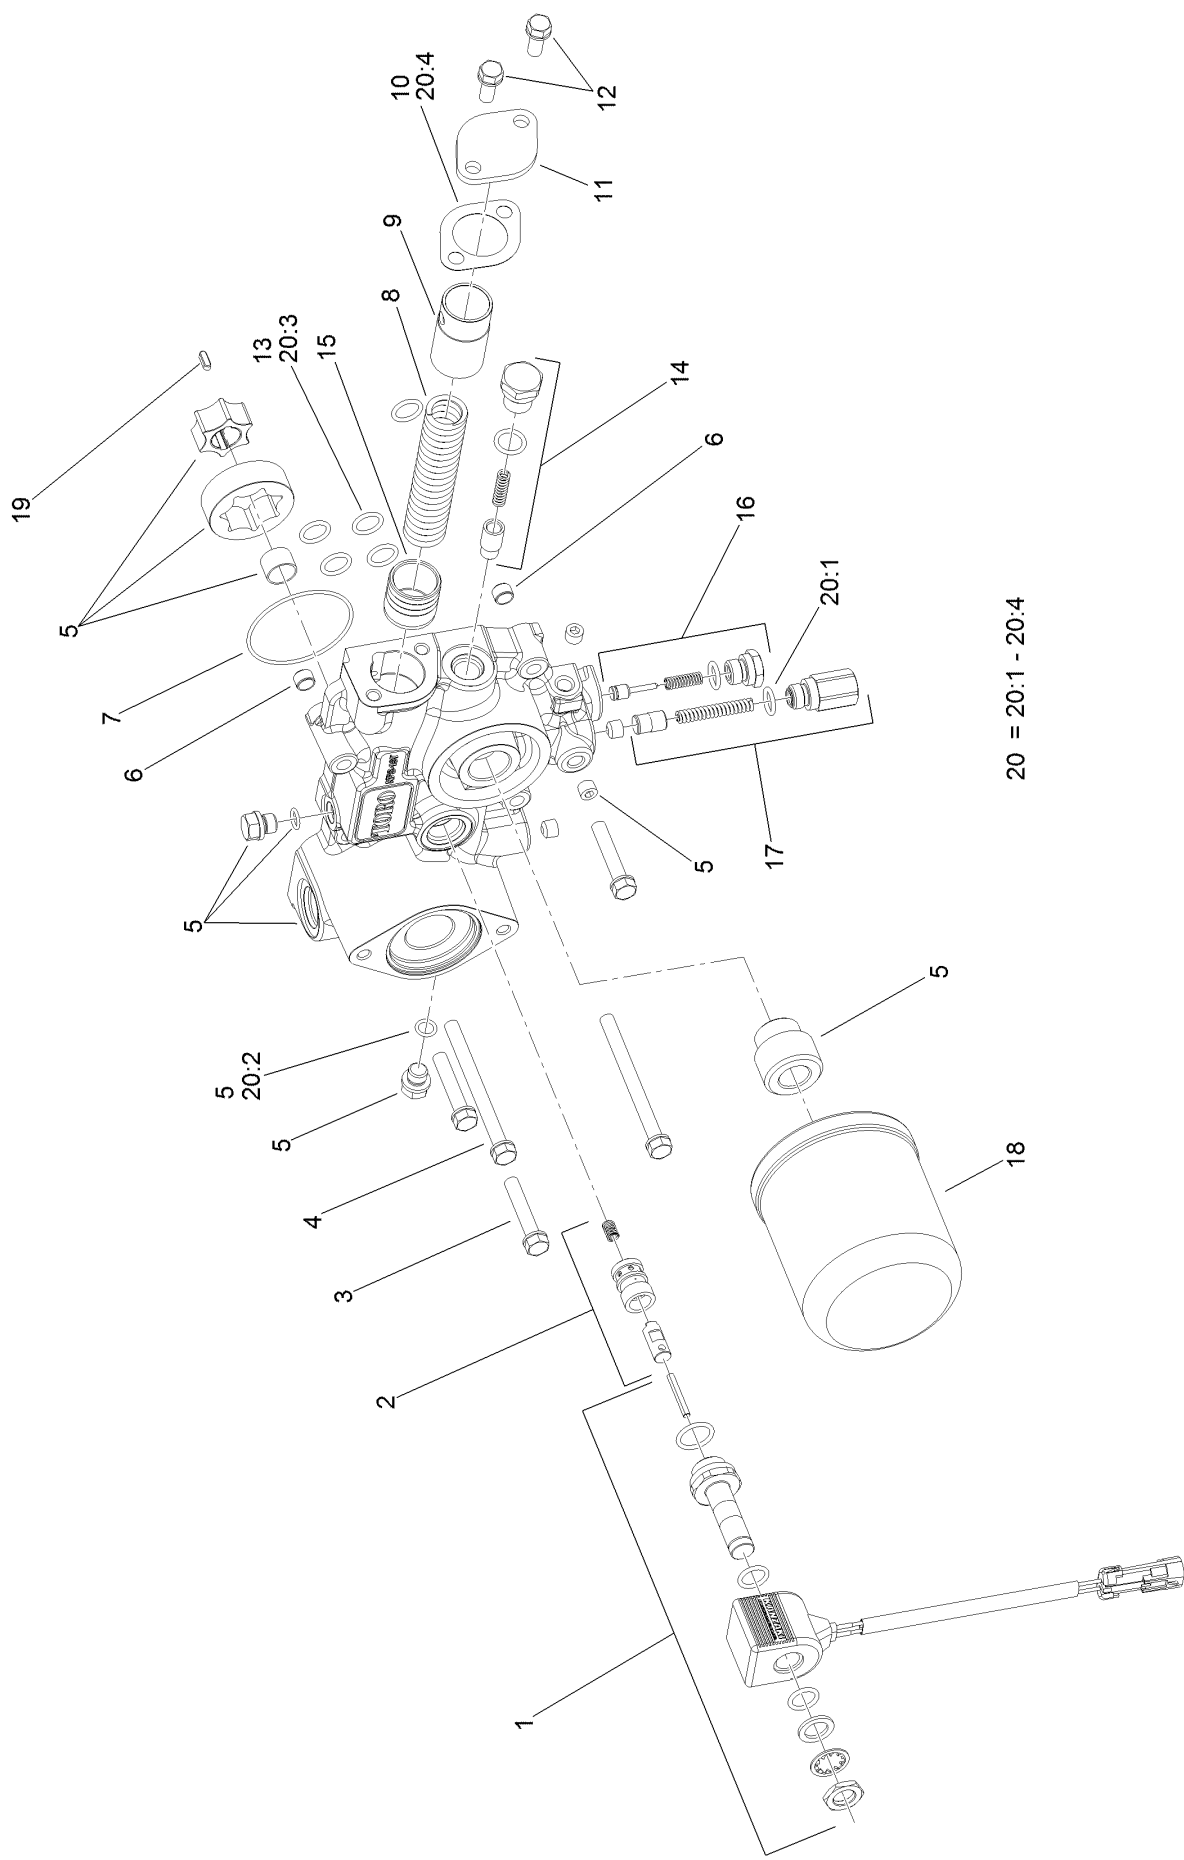

20 = 20:1 - 20:4


# Charge Pump Housing Assembly
 
## Transmission Assembly No. 125-9290 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 107-0851           | 1           | Solenoid ASM        | 13          | 104-3298           | 1           | Packing                 |
| 2           | 107-0850           | 1           | Solenoid Valve ASM  | 14          | 107-0843           | 1           | Filter Bypass Valve ASM |
| 3           | 107-0863           | 3           | Bolt                | 15          | 107-0818           | 1           | Piston                  |
| 4           | 107-0864           | 2           | Bolt                | 16          | 120-5153           | 1           | Charge Relief Valve ASM |
| 5           | 107-0840           | 1           | Pump Body ASM       | 17          | 107-0841           | 1           | Pressure Valve ASM      |
| 6           | 107-0848           | 2           | Pin                 | 18          | 108-5194           | 1           | Filter-Oil, HYD         |
| 7           | 107-0856           | 1           | O-Ring              | 19          | 107-0865           | 1           | Key                     |
| 8           | 107-0845           | 1           | Spring              | 20          | 107-0855           | 1           | Charge Pump Seal Kit    |
| 9           | 107-0844           | 1           | Collar              | 20:1        | 93-0418            | 2           | O-Ring                  |
| 10          | 107-0847           | 1           | Gasket              | 20:2        | 107-0817           | 2           | O Ring-Plug             |
| 11          | 107-0846           | 1           | Cover               | 20:3        | 104-3298           | 6           | Packing                 |
| 12          | 93-0457            | 2           | Bolt And Washer ASM | 20:4        | 107-0847           | 1           | Gasket                  |

# Center Section Assembly

## Transmission Assembly No. 125-9290

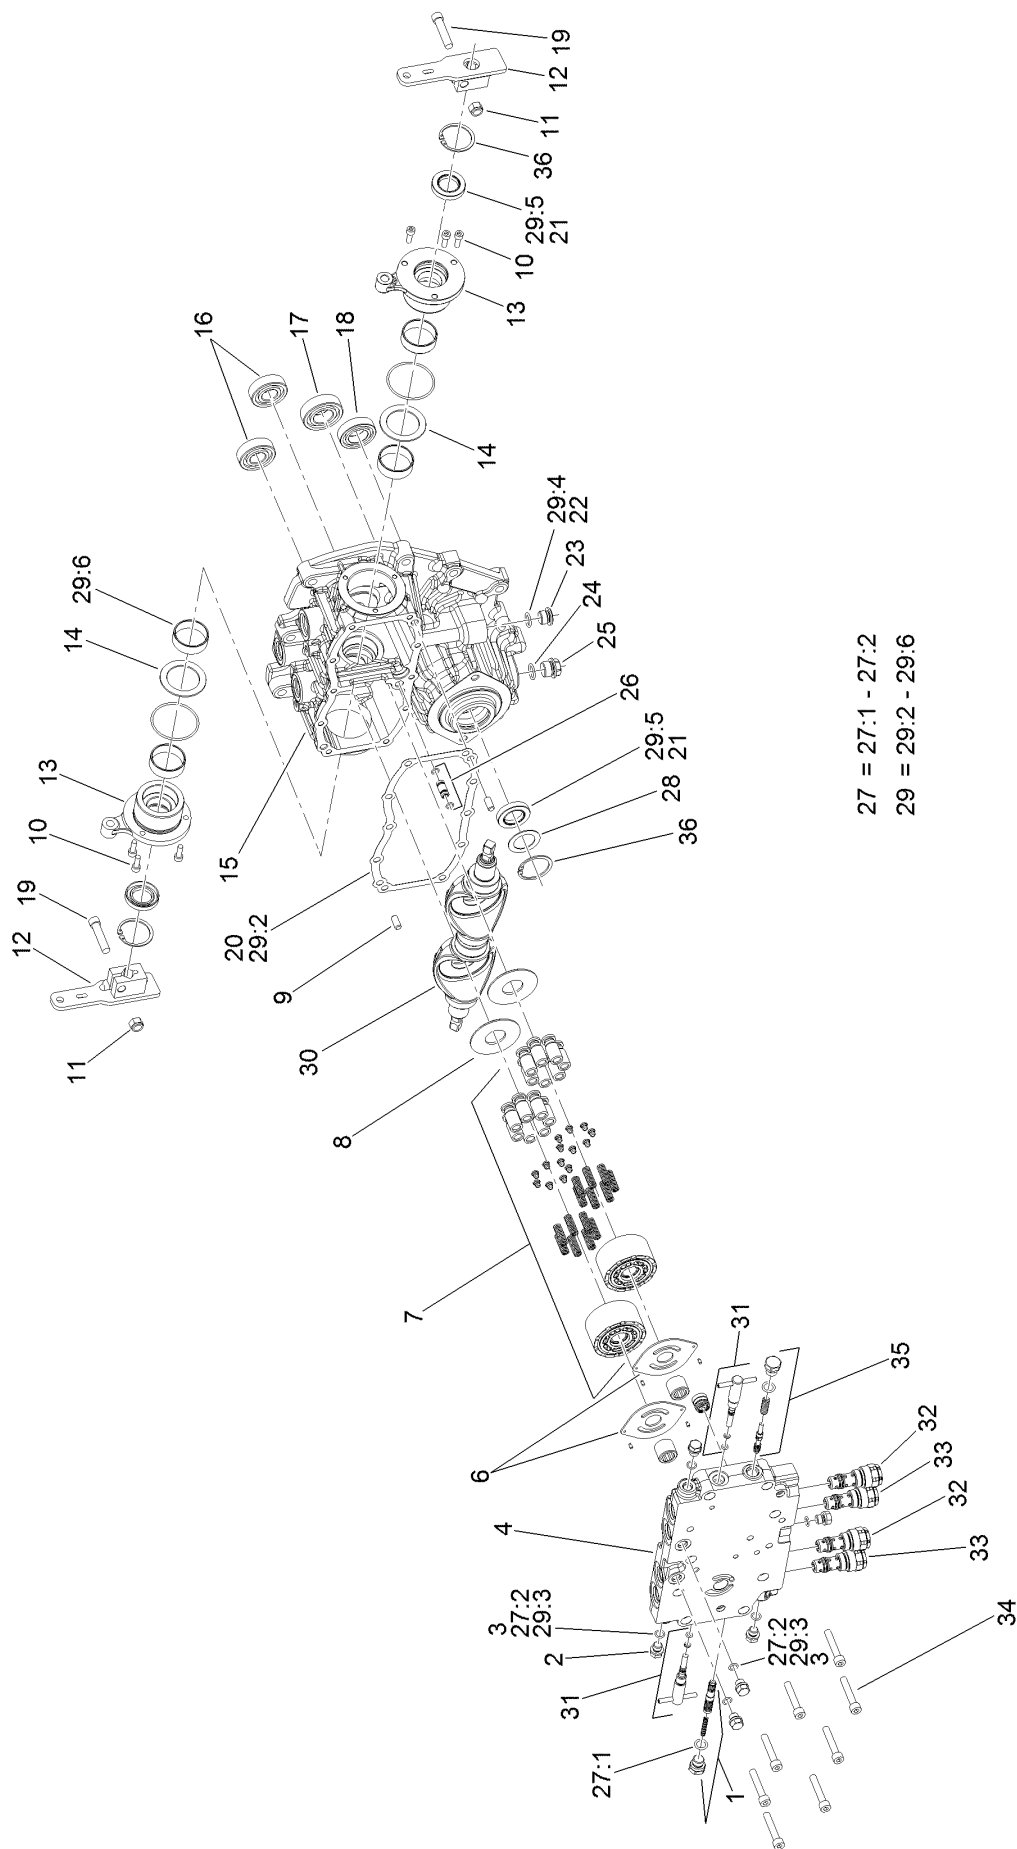


# Center Section Assembly

## Transmission Assembly No. 125-9290 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 107-0807           | 1           | Valve-Flushing, RH  | 23          | 107-0861           | 1           | Plug-NPTF             |
| 2           | 107-0857           | 6           | Plug                | 24          | 237-79             | 1           | O-Ring                |
| 3           | 107-0817           | 6           | O Ring-Plug         | 25          | 107-0867           | 1           | Plug                  |
| 4           | 120-5150           | 1           | Center Case ASM     | 26          | 107-0812           | 1           | Pipe                  |
| 6           | 107-0805           | 2           | Plate-Valve         | 27          | 107-0852           | 1           | Center Case Seal Kit  |
| 7           | 107-0824           | 2           | Cylinder Block ASM  | 27:1        | 93-0418            | 2           | O-Ring                |
| 8           | 107-0830           | 2           | Plate-Thrust        | 27:2        | 107-0817           | 6           | O Ring-Plug           |
| 9           | 92-0765            | 4           | Pin-Parallel        | 28          | 107-0813           | 1           | Spacer                |
| 10          | 107-0859           | 6           | Bolt                | 29          | 107-0853           | 1           | Pump Housing Seal Kit |
| 11          | 120-6681           | 2           | U-Nut               | 29:2        | 107-0810           | 1           | Gasket-Case, Center   |
| 12          | 131-5505           | 2           | Arm-Control         | 29:3        | 107-0817           | 2           | O Ring-Plug           |
| 13          | 107-0832           | 2           | Side Cover ASM      | 29:4        | 104-3298           | 1           | Packing               |
| 14          | 107-0829           | 2           | Washer              | 29:5        | 107-0814           | 3           | Seal                  |
| 15          | 120-5151           | 1           | Pump Housing ASM    | 29:6        | 107-0825           | 4           | Ring-Seal             |
| 16          | 107-0826           | 2           | Bearing             | 30          | 120-6679           | 2           | Plate-Swash           |
| 17          | 107-0821           | 1           | Bearing             | 31          | 107-0808           | 2           | Valve-Bypass          |
| 18          | 107-0838           | 1           | Bearing             | 32          | 107-0804           | 2           | Valve-Rear            |
| 19          | 120-6682           | 2           | Bolt                | 33          | 107-0803           | 2           | Valve-Front           |
| 20          | 107-0810           | 2           | Gasket-Case, Center | 34          | 107-0863           | 8           | Bolt                  |
| 21          | 107-0814           | 1           | Seal                | 35          | 107-0806           | 1           | Valve-Flushing, LH    |
| 22          | 104-3298           | 1           | Packing             | 36          | 92-0757            | 2           | Ring-Snap             |
 
# **Gear Case and Clutch Assembly** **Transmission Assembly No. 125-9290**

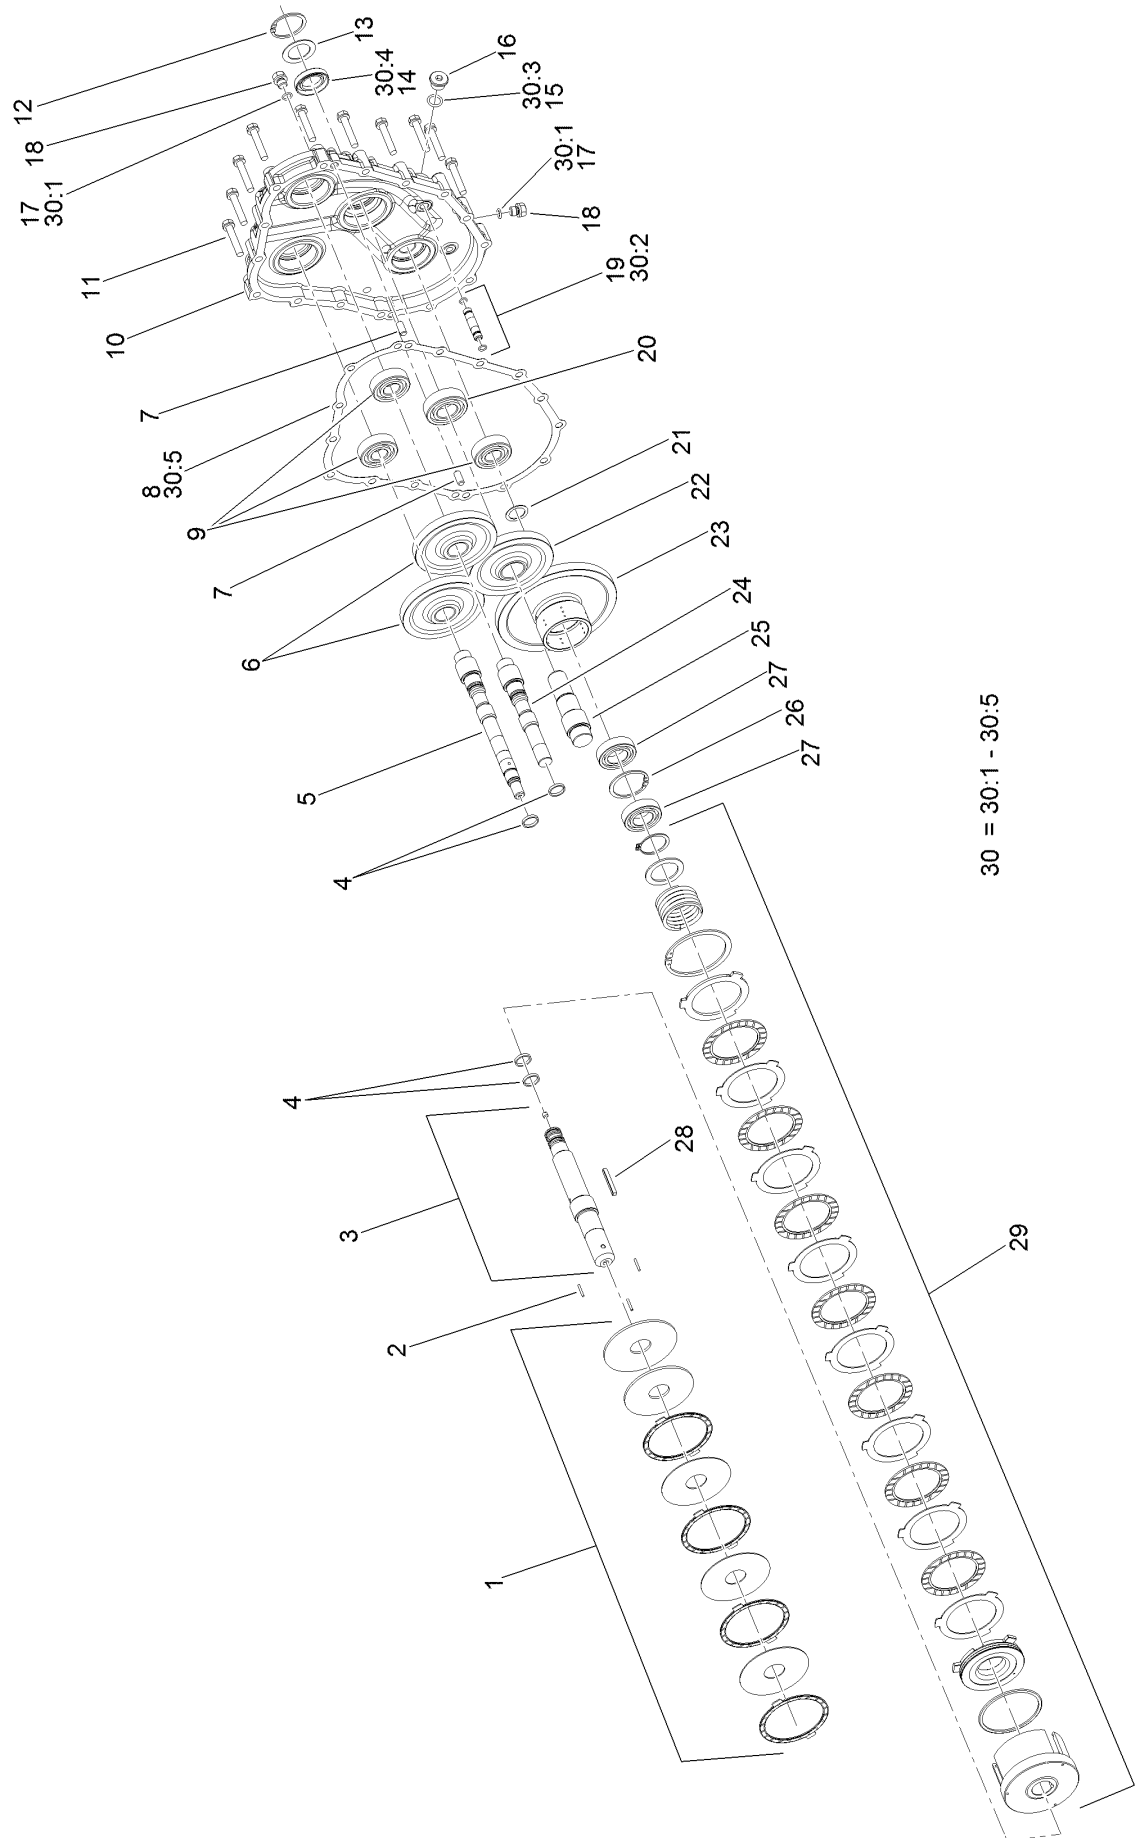




# Gear Case and Clutch Assembly

## Transmission Assembly No. 125-9290 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 107-0839           | 1           | PTO Brake ASM        | 19          | 107-0811           | 1           | Pipe                  |
| 2           | 107-0837           | 3           | Rod-Push             | 20          | 107-0821           | 2           | Bearing               |
| 3           | 107-0833           | 1           | PTO Shaft ASM        | 21          | 107-0836           | 1           | Spacer                |
| 4           | 107-0825           | 2           | Ring-Seal            | 22          | 107-0820           | 1           | Gear-Input            |
| 5           | 107-0827           | 1           | Shaft-Pump           | 23          | 107-0834           | 1           | Gear-PTO              |
| 6           | 107-0823           | 2           | Gear-Pump            | 24          | 107-0822           | 1           | Shaft-Pump            |
| 7           | 92-0765            | 4           | Pin-Parallel         | 25          | 107-0819           | 1           | Shaft-Input           |
| 8           | 107-0816           | 1           | Gasket-Housing, Gear | 26          | 92-0758            | 1           | Ring-Snap             |
| 9           | 107-0826           | 4           | Bearing              | 27          | 107-0838           | 3           | Bearing               |
| 10          | 120-5152           | 1           | Housing-Case, Gear   | 28          | 107-0866           | 1           | Key                   |
| 11          | 107-0863           | 13          | Bolt                 | 29          | 107-0835           | 1           | Clutch Cylinder ASM   |
| 12          | 92-0757            | 1           | Ring-Snap            | 30          | 107-0854           | 1           | Gear Housing Seal Kit |
| 13          | 107-0813           | 1           | Spacer               | 30:1        | 107-0817           | 2           | O Ring-Plug           |
| 14          | 107-0814           | 1           | Seal                 | 30:2        |                    | 2           | O-Ring ●              |
| 15          | 104-3298           | 1           | Packing              | 30:3        | 104-3298           | 1           | Packing               |
| 16          | 107-0861           | 1           | Plug-NPTF            | 30:4        | 107-0814           | 1           | Seal                  |
| 17          | 107-0817           | 6           | O Ring-Plug          | 30:5        | 107-0816           | 1           | Gasket-Housing, Gear  |
| 18          | 107-0857           | 6           | Plug                 |             |                    |             |                       |

 
● Not serviced separately

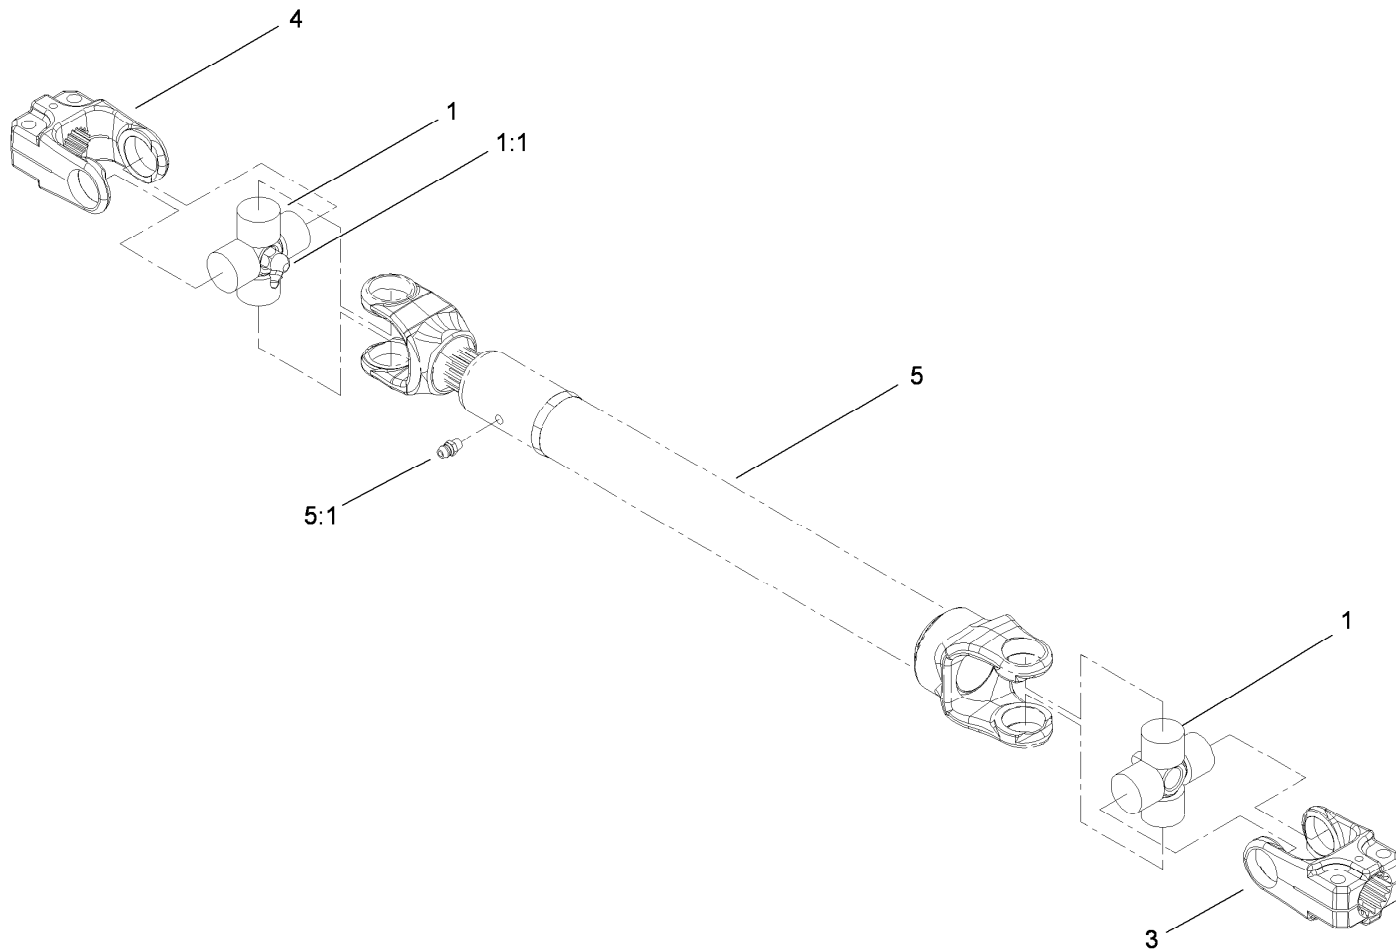

## Driveshaft Assembly No. 110-3575

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 112-1687    | 2    | Cross And Bearing Kit |
| 1:1  | 62-3820     | 1    | Fitting-Grease        |
| 3    | 54-9040     | 1    | Yoke-End              |
| 4    | 54-9090     | 1    | Yoke-End              |
| 5    |             | 1    | Tube-Yoke, Slip ●     |
| 5:1  | 302-22      | 1    | Fitting-Grease        |

 ● Not serviced separately

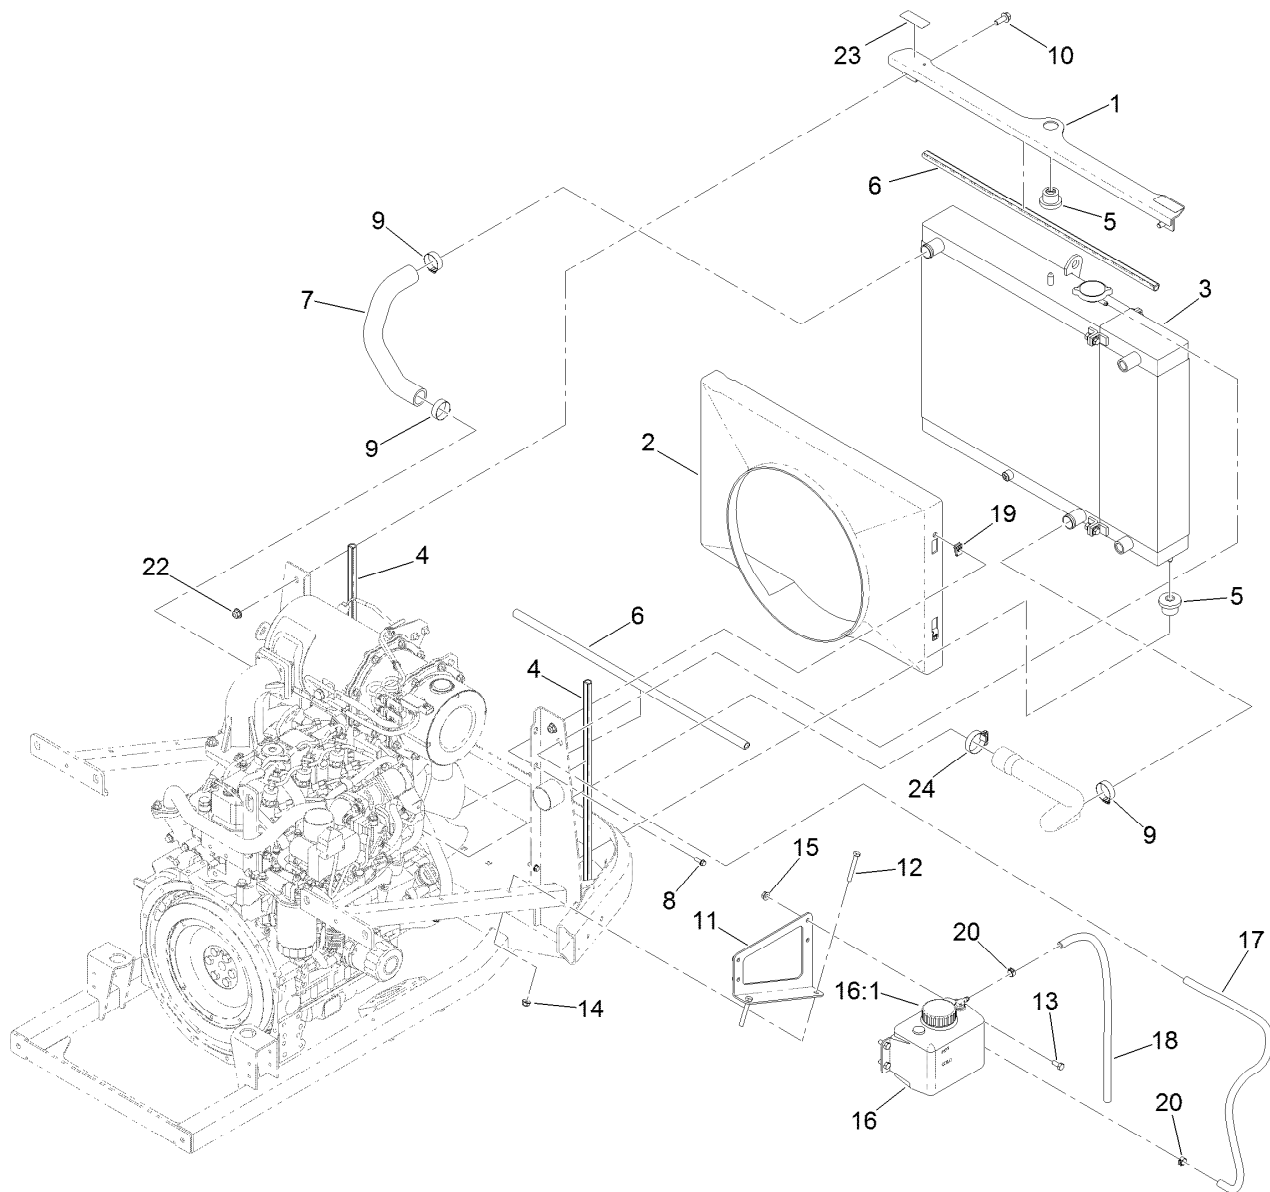


## Radiator Component Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 133-4736-03 | 1    | Support-Radiator       |
| 2    | 125-2840    | 1    | Shroud-Fan             |
| 3    |             | 1    | Radiator/Cooler ASM ■● |
| 4    | 119-1426    | 2    | Seal-Bulb              |
| 5    | 119-1422    | 3    | Mount-Isolator         |
| 6    | 119-1427    | 2    | Seal-Bulb              |
| 7    | 125-2846    | 1    | Hose-Radiator, Upper   |
| 8    | 32105-15    | 4    | Screw-HWH              |
| 9    | 2412-34     | 3    | Clamp-Hose             |
| 10   | 3234-42     | 2    | Screw-HHF              |
| 11   | 125-2816-0P | 1    | Bracket-Overflow       |
| 12   | 322-11      | 2    | Screw-HH               |

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 13   | 322-3       | 4    | Screw-HH              |
| 14   | 104-8300    | 2    | Nut-HF, NI            |
| 15   | 32128-25    | 4    | Nut-HF                |
| 16   | 120-5573    | 1    | Coolant Reservoir ASM |
| 16:1 | 87-7050     | 1    | Cap-Reservoir         |
| 17   | 110-3257    | 1    | Hose-Fuel             |
| 18   | 110-6187    | 1    | Hose-Fuel             |
| 19   | 107069      | 4    | Clip                  |
| 20   | 92-2379     | 2    | Clamp-Hose            |
| 22   | 104-8301    | 2    | Nut-HF, NI            |
| 23   | 117-4766    | 2    | Decal-Warning, Fan    |
| 24   | 2412-111    | 1    | Clamp                 |


● See following pages

 ■ Not serviced separately

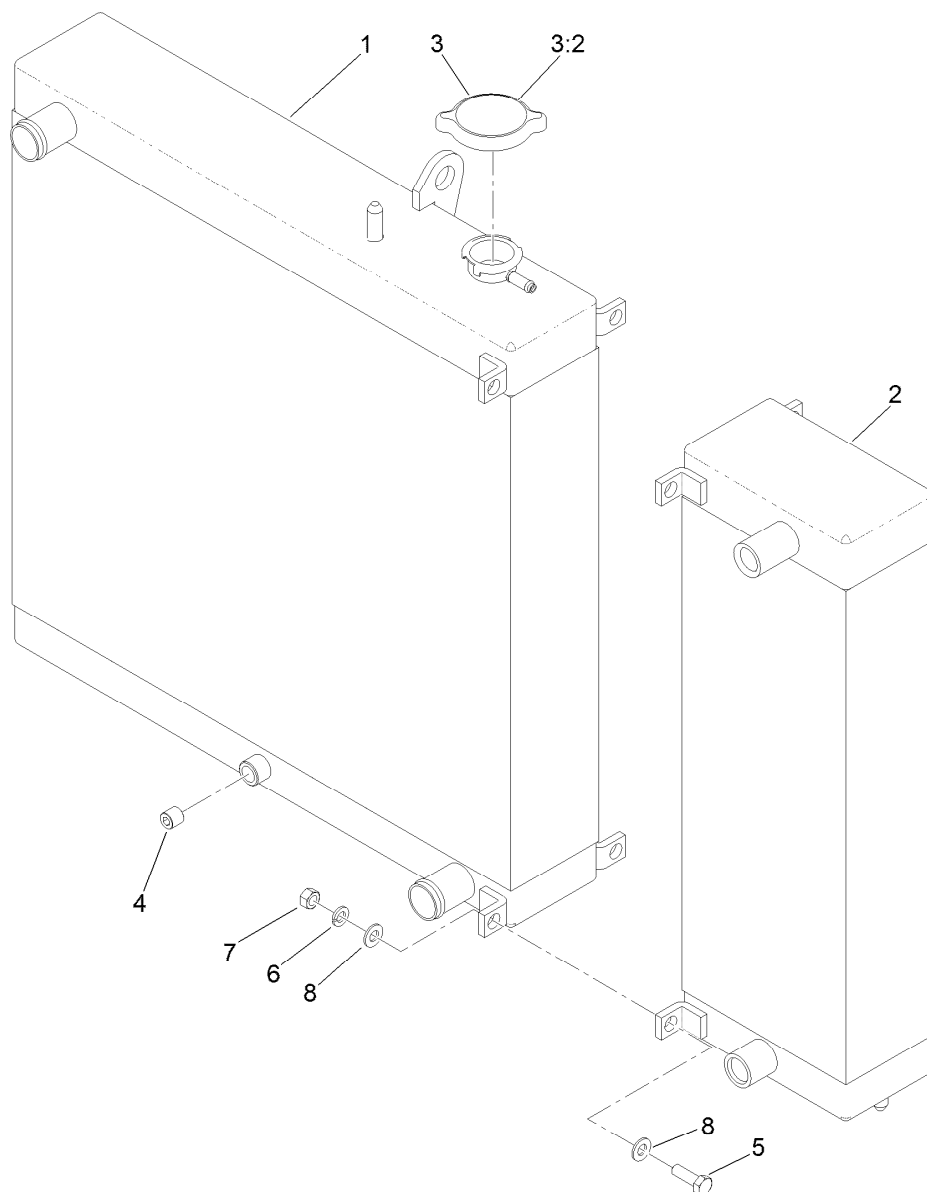


## Radiator and Cooler Assembly
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 133-4739    | 1    | Radiator         |
| 2    | 125-4355    | 1    | Oil Cooler       |
| 3    | 119-1430    | 1    | Radiator Cap ASM |
| 3:2  | 117-3276    | 1    | Decal-Danger     |
| 4    | 99-8551     | 1    | Plug-Pipe        |
| 5    | 322-5       | 4    | Screw-HH         |
| 6    | 3253-4      | 4    | Washer-Lock      |
| 7    | 3217-6      | 4    | Nut-Hex          |
| 8    | 3256-23     | 4    | Washer-Plain     |

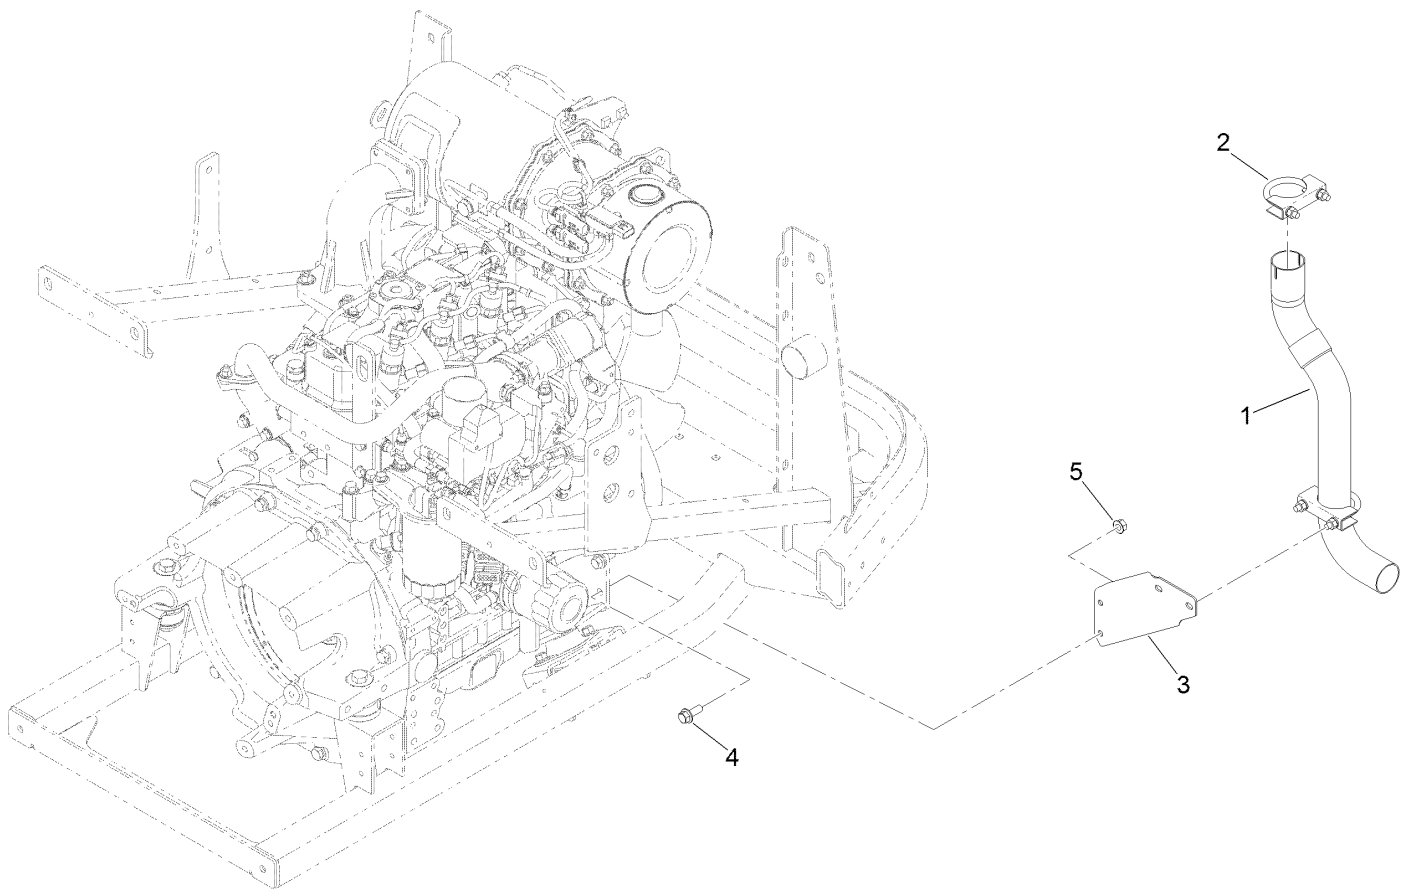

## Muffler Component Assembly

 
| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 125-2844    | 1    | Pipe-Exhaust    |
| 2    | 18-2130     | 2    | Clamp           |
| 3    | 127-4860-0P | 1    | Bracket-Exhaust |
| 4    | 3234-42     | 2    | Screw-HHF       |
| 5    | 32128-21    | 2    | Nut-HF Lock     |

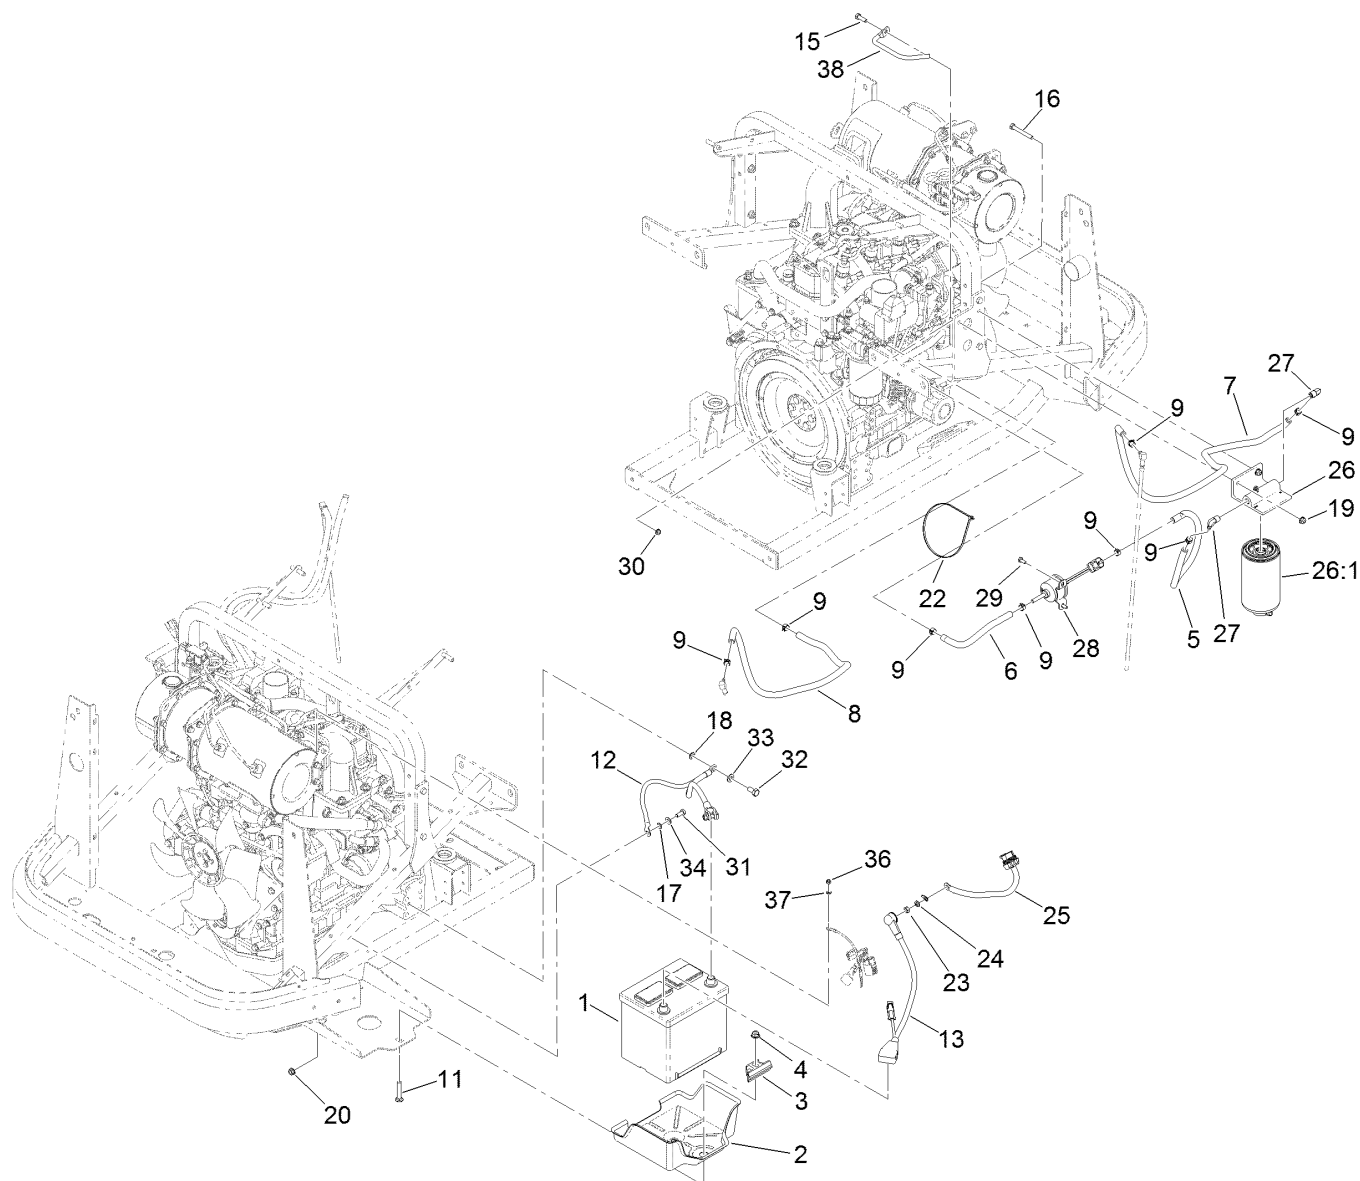

## Battery and Fuel Delivery Assembly

| Ref. | Part Number | Qty. | Description                      |
|------|-------------|------|----------------------------------|
| 1    | 106-5187    | 1    | Battery, 525 CCA W/O Electrolyte |
| 2    | 127-4866    | 1    | Tray-Battery                     |
| 3    | 138-6335    | 1    | Retainer-Battery                 |
| 4    | 104-8301    | 1    | Nut-HF, NI                       |
| 5    | 110-4109    | 1    | Hose-Fuel                        |
| 6    | 110-4124    | 1    | Hose-Fuel                        |
| 7    | 109-0277    | 1    | Hose-Fuel                        |
| 8    | 110-9662    | 1    | Hose-Fuel                        |
| 9    | 92-2379     | 8    | Clamp-Hose                       |
| 11   | 3231-6      | 1    | Screw-CARR                       |
| 12   | 122-0266    | 1    | Cable-Battery, Negative          |
| 13   | 119-4378    | 1    | Cable-Battery, Positive          |
| 15   | 322-5       | 1    | Screw-HH                         |
| 16   | 322-12      | 1    | Screw-HH                         |
| 17   | 3255-8      | 1    | Washer-Lock                      |
| 18   | 3255-9      | 1    | Washer-Lock                      |
| 19   | 104-8300    | 2    | Nut-HF, NI                       |

 
| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 20   | 32128-25    | 1    | Nut-HF                      |
| 22   | 3290-379    | 1    | Tie-Cable                   |
| 23   | 33014-00    | 1    | Nut-Hex                     |
| 24   | 3253-4      | 1    | Washer-Lock                 |
| 25   | 99-3441     | 1    | Harness-Wire, Fusible Link  |
| 26   | 125-2914    | 1    | Filter-Separator            |
| 26:1 | 125-2915    | 1    | Filter-Fuel/Water Separator |
| 27   | 353-781     | 2    | Fitting-HYD, 90             |
| 28   | 121-5613    | 1    | Pump-Fuel, Electric         |
| 29   | 321-3       | 2    | Screw-HH                    |
| 30   | 104-7201    | 2    | Nut-HF                      |
| 31   | 322-3       | 1    | Screw-HH                    |
| 32   | 33115-020   | 1    | Screw-HH                    |
| 33   | 3256-24     | 1    | Washer-Flat                 |
| 34   | 3256-23     | 1    | Washer-Plain                |
| 36   | 33013-00    | 1    | Nut-Hex                     |
| 37   | 43-5930     | 1    | Washer-Lock, Spring         |
| 38   | 131-3371    | 1    | Guide-Cable, Brake          |

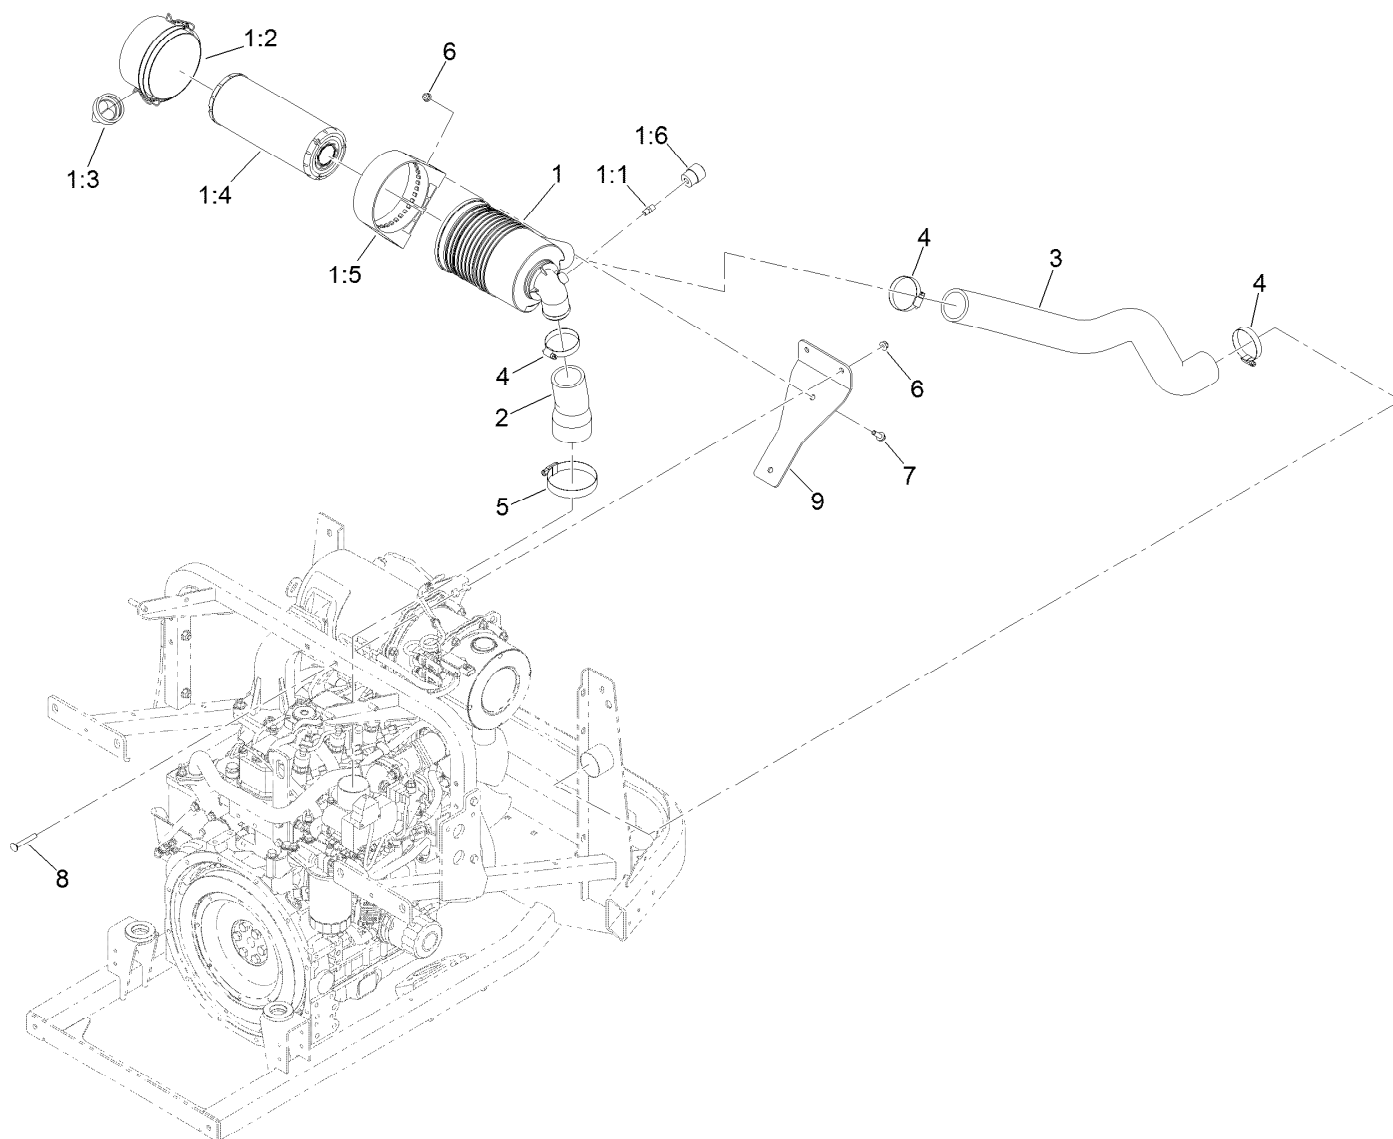

## Air Cleaner Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 136-4481    | 1    | Air Cleaner ASM      |
| 1:1  | 94-1416     | 1    | Adapter-Indicator    |
| 1:2  | 98-9771     | 1    | Cover ASM            |
| 1:3  | 94-1414     | 1    | Valve-Vacuator       |
| 1:4  | 108-3810    | 1    | Filter-Air           |
| 1:5  | 98-4525     | 1    | Bracket-Cleaner, Air |
| 1:6  | 93-9164     | 1    | Indicator-Mini       |
| 2    | 125-2848    | 1    | Hose-Inlet, Air      |
| 3    | 125-2849    | 1    | Hose-Draw, Air       |
| 4    | 2412-130    | 3    | Clamp-Hose           |
| 5    | 2412-125    | 1    | Clamp-Hose           |
| 6    | 104-8300    | 4    | Nut-HF, NI           |
| 7    | 3234-17     | 2    | Screw-HHF            |
| 8    | 3230-7      | 2    | Bolt-CARR            |
| 9    | 125-2847-03 | 1    | Bracket-Cleaner, Air |
 
# Traction Pedal Assembly

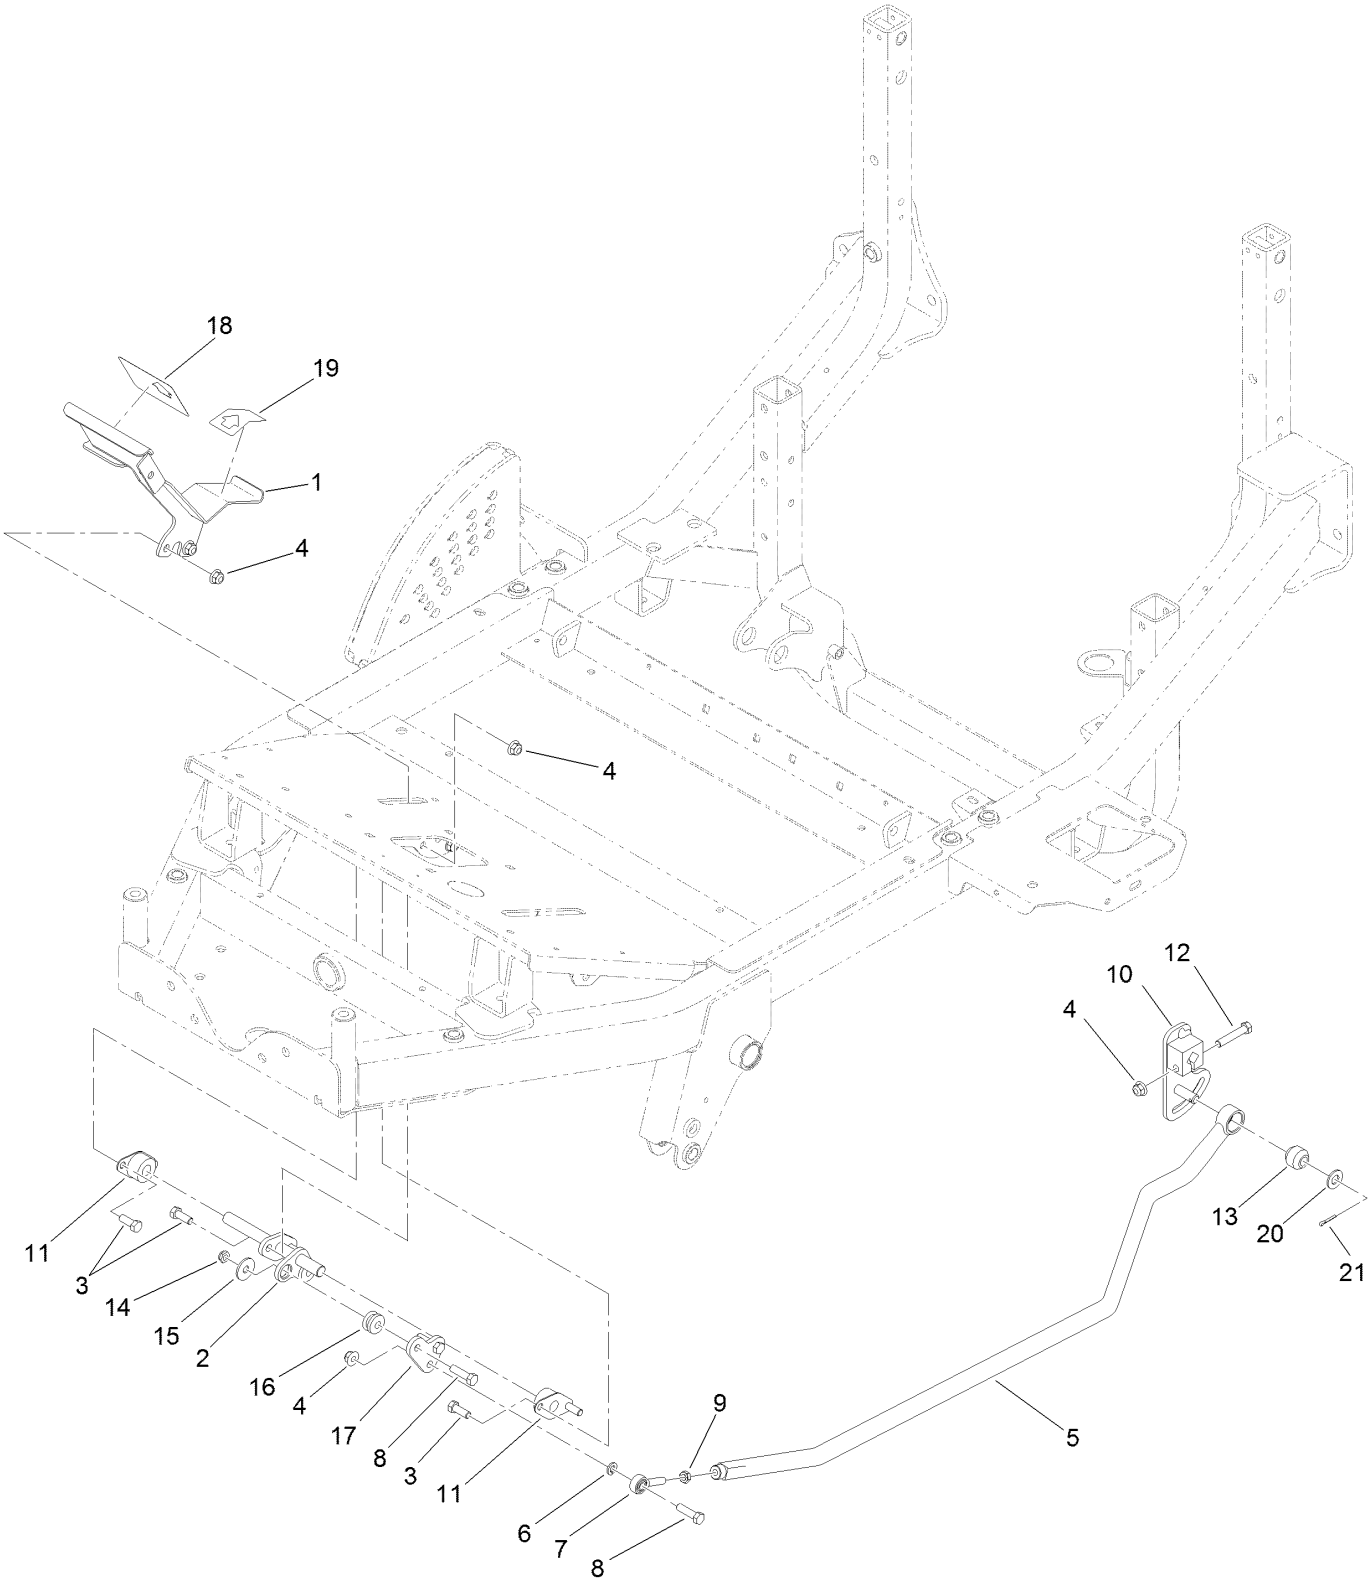




## Traction Pedal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 117-3070-01        | 1           | Pedal                 | 12          | 323-10             | 1           | Screw-HH                |
| 2           | 125-4402           | 1           | Pivot-Pedal, Isolated | 13          | 23-2270            | 1           | Bushing-Rubber          |
| 3           | 323-6              | 6           | Screw-HH              | 14          | 3296-59            | 2           | Nut-Lock, NI            |
| 4           | 104-8301           | 8           | Nut-HF, NI            | 15          | 93-8806            | 2           | Washer-Hardened         |
| 5           | 136-4451-0P        | 1           | Rod-Traction          | 16          | 63-9750            | 2           | Mount                   |
| 6           | 3253-21            | 1           | Washer-Lock           | 17          | 136-4453           | 1           | Plate-Linkage, Traction |
| 7           | 2411-36            | 1           | Bearing-End, Rod      | 18          | 94-3307            | 1           | Pad-Pedal, Traction     |
| 8           | 323-29             | 3           | Screw-HH              | 19          | 94-3308            | 1           | Pad-Pedal, Traction     |
| 9           | 3220-3             | 1           | Nut-HJ                | 20          | 3256-26            | 1           | Washer-Flat             |
| 10          | 131-5546-0P        | 1           | Lever-Traction        | 21          | 3272-10            | 1           | Pin-Cotter              |
| 11          | 256-236            | 2           | Bearing-Mount, Flange |             |                    |             |                         |

 
# Neutral System Assembly

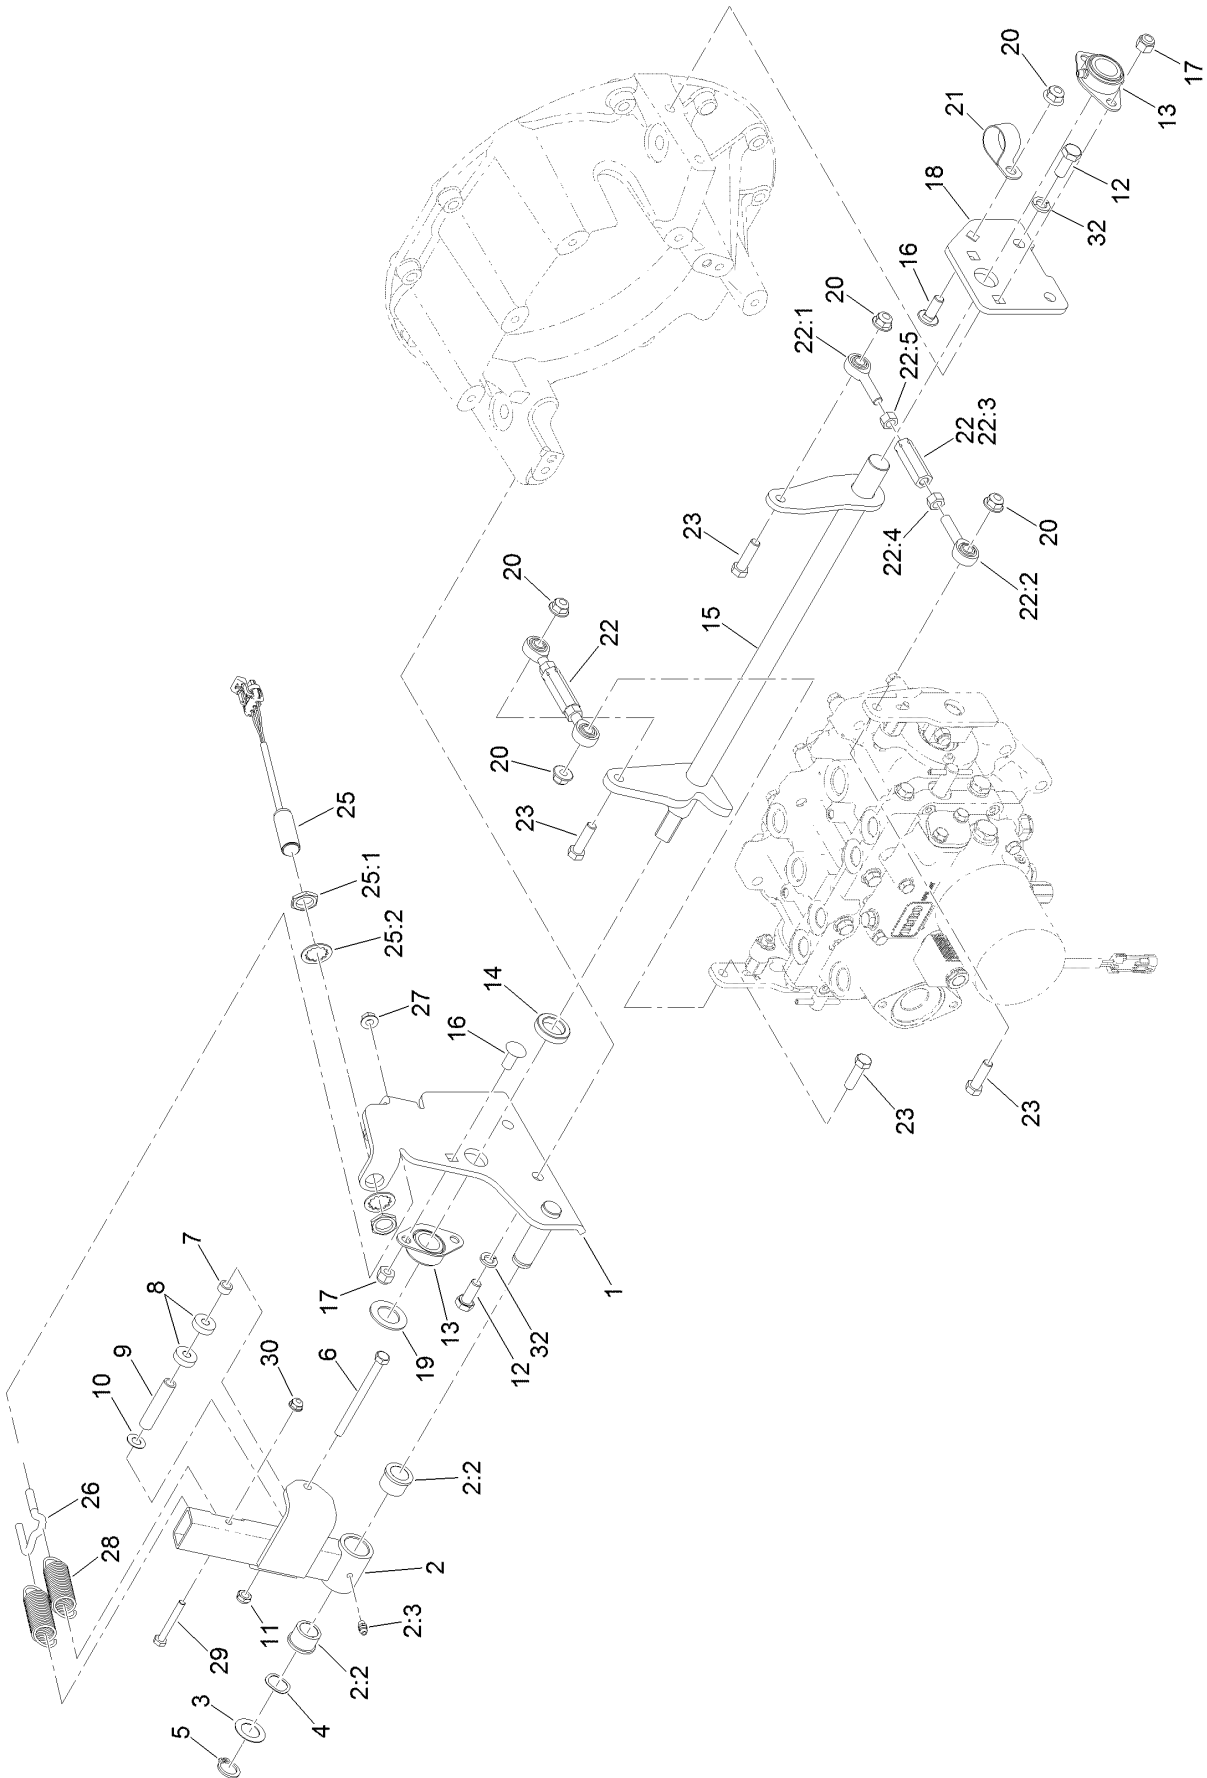

## Neutral System Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>          |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-----------------------------|
| 1           | 136-4482-0P        | 1           | Plate-End, Neutral    | 19          | 119-2332           | 1           | Washer-Flat                 |
| 2           | 125-4366           | 1           | Neutral Arm ASM       | 20          | 104-8301           | 5           | Nut-HF, NI                  |
| 2:2         | 256-113            | 2           | Bushing-Flange        | 21          | 2412-126           | 1           | R-Clamp                     |
| 2:3         | 302-5              | 1           | Fitting-Grease        | 22          | 125-2870           | 2           | Link ASM                    |
| 3           | 3-6498             | 1           | Washer-Thrust         | 22:1        | 125-4389           | 1           | Bearing-End, Rod            |
| 4           | 119-4164           | 1           | Washer-Wave           | 22:2        | 2411-36            | 1           | Bearing-End, Rod            |
| 5           | 32120-93           | 1           | Ring-Retaining        | 22:3        | 125-4390           | 1           | Hex-Adjustment              |
| 6           | 322-19             | 1           | Screw-HH              | 22:4        | 3219-3             | 1           | Nut-Hex                     |
| 7           | 136-4455           | 1           | Sleeve-Spacer         | 22:5        | 3219-20            | 1           | Nut-Hex, LH                 |
| 8           | 121-6835           | 2           | Bearing-Ball          | 23          | 323-29             | 4           | Screw-HH                    |
| 9           | 136-4454           | 1           | Sleeve-Spacer         | 25          | 115-5300           | 1           | Proximity Switch ASM        |
| 10          | 73-0041            | 1           | Washer-Thrust         | 25:1        | 117-3207           | 2           | Nut-Hex                     |
| 11          | 3296-47            | 1           | Nut-Lock, NI          | 25:2        | 117-3208           | 2           | Washer-Lock, Internal Tooth |
| 12          | 120-9635           | 4           | Screw-HH              | 26          | 131-3376           | 1           | Hook-Spring, Dual           |
| 13          | 131-5529           | 2           | Bearing-Flange, Side  | 27          | 32128-25           | 1           | Nut-HF                      |
| 14          | 125-2879           | 1           | Spacer-Shaft, Neutral | 28          | 131-3374           | 2           | Spring-Extension            |
| 15          | 131-5547-0P        | 1           | Shaft-Neutral         | 29          | 321-11             | 1           | Screw-HH                    |
| 16          | 3231-27            | 5           | Screw-CARR            | 30          | 104-7201           | 1           | Nut-HF                      |
| 17          | 3296-39            | 4           | Nut-Lock, NI          | 32          | 48-9590            | 4           | Washer-Lock                 |
| 18          | 125-2869-0P        | 1           | Plate-End, Neutral    |             |                    |             |                             |

 
# Hood Assembly

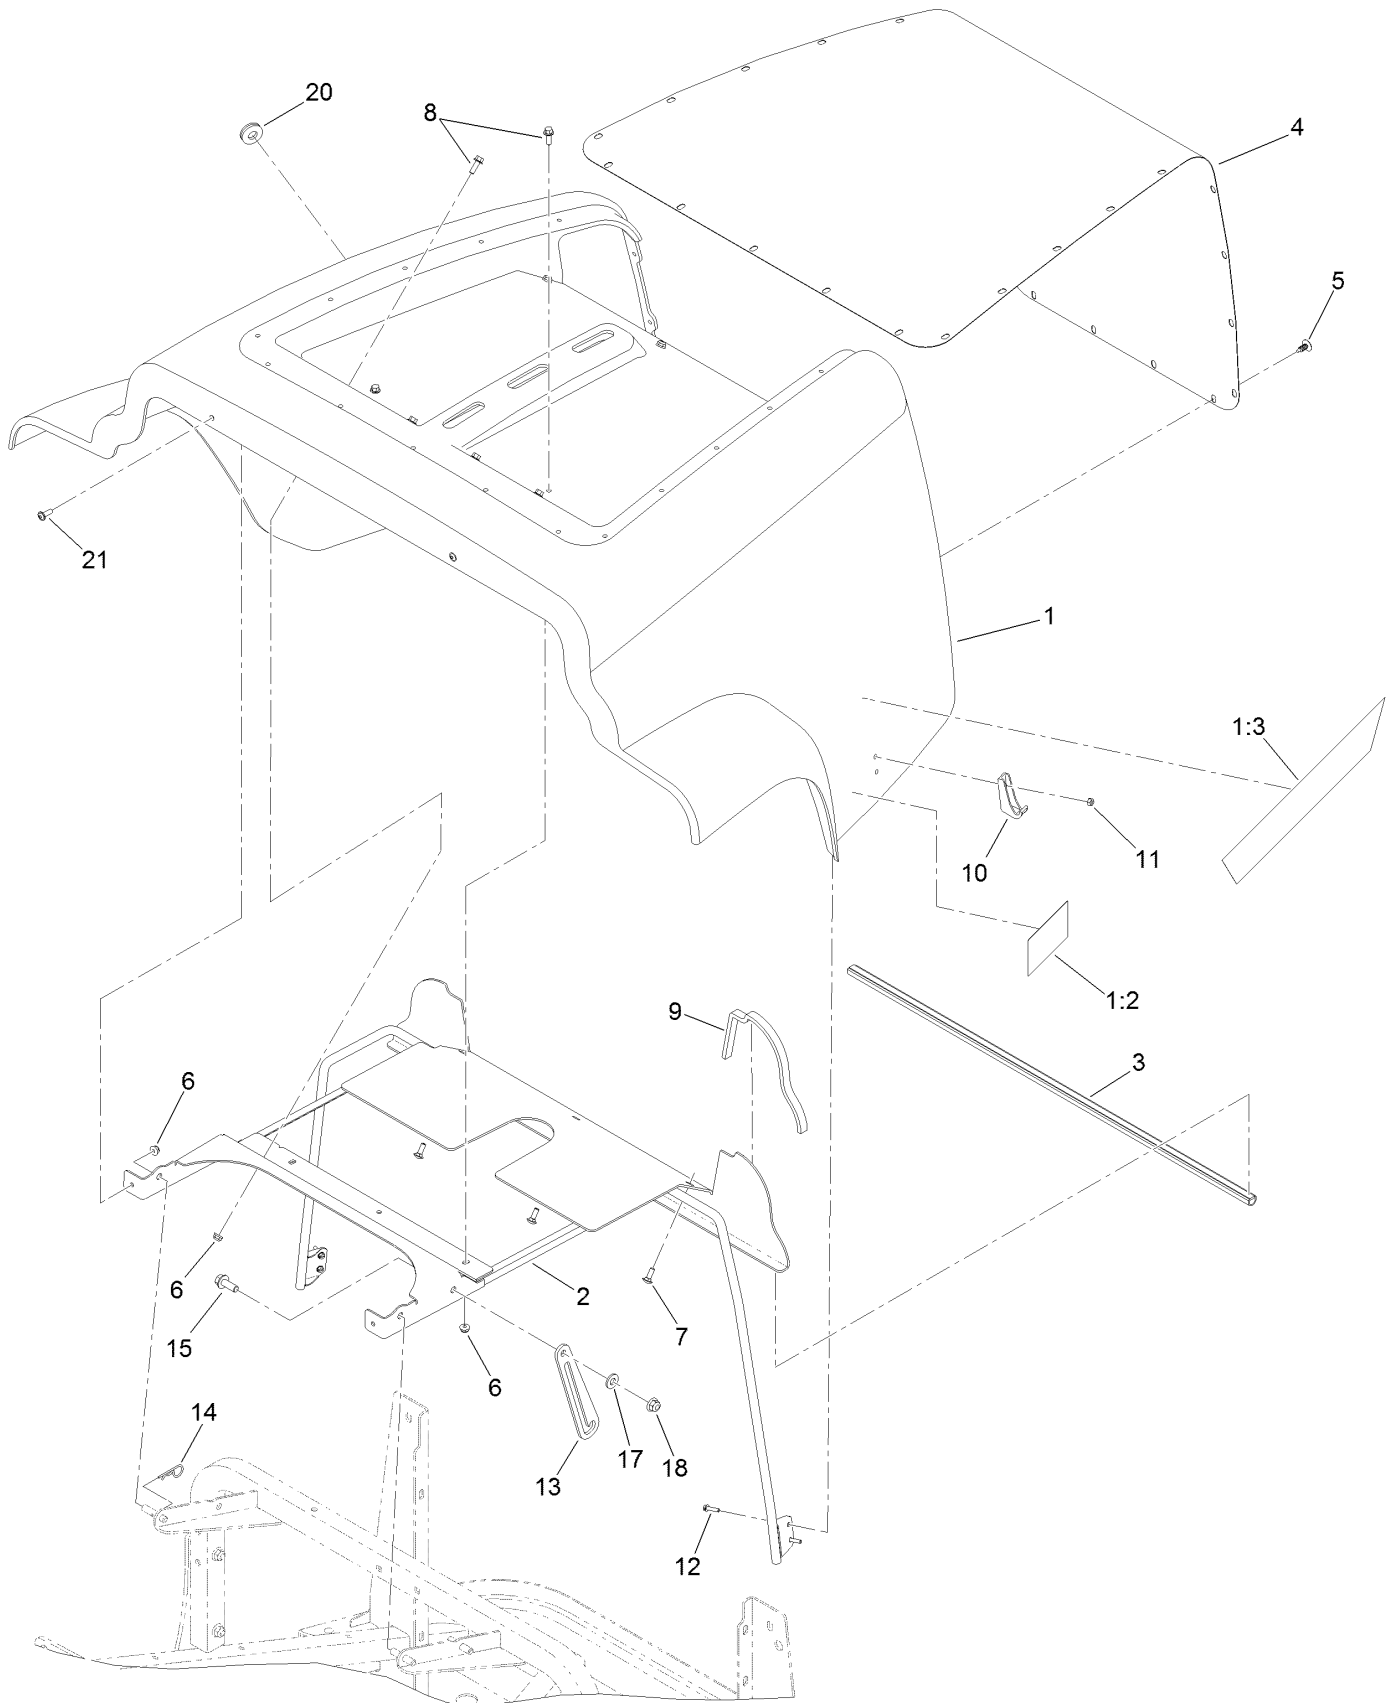

## Hood Assembly (continued)


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-4879           | 1           | Hood ASM           | 10          | 103-2897           | 2           | Latch-Catch        |
| 1:2         | 117-3270           | 2           | Decal-Danger       | 11          | 3296-2             | 4           | Nut-Lock, NI       |
| 1:3         | 117-3279           | 2           | Decal-Hood         | 12          | 32105-13           | 4           | Screw-HWH          |
| 2           | 136-4456-03        | 1           | Mount-Hood         | 13          | 125-2899-03        | 1           | Rod-Prop           |
| 3           | 115-0423           | 1           | Seal-Bulb          | 14          | 9335054            | 1           | Pin-Hair           |
| 4           | 125-2881-03        | 1           | Screen-Hood        | 15          | 3234-42            | 1           | Screw-HHF          |
| 5           | 117-2382           | 27          | Plug-Plastic       | 17          | 66-2920            | 1           | Washer-Friction    |
| 6           | 104-7201           | 11          | Nut-HF             | 18          | 104-8301           | 1           | Nut-HF, NI         |
| 7           | 3229-1             | 3           | Screw-CARR         | 20          | 104-1453           | 1           | Grommet            |
| 8           | 3234-4             | 6           | Screw-HHF          | 21          | 92-3911            | 2           | Screw-HSBH         |
| 9           | 125-4449           | 2           | Seal-Foam          |             |                    |             |                    |
 
# Deck Lift Valve and Hydraulic Fitting Assembly

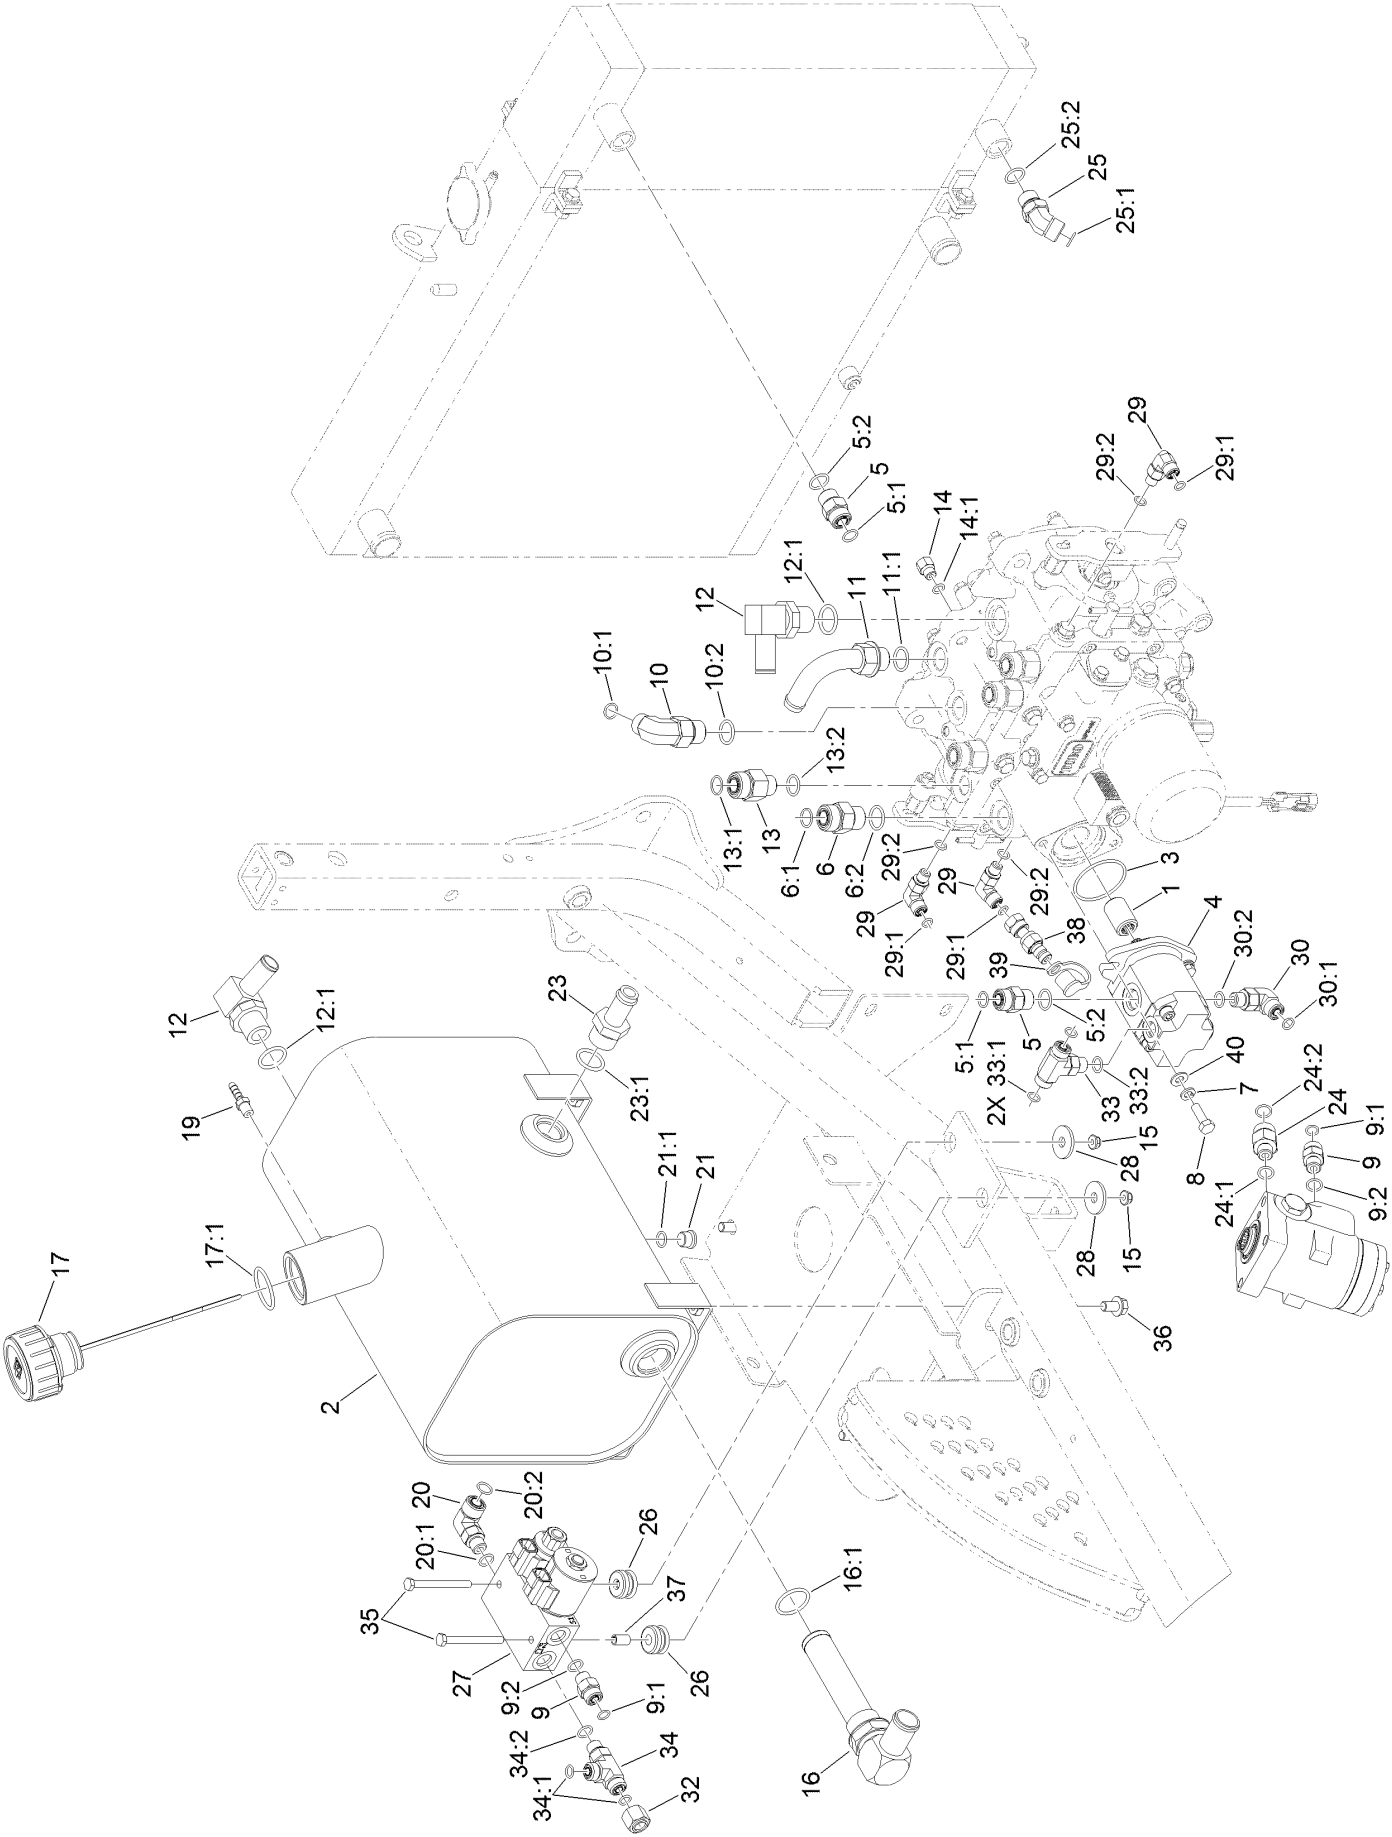

## Deck Lift Valve and Hydraulic Fitting Assembly (continued)
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 108-9920           | 1           | Coupler-Spline        | 20:1        | 237-30             | 1           | O-Ring                |
| 2           | 117-3372           | 1           | Tank-Hydraulic, Metal | 20:2        | 237-42             | 1           | O-Ring                |
| 3           | 108-9919           | 1           | O-Ring                | 21          | 353-989            | 1           | Plug-Hex, Hollow      |
| 4           | 115-0375           | 1           | Gear Pump ASM         | 21:1        | 237-42             | 1           | O-Ring                |
| 5           | 340-4              | 2           | Fitting-Straight      | 23          | 354-73             | 1           | Fitting               |
| 5:1         | 237-30             | 1           | O-Ring                | 23:1        | 237-81             | 1           | O-Ring                |
| 5:2         | 237-79             | 1           | O-Ring                | 24          | 340-5              | 1           | Fitting-Straight      |
| 6           | 340-7              | 1           | Fitting-Straight      | 24:1        | 237-42             | 1           | O-Ring                |
| 6:1         | 237-65             | 1           | O-Ring                | 24:2        | 237-30             | 1           | O-Ring                |
| 6:2         | 237-80             | 1           | O-Ring                | 25          | 340-101            | 1           | Fitting-HYD, 45 DEG   |
| 7           | 3253-4             | 2           | Washer-Lock           | 25:1        | 237-30             | 1           | O-Ring                |
| 8           | 33114-025          | 2           | Screw-HH              | 25:2        | 237-79             | 1           | O-Ring                |
| 9           | 340-2              | 5           | Fitting-Straight      | 26          | 63-9750            | 2           | Mount                 |
| 9:1         | 237-22             | 1           | O-Ring                | 27          | 131-1934           | 1           | Deck Lift Valve ASM   |
| 9:2         | 237-42             | 1           | O-Ring                | 28          | 63-8410            | 2           | Washer                |
| 10          | 340-105            | 1           | Fitting-Elbow, 90 DEG | 29          | 340-132            | 3           | Fitting-Elbow, 90 DEG |
| 10:1        | 237-80             | 1           | O-Ring                | 29:1        | 237-78             | 1           | O-Ring                |
| 10:2        | 237-30             | 1           | O-Ring                | 29:2        | 237-21             | 1           | O-Ring                |
| 11          | 110-5522           | 1           | Fitting-Elbow, 90     | 30          | 340-77             | 1           | Fitting-Elbow, 90 DEG |
| 11:1        | 237-80             | 1           | O-Ring                | 30:1        | 237-22             | 1           | O-Ring                |
| 12          | 353-987            | 2           | Fitting-Elbow, 90     | 30:2        | 237-42             | 1           | O-Ring                |
| 12:1        | 237-81             | 1           | O-Ring                | 32          | 340-117            | 1           | Cap                   |
| 13          | 340-155            | 4           | Fitting-Straight      | 33          | 340-94             | 1           | Adapter               |
| 13:1        | 237-79             | 1           | O-Ring                | 33:1        | 237-22             | 2           | O-Ring                |
| 13:2        | 237-151            | 1           | O-Ring                | 33:2        | 237-42             | 1           | O-Ring                |
| 14          | 110-5536           | 1           | Fitting-HYD, Adapter  | 34          | 340-86             | 1           | Fitting-Tee           |
| 14:1        | 237-78             | 1           | O-Ring                | 34:1        | 237-22             | 2           | O-Ring                |
| 15          | 104-7201           | 2           | Nut-HF                | 34:2        | 237-42             | 1           | O-Ring                |
| 16          | 105-0204           | 1           | Strainer Fitting ASM  | 35          | 321-14             | 2           | Screw-HH              |
| 16:1        | 237-146            | 1           | O-Ring                | 36          | 32144-15           | 4           | Screw-HHFTF           |
| 17          | 117-3389           | 1           | Cap-Tank, Hydraulic   | 37          | 80-0650            | 2           | Spacer-Tubular        |
| 17:1        | 237-101            | 1           | O-Ring                | 38          | 115-8886           | 1           | Nipple-Test           |
| 19          | 304-73             | 1           | Fitting-Straight      | 39          | 354-79             | 1           | Cap-Dust              |
| 20          | 340-99             | 1           | Fitting-HYD, 90 DEG   | 40          | 3256-23            | 2           | Washer-Plain          |

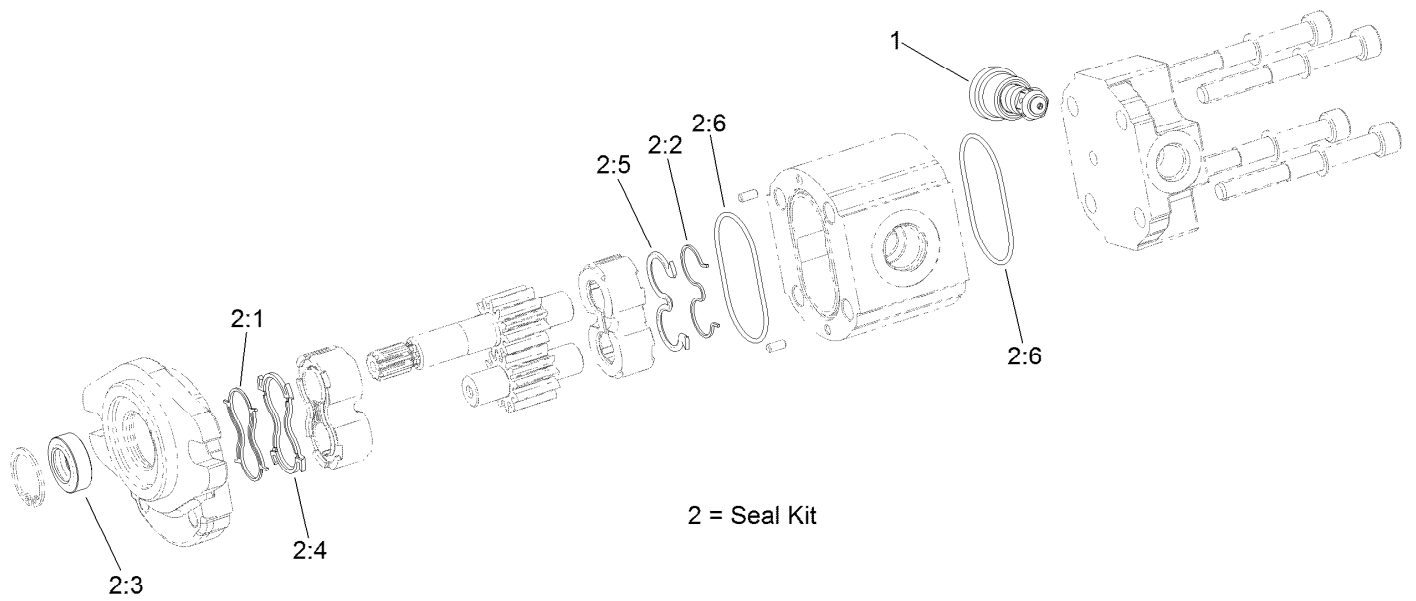


## Hydraulic Gear Pump Assembly No. 115-0375

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 115-0376    | 1    | Valve-Relief, 125 Bar |
| 2    | 112-0199    | 1    | Seal Kit              |
| 2:1  |             | 1    | Seal-Anti Extrusion ● |
| 2:2  |             | 1    | Seal-Anti Extrusion ● |
| 2:3  |             | 1    | Seal-Shaft ●          |
| 2:4  |             | 1    | Seal-Upper ●          |
| 2:5  |             | 1    | Seal ●                |
| 2:6  |             | 2    | O-Ring ●              |

 ● Not serviced separately




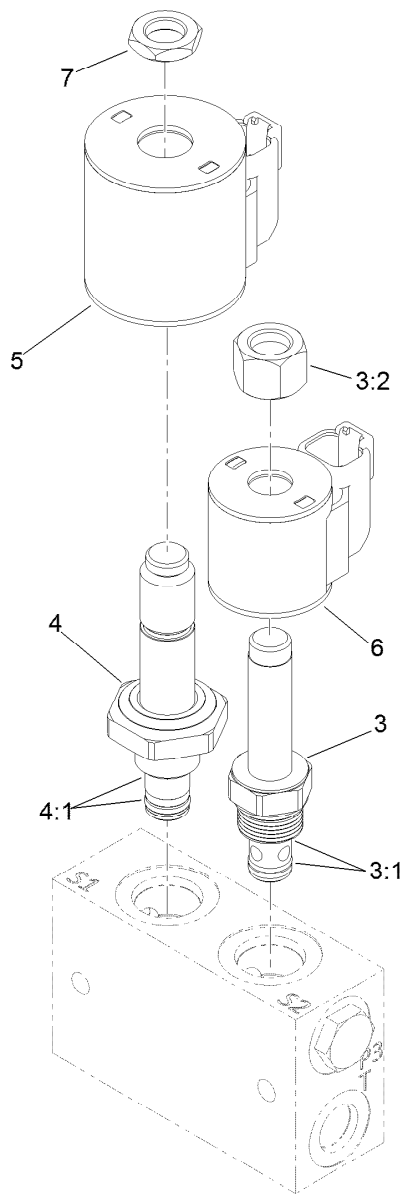

## Valve Assembly No. 131-1934

| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 3    | 107-7517    | 1    | Valve-Solenoid |
| 3:1  | 105-9156    | 1    | Seal Kit       |
| 3:2  | 107-7812    | 1    | Nut-Solenoid   |
| 4    | 131-1935    | 1    | Valve-Solenoid |
| 4:1  | 107-7527    | 1    | Seal Kit       |
| 5    | 115-3021    | 1    | Coil-12V       |
| 6    | 119-8036    | 1    | Coil           |
| 7    | 110-2634    | 1    | Nut-Coil       |

 
# 4 Wheel Drive Hydraulic Hose Assembly

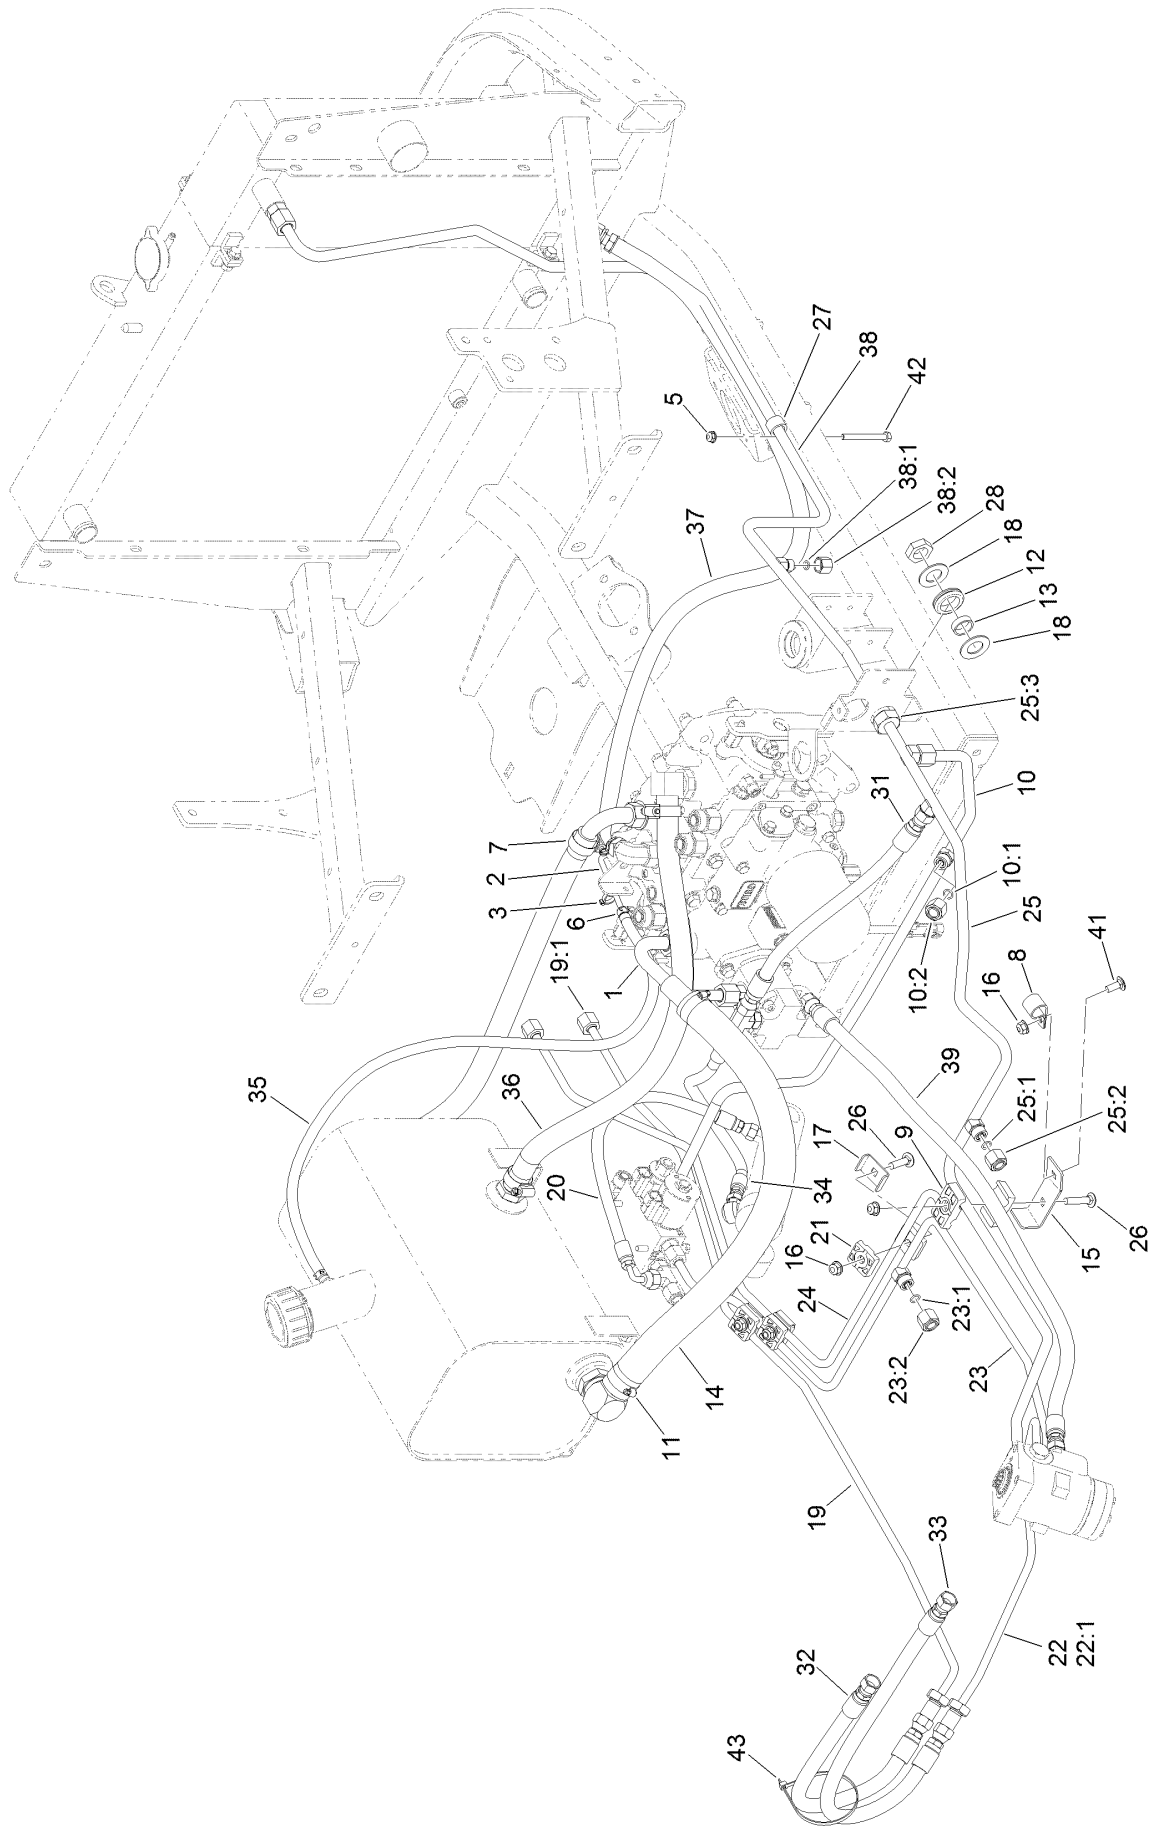

## 4 Wheel Drive Hydraulic Hose Assembly (continued)
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            |
|-------------|--------------------|-------------|-----------------------------------|-------------|--------------------|-------------|-------------------------------|
| 1           | 138-1910           | 1           | Suction Tube ASM                  | 23          | 125-2890           | 1           | Steer/Lift Tube ASM           |
| 2           | 125-2891           | 1           | Tube ASM                          | 23:1        | 237-22             | 1           | O-Ring                        |
| 3           | 32180-030          | 1           | Clip-Tie                          | 23:2        | 340-117            | 1           | Cap                           |
| 5           | 104-7201           | 1           | Nut-HF                            | 24          | 131-3351           | 1           | Steer/Steer Manifold Tube ASM |
| 6           | 2412-98            | 2           | Clamp-Hose                        | 25          | 127-4872           | 1           | Steer/Drain Tube ASM          |
| 7           | 2412-129           | 4           | Clamp-Hose                        | 25:1        | 237-22             | 2           | O-Ring                        |
| 8           | 2412-4             | 1           | Clamp-R                           | 25:2        | 340-117            | 1           | Cap                           |
| 9           | 56-7972            | 2           | Clamp-Tube                        | 25:3        | 237-30             | 2           | O-Ring                        |
| 10          | 125-2893           | 1           | Tube ASM                          | 26          | 3230-4             | 4           | Bolt-CARR                     |
| 10:1        | 237-22             | 1           | O-Ring                            | 27          | 2412-87            | 1           | Clamp-Cable                   |
| 10:2        | 340-117            | 1           | Cap                               | 28          | 340-127            | 1           | Nut-Bulkhead                  |
| 11          | 2412-34            | 2           | Clamp-Hose                        | 31          | 117-3122           | 1           | Hose ASM                      |
| 12          | 240-5              | 1           | Grommet                           | 32          | 119-1433           | 1           | Hose ASM                      |
| 13          | 69-8960            | 1           | Spacer                            | 33          | 100-5629           | 1           | Hose ASM                      |
| 14          | 117-3200           | 1           | Hose-Suction                      | 34          | 117-3123           | 1           | HYD Hose ASM                  |
| 15          | 120-0245           | 1           | Bracket-Support                   | 35          | 109-0275           | 1           | Hose-Fuel                     |
| 16          | 104-8300           | 5           | Nut-HF, NI                        | 36          | 117-3121           | 2           | Hose ASM                      |
| 17          | 119-1418           | 6           | Plate-Clamp, Short                | 37          | 117-9937           | 1           | HYD Hose ASM                  |
| 18          | 69-8930            | 2           | Washer                            | 38          | 125-2892           | 1           | Drain/Cooler Tube ASM         |
| 19          | 131-3358           | 1           | Steer Manifold/Front CYL Tube ASM | 38:1        | 237-21             | 1           | O-Ring                        |
| 19:1        | 237-22             | 1           | O-Ring                            | 38:2        | 117-3297           | 1           | Fitting-Cap                   |
| 20          | 110-0928           | 1           | Hose-HYD                          | 39          | 119-8114           | 1           | HYD Hose ASM                  |
| 21          | 56-7973            | 6           | Clamp-Tube                        | 41          | 3230-23            | 1           | Bolt-CARR                     |
| 22          | 125-2887           | 1           | Steer/Front Tube ASM              | 42          | 321-15             | 1           | Screw-HH                      |
| 22:1        | 237-22             | 1           | O-Ring                            | 43          | 3334-945           | 1           | Tie-Cable                     |




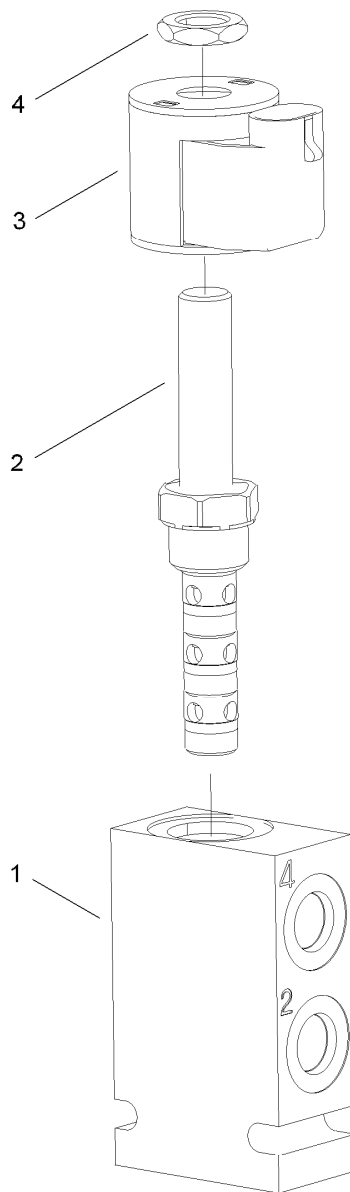

## Steering Selector Valve Assembly No. 115-0280

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    |             | 1    | Block-Manifold ● |
| 2    | 119-8042    | 1    | Valve-Solenoid   |
| 3    | 110-6344    | 1    | Coil-12V, DC     |
| 4    | 110-2634    | 1    | Nut-Coil         |

 
● Not serviced separately

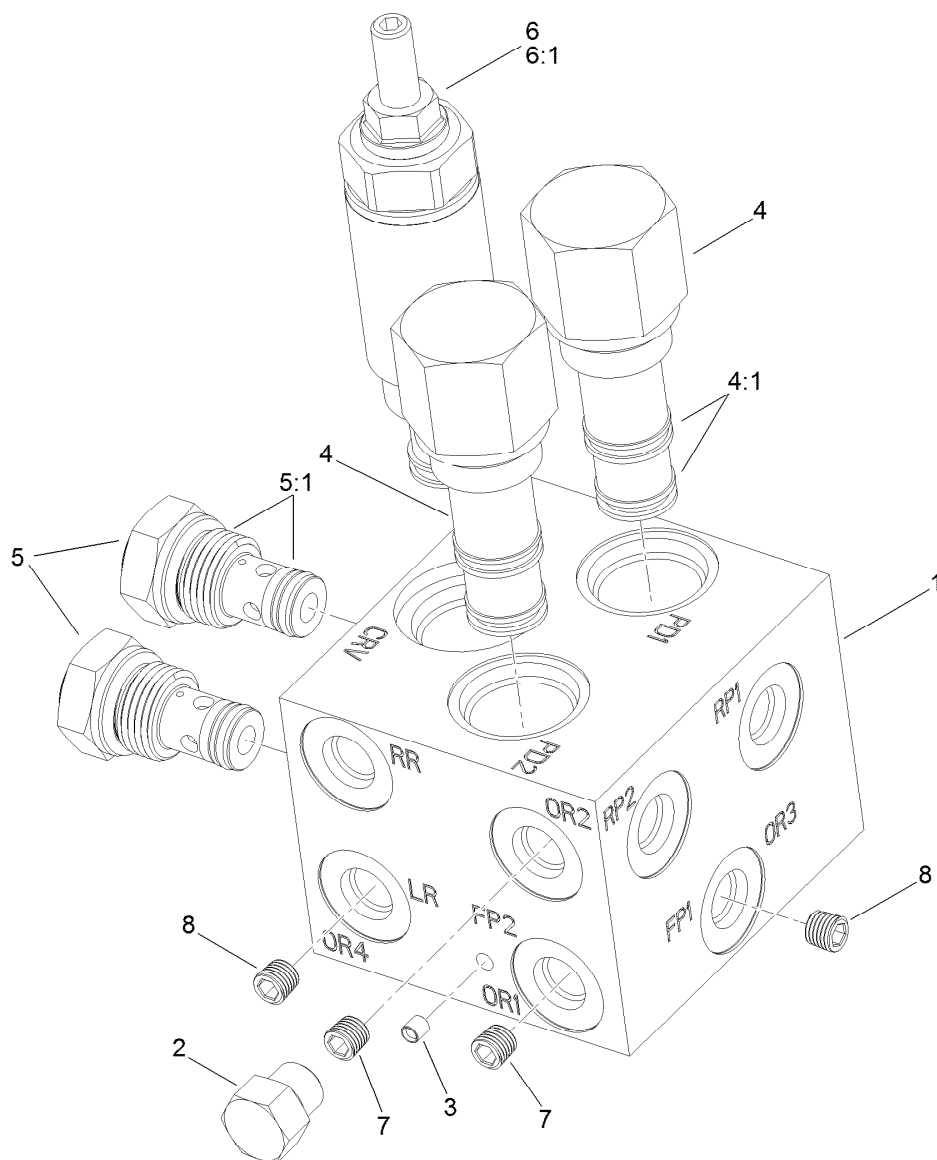

## Cross-Trax Traction Valve Assembly No. 117-2247

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    |             | 1    | Block-Manifold ●         |
| 2    | 117-0115    | 1    | Plug                     |
| 3    |             | 1    | Plug-4Mm ●               |
| 4    | 119-8028    | 2    | Valve-Pilot, Directional |
| 4:1  | 119-8029    | 1    | Pilot Valve Seal Kit     |
| 5    | 119-8030    | 2    | Valve-Check              |
| 5:1  | 119-8031    | 1    | Seal Kit-Check Valve     |
| 6    | 119-8032    | 1    | Valve-Relief             |
| 6:1  | 119-8033    | 1    | Relief Valve Seal Kit    |
| 7    | 119-8034    | 2    | Orifice-.090             |
| 8    | 119-8035    | 2    | Orifice-.040             |

 ● Not serviced separately

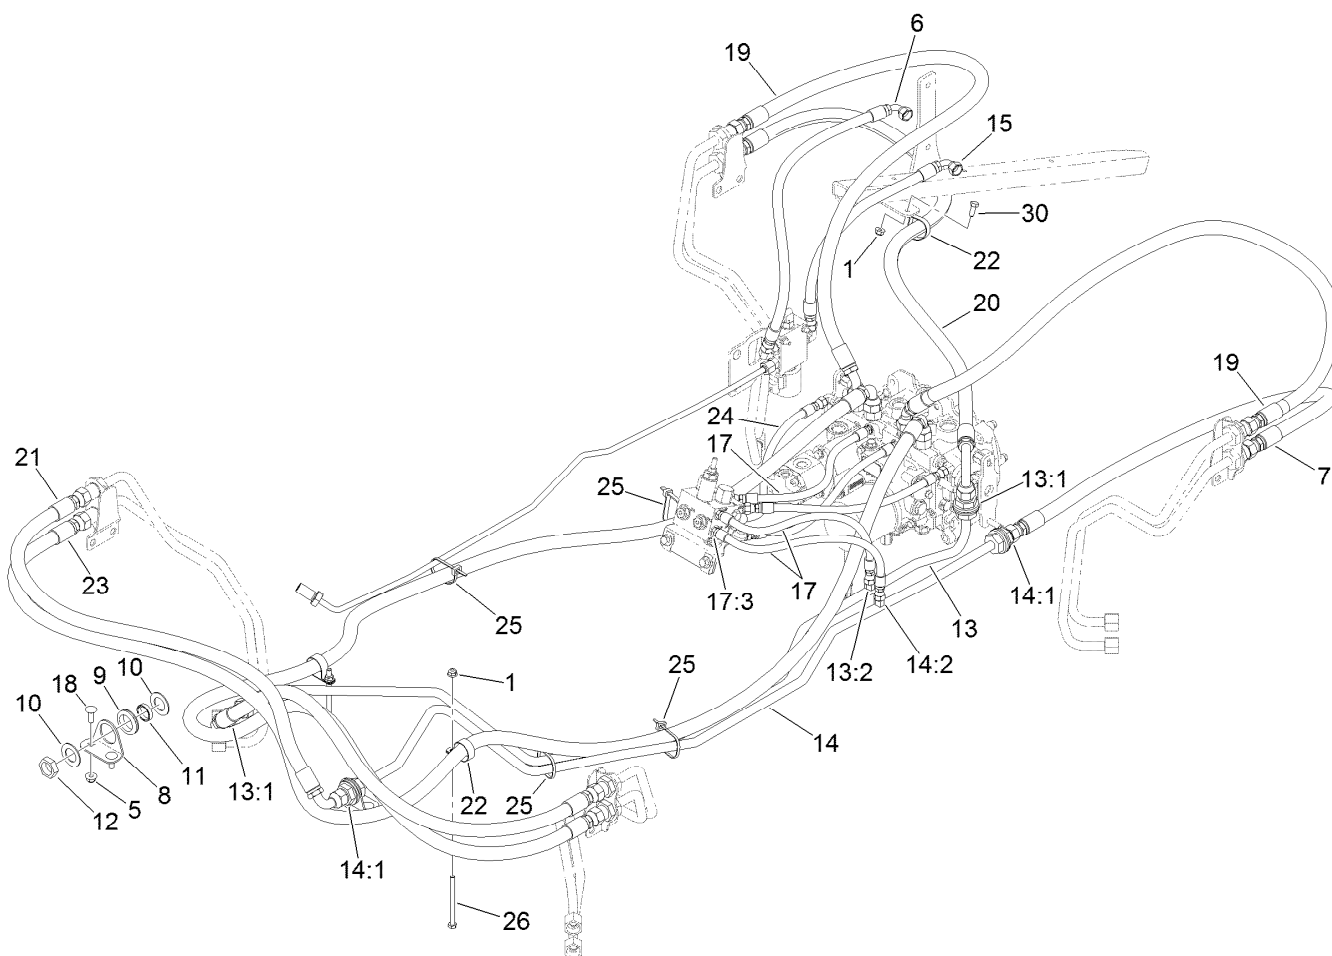


## Steering and Traction Hose Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 104-8300    | 3    | Nut-HF, NI              |
| 5    | 104-8301    | 4    | Nut-HF, NI              |
| 6    | 131-3354    | 1    | Hose ASM                |
| 7    | 119-1435    | 1    | Hose ASM                |
| 8    | 115-0479    | 2    | Bracket-Bulkhead        |
| 9    | 240-3       | 4    | Grommet-Rubber          |
| 10   | 69-9010     | 8    | Washer                  |
| 11   | 125-1984    | 4    | Spacer                  |
| 12   | 340-74      | 4    | Nut-Lock, Bulkhead      |
| 13   | 125-4357    | 1    | Tube ASM-Front Trax, RH |
| 13:1 | 237-65      | 2    | O-Ring                  |
| 13:2 | 237-20      | 1    | O-Ring                  |
| 14   | 117-3116    | 1    | Tube ASM-Front Trax, LH |
| 14:1 | 237-65      | 2    | O-Ring                  |

| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 14:2 | 237-21      | 1    | O-Ring       |
| 15   | 131-3353    | 1    | Hose ASM     |
| 17   | 115-0377    | 4    | Hose ASM     |
| 17:3 | 237-78      | 1    | O-Ring       |
| 18   | 3231-22     | 4    | Screw-CARR   |
| 19   | 125-4406    | 2    | Hose ASM     |
| 20   | 133-4747    | 1    | HYD Hose ASM |
| 21   | 117-3124    | 2    | Hose ASM     |
| 22   | 2412-74     | 3    | R-Clamp      |
| 23   | 117-3126    | 2    | Hose ASM     |
| 24   | 117-3127    | 2    | Hose ASM     |
| 25   | 3334-945    | 2    | Tie-Cable    |
| 26   | 322-19      | 2    | Screw-HH     |
| 30   | 322-3       | 1    | Screw-HH     |
 
# Cab Mounting Assembly

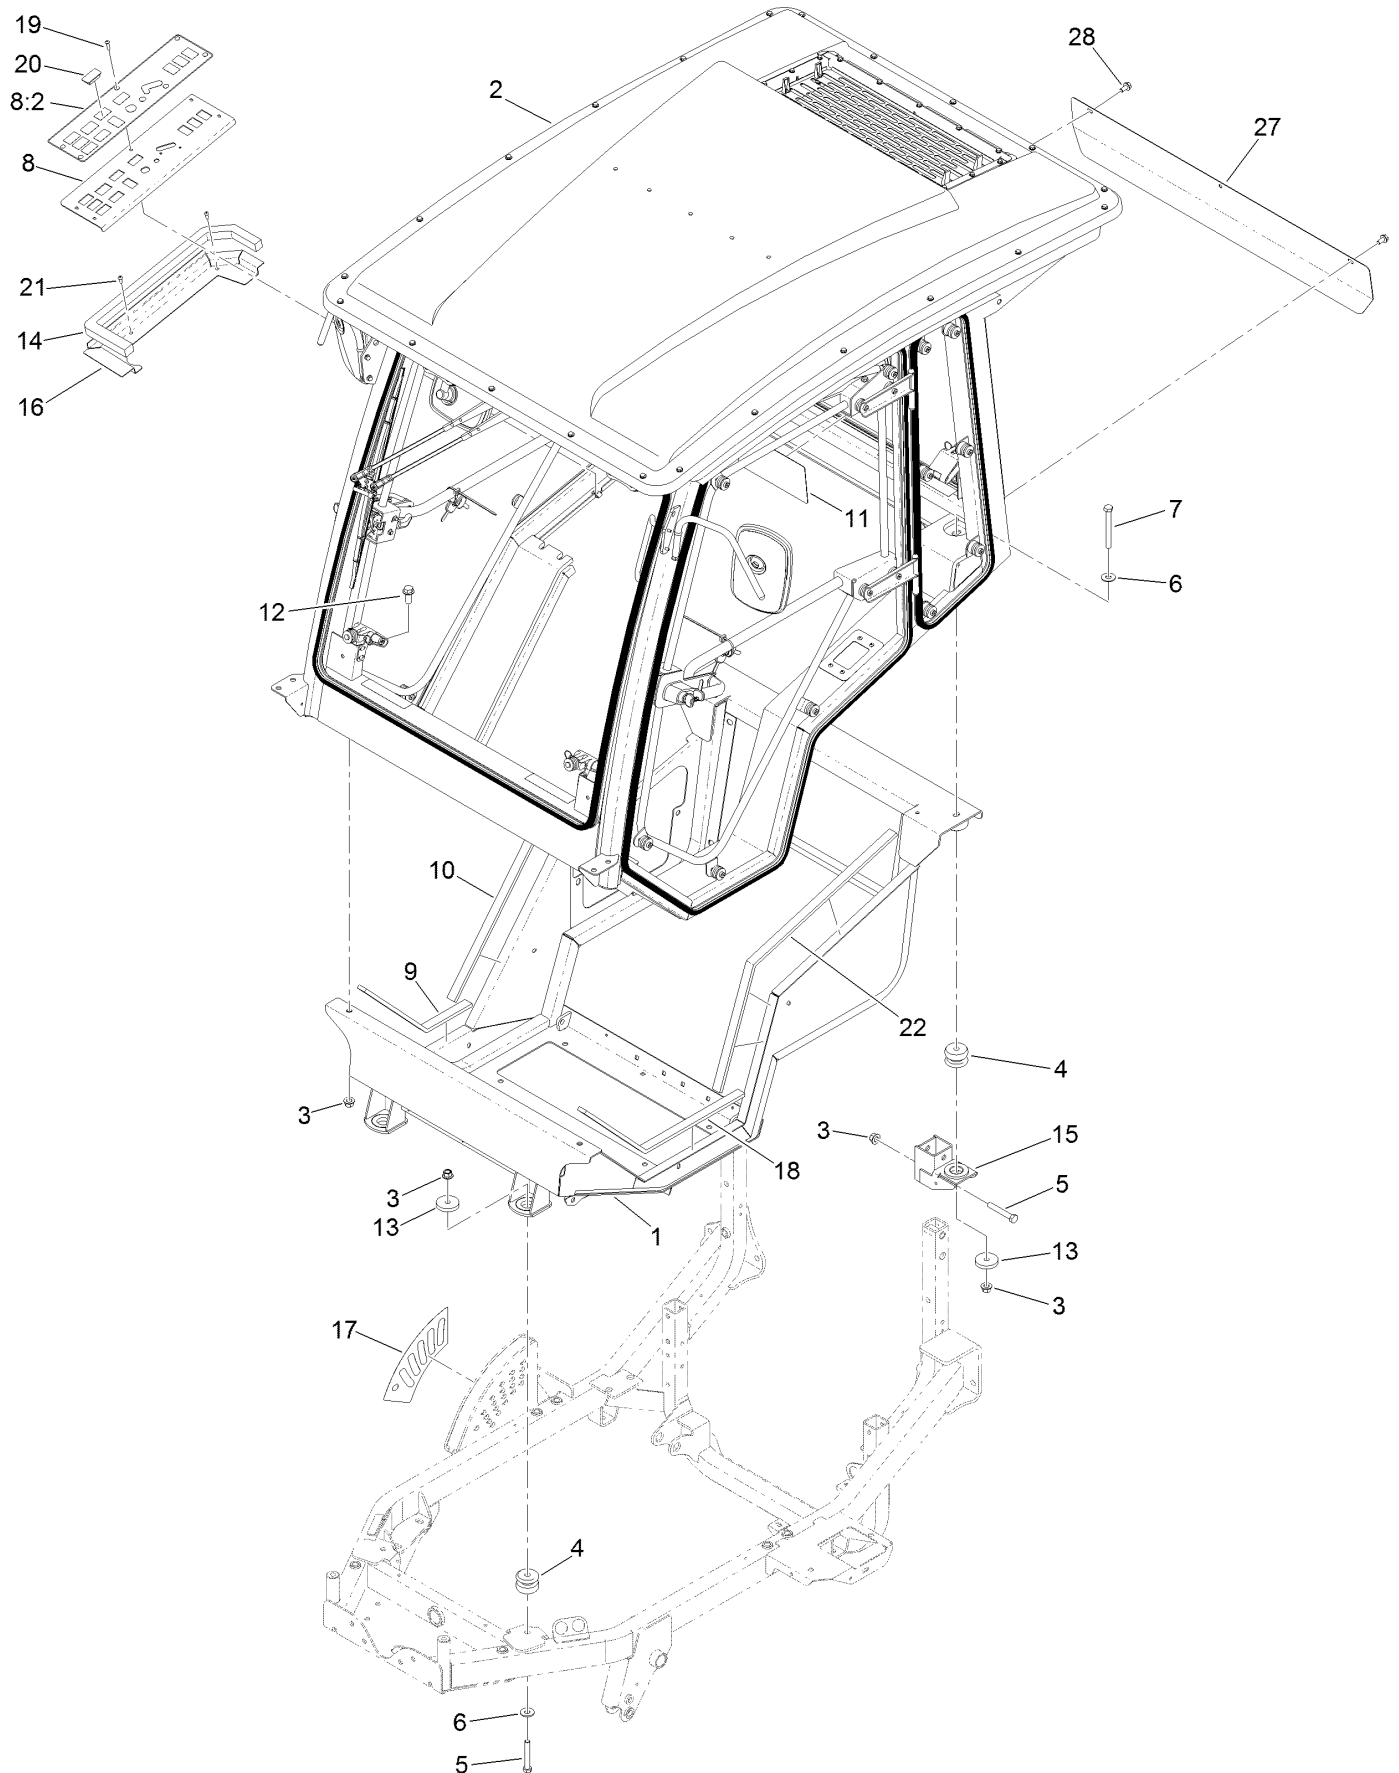




## Cab Mounting Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>          | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|-----------------------------|-------------|--------------------|-------------|---------------------|
| 1           | 132-8105-03        | 1           | Platform-Cab                | 13          | 115-5519           | 4           | Washer-Plain        |
| 2           |                    | 1           | Cab ASM ●                   | 14          | 125-9629           | 1           | Foam-Panel, Control |
| 3           | 99-5107            | 10          | Nut-Lock                    | 15          | 117-3060-0P        | 2           | Mount-Cab           |
| 4           | 110-5954           | 4           | Mount-Center, Bonded        | 16          | 138-8235-03        | 1           | Plate-Seal          |
| 5           | 112-7264           | 6           | Screw-HH                    | 17          | 132-6553           | 1           | Decal-HOC, Cab      |
| 6           | 3256-6             | 4           | Washer-Flat                 | 18          | 125-7433           | 1           | Foam-Seal, LH Front |
| 7           | 702093             | 2           | Screw-HH                    | 19          | 108-0035           | 5           | Screw               |
| 8           | 131-1945           | 1           | Console Plate ASM           | 20          | 99-7420            | 5           | Plug-Hole           |
| 8:2         | 125-9248           | 1           | Decal-Panel, Control        | 21          | 3274-31            | 2           | Screw-HSBH          |
| 9           | 125-7434           | 1           | Foam-Seal, RH Front         | 22          | 125-7432           | 1           | Foam-Seal, LH Rear  |
| 10          | 125-7435           | 1           | Foam-Seal, LH Rear          | 27          | 125-7448-03        | 1           | Cover-Access        |
| 11          | 131-1946           | 1           | Decal-Instructions, Service | 28          | 110-9380           | 3           | Screw-HWH           |
| 12          | 3234-38            | 2           | Screw-HHF                   |             |                    |             |                     |

● Not serviced separately

 
# Foam Assembly

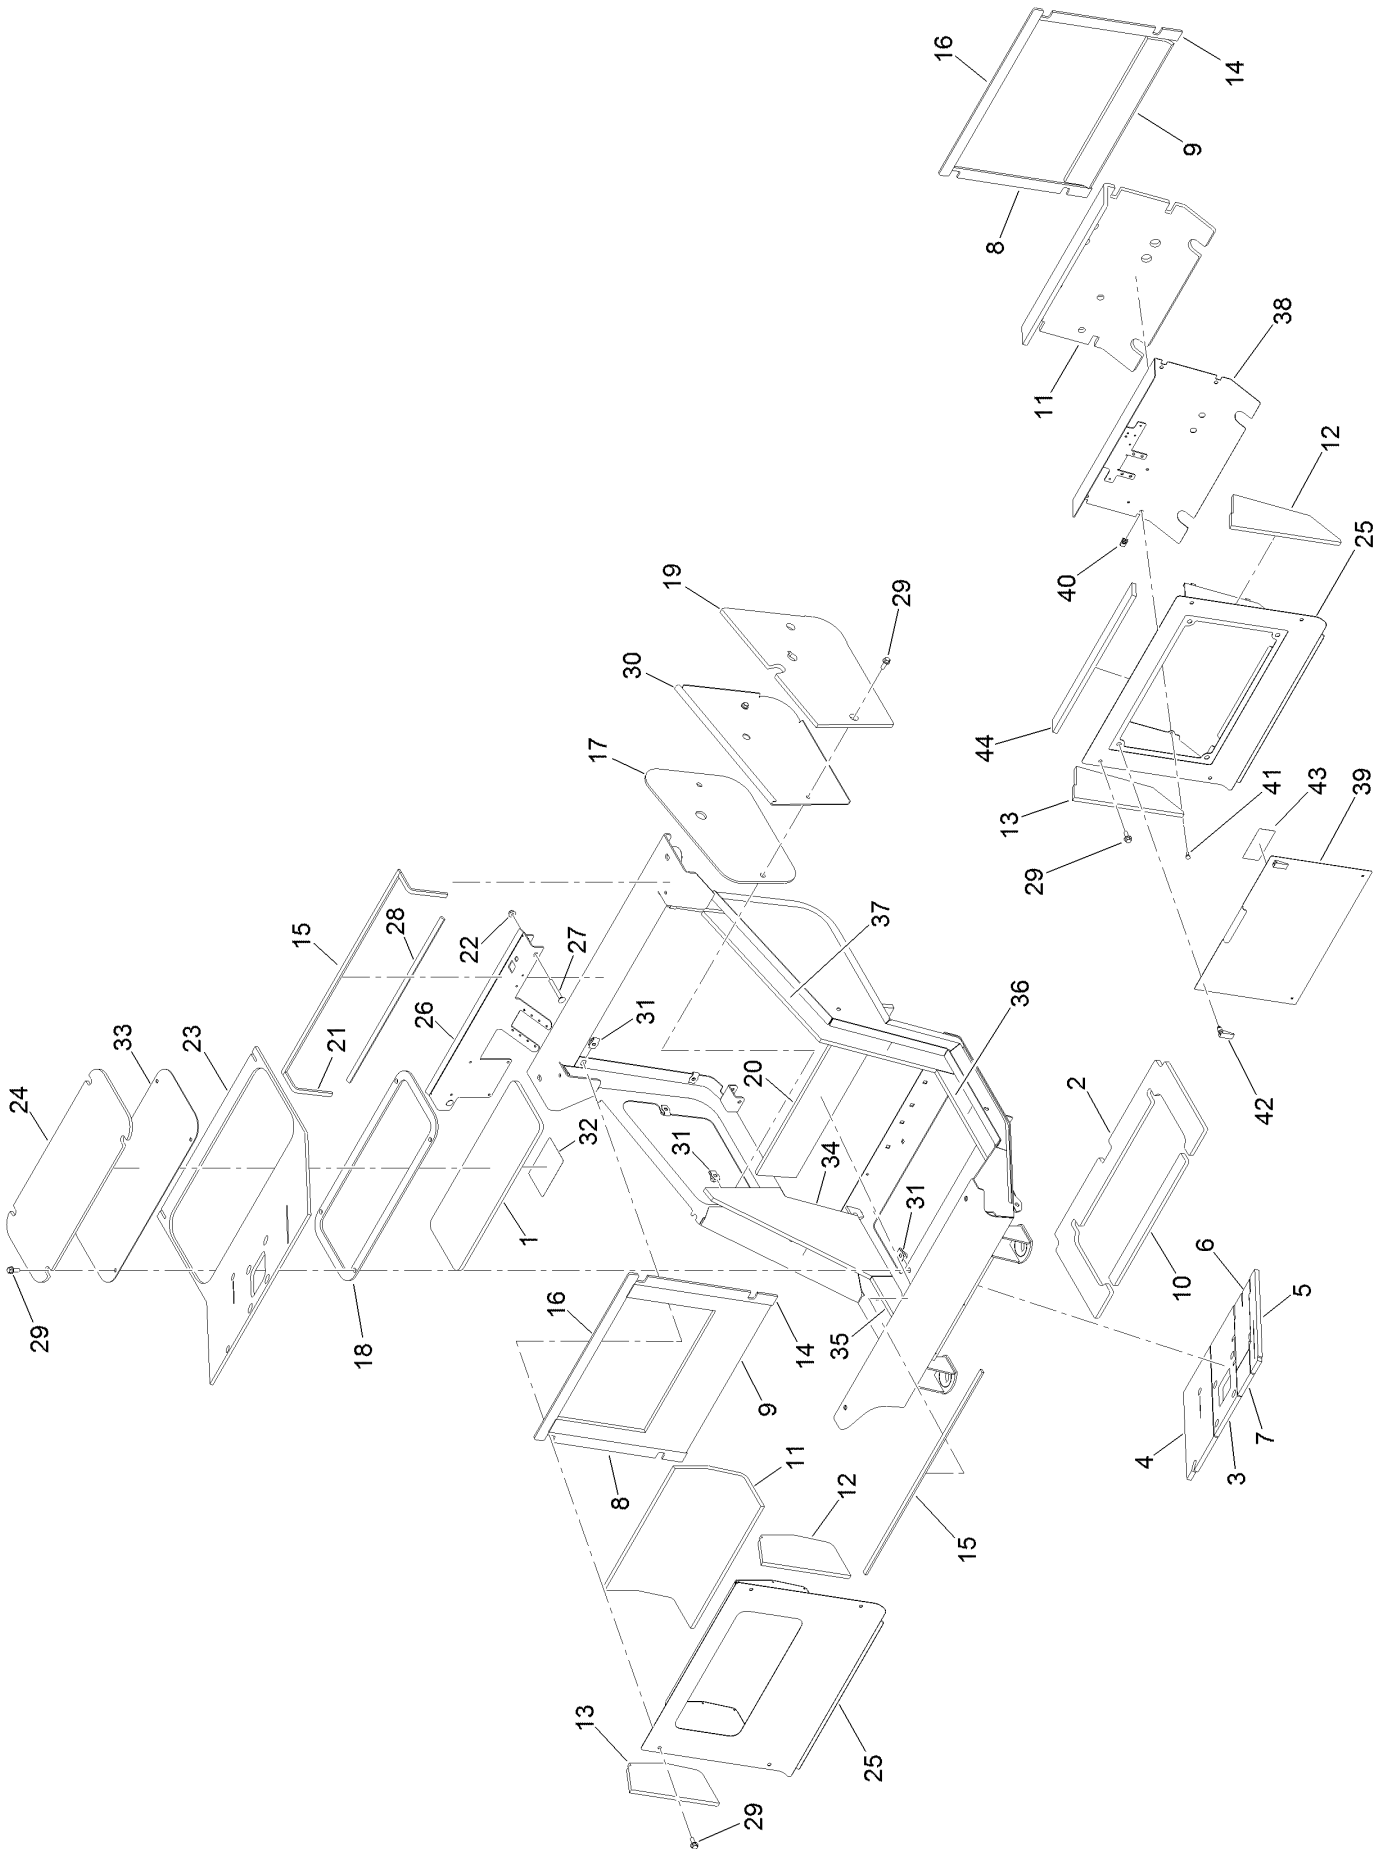

## Foam Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 119-8052           | 1           | Foam               | 23          | 119-8078           | 1           | Mat-Floor                  |
| 2           | 119-8053           | 1           | Foam               | 24          | 119-8079           | 1           | Mat-Panel, Floor           |
| 3           | 119-8054           | 1           | Foam               | 25          | 131-5539-03        | 1           | Housing-Center, Electrical |
| 4           | 119-8055           | 1           | Foam               | 26          | 132-6597-0P        | 1           | Channel-Seat               |
| 5           | 119-8056           | 1           | Foam               | 27          | 3231-10            | 2           | Screw-CARR                 |
| 6           | 119-8057           | 1           | Foam               | 28          | 132-8127           | 1           | Strip-Foam                 |
| 7           | 119-8058           | 1           | Foam               | 29          | 110-5052           | 10          | Screw-HHF                  |
| 8           | 119-8064           | 1           | Foam               | 30          | 138-1936-03        | 1           | Panel-Access, Cab          |
| 9           | 131-5541           | 1           | Foam-Bottom, Ec    | 31          | 105-4886           | 10          | Nut-Tinnerman              |
| 10          | 119-8066           | 1           | Foam               | 32          | 112-1461           | 1           | Decal-Routing, Belt        |
| 11          | 131-5536           | 1           | Foam-Tray, Ec      | 33          | 117-3322-0P        | 1           | Cover-Floor                |
| 12          | 131-5542           | 1           | Foam Side, Ec      | 34          | 130-0424           | 1           | Foam-Interior, RH          |
| 13          | 131-5543           | 1           | Foam Side, Ec      | 35          | 130-0446           | 1           | Foam-Interior, RH          |
| 14          | 119-8063           | 1           | Foam               | 36          | 130-0447           | 1           | Foam-Interior, LH          |
| 15          | 119-9897           | 2           | Strip-Foam         | 37          | 130-0448           | 1           | Foam-Interior, LH          |
| 16          | 119-8062           | 1           | Foam               | 38          | 131-5545-0P        | 1           | Tray-Electrical, Center    |
| 17          | 119-8050           | 1           | Foam               | 39          | 131-5544-03        | 1           | Panel-Cover, Ec            |
| 18          | 119-8051           | 1           | Foam               | 40          | 107069             | 4           | Clip                       |
| 19          | 138-8233           | 1           | Foam               | 41          | 321-3              | 4           | Screw-HH                   |
| 20          | 119-8076           | 1           | Foam-Interior      | 42          | 74-5950            | 4           | Latch-Swell                |
| 21          | 119-9896           | 2           | Strip-Foam         | 43          | 117-3233           | 1           | Decal-Fuseblock            |
| 22          | 104-8301           | 2           | Nut-HF, NI         | 44          | 131-5540           | 1           | Foam-Top, Ec               |
 
# Yanmar Air Conditioner Assembly

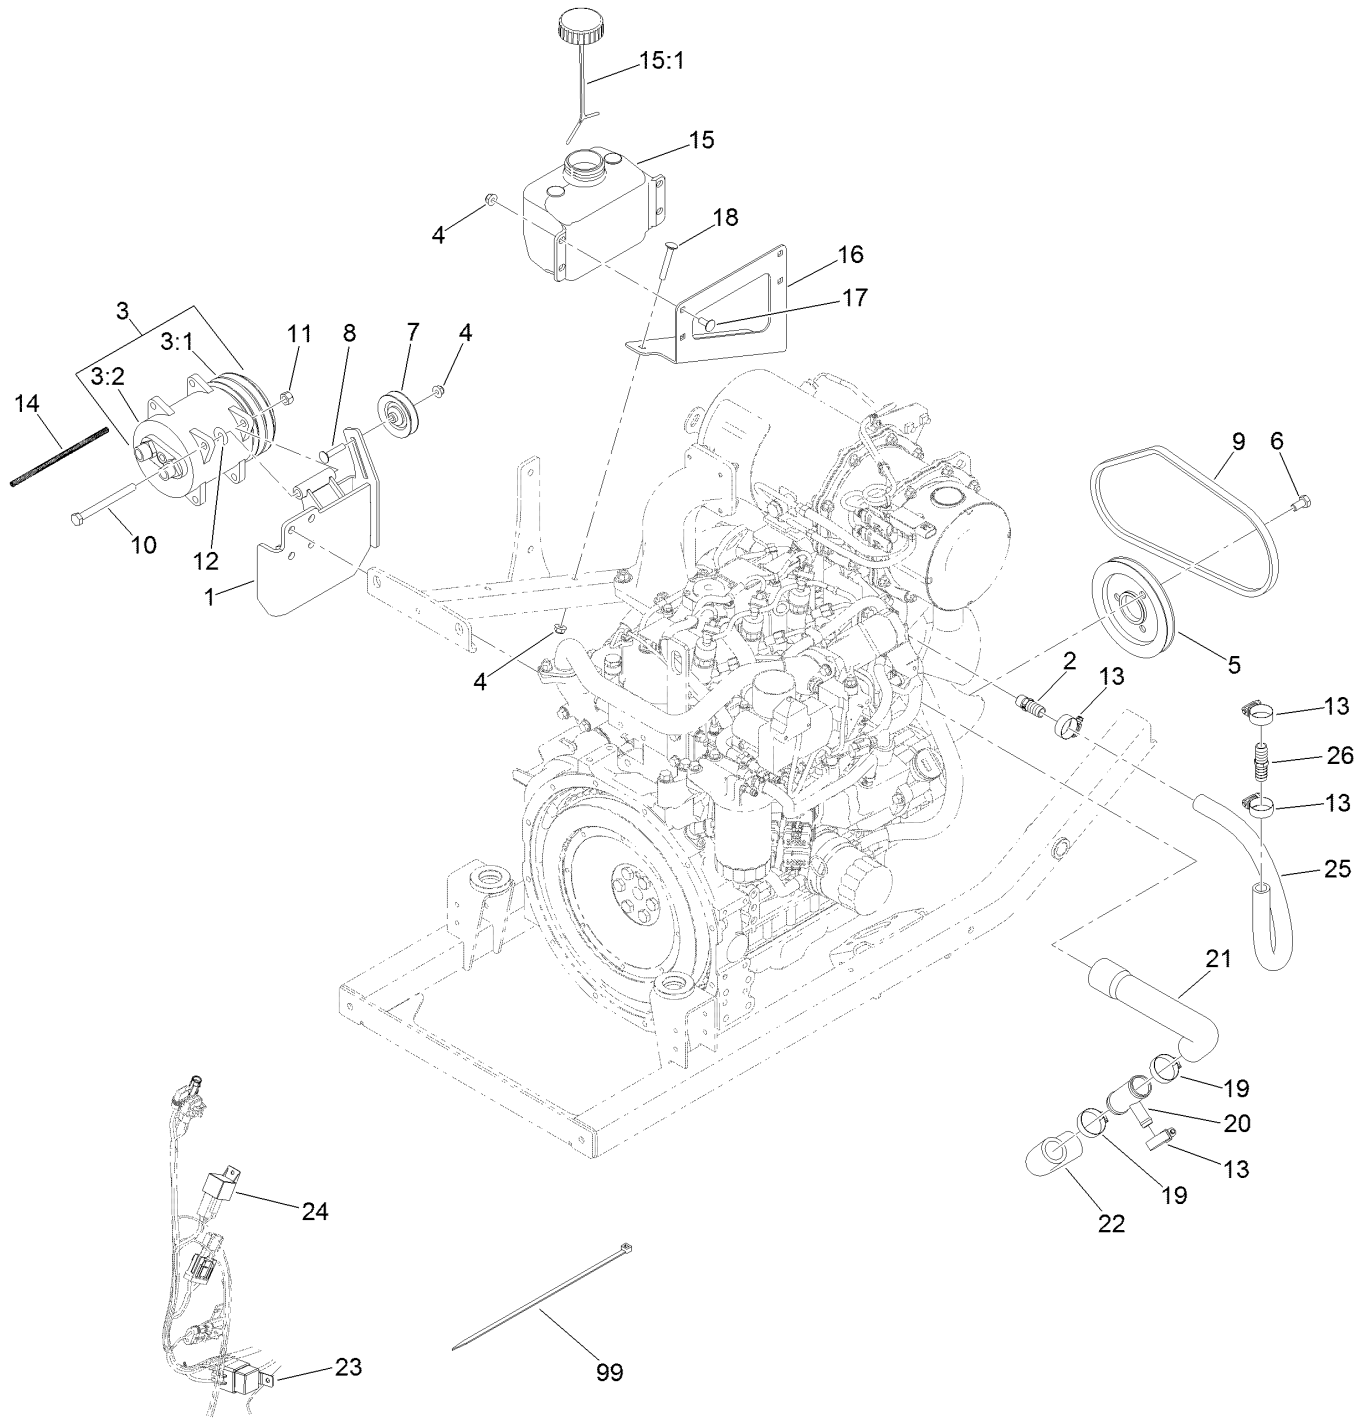


View of Cab Power Harness

## Yanmar Air Conditioner Assembly (continued)
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>           |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|------------------------------|
| 1           | 125-4397-0P        | 1           | Bracket-Compressor | 15          | 138-2702           | 1           | Tank-Fluid, Washer           |
| 2           | 117-9410           | 1           | Fitting-Straight   | 15:1        | 125-5258           | 1           | Lid-Tank, Washer Fluid       |
| 3           | 117-3048           | 1           | Compressor ASM     | 16          | 127-9856-0P        | 1           | Bracket-Bottle, Washer Fluid |
| 3:1         | 120-0251           | 1           | Clutch-Compressor  | 17          | 3230-23            | 4           | Bolt-CARR                    |
| 3:2         |                    | 1           | Compressor ●       | 18          | 126-0699           | 2           | Bolt-CARR                    |
| 4           | 104-8300           | 7           | Nut-HF, NI         | 19          | 2412-34            | 2           | Clamp-Hose                   |
| 5           | 125-4381           | 1           | Pulley-Compressor  | 20          | 119-0142           | 1           | Fitting-Radiator             |
| 6           | 33115-020          | 3           | Screw-HH           | 21          | 131-1932           | 1           | Hose-Radiator, Lower         |
| 7           | 119-8822           | 1           | Pulley-Idler       | 22          | 131-1933           | 1           | Hose-Radiator, Lower         |
| 8           | 3230-4             | 1           | Bolt-CARR          | 23          | 99-7430            | 1           | Relay-Mini                   |
| 9           | 117-3399           | 1           | Belt-V             | 24          | 99-7435            | 1           | Relay                        |
| 10          | 33115-110          | 2           | Screw-HH           | 25          | 131-3372           | 1           | Hose-Heater                  |
| 11          | 33025-00           | 2           | Nut-Lock, NI       | 26          | 131-3373           | 1           | Fitting-STR                  |
| 12          | 119-7734           | 1           | Shim               | 99          | 3290-379           | 1           | Tie-Cable                    |
| 13          | 2412-129           | 4           | Clamp-Hose         |             |                    |             |                              |
| 14          | 115-8882           | 1           | Conduit-Convolutd  |             |                    |             |                              |

● Not serviced separately


Seat Assembly

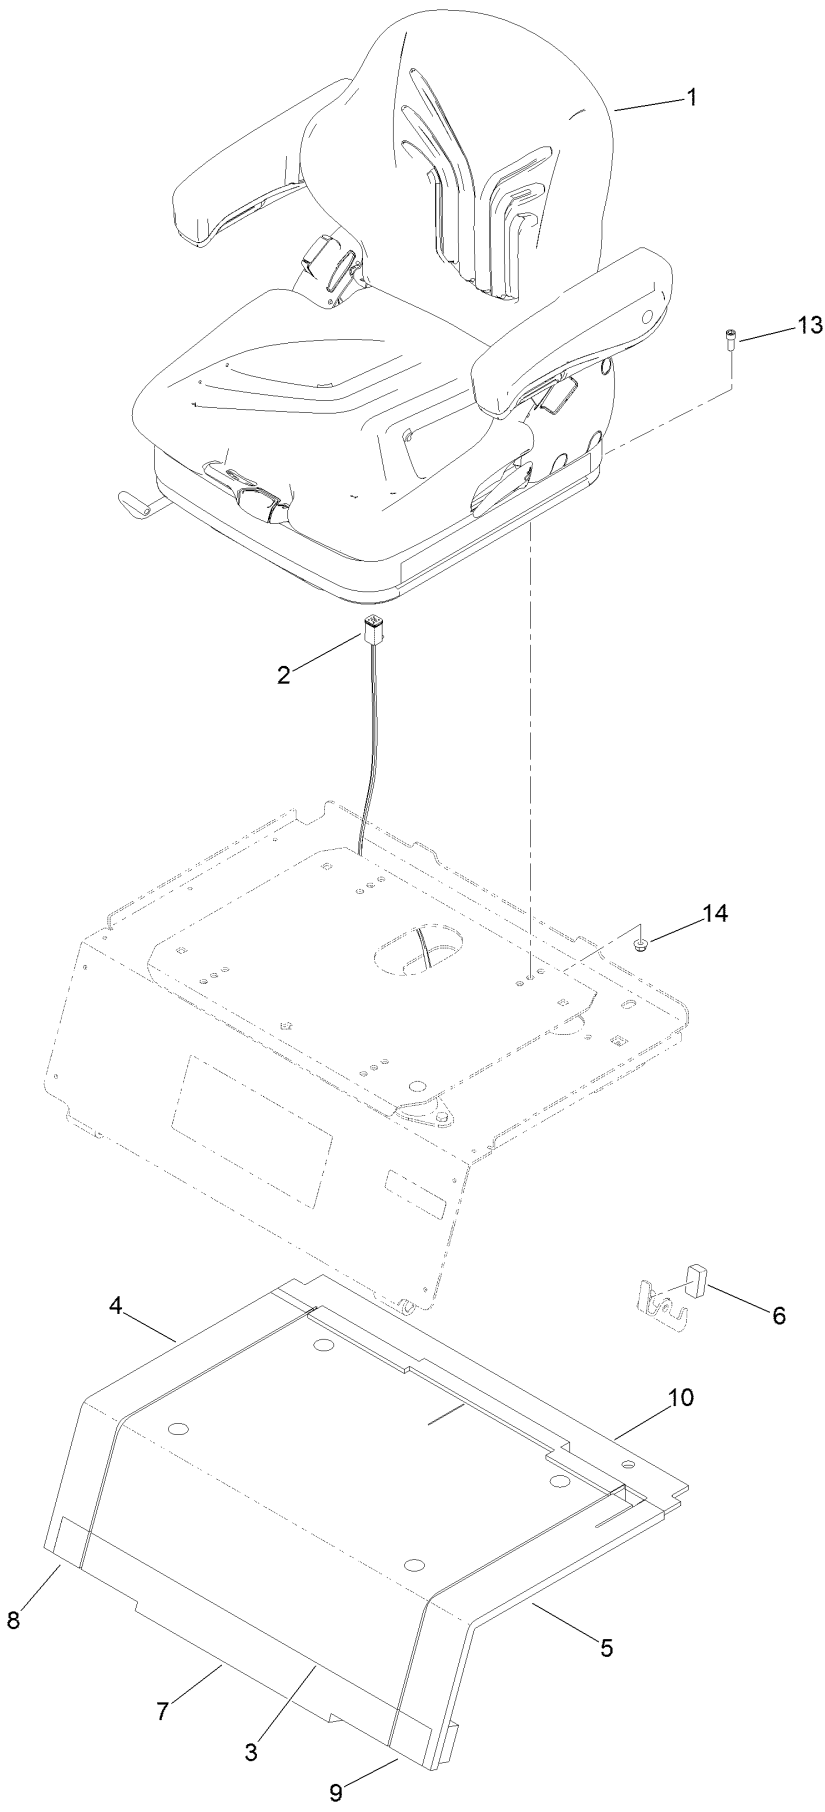

## Seat Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 117-3096           | 1           | Vinyl Air Ride Seat ASM | 7           | 119-8070           | 1           | Foam               |
| 1           | 117-3097           | 1           | Cloth Air Ride Seat ASM | 8           | 119-8071           | 1           | Foam               |
| 2           | 119-5787           | 1           | Harness-Wire, Seat      | 9           | 119-8072           | 1           | Foam               |
| 3           | 119-8059           | 1           | Foam                    | 10          | 119-8075           | 1           | Foam               |
| 4           | 119-8073           | 1           | Foam                    | 13          | 3274-10            | 4           | Screw-HSH          |
| 5           | 119-8074           | 1           | Foam                    | 14          | 104-8300           | 4           | Nut-HF, NI         |
| 6           | 119-8060           | 1           | Foam                    |             |                    |             |                    |
 
# Seat Assembly No. 117-3096

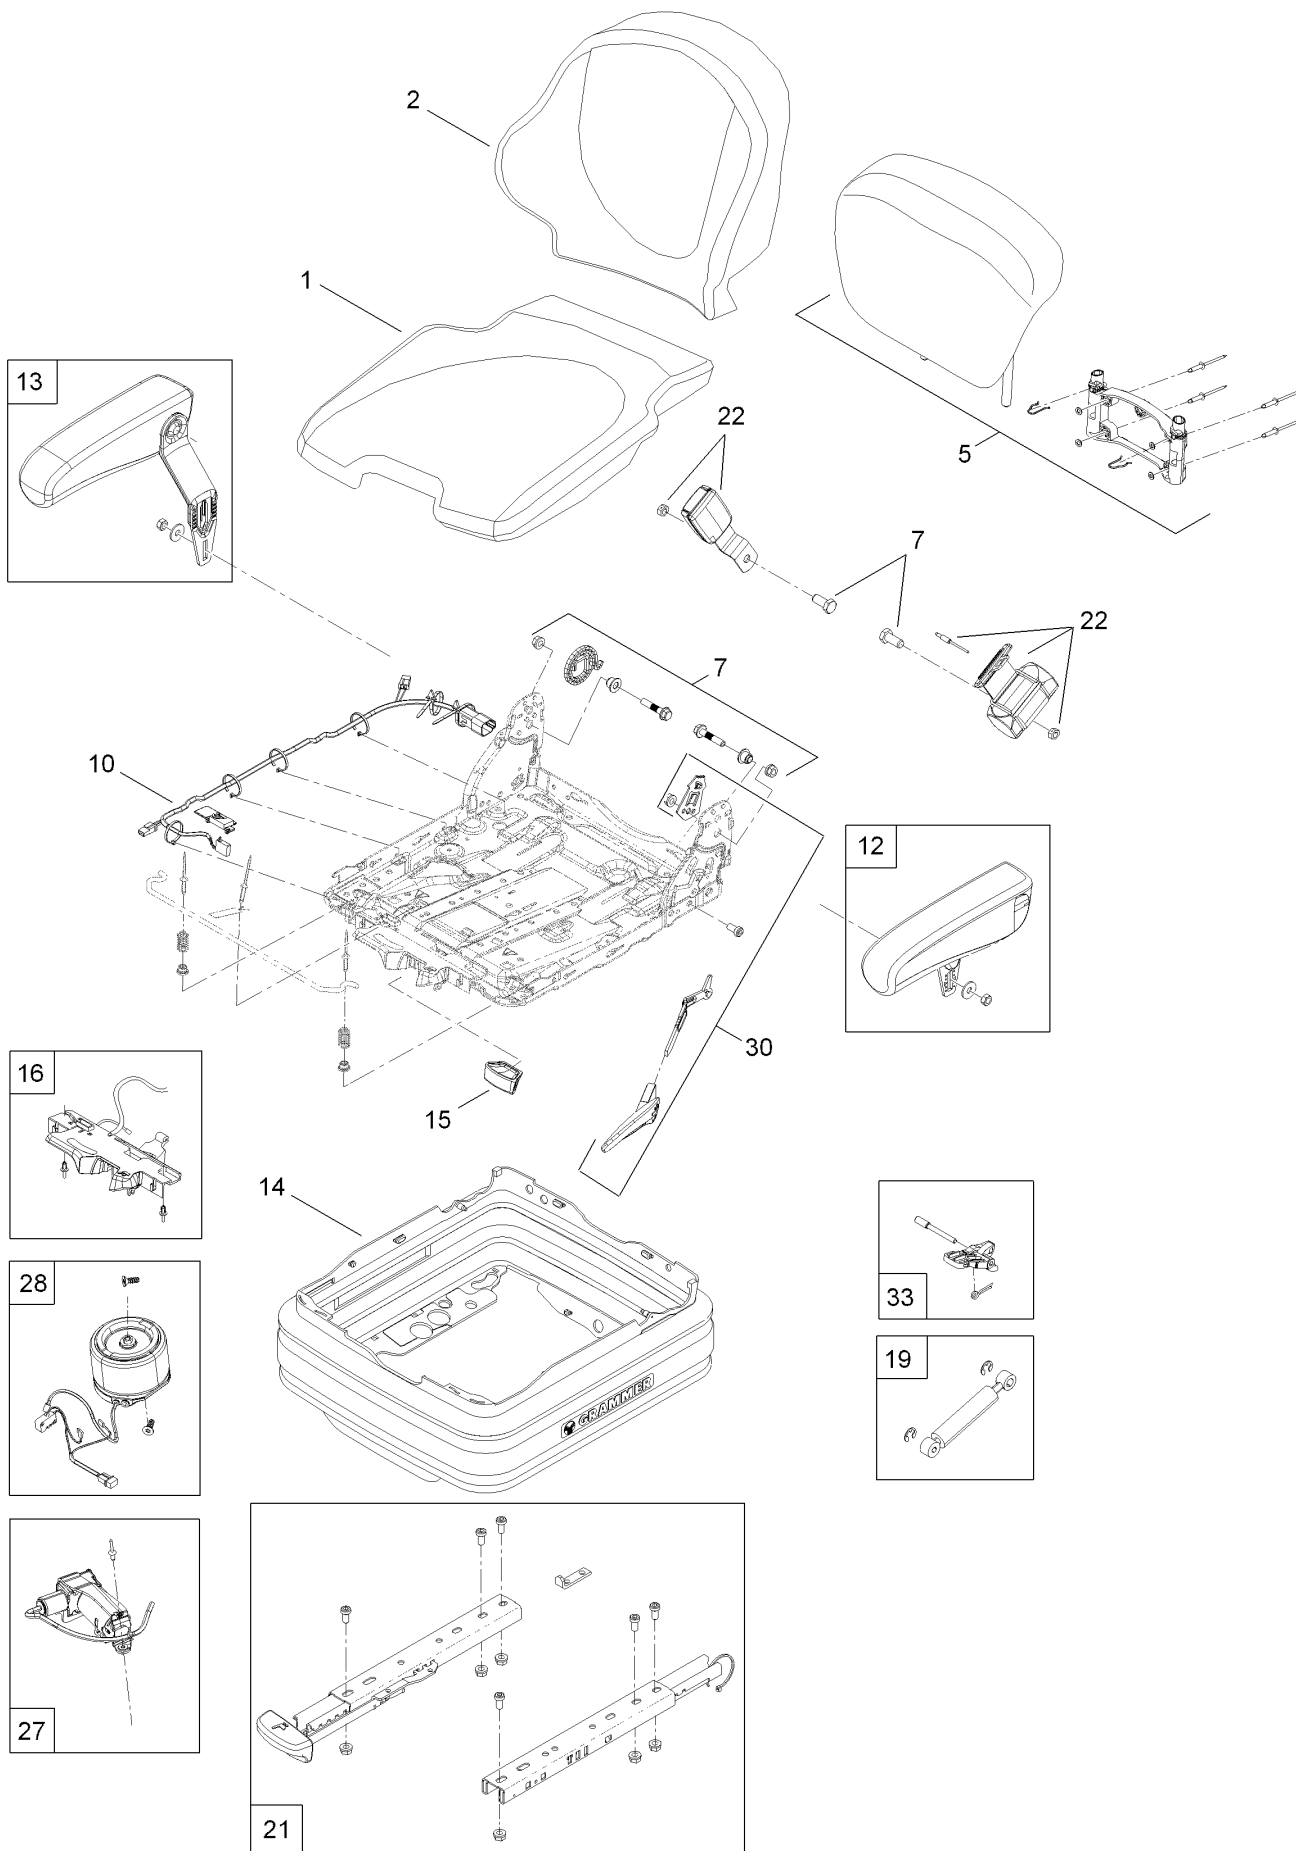




## Seat Assembly No. 117-3096 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>          | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 120-0581           | 1           | Seat Cushion Kit            | 16          | 120-0574           | 1           | Housing                 |
| 2           | 120-0582           | 1           | Back Cushion Kit            | 19          | 120-0575           | 1           | Shock Absorber Kit      |
| 5           | 120-0583           | 1           | Extension-Backrest, Vinyl ● | 21          | 120-0584           | 1           | Rails Adjustment Kit    |
| 7           | 120-0568           | 1           | Backrest Kit                | 22          | 120-0576           | 1           | Seatbelt Kit            |
| 10          | 120-0569           | 1           | Switch Kit                  | 27          | 120-0577           | 1           | Compressor              |
| 12          | 119-7105           | 1           | Premium Armrest Kit         | 28          | 120-0578           | 1           | Air Spring Kit          |
| 13          | 120-0571           | 1           | RH Armrest Kit              | 30          | 120-0579           | 1           | Backrest Adjustment Kit |
| 14          | 120-0572           | 1           | Bellows                     | 33          | 120-0580           | 1           | Lever Kit               |
| 15          | 120-0573           | 1           | Handle                      |             |                    |             |                         |

● Optional Equipment
 
# Cloth Air Ride Seat Assembly No. 117-3097



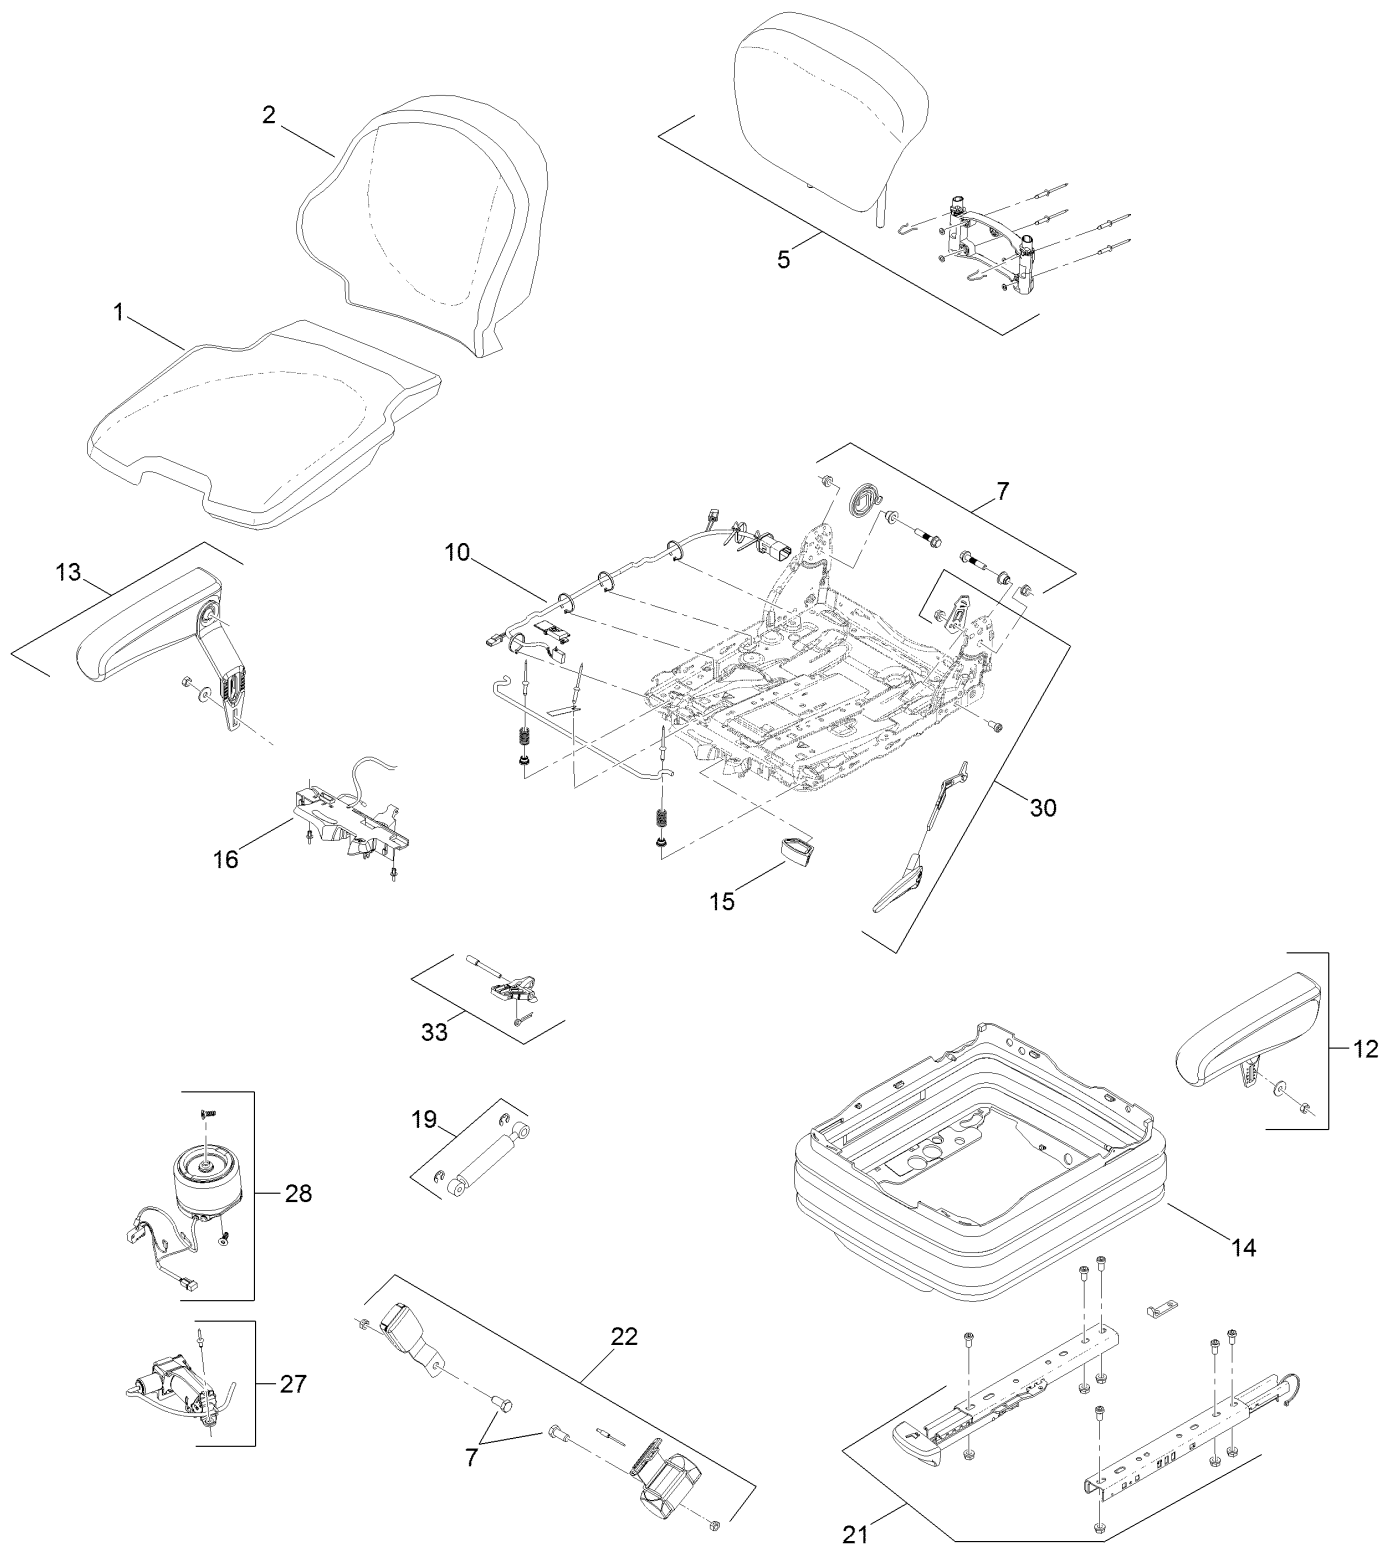


## Cloth Air Ride Seat Assembly No. 117-3097 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|--------------------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 120-0565           | 1           | Cloth Seat Cushion Kit         | 15          | 120-0573           | 1           | Handle                  |
| 2           | 120-0566           | 1           | Cloth Back Cushion Kit         | 16          | 120-0574           | 1           | Housing                 |
| 5           | 120-0567           | 1           | Backrest Cloth Extension Kit ● | 19          | 120-0575           | 1           | Shock Absorber Kit      |
| 7           | 120-0568           | 1           | Backrest Kit                   | 21          | 120-0584           | 1           | Rails Adjustment Kit    |
| 10          | 120-0569           | 1           | Switch Kit                     | 22          | 120-0576           | 1           | Seatbelt Kit            |
| 12          | 119-7105           | 1           | Premium Armrest Kit            | 27          | 120-0577           | 1           | Compressor              |
| 13          | 120-0571           | 1           | RH Armrest Kit                 | 28          | 120-0578           | 1           | Air Spring Kit          |
| 14          | 120-0572           | 1           | Bellows                        | 30          | 120-0579           | 1           | Backrest Adjustment Kit |
|             |                    |             |                                | 33          | 120-0580           | 1           | Lever Kit               |

● Optional Equipment

   
# Cab Cable Tie Assembly

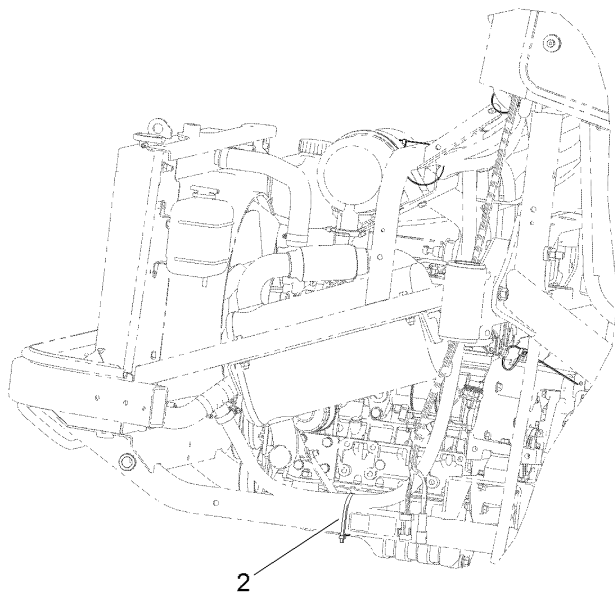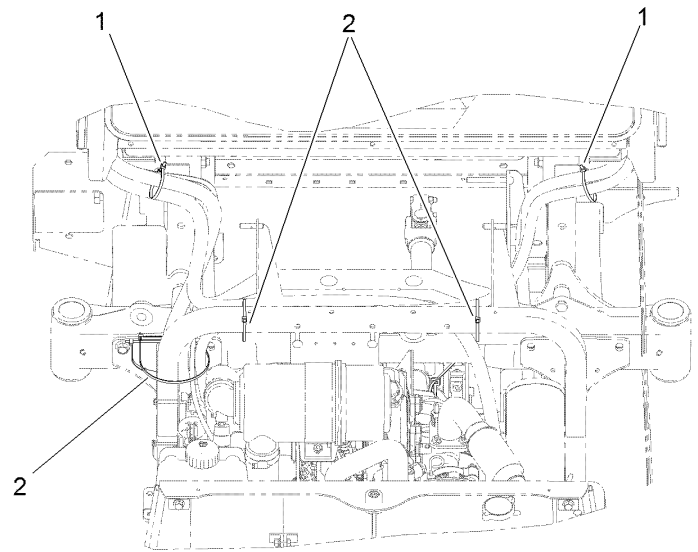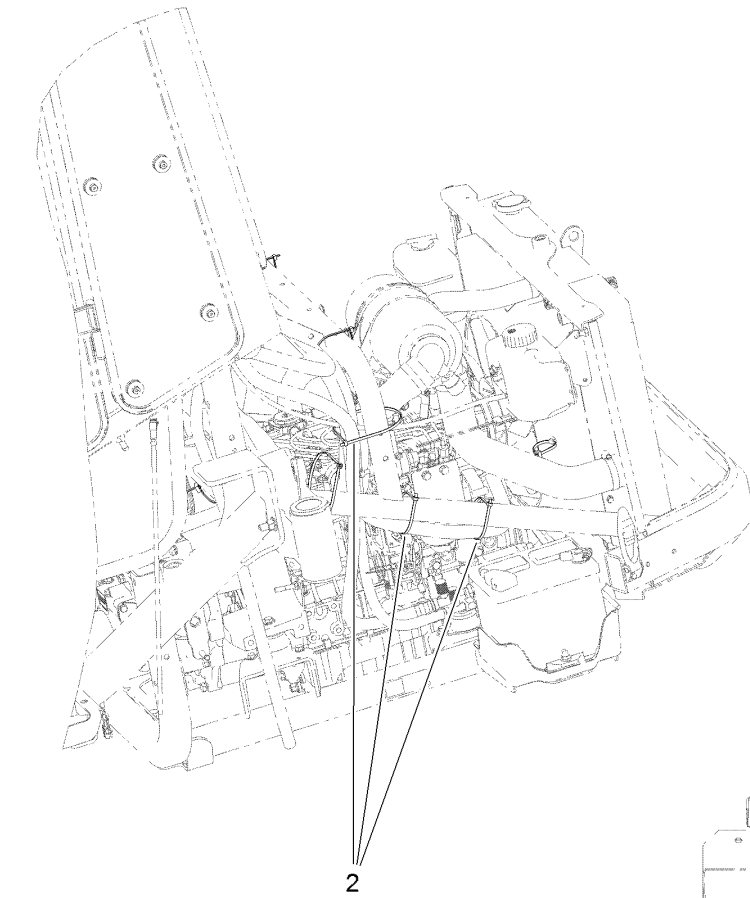

## Cab Cable Tie Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 32180-030          | 2           | Clip-Tie           |
| 2           | 3290-379           | 7           | Tie-Cable          |

 
# A/C Compressor Guard Assembly

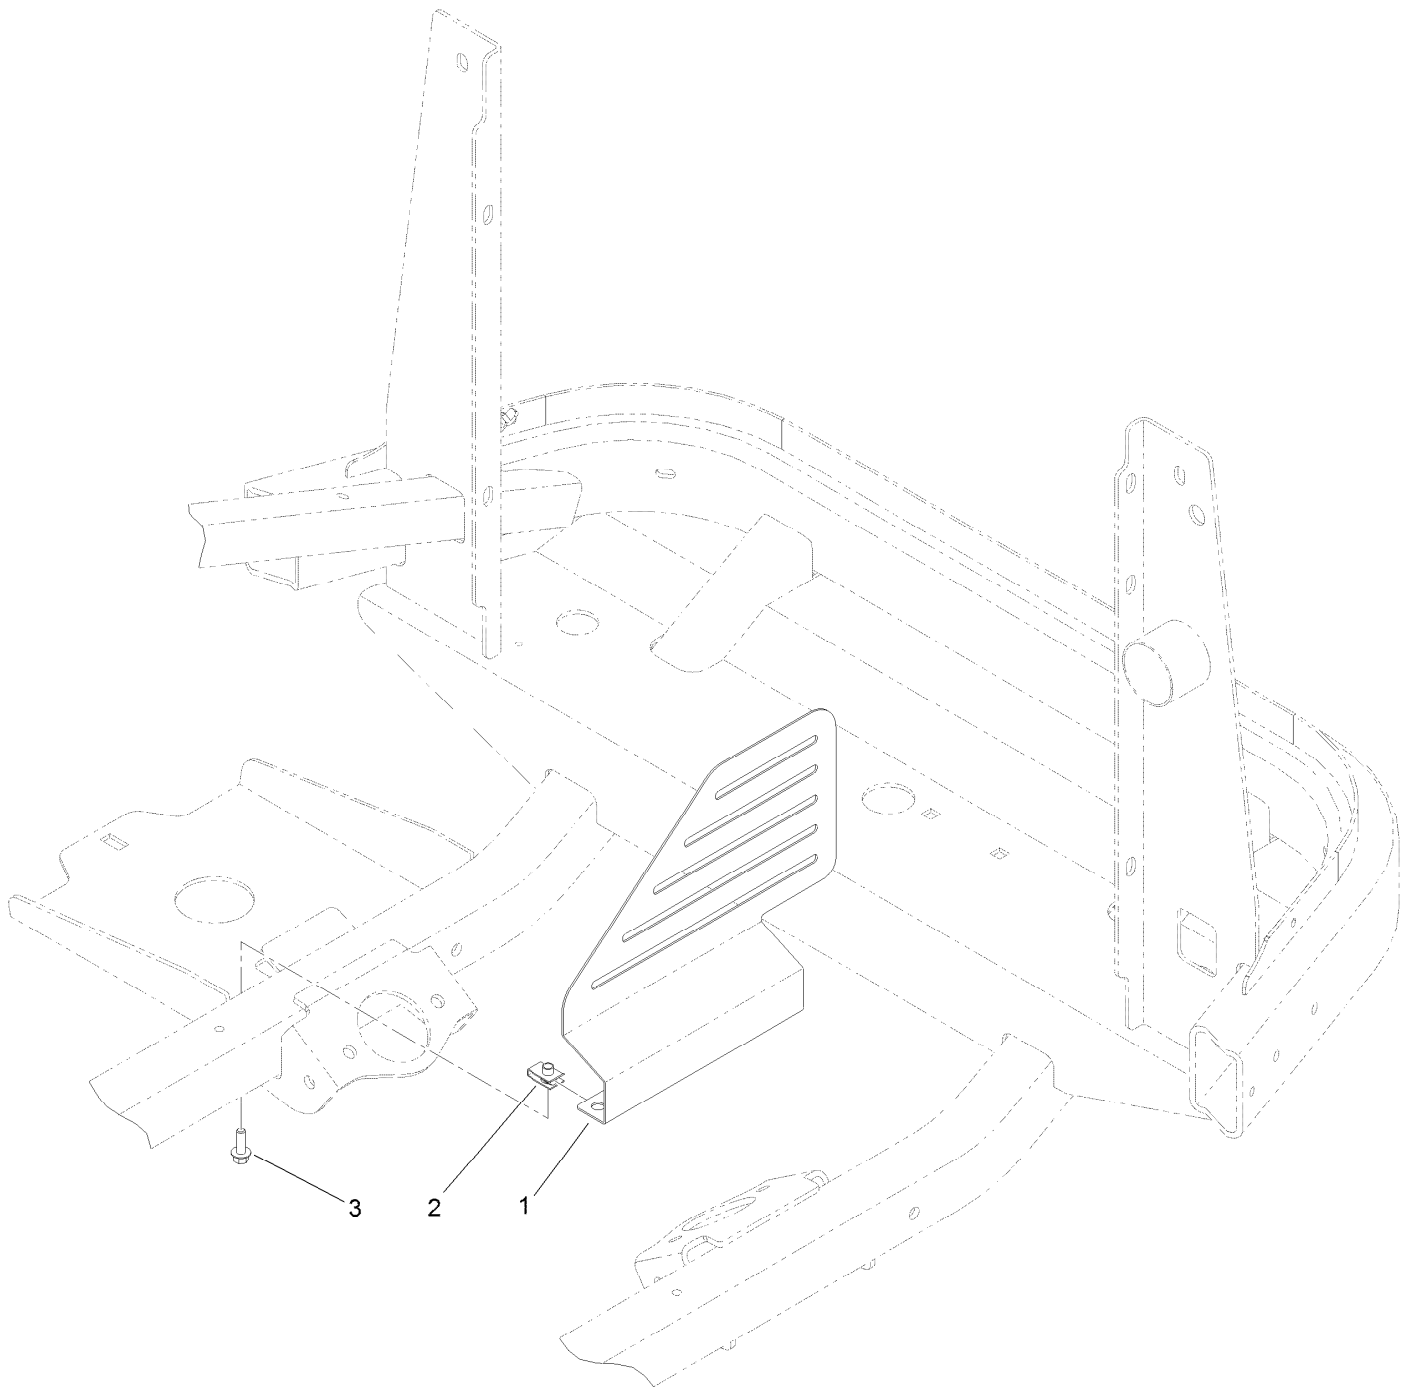

## A/C Compressor Guard Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-4934-0P        | 1           | Shield-Compressor  |
| 2           | 107069             | 2           | Clip               |
| 3           | 3234-4             | 2           | Screw-HHF          |
 
# Cab Frame, Mount and Seal Assembly

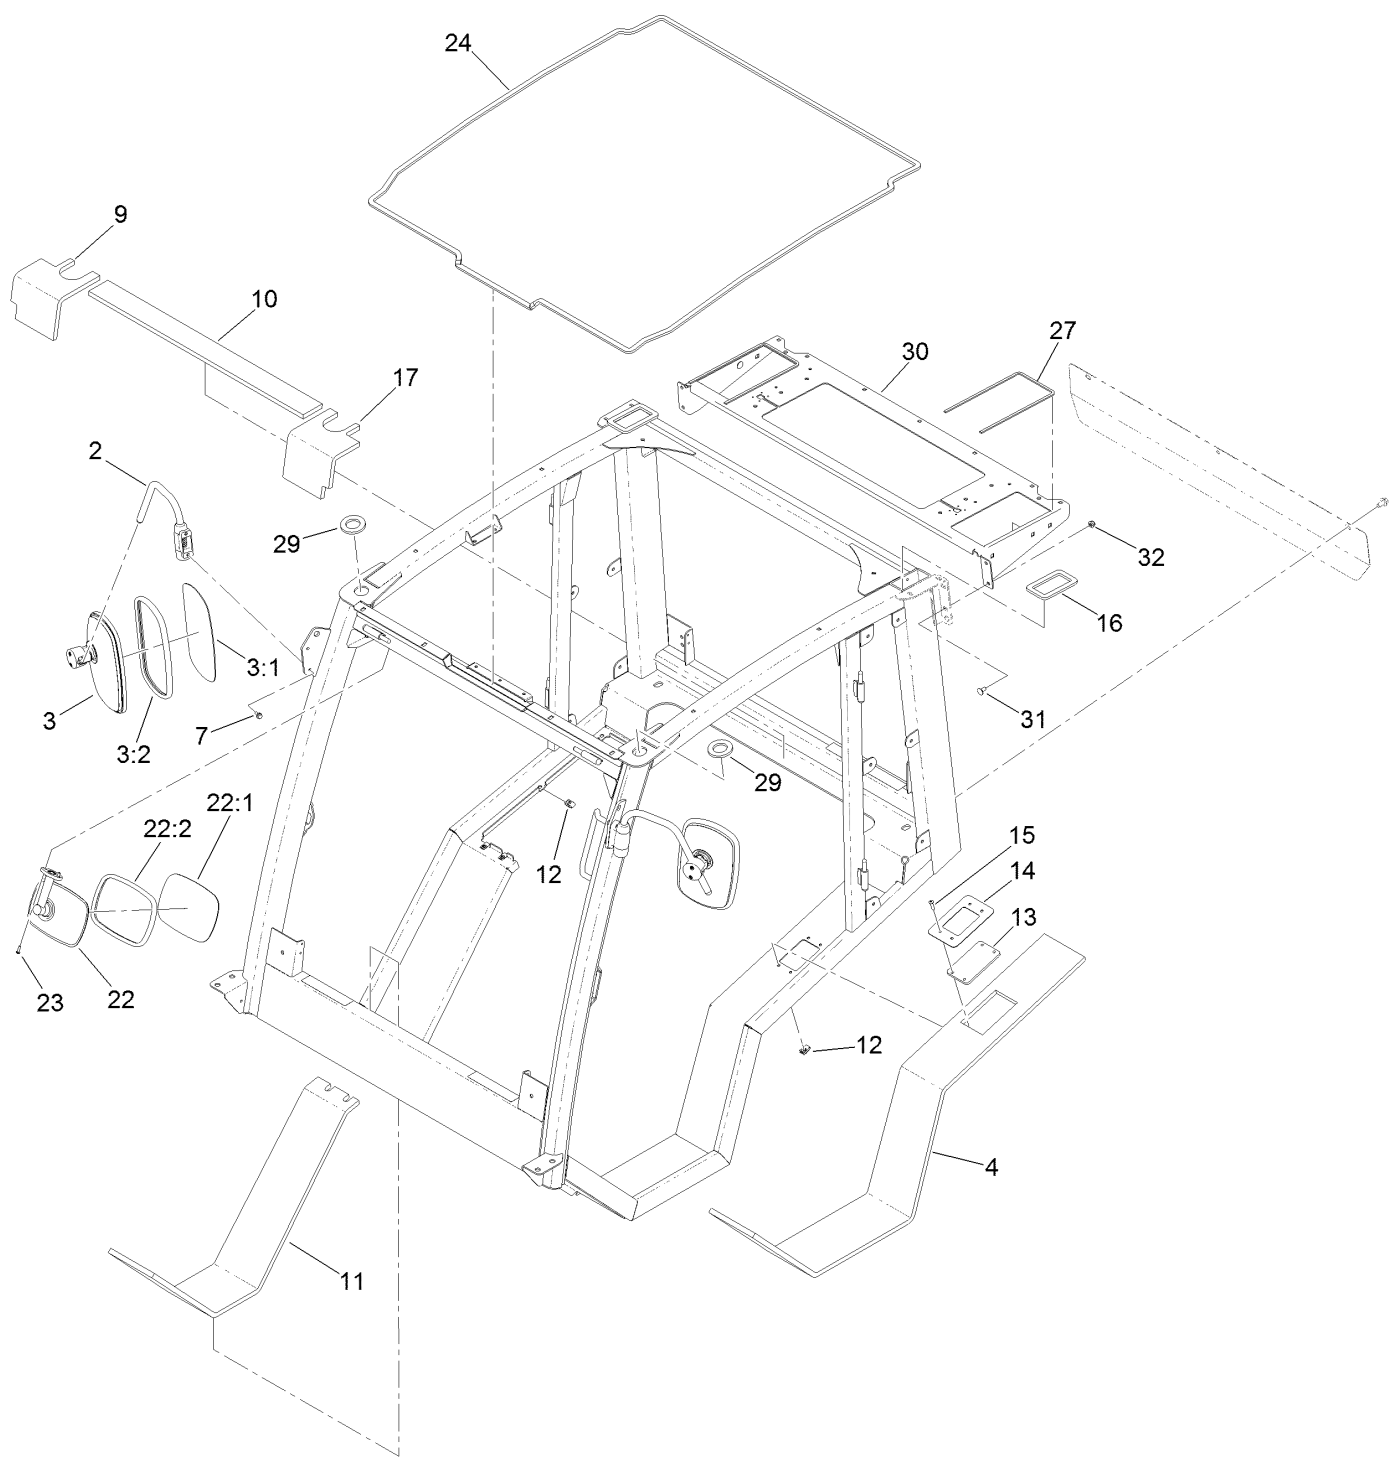




## Cab Frame, Mount and Seal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|---------------------------|-------------|--------------------|-------------|----------------------------|
| 2           | 121-8275           | 2           | Arm-Mirror, Side          | 16          | 130-5855           | 2           | Seal-Tube, Rear            |
| 3           | 121-8341           | 2           | Side Mirror ASM           | 17          | 130-5877           | 1           | Foam-Interior, Rear LH     |
| 3:1         | 121-8340           | 1           | Mirror                    | 22          | 121-8343           | 1           | Interior Mirror ASM        |
| 3:2         | 121-8339           | 1           | Gasket                    | 22:1        | 121-8342           | 1           | Mirror                     |
| 4           | 130-0435           | 1           | Foam-Interior, LH         | 22:2        | 121-8389           | 1           | Gasket                     |
| 7           | 33103-016          | 4           | Screw-HHF                 | 23          | 32144-32           | 2           | Screw                      |
| 9           | 130-5876           | 1           | Foam-Interior, Rear RH    | 24          | 130-0586           | 1           | Seal-Foam, Frame Roof      |
| 10          | 130-5878           | 1           | Foam-Interior, Rear Shelf | 27          | 130-0587           | 2           | Seal-Foam, Roof Air Filter |
| 11          | 130-0425           | 1           | Foam-Interior, RH         | 29          | 133-0982           | 2           | Tube-Seal, Front           |
| 12          | 107069             | 9           | Clip                      | 30          | 136-1768-03        | 1           | Shelf-Mount, Fan           |
| 13          | 119-9878           | 1           | Window-Gauge, Fuel        | 31          | 3230-18            | 4           | Screw-CARR                 |
| 14          | 130-5517-03        | 1           | Plate-Retention           | 32          | 104-8300           | 4           | Nut-HF, NI                 |
| 15          | 3274-65            | 4           | Screw-HSBH                |             |                    |             |                            |
 
# Cab Headliner Assembly

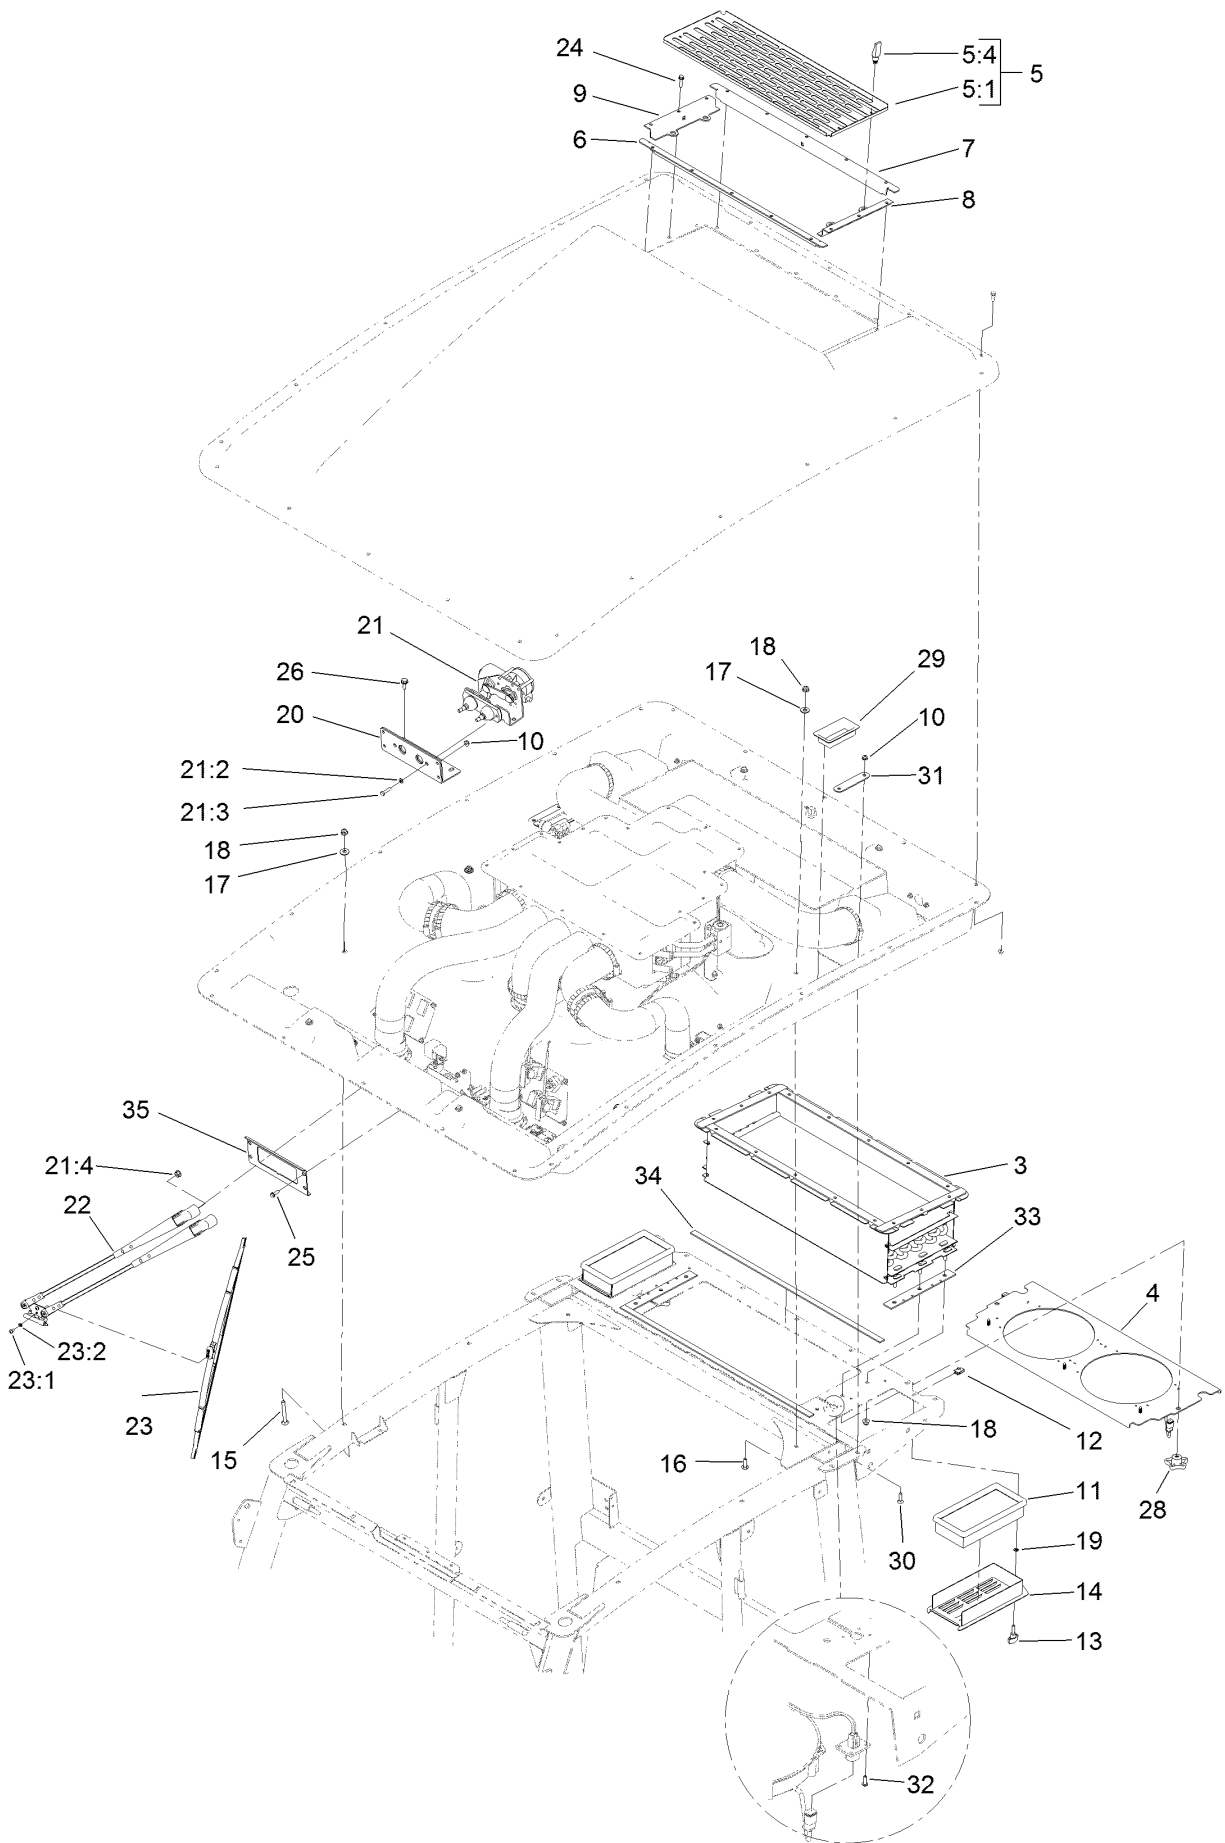


## Cab Headliner Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|---------------------------|
| 3           | 132-3468           | 1           | A/C Duct ASM       | 21          | 125-7452           | 1           | Wiper Motor ASM           |
| 4           | 132-3488           | 1           | Panel-Fan          | 21:2        | 3253-3             | 1           | Washer-Lock               |
| 5           |                    | 1           | Screen ASM ●       | 21:3        | 33113-025          | 1           | Screw-HH                  |
| 5:1         | 132-3530-03        | 1           | Screen             | 21:4        | 112-2844           | 2           | Nut-HF                    |
| 5:4         | 74-5950            | 4           | Latch-Swell        | 22          | 125-7453           | 1           | Arm-Wiper                 |
| 6           | 132-3531-03        | 1           | Seal-Front         | 23          | 125-7454           | 1           | Blade-Wiper               |
| 7           | 132-3532-03        | 1           | Seal-Rear          | 23:1        | 47-2830            | 2           | Screw                     |
| 8           | 132-3533-03        | 1           | Seal-Side, Left    | 23:2        | 43-5920            | 2           | Washer-Lock, Spring       |
| 9           | 132-3534-03        | 1           | Seal-Side, Right   | 24          | 120-4654           | 16          | Screw-HHF                 |
| 10          | 104-7201           | 8           | Nut-HF             | 25          | 32105-15           | 4           | Screw-HWH                 |
| 11          | 121-8457           | 2           | Filter-Air         | 26          | 32144-11           | 2           | Screw-HWH                 |
| 12          | 107069             | 2           | Clip               | 28          | 117-5976           | 2           | Knob-Handle               |
| 13          | 126-5846           | 2           | Knob-T             | 29          | 130-5661           | 2           | Tube-Sleeve               |
| 14          | 125-9825-03        | 2           | Cover-Air, Fresh   | 30          | 3229-30            | 4           | Screw-CARR                |
| 15          | 3230-9             | 4           | Screw-CARR         | 31          | 130-5854           | 2           | Brace-Seal                |
| 16          | 3230-22            | 13          | Screw-CARR         | 32          | 363-8245           | 8           | Screw-TAP                 |
| 17          | 3256-3             | 17          | Washer-Flat        | 33          | 132-3608           | 2           | Seal-Edge                 |
| 18          | 104-8300           | 21          | Nut-HF, NI         | 34          | 132-3609           | 2           | Seal-Strip                |
| 19          | 32115-15           | 2           | Nut-Push           | 35          | 130-6068-03        | 1           | Plate-Washer, Wiper Motor |
| 20          | 130-5871           | 1           | Bracket-Wiper      |             |                    |             |                           |

● Not serviced separately

 
# Air Conditioning Duct Assembly No. 132-3468

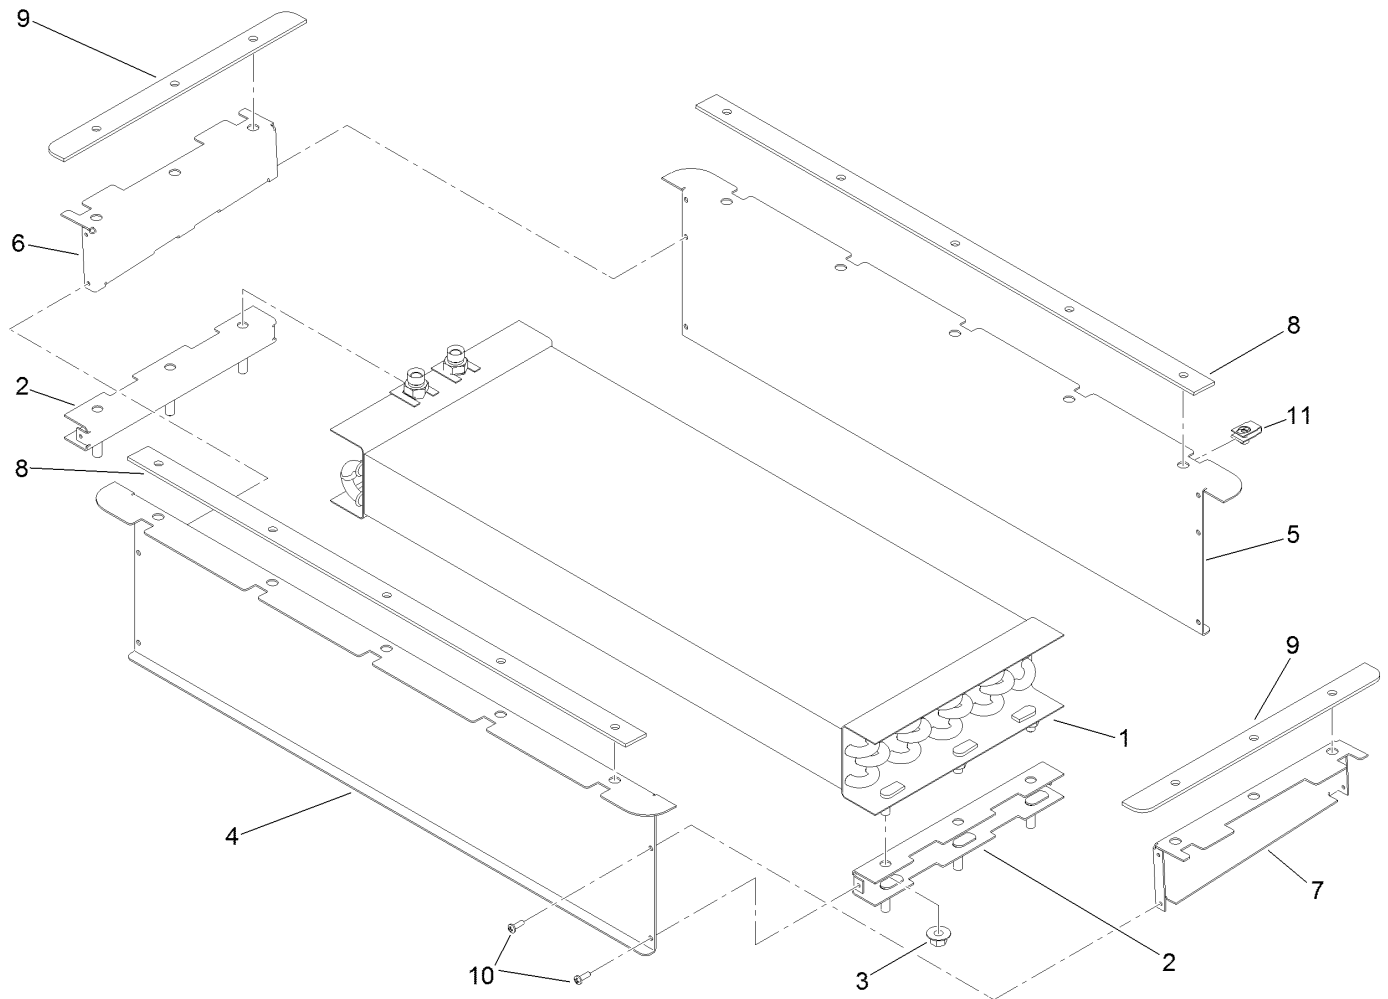

## Air Conditioning Duct Assembly No. 132-3468 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 121-8447           | 1           | Core-Condenser     | 7           | 132-3465-03        | 1           | Wall-Side, Left    |
| 2           | 132-3469-03        | 2           | Leg-Lower          | 8           | 132-3466           | 2           | Seal-Strip         |
| 3           | 32128-44           | 6           | Nut                | 9           | 132-3467           | 2           | Seal-Edge          |
| 4           | 132-3462-03        | 1           | Wall-Front         | 10          | 363-8245           | 12          | Screw-TAP          |
| 5           | 132-3463-03        | 1           | Wall-Back          | 11          | 107069             | 16          | Clip               |
| 6           | 132-3464-03        | 1           | Wall-Side, Right   |             |                    |             |                    |
 
# Fan Panel Assembly No. 132-3488

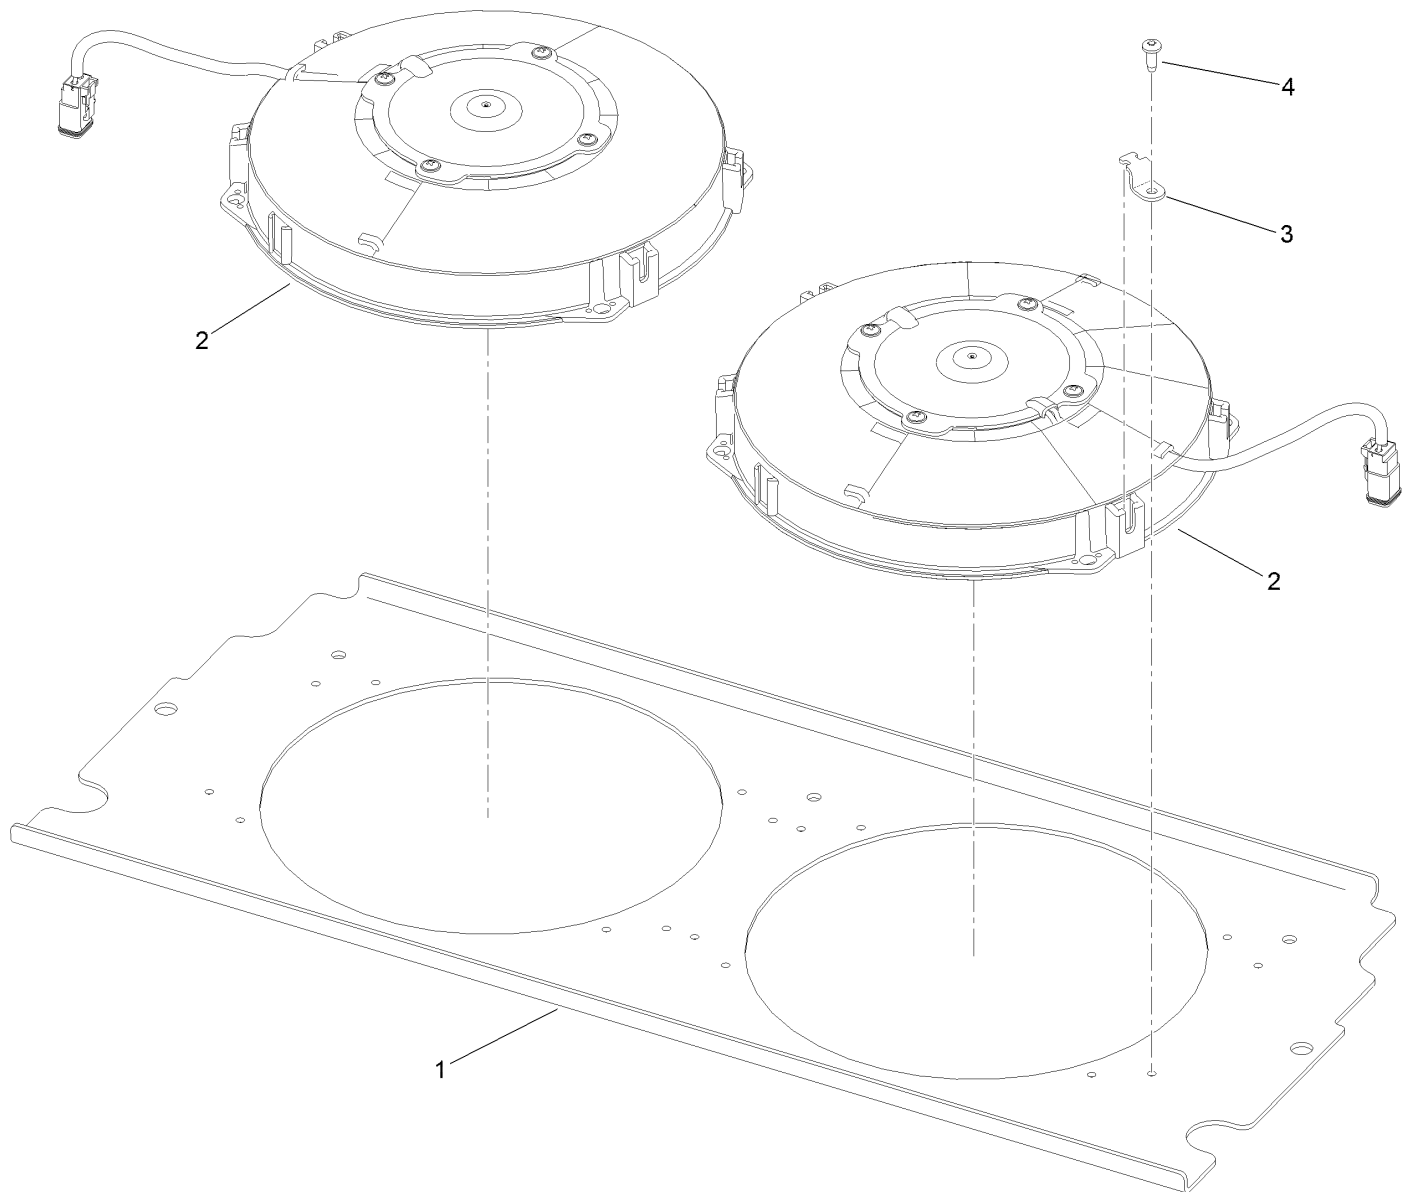


## Fan Panel Assembly No. 132-3488 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 132-3486-03        | 1           | Plate-Mount, Fan   |
| 2           | 132-3607           | 2           | Fan-Condenser      |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 3           | 132-3606           | 8           | Tab-Fan               |
| 4           | 105-6849           | 8           | Screw-Forming, Thread |
 
# Window Assembly

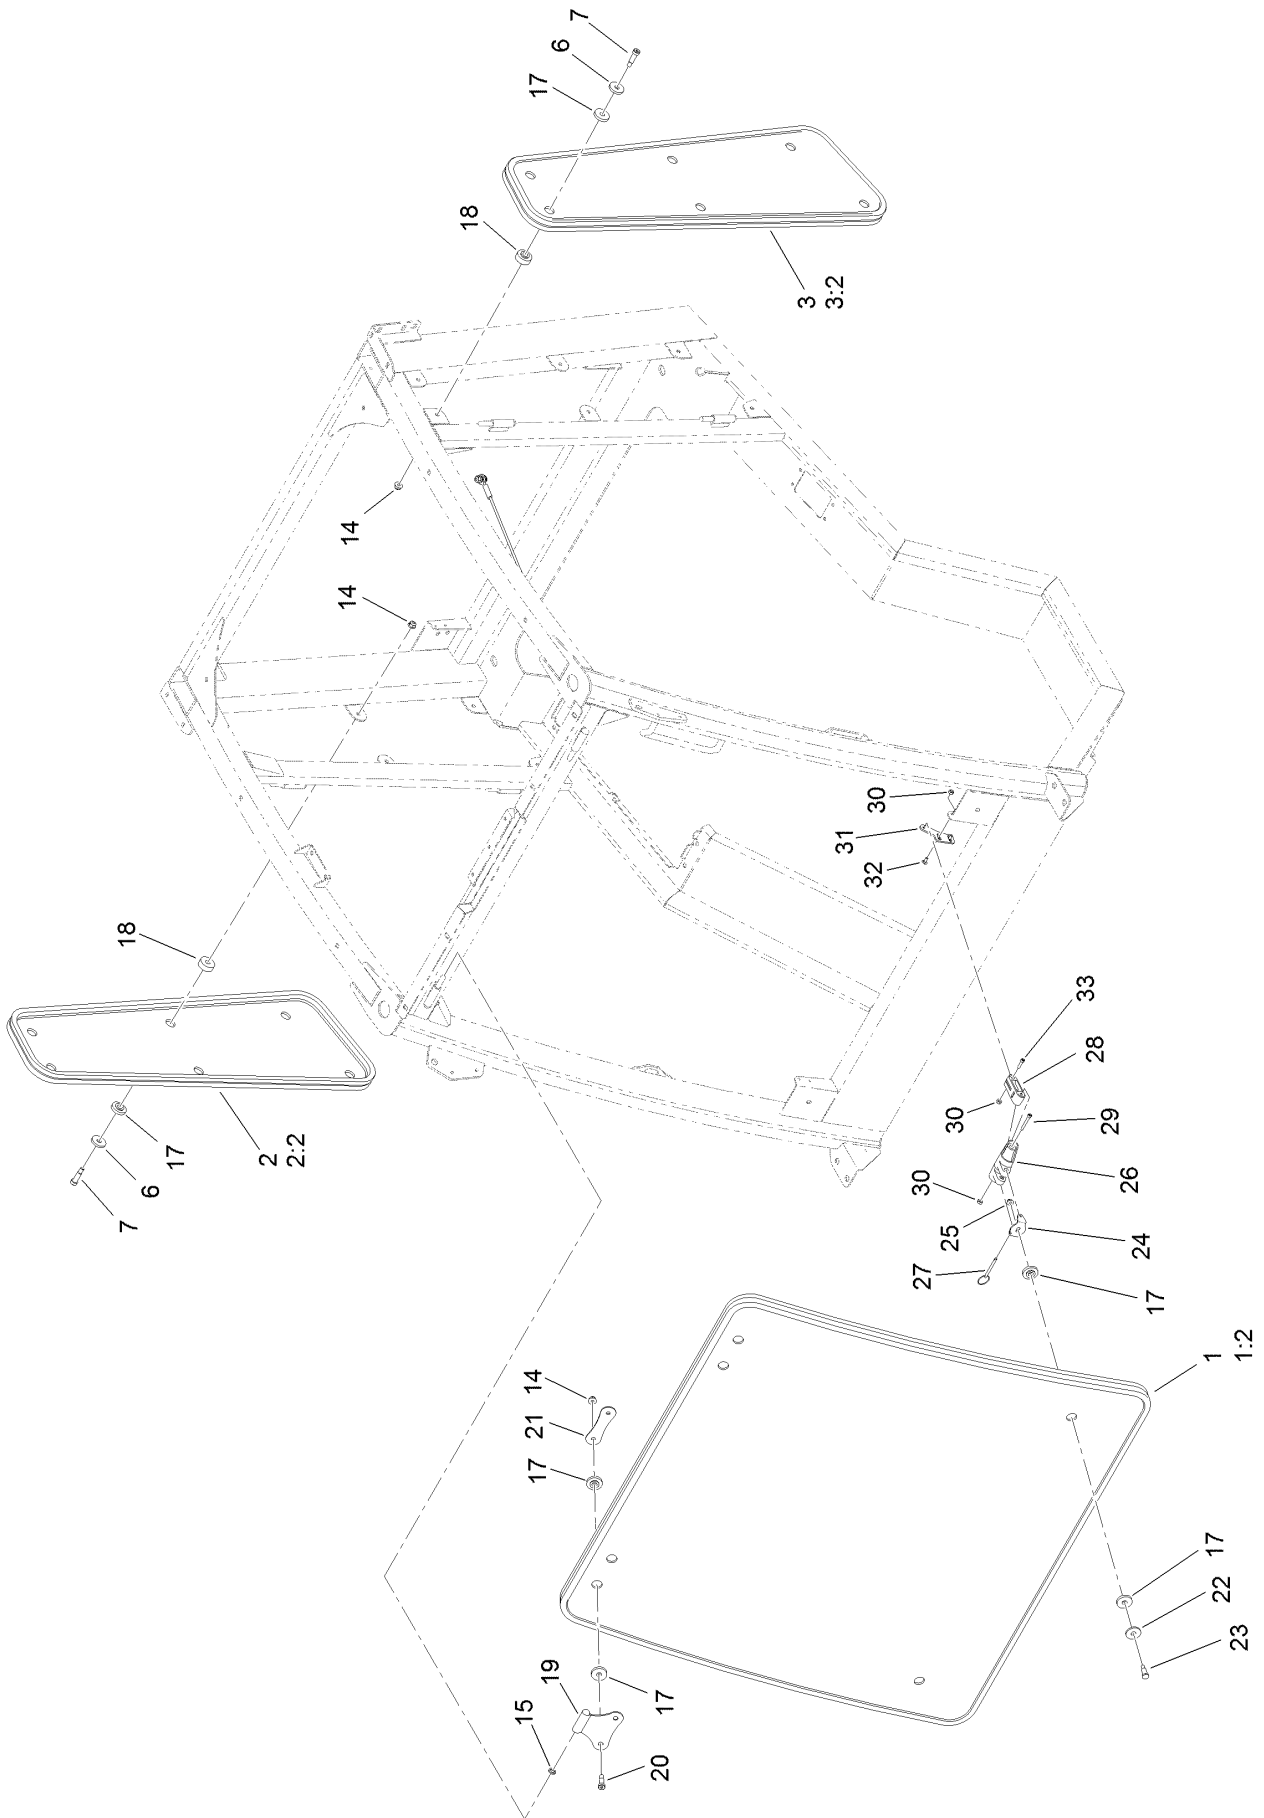




## Window Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 130-5680           | 1           | Upper Front Window ASM | 21          | 127-9933           | 2           | Plate-Backer, Windshield |
| 1:2         | 121-8212           | 1           | Seal-Trim              | 22          | 125-9676           | 2           | Washer-Backup            |
| 2           | 130-5688           | 1           | RH Side Window ASM     | 23          | 119-9812           | 2           | Bolt-Shoulder            |
| 2:2         | 125-7379           | 1           | Trim-Seal, Side RH     | 24          | 125-9987           | 2           | Mount-Latch              |
| 3           | 130-5689           | 1           | LH Side Window ASM     | 25          | 104-7201           | 2           | Nut-HF                   |
| 3:2         | 121-8499           | 1           | Seal-Trim, Side LH     | 26          | 125-9792           | 2           | Handle-Window            |
| 6           | 130-5815           | 12          | Washer-Backup          | 27          | 127-9850           | 2           | Pin-Release, Quick       |
| 7           | 125-9521           | 12          | Screw-Shoulder, HSH    | 28          | 125-9793           | 2           | Link-Window              |
| 14          | 104-8300           | 16          | Nut-HF, NI             | 29          | 3274-59            | 2           | Screw-HSH                |
| 15          | 121-8441           | 2           | Washer-Spacer          | 30          | 120-9681           | 8           | Nut-Lock, NI             |
| 17          | 125-9982           | 24          | Bushing-Flange         | 31          | 130-0590           | 2           | Mount-Tab                |
| 18          | 125-9537           | 12          | Bushing-Flange         | 32          | 1-807513           | 4           | Bolt-CARR                |
| 19          | 121-8535-03        | 2           | Hinge-Window           | 33          | 3274-14            | 2           | Screw-HSH                |
| 20          | 125-9520           | 4           | Screw-Shoulder, HSH    |             |                    |             |                          |

 
# Tier 4 Engine Hose Routing Assembly

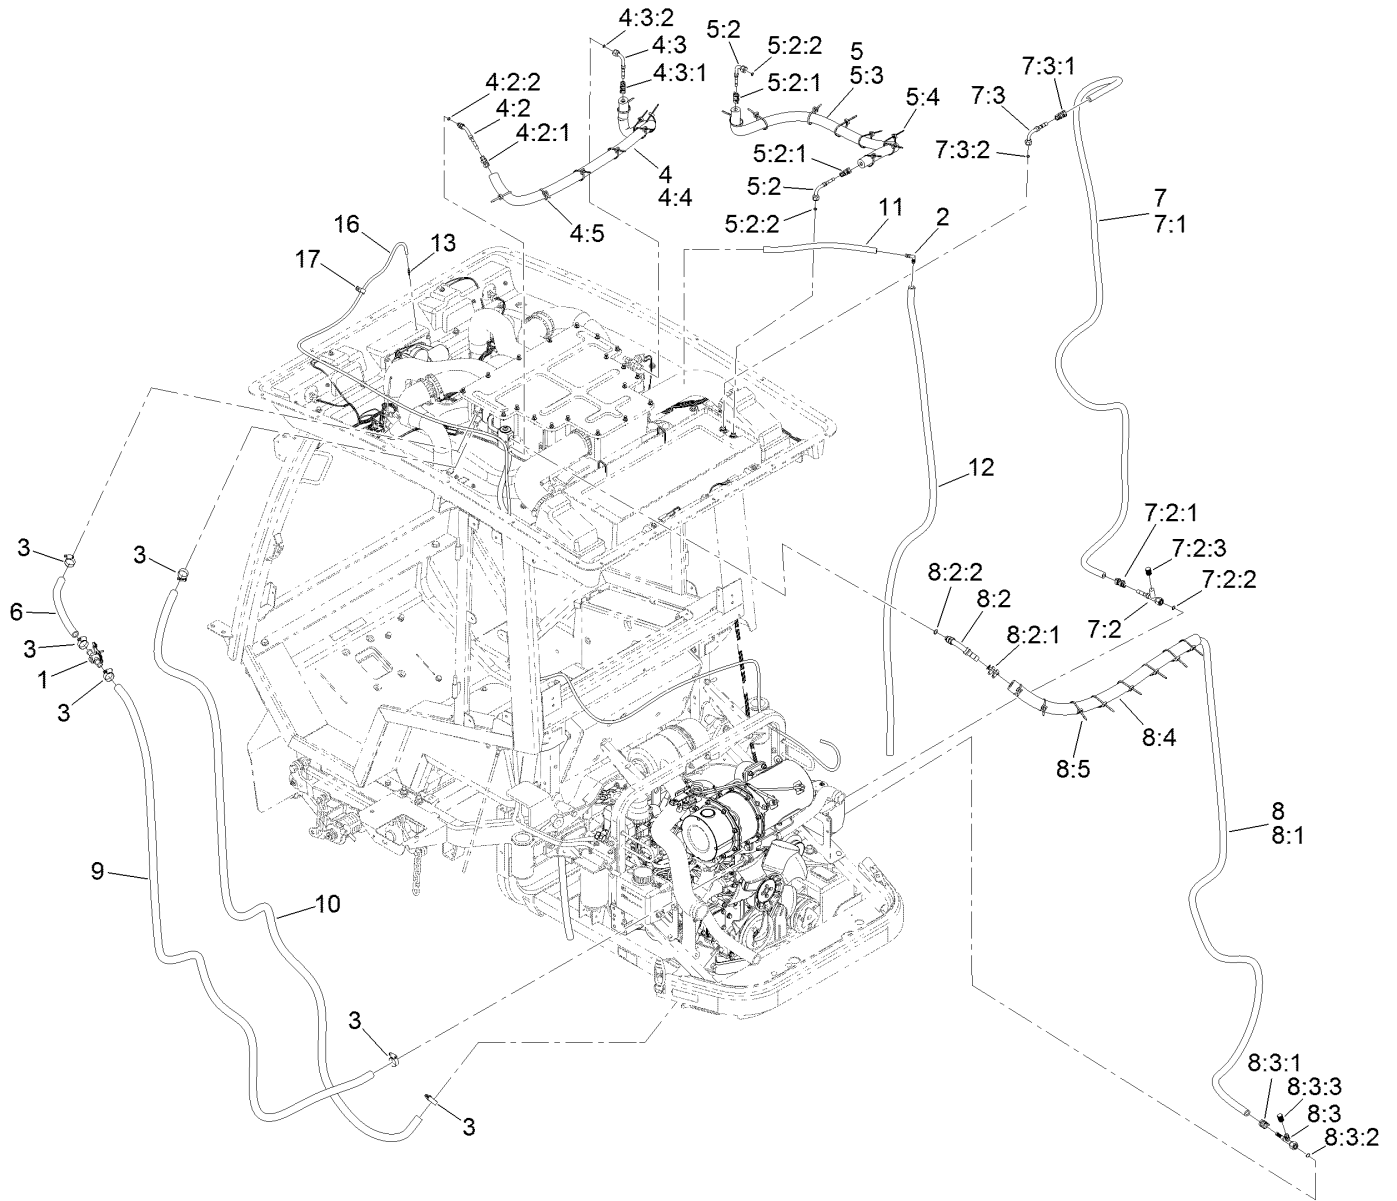

## Tier 4 Engine Hose Routing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 120-4947           | 1           | Valve-Heater             | 7:2:2       | 117-2779           | 1           | O-Ring                   |
| 2           | 130-0578           | 2           | Fitting-Barb, 90 DEG     | 7:2:3       | 117-2783           | 1           | Cap-Side, High           |
| 3           | 2412-129           | 6           | Clamp-Hose               | 7:3         | 130-5752           | 1           | Fitting-Female, 90 DEG   |
| 4           | 125-9702           | 1           | Hose ASM                 | 7:3:1       | 130-5773           | 1           | Fitting Kit              |
| 4:2         | 130-5753           | 1           | Fitting-45 DEG           | 7:3:2       | 117-2778           | 1           | O-Ring                   |
| 4:2:1       | 130-5772           | 1           | Fitting Kit              | 8           | 125-9705           | 1           | AC Hose ASM              |
| 4:2:2       | 117-2778           | 1           | O-Ring                   | 8:1         | 130-5798           | 1           | Hose-Refrigerant         |
| 4:3         | 130-5751           | 1           | Fitting-Female, 90 DEG   | 8:2         | 130-5754           | 1           | Fitting-Male, 45 DEG     |
| 4:3:1       | 130-5772           | 1           | Fitting Kit              | 8:2:1       | 130-5775           | 1           | Fitting Kit              |
| 4:3:2       | 117-2778           | 1           | O-Ring                   | 8:2:2       | 117-2780           | 1           | O-Ring                   |
| 4:4         | 130-5958           | 1           | Cover-Foam               | 8:3         | 130-5755           | 1           | Fitting-Female, Straight |
| 4:5         | 3290-378           | 8           | Tie-Cable                | 8:3:1       | 130-5775           | 1           | Fitting Kit              |
| 5           | 125-9703           | 1           | Hose ASM                 | 8:3:2       | 117-2780           | 1           | O-Ring                   |
| 5:2         | 130-5751           | 2           | Fitting-Female, 90 DEG   | 8:3:3       | 117-2784           | 1           | Cap-Side, Low            |
| 5:2:1       | 130-5772           | 1           | Fitting Kit              | 8:4         | 130-5959           | 1           | Cover-Foam               |
| 5:2:2       | 117-2778           | 1           | O-Ring                   | 8:5         | 3290-378           | 1           | Tie-Cable                |
| 5:3         | 130-5958           | 1           | Cover-Foam               | 9           | 125-9707           | 1           | Hose-Heater              |
| 5:4         | 3290-378           | 8           | Tie-Cable                | 10          | 125-9708           | 1           | Hose-Heater              |
| 6           | 125-9706           | 1           | Hose-Heater              | 11          | 125-9865           | 2           | Hose-Drain               |
| 7           | 125-9704           | 1           | AC Hose ASM              | 12          | 125-9866           | 2           | Hose-Drain               |
| 7:1         | 130-5799           | 1           | Hose-Refrigerant         | 13          | 127-9905           | 1           | Fitting-Hose, Barb       |
| 7:2         | 130-5757           | 1           | Fitting-Straight, Female | 16          | 127-9903           | 1           | Hose-Washer Fluid        |
| 7:2:1       | 130-5773           | 1           | Fitting Kit              | 17          | 2412-73            | 1           | Clamp-R                  |

 
# Pre-Filter Screen Assembly

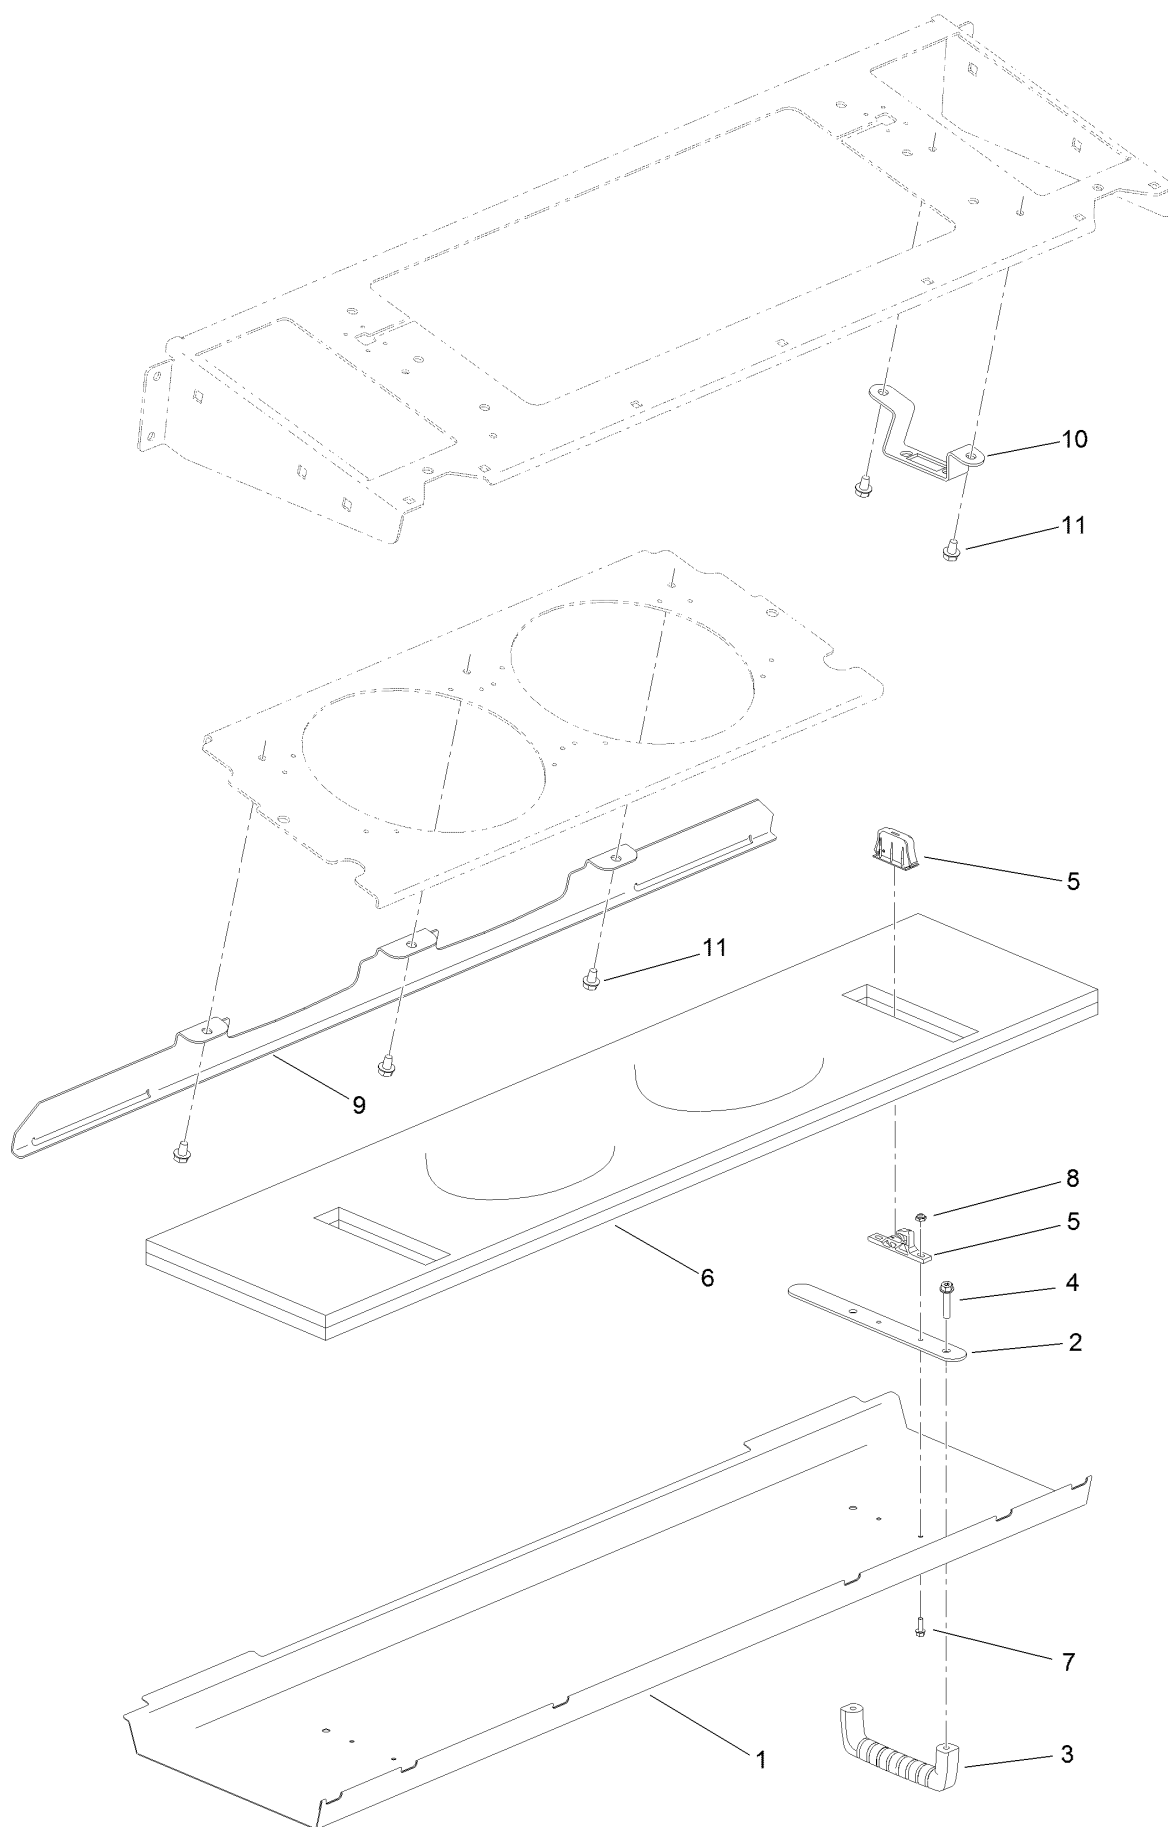

## Pre-Filter Screen Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|---------------------|
| 1           | 130-0640-03        | 1           | Screen              | 7           | 112-3169           | 4           | Screw-HHF, Serrated |
| 2           | 130-0642-03        | 2           | Backplate           | 8           | 3296-54            | 4           | Nut-Lock            |
| 3           | 65-5100            | 2           | Handle-Door         | 9           | 132-3630-03        | 1           | Screen-Mount, Front |
| 4           | 137-3101           | 4           | Screw-Plastic, HWH  | 10          | 136-2171           | 2           | Mount-Latch         |
| 5           | 130-0643           | 2           | Latch-Push To Close | 11          | 32104-82           | 7           | Screw-HHF           |
| 6           | 130-5875           | 1           | Pre-Filter          |             |                    |             |                     |

 
# Rear Window Assembly

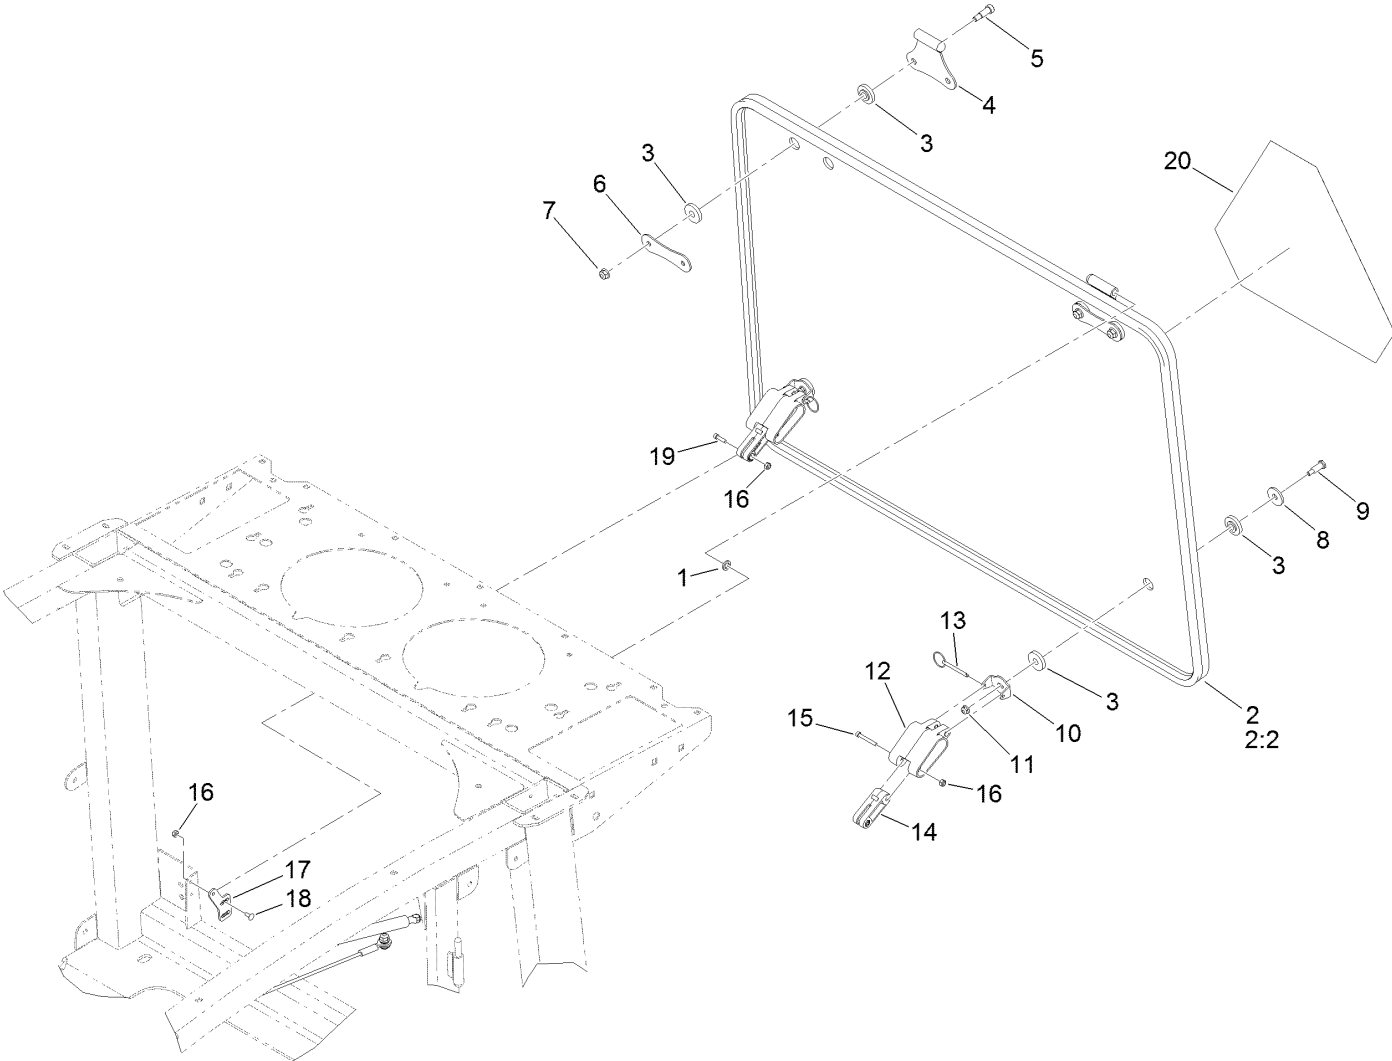

## Rear Window Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 121-8441           | 2           | Washer-Spacer            | 11          | 104-7201           | 2           | Nut-HF             |
| 2           | 130-5690           | 1           | Rear Window ASM          | 12          | 125-9792           | 2           | Handle-Window      |
| 2:2         | 121-8213           | 1           | Trim-Window, Rear        | 13          | 127-9850           | 2           | Pin-Release, Quick |
| 3           | 125-9982           | 12          | Bushing-Flange           | 14          | 125-9793           | 2           | Link-Window        |
| 4           | 121-8535           | 2           | Hinge-Window             | 15          | 3274-59            | 2           | Screw-HSH          |
| 5           | 125-9520           | 4           | Screw-Shoulder, HSH      | 16          | 120-9681           | 8           | Nut-Lock, NI       |
| 6           | 127-9933           | 2           | Plate-Backer, Windshield | 17          | 130-0590           | 2           | Mount-Tab          |
| 7           | 104-8300           | 4           | Nut-HF, NI               | 18          | 1-807513           | 4           | Bolt-CARR          |
| 8           | 125-9676           | 2           | Washer-Backup            | 19          | 3274-14            | 2           | Screw-HSH          |
| 9           | 119-9812           | 2           | Bolt-Shoulder            | 20          | 120-0250           | 1           | Decal-Warning      |
| 10          | 125-9987           | 2           | Mount-Latch              |             |                    |             |                    |
 
# Door Assembly

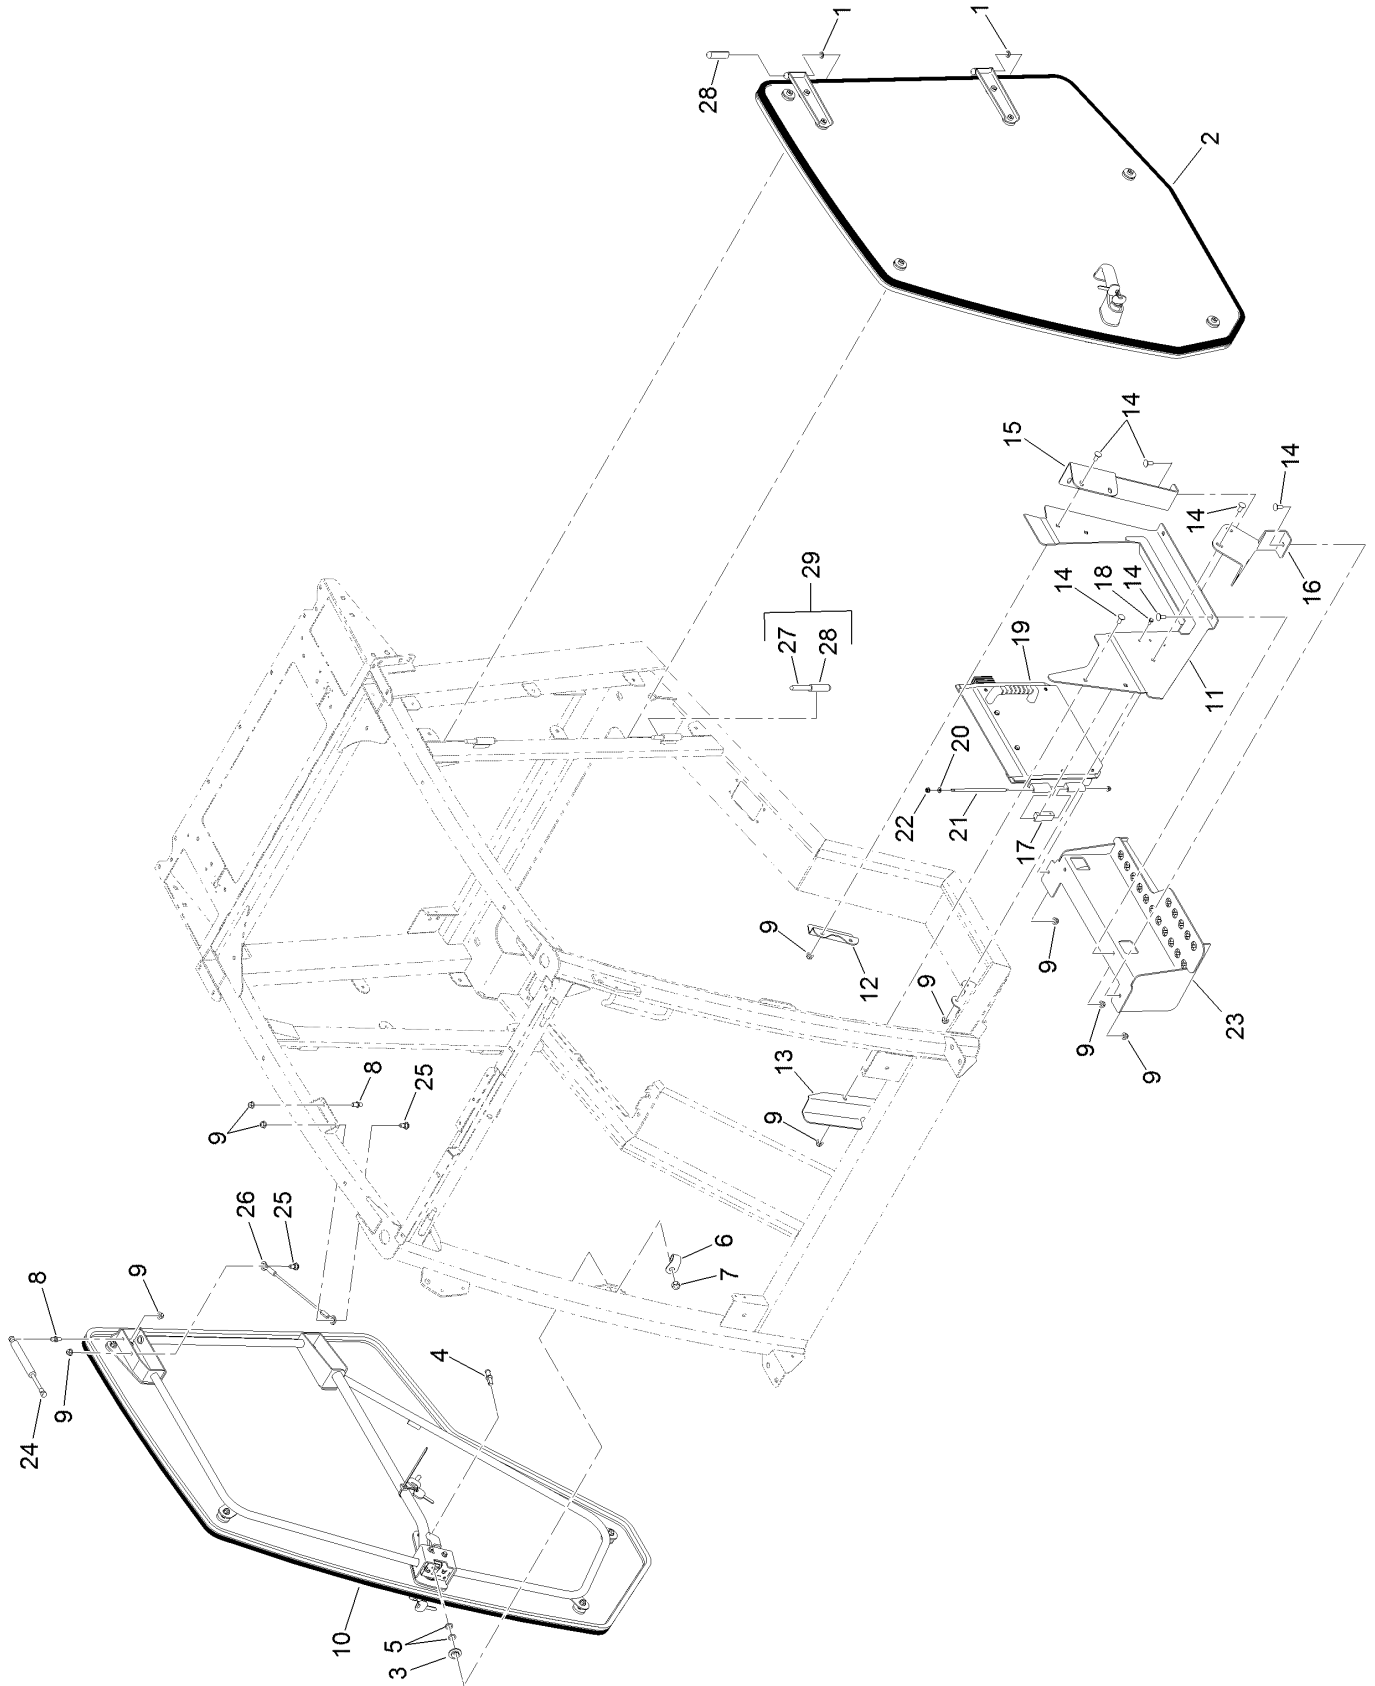




## Door Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 121-8441           | 4           | Washer-Spacer                  | 16          | 136-1987-03        | 1           | Mount-Channel, Outside |
| 2           |                    | 1           | LH Door ASM ●                  |             |                    |             | Front                  |
| 3           | 125-9992           | 2           | Adjuster-Stud                  | 17          | 136-1964           | 1           | Block-Hinge            |
| 4           | 132-3718           | 2           | Stud-Striker                   | 18          | 32144-1            | 2           | Screw-Taptite          |
| 5           | 73-0040            | 4           | Washer-Thrust                  | 19          |                    | 1           | Half Door ASM ●        |
| 6           | 121-8393           | 2           | Guard-Striker                  | 20          | 3256-14            | 1           | Washer-Flat            |
| 7           | 106-0327           | 2           | Nut-Hex                        | 21          | 136-2012           | 1           | Pin-Hinge              |
| 8           | 98-3104            | 2           | Stud-Ball                      | 22          | 120-4578           | 2           | Nut-HF                 |
| 9           | 104-8300           | 16          | Nut-HF, NI                     | 23          | 136-1881-03        | 1           | Step                   |
| 10          |                    | 1           | RH Door ASM ●                  | 24          | 130-6083           | 2           | Spring-Gas, Door       |
| 11          | 136-1889           | 1           | Panel ASM-Sealing              | 25          | 120-9471           | 4           | Bolt-Shoulder          |
| 12          | 136-1986-03        | 2           | Mount-Channel, Inside          | 26          | 130-5726           | 2           | Lanyard                |
| 13          | 136-2207-03        | 1           | Mount-Channel, Inside          | 27          | 133-1110           | 1           | Pin-Hinge              |
| 14          | 3230-23            | 10          | Bolt-CARR                      | 28          | 121-8439           | 1           | Receiver-Pivot, Hinge  |
| 15          | 136-2017-03        | 1           | Mount-Channel, Outside<br>Rear | 29          | 121-8440           | 1           | Pivot-Hinge            |

● Not serviced separately

 
# LH Door Assembly

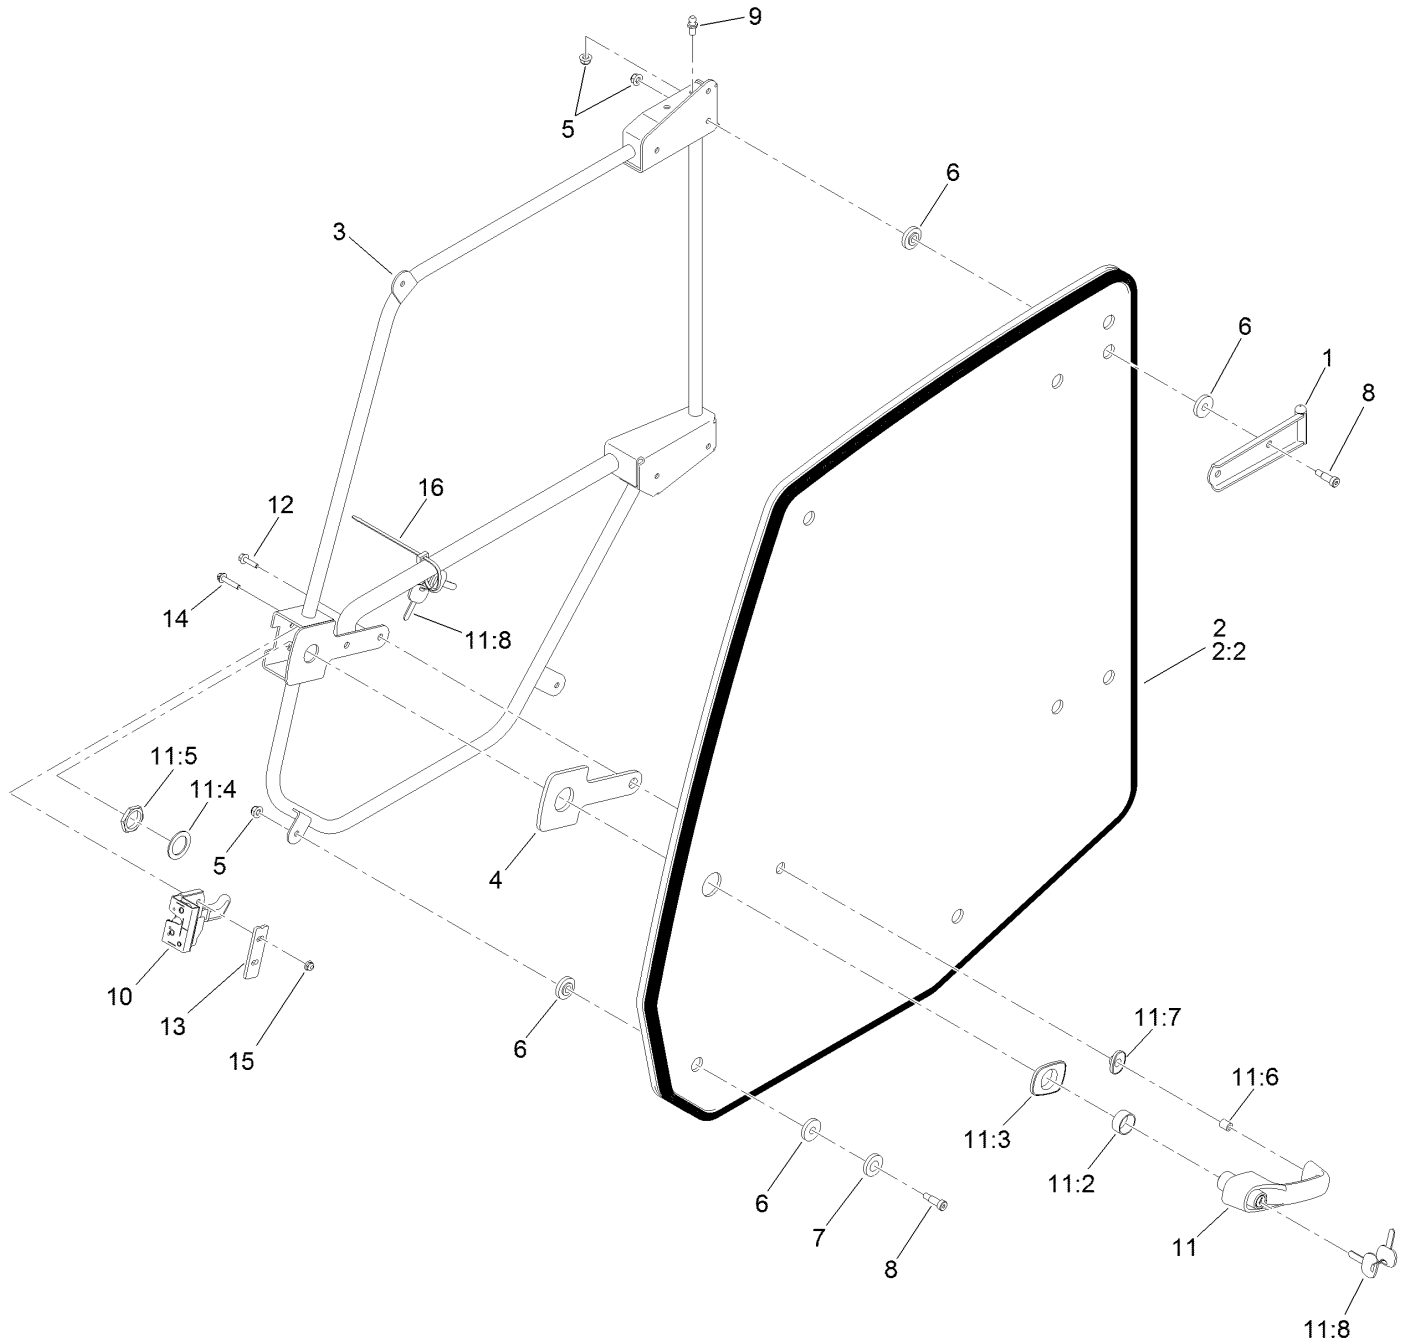

## LH Door Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 125-9619-03        | 2           | Hinge-Door, LH      | 11:2        | 121-8628           | 1           | Cylinder-Mounting, Key  |
| 2           | 136-2015           | 1           | LH Door ASM         | 11:3        | 121-8322           | 1           | Grommet-Mounting, Large |
| 2:2         | 136-1983           | 1           | Trim-Seal, Door LH  | 11:4        | 121-8327           | 1           | Washer                  |
| 3           | 136-1897-03        | 1           | LH Door Frame ASM   | 11:5        | 121-8328           | 1           | Nut                     |
| 4           | 121-8331           | 1           | Gasket-Handle       | 11:6        | 121-8627           | 1           | Cylinder-Mounting, End  |
| 5           | 104-8300           | 9           | Nut-HF, NI          | 11:7        | 121-8323           | 1           | Grommet-Mounting, Small |
| 6           | 125-9982           | 16          | Bushing-Flange      | 11:8        | 125-9531           | 1           | Key-Set                 |
| 7           | 125-9676           | 4           | Washer-Backup       | 12          | 33103-025          | 1           | Screw-HHF               |
| 8           | 125-9520           | 8           | Screw-Shoulder, HSH | 13          | 121-8395           | 1           | Plate-Support, Latch    |
| 9           | 98-3104            | 1           | Stud-Ball           | 14          | 3234-21            | 2           | Screw-HHF               |
| 10          | 121-8391           | 1           | Latch-LH            | 15          | 104-7201           | 2           | Nut-HF                  |
| 11          | 121-8630           | 1           | Handle ASM          | 16          | 3290-378           | 1           | Tie-Cable               |

 
RH Door Assembly

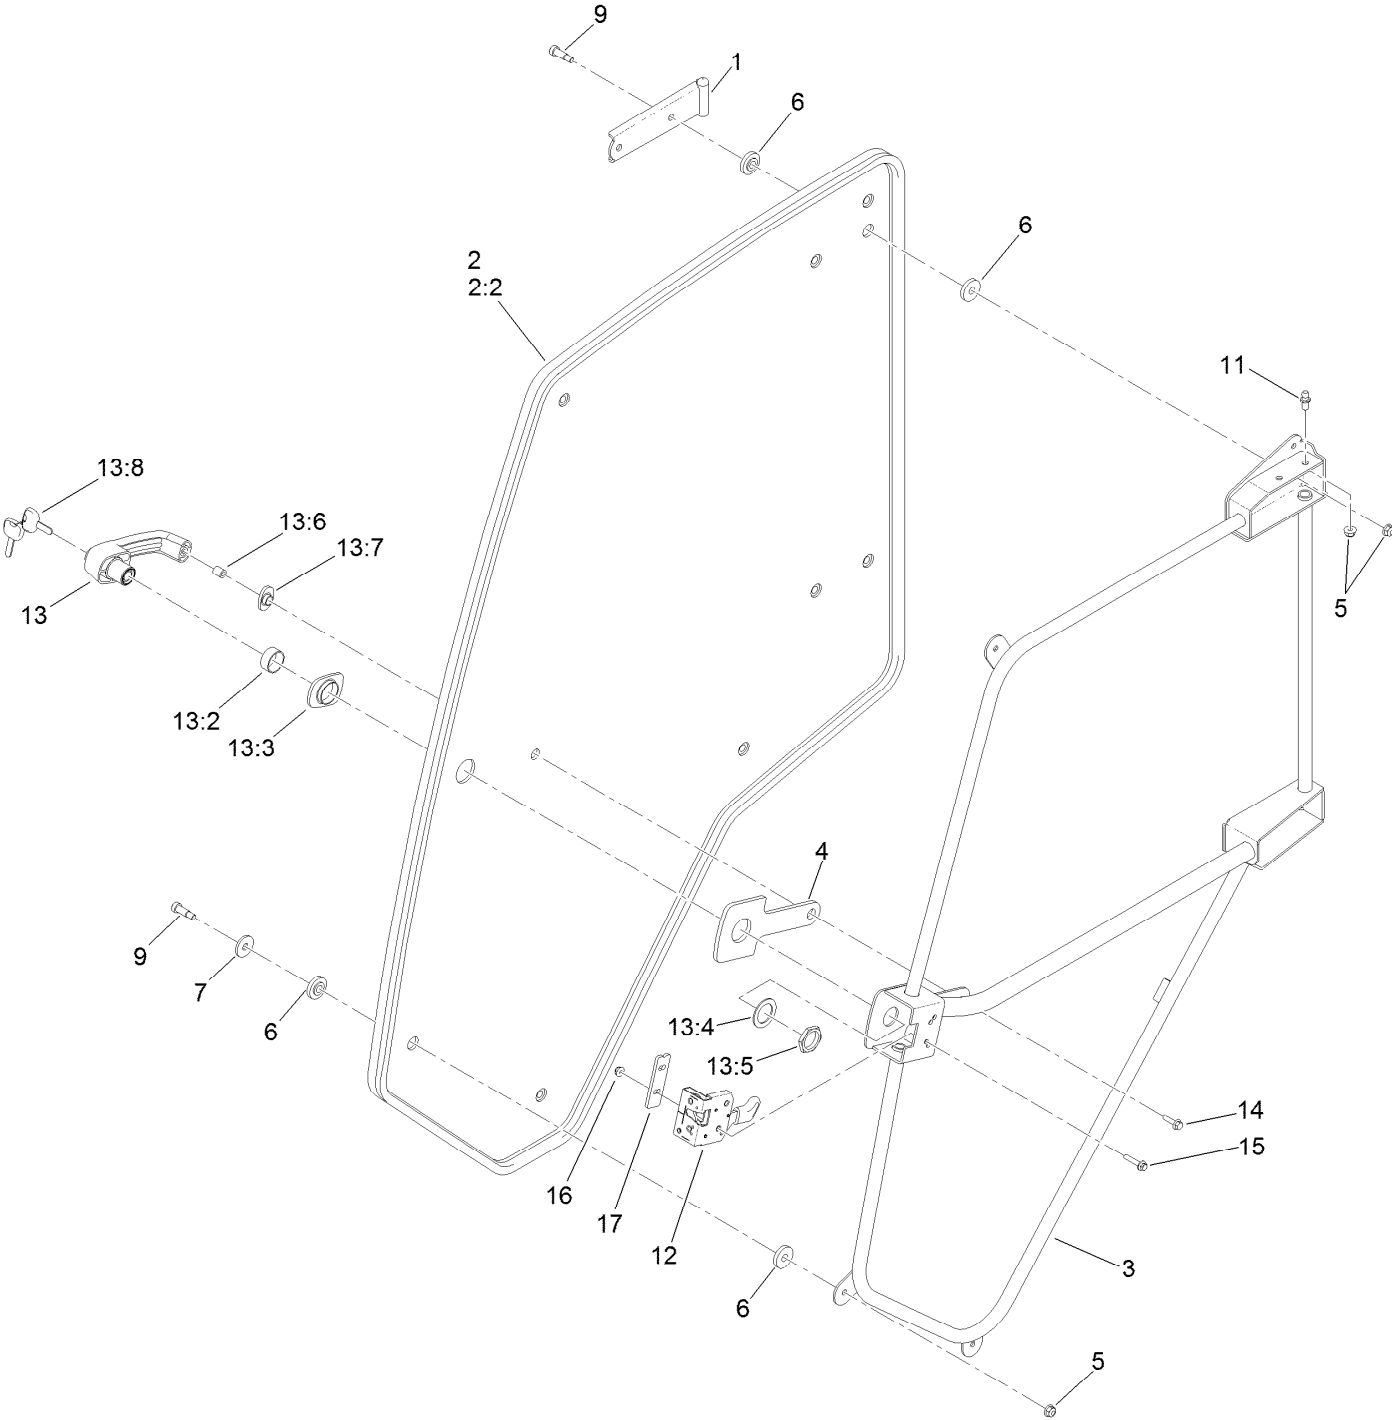

## RH Door Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 125-9618-03        | 2           | Hinge-Door, RH      | 13:2        | 121-8628           | 1           | Cylinder-Mounting, Key  |
| 2           | 130-5691           | 1           | RH Door ASM         | 13:3        | 121-8322           | 1           | Grommet-Mounting, Large |
| 2:2         | 125-7385           | 1           | Trim-Seal, Door RH  | 13:4        | 121-8327           | 1           | Washer                  |
| 3           | 125-7389-03        | 1           | Frame-Door, RH      | 13:5        | 121-8328           | 1           | Nut                     |
| 4           | 121-8331           | 1           | Gasket-Handle       | 13:6        | 121-8627           | 1           | Cylinder-Mounting, End  |
| 5           | 104-8300           | 10          | Nut-HF, NI          | 13:7        | 121-8323           | 1           | Grommet-Mounting, Small |
| 6           | 125-9982           | 18          | Bushing-Flange      | 13:8        | 125-9531           | 1           | Key-Set                 |
| 7           | 125-9676           | 5           | Washer-Backup       | 14          | 33103-025          | 1           | Screw-HHF               |
| 9           | 125-9520           | 9           | Screw-Shoulder, HSH | 15          | 3234-21            | 2           | Screw-HHF               |
| 11          | 98-3104            | 1           | Stud-Ball           | 16          | 104-7201           | 2           | Nut-HF                  |
| 12          | 121-8390           | 1           | Latch-RH            | 17          | 121-8395           | 1           | Plate-Support, Latch    |
| 13          | 121-8630           | 1           | Handle ASM          |             |                    |             |                         |

 
# Half Door Assembly

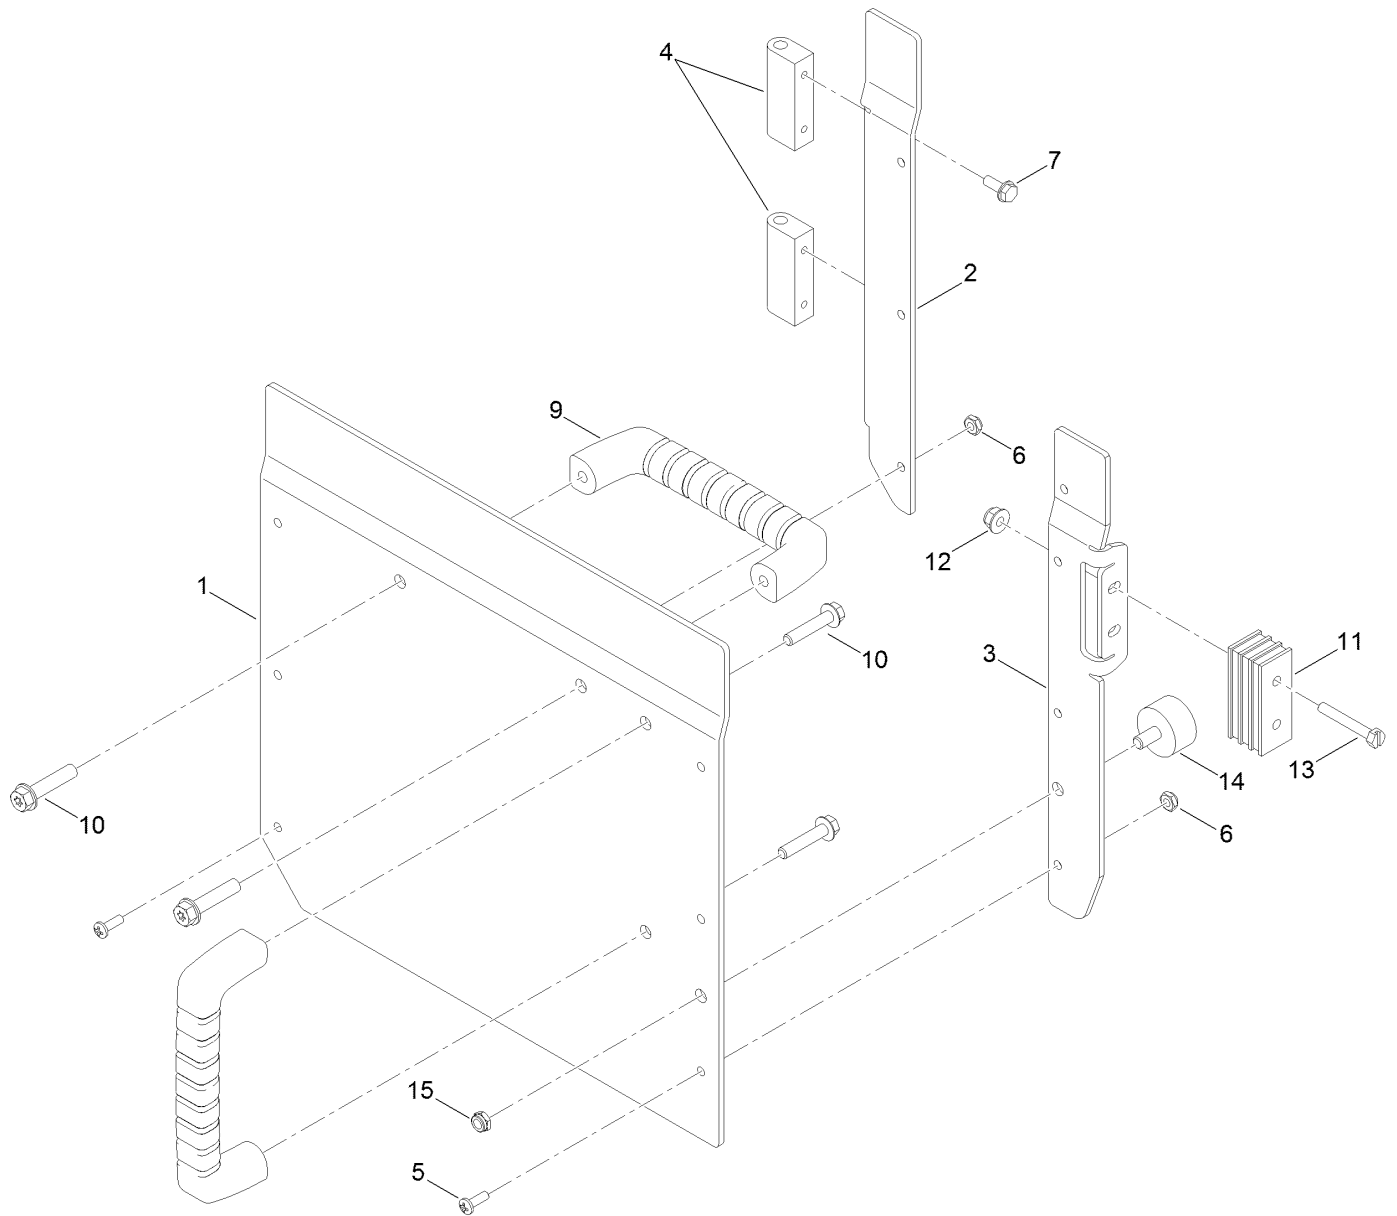

## Half Door Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 136-1967-03        | 1           | Door-Lower         | 9           | 65-5100            | 2           | Handle-Door        |
| 2           | 136-2019-03        | 1           | Bracket-Door, LH   | 10          | 137-3101           | 4           | Screw-Plastic, HWH |
| 3           | 136-1965-03        | 1           | Bracket-Door, RH   | 11          | 69-6260            | 1           | Magnet             |
| 4           | 136-1964           | 2           | Block-Hinge        | 12          | 120-4578           | 2           | Nut-HF             |
| 5           | 32144-87           | 6           | Screw-HWHTF        | 13          | 32105-1            | 2           | Screw-SHH          |
| 6           | 3296-54            | 6           | Nut-Lock           | 14          | 240-14             | 1           | Bumper-Rubber      |
| 7           | 32144-1            | 4           | Screw-Taptite      | 15          | 3296-56            | 1           | Nut-Lock, NI       |
 
# Roof and Headliner Assembly

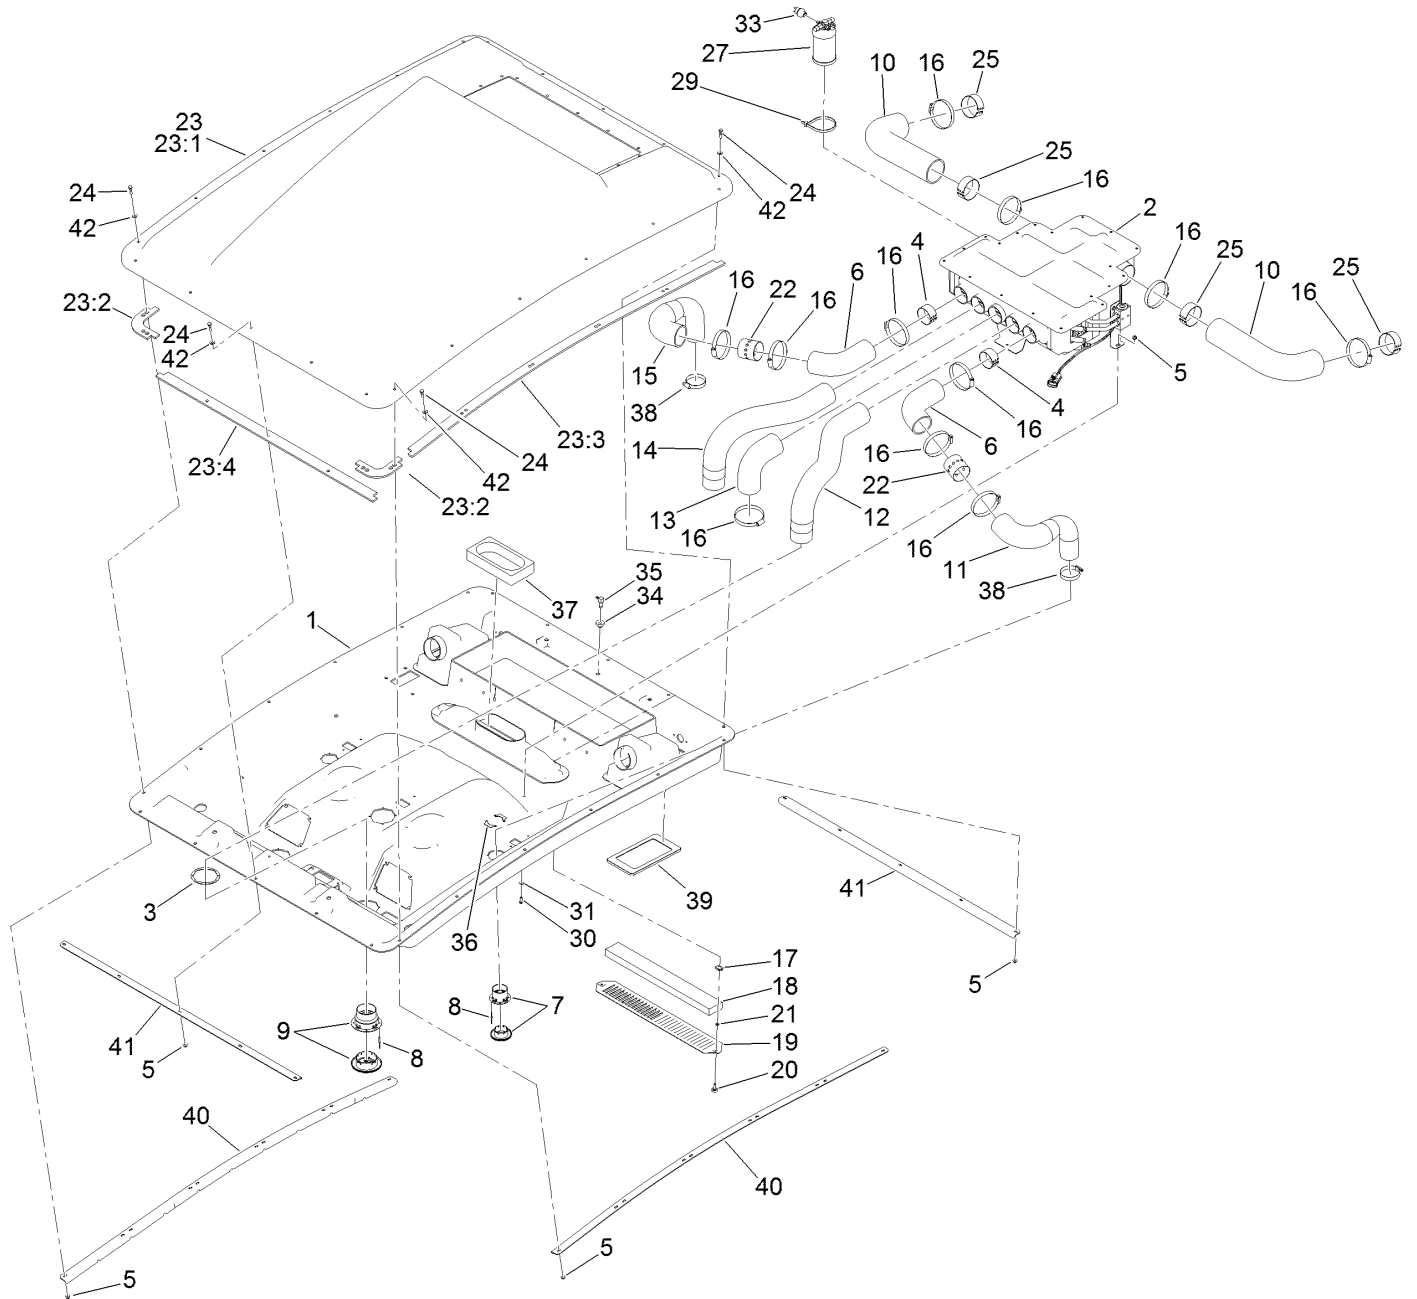




## Roof and Headliner Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 121-8470           | 1           | Headliner                         | 22          | 130-5927           | 2           | Adapter-Bleed         |
| 2           | 121-8495           | 1           | Box-Mixing, Heater A/C            | 23          | 132-3601           | 1           | Roof ASM              |
| 3           | 130-0558           | 3           | Backplate-Rivet                   | 23:1        | 132-3602           | 1           | Roof                  |
| 4           | 130-5938           | 2           | Tube-Support                      | 23:2        | 130-5961           | 4           | Seal-Corner           |
| 5           | 104-7201           | 24          | Nut-HF                            | 23:3        | 130-5960           | 2           | Seal-Side             |
| 6           | 130-5860           | 2           | Hose-Vent                         | 23:4        | 130-5962           | 2           | Seal-Front, Rear      |
| 7           | 130-0455           | 2           | Louver-Round, Snap-In             | 24          | 136-8674           | 22          | Bolt-Pivot, Eccentric |
| 8           | 125-7503           | 20          | Rivet-Pop                         | 25          | 130-5939           | 4           | Tube-Support          |
| 9           | 130-0465           | 3           | Louver-Round, Snap-In (4<br>Inch) | 27          | 130-5999           | 1           | Drier-Receiver        |
| 10          | 121-8473           | 2           | Hose-Intake, Fresh Air            | 29          | 3334-945           | 2           | Tie-Cable             |
| 11          | 130-5861           | 1           | Hose-Vent, Outer (LH)             | 30          | 3274-69            | 2           | Screw-HSBH            |
| 12          | 121-8477           | 1           | Hose-Vent, Defrost (LH)           | 31          | 3256-1             | 2           | Washer-Flat           |
| 13          | 130-0437           | 1           | Hose-Vent, Center                 | 33          | 119-4501           | 1           | Switch-Function, Dual |
| 14          | 121-8478           | 1           | Hose-Vent, Defrost (RH)           | 34          | 46-6560            | 1           | Bushing               |
| 15          | 130-5862           | 1           | Hose-Vent, Outer (RH)             | 35          | 104-5228           | 1           | Fitting-Elbow, 90 DEG |
| 16          | 2412-110           | 11          | Clamp-Band/Screw                  | 36          | 130-0445           | 4           | Backplate-Rivet       |
| 17          | 107069             | 2           | Clip                              | 37          | 130-0444           | 1           | Foam-Inlet, Airbox    |
| 18          | 125-9532           | 1           | Filter-Cab, Inside                | 38          | 2412-130           | 2           | Clamp-Hose            |
| 19          | 125-9604-03        | 1           | Plate-Cover, Recirculation        | 39          | 132-3474           | 2           | Insert-Seal, Filter   |
| 20          | 125-7438           | 2           | Knob-Screw, Thumb                 | 40          | 132-1461-03        | 2           | Strap-Cab, Side       |
| 21          | 32115-15           | 2           | Nut-Push                          | 41          | 132-1462-03        | 2           | Strap-Cab             |
|             |                    |             |                                   | 42          | 3256-74            | 22          | Washer-Flat           |

 
# Headliner Wire Harness and Control Assembly

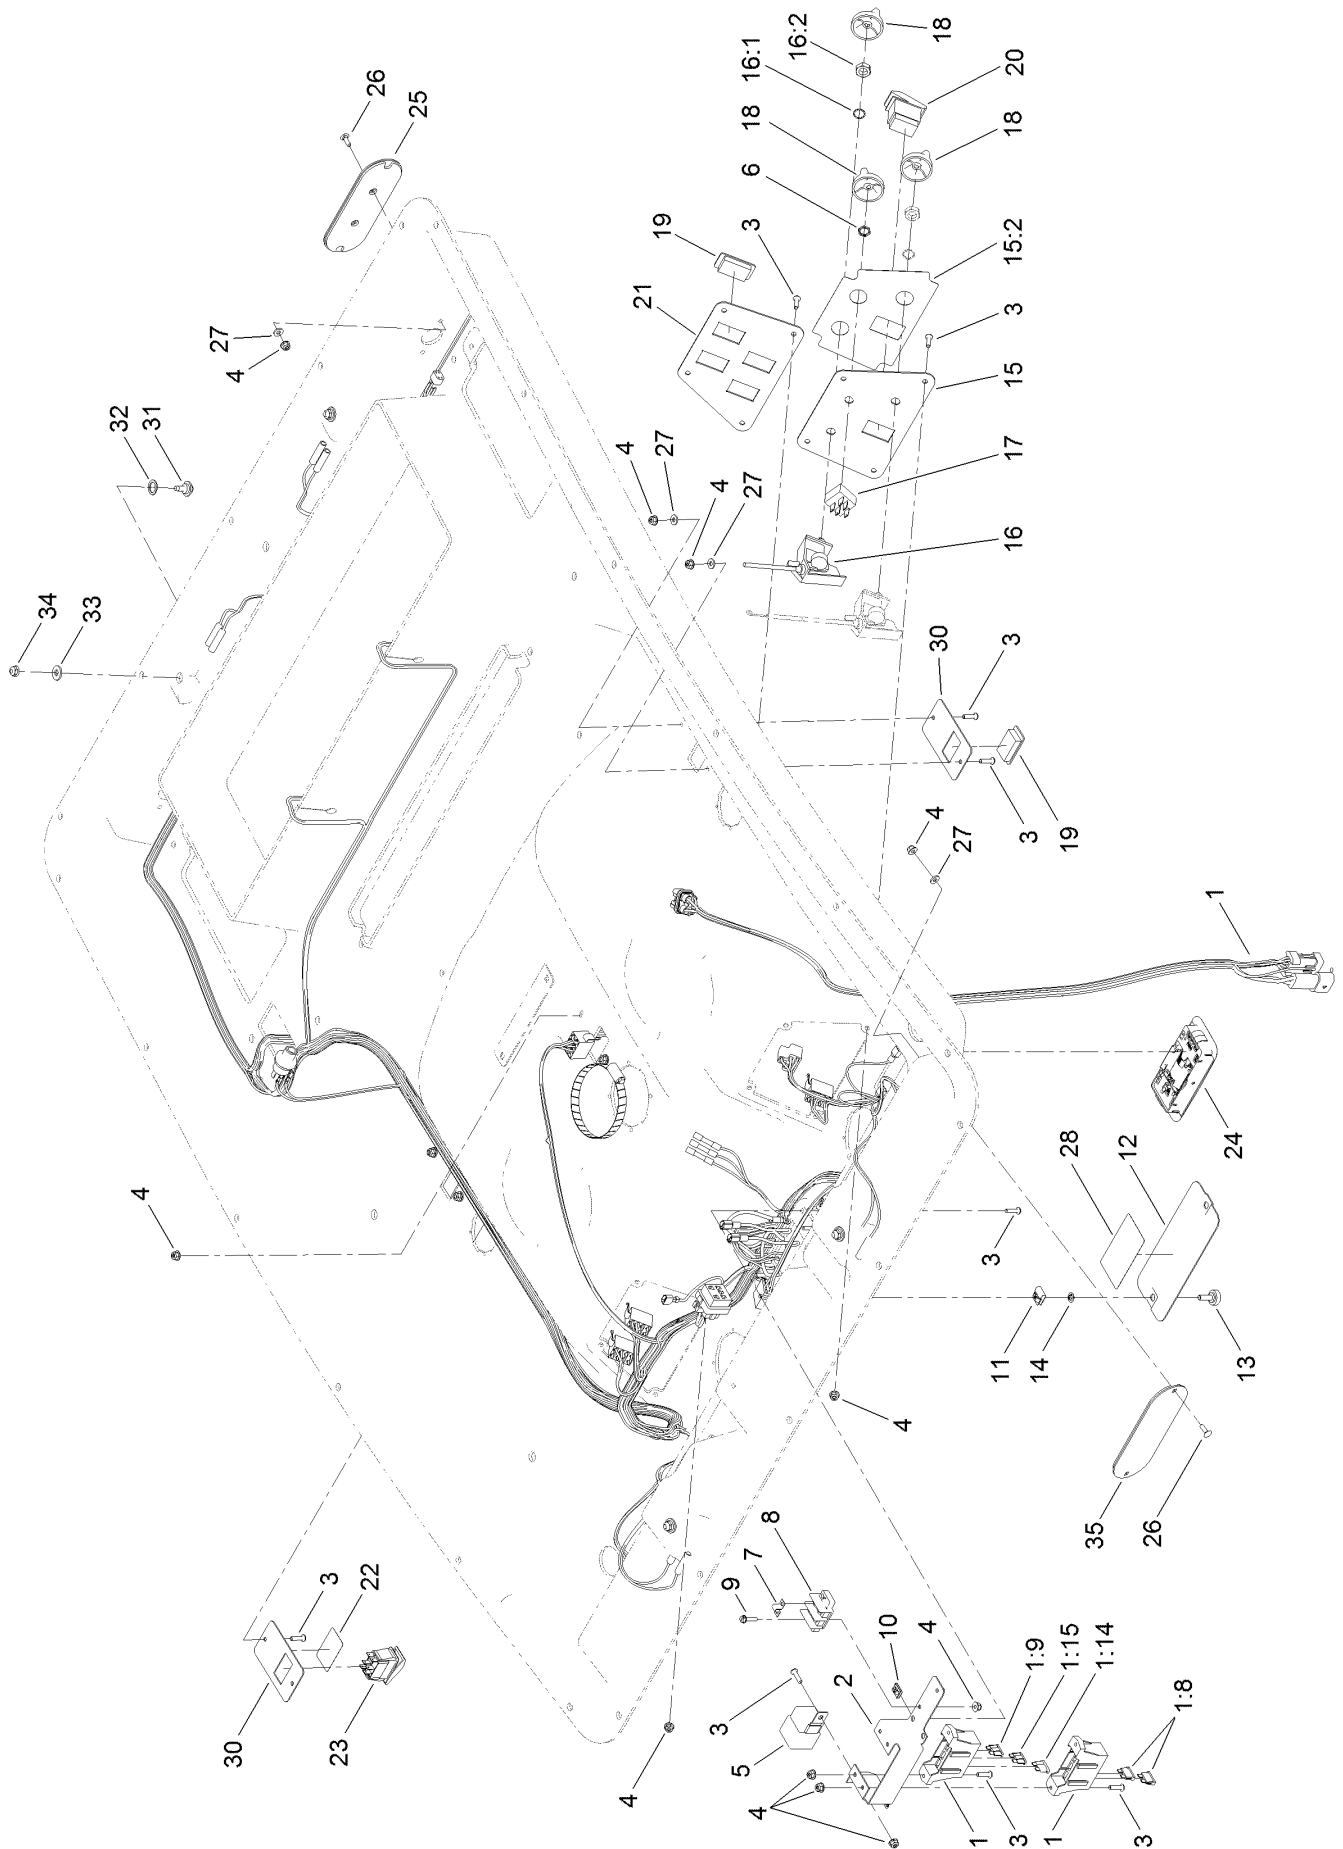

## Headliner Wire Harness and Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 122-0723           | 1           | Harness-Wire, Headliner | 16:1        | 3254-20            | 1           | Washer-Lock, Int     |
| 1:8         | 109355             | 2           | Fuse-Blade, 15 Amp      | 16:2        | 3220-4             | 1           | Nut-Jam              |
| 1:9         | 109103             | 1           | Fuse-Blade, 30 Amp      | 17          | 122-0150           | 1           | Switch, Rotary       |
| 1:14        | 109101             | 1           | Fuse-Blade, 20 Amp      | 18          | 125-9510           | 3           | Knob-Control         |
| 1:15        | 109102             | 1           | Fuse-Blade, 25 Amp      | 19          | 99-7420            | 6           | Plug-Hole            |
| 2           | 125-9606-03        | 1           | Bracket-Fuse Block      | 20          | 95-8999            | 1           | Switch               |
| 3           | 104-2408           | 22          | Screw-HSBH              | 21          | 125-9691-03        | 1           | Panel-Switch, Lights |
| 4           | 120-4578           | 29          | Nut-HF                  | 22          | 125-9688           | 1           | Decal-Washer         |
| 5           | 99-7430            | 1           | Relay-Mini              | 23          | 119-8355           | 1           | Switch-Rocker        |
| 6           | 130-0588           | 1           | Nut-Switch              | 24          | 125-7437           | 1           | Light-Dome           |
| 7           | 42863              | 1           | Strip-Jumper            | 25          | 130-5867           | 2           | Cover-Light, Rear    |
| 8           | 42862              | 1           | Block-Terminal, Ground  | 26          | 3229-34            | 8           | Screw-CARR           |
| 9           | 32105-13           | 3           | Screw-HWH               | 27          | 3256-14            | 14          | Washer-Flat          |
| 10          | 107-1013           | 4           | Nut-Speed               | 28          | 132-3600           | 1           | Decal-Panel, Fuse    |
| 11          | 609900             | 2           | Nut-Speed               | 30          | 130-0436           | 3           | Panel-Switch         |
| 12          | 125-9603-03        | 1           | Plate-Cover, Fuse       | 31          | 92-9698            | 4           | Screw-Shoulder       |
| 13          | 125-7438           | 2           | Knob-Screw, Thumb       | 32          | 94-8196            | 4           | Washer-Nylon         |
| 14          | 32115-15           | 2           | Nut-Push                | 33          | 3256-2             | 4           | Washer-Flat          |
| 15          | 121-8481           | 1           | Panel-Air/Heat          | 34          | 104-7201           | 4           | Nut-HF               |
| 15:2        | 121-8378           | 1           | Decal, Air/Heat         | 35          | 130-5868           | 2           | Cover-Light, Front   |
| 16          | 125-9677           | 1           | Control-Rotary, Linear  |             |                    |             |                      |

 
# Mixing Box Mounting Bracket and Water Tray Assembly

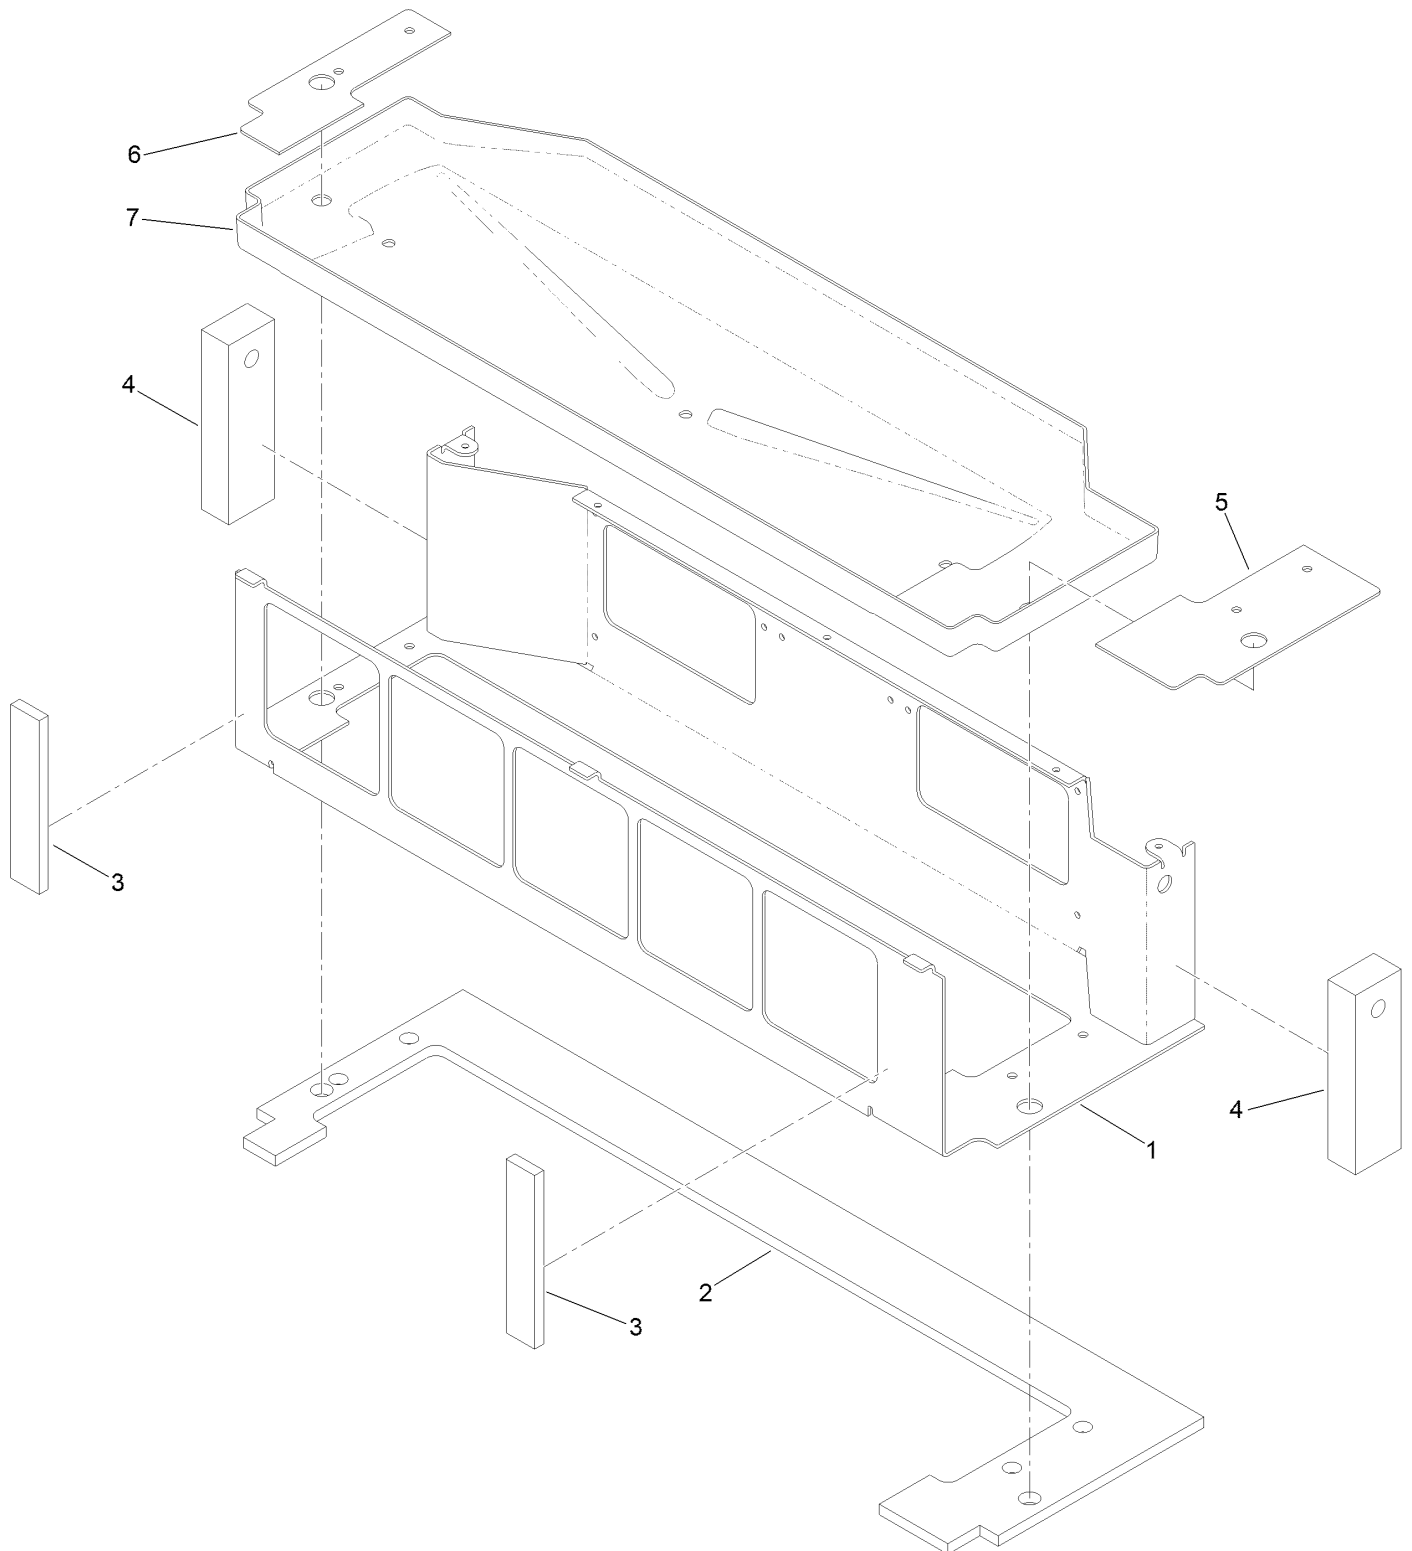

## Mixing Box Mounting Bracket and Water Tray Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 130-5655-03        | 1           | Bracket-Mount      | 5           | 130-5653           | 1           | Gasket-Mount, LH Bracket |
| 2           | 130-5659           | 1           | Seal-Foam          | 6           | 130-5654           | 1           | Gasket-Mount, RH Bracket |
| 3           | 130-5808           | 2           | Seal-Foam, Front   | 7           | 130-5660           | 1           | Tray-Water               |
| 4           | 130-0602           | 2           | Seal-End           |             |                    |             |                          |
 
# Blower Fan and Evaporator Core Assembly

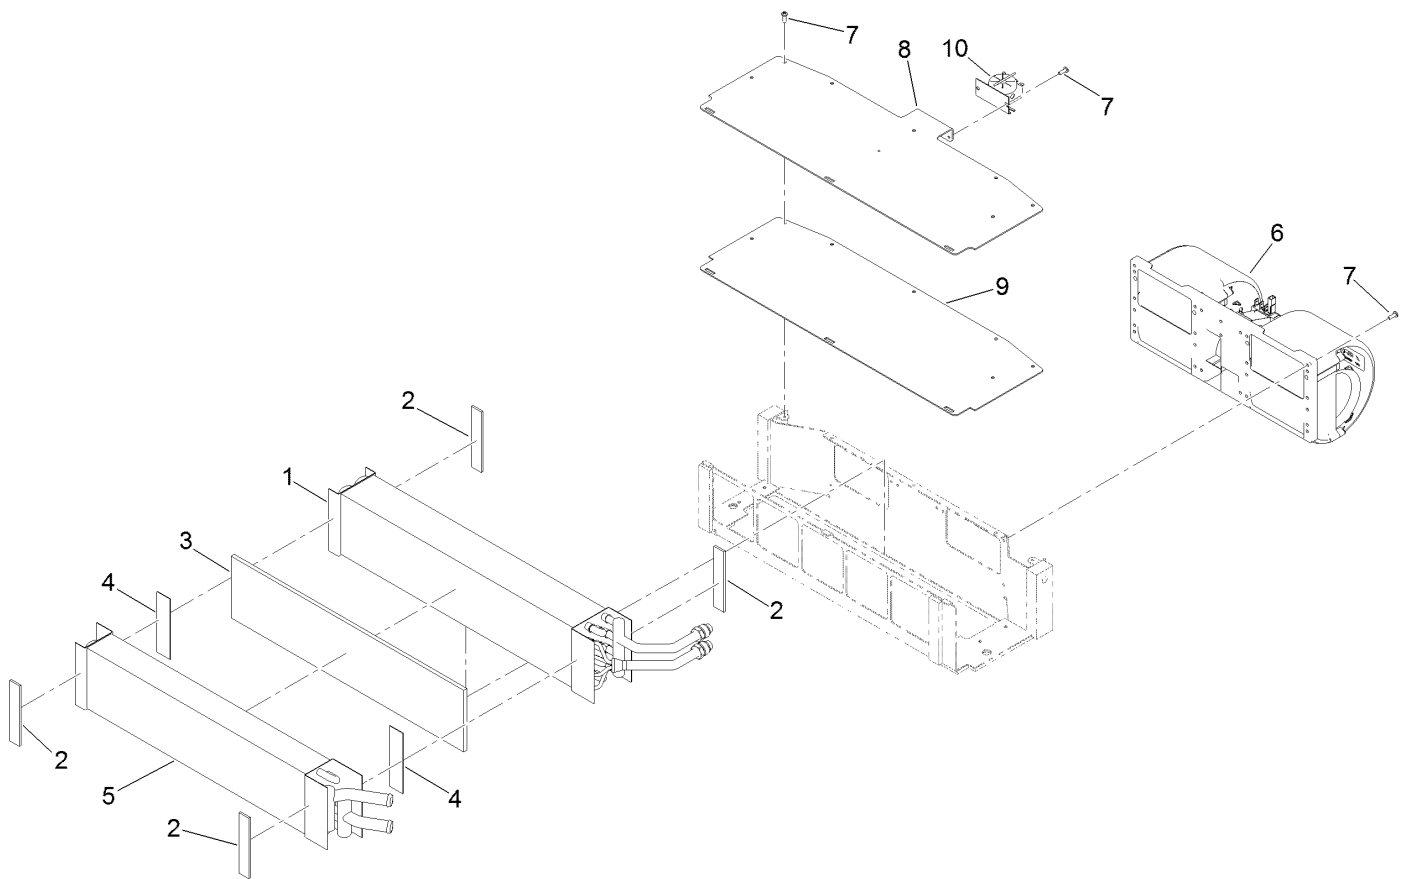


## Blower Fan and Evaporator Core Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 130-5392           | 1           | Core-Evaporator    |
| 2           | 130-5658           | 4           | Gasket-Coil        |
| 3           | 130-5807           | 1           | Foam               |
| 4           | 130-5806           | 2           | Tape, Double-Sided |
| 5           | 127-9915           | 1           | Core-Heater        |
| 6           | 121-8451           | 1           | Fan-Blower         |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             |
|-------------|--------------------|-------------|--------------------------------|
| 7           | 363-8245           | 13          | Screw-TAP                      |
| 8           | 130-5656-03        | 1           | Cover, Bracket-Mount           |
| 9           | 130-5652           | 1           | Gasket-Mount, Cover<br>Bracket |
| 10          | 121-8385           | 1           | Thermostat-Switch, Freeze      |
 
# Heat/Air Conditioner Housing Assembly

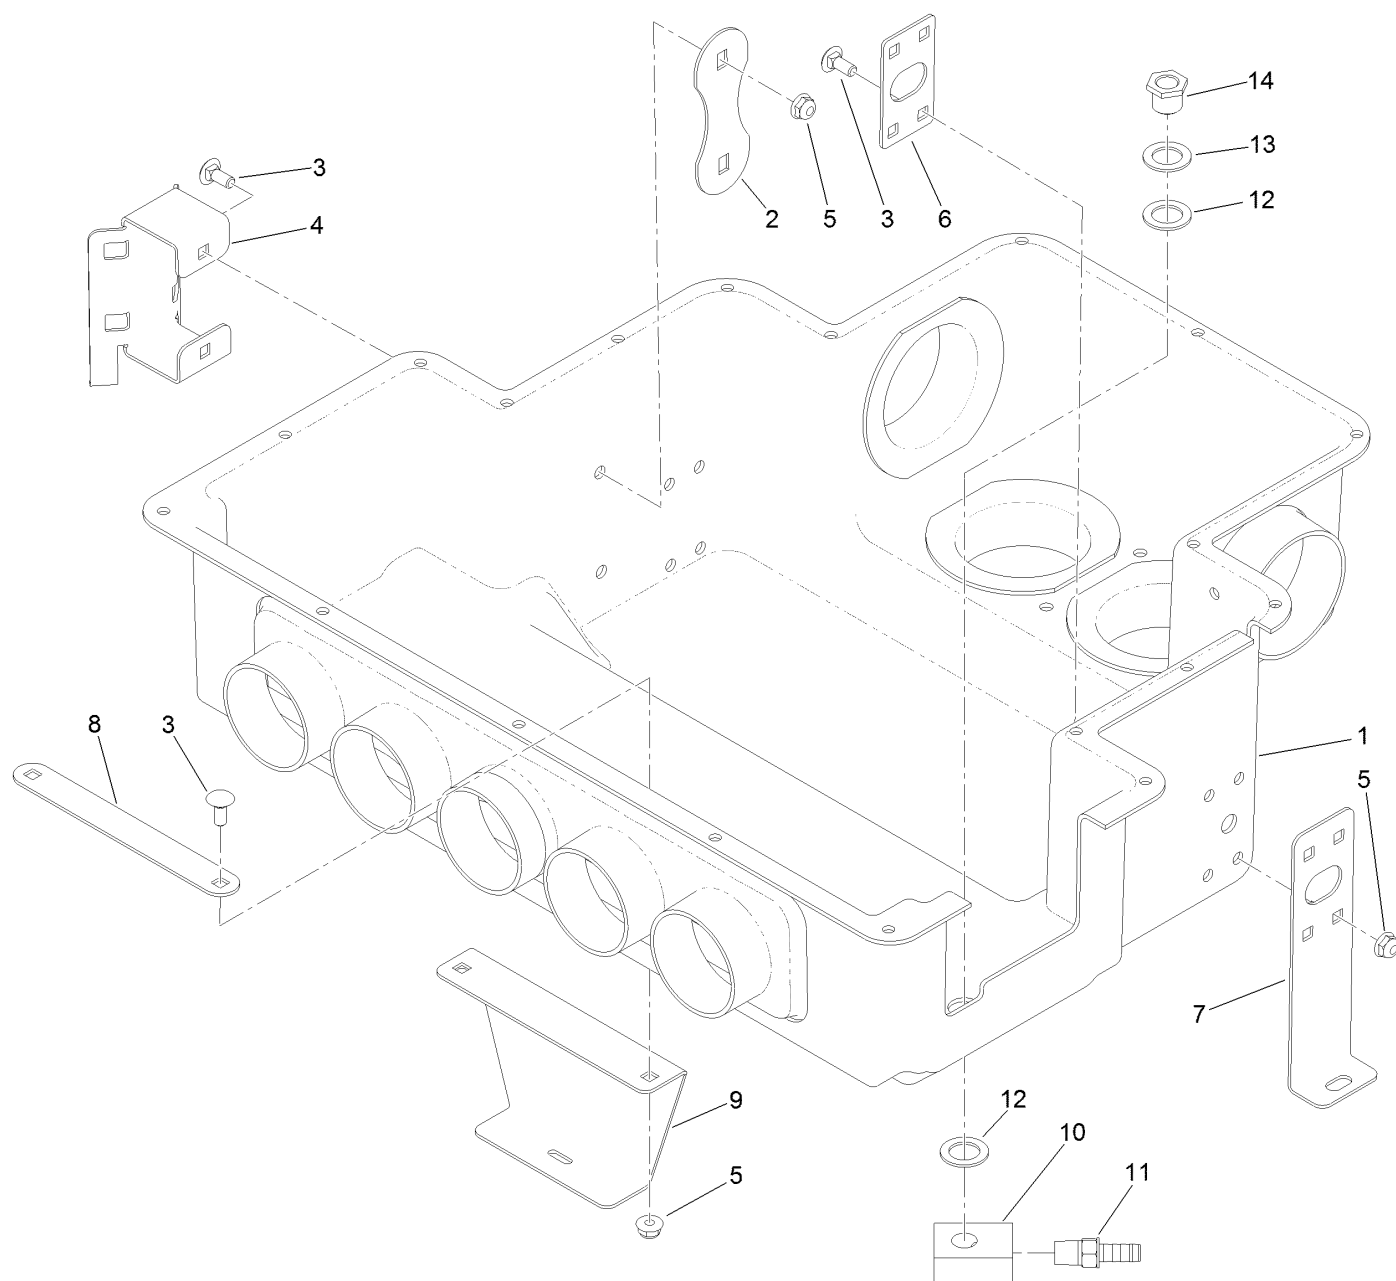




## Heat/Air Conditioner Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 1           | 130-5830           | 1           | Housing-Heat/AC      |
| 2           | 121-8491           | 1           | Plate-Support        |
| 3           | 3229-11            | 12          | Screw-CARR           |
| 4           | 121-8490           | 1           | Bracket-Mount, Drier |
| 5           | 104-7201           | 12          | Nut-HF               |
| 6           | 130-5834           | 2           | Bracket-Support      |
| 7           | 130-5821           | 2           | Bracket-Airbox, Side |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 8           | 125-7504           | 1           | Plate-Backer, Center   |
| 9           | 130-0554           | 1           | Bracket-Airbox, Center |
| 10          | 130-5601           | 2           | Drain-Lower            |
| 11          | 108-0342           | 2           | Fitting-Straight       |
| 12          | 121-6840           | 4           | Washer-Rubber          |
| 13          | 107-3041           | 2           | Washer-Flat            |
| 14          | 130-0293           | 2           | Drain-Upper            |

 
# Air Diverter and Expansion Valve Assembly

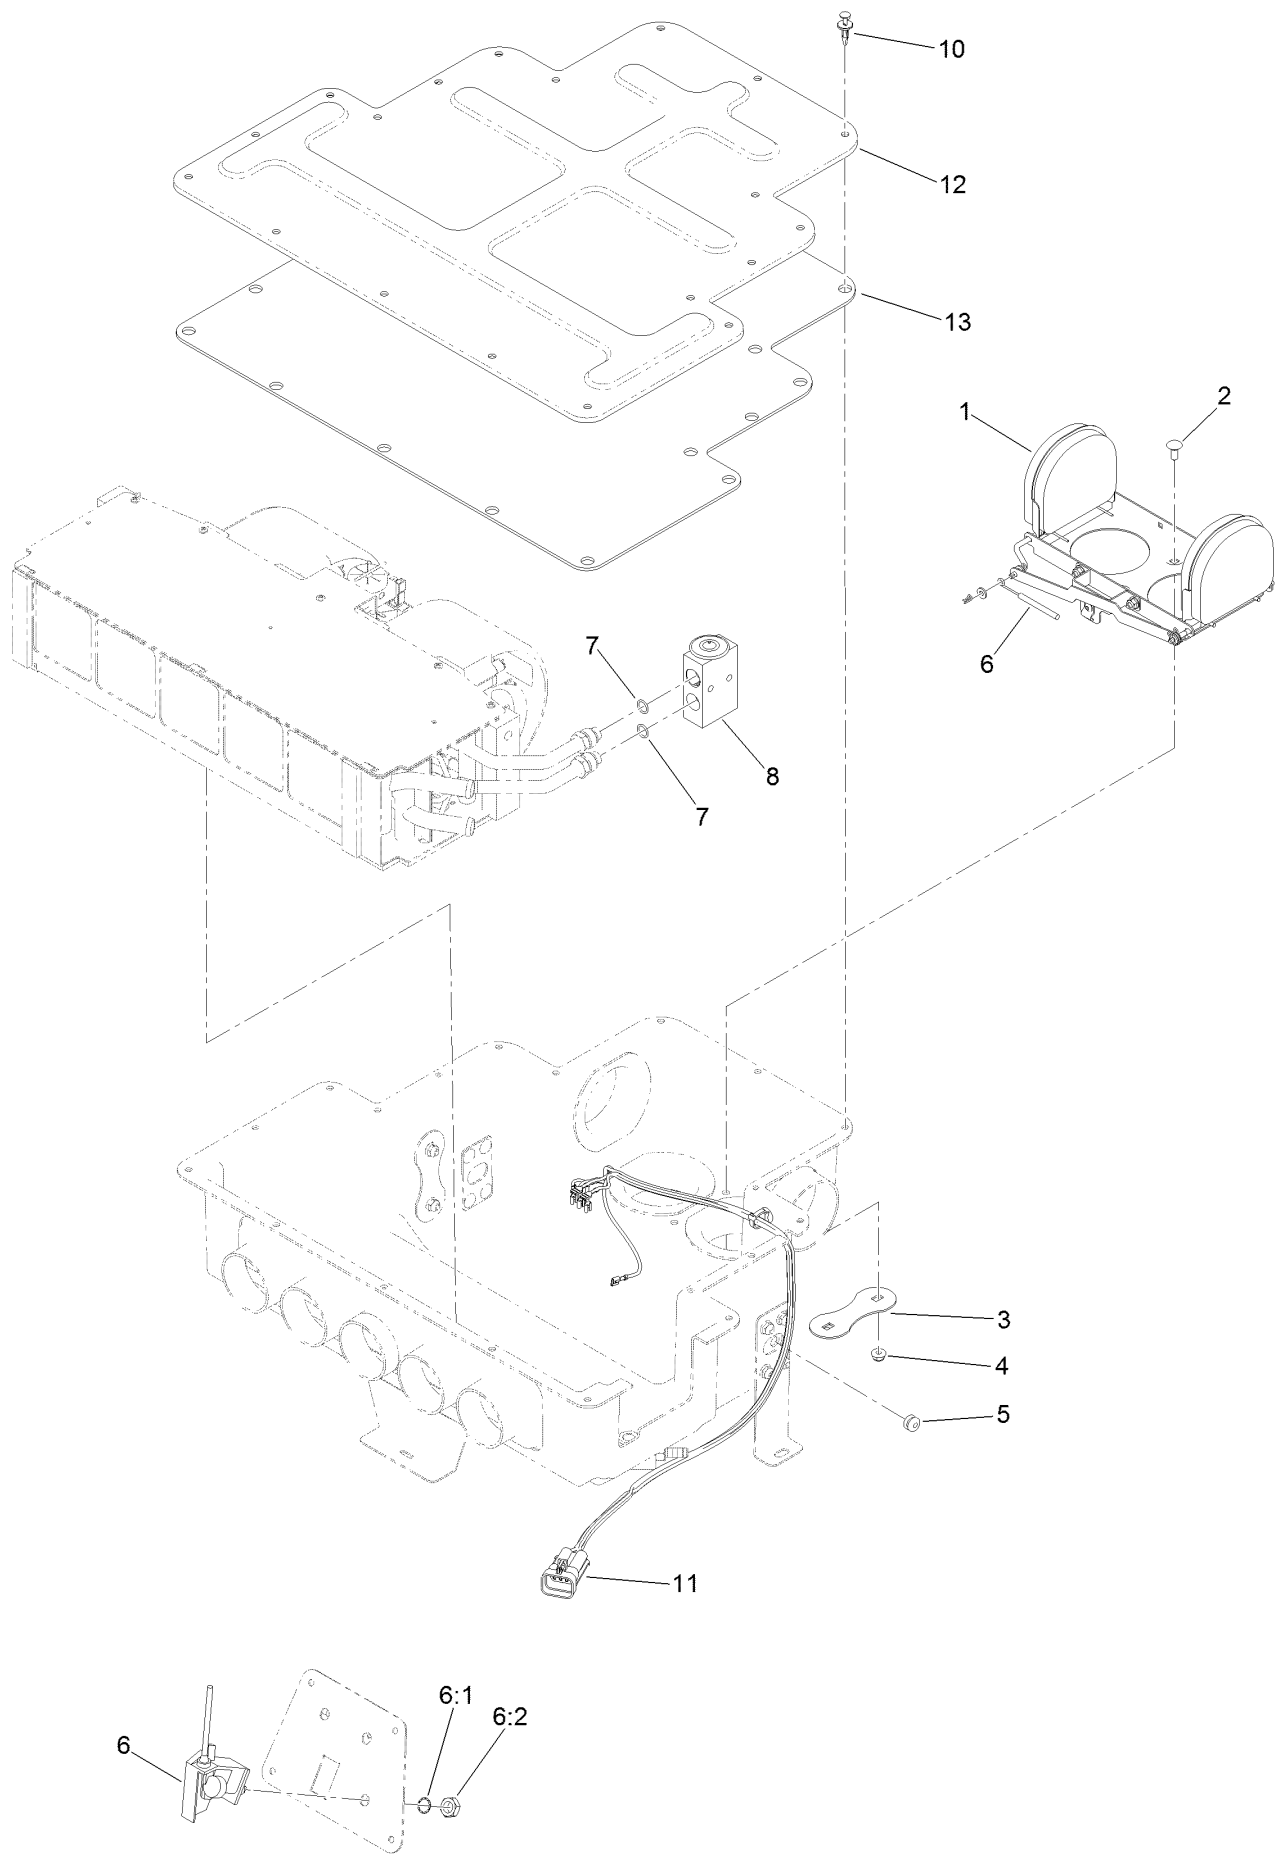

## Air Diverter and Expansion Valve Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>              |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|---------------------------------|
| 1           | 121-8369           | 1           | Air Diverter ASM       | 7           | 125-9524           | 2           | O-Ring                          |
| 2           | 3229-11            | 2           | Screw-CARR             | 8           | 121-8384           | 1           | Valve-Expansion                 |
| 3           | 121-8491           | 1           | Plate-Support          | 10          | 125-9622           | 19          | Rivet-Blind                     |
| 4           | 104-7201           | 2           | Nut-HF                 | 11          | 122-0153           | 1           | Harness-Wire, Heat/AC<br>Blower |
| 5           | 125-7528           | 1           | Grommet-Cable          | 12          | 121-8449           | 1           | Housing-Ventilation, Upper      |
| 6           | 125-9678           | 1           | Control-Rotary, Linear | 13          | 130-5614           | 1           | Insulation-Cover                |
| 6:1         | 3254-20            | 1           | Washer-Lock, Int       |             |                    |             |                                 |
| 6:2         | 3220-4             | 1           | Nut-Jam                |             |                    |             |                                 |
 
# Air Diverter Assembly No. 121-8369

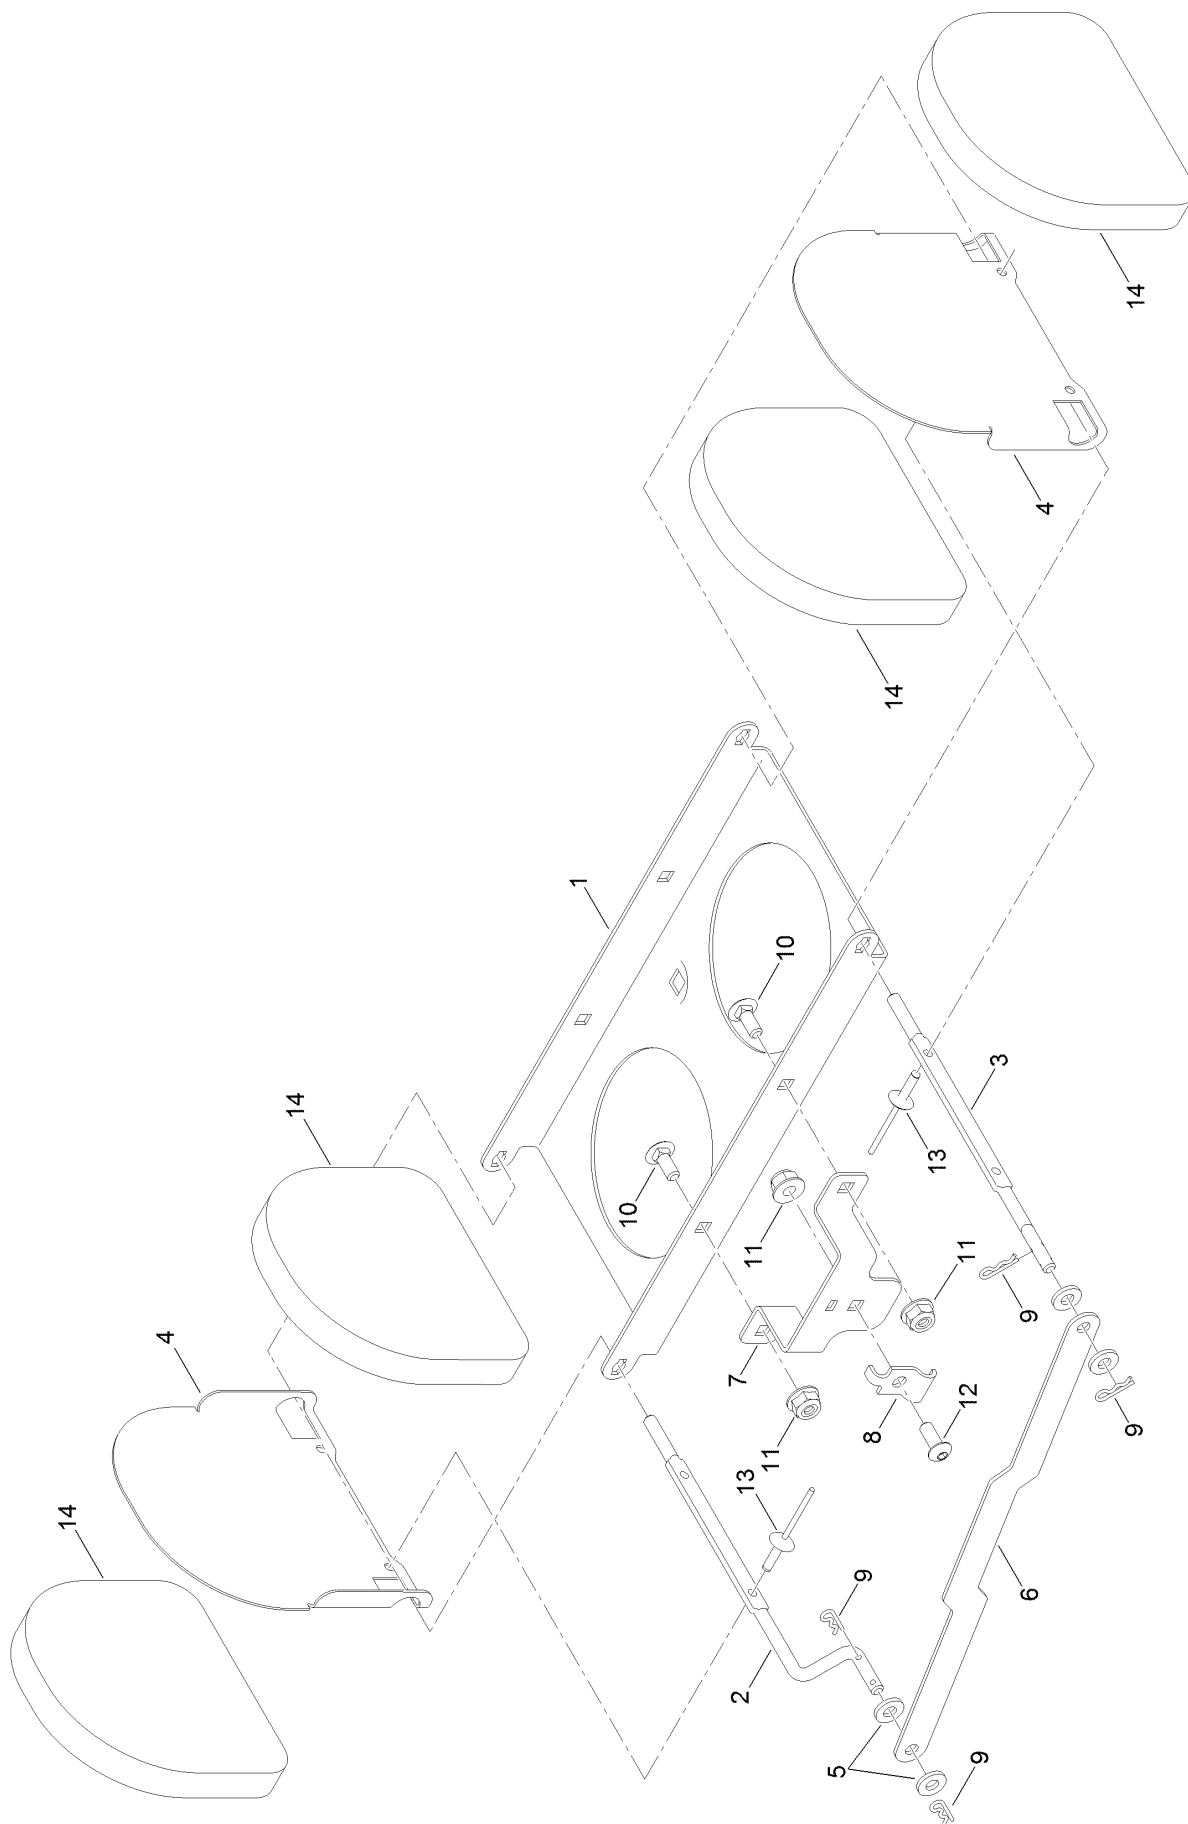


## Air Diverter Assembly No. 121-8369 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 125-9697           | 1           | Base-Mount         |
| 2           | 121-8381           | 1           | Shaft-Baffle, RH   |
| 3           | 121-8382           | 1           | Shaft-Baffle, LH   |
| 4           | 125-9698           | 2           | Baffle-Air         |
| 5           | 3256-51            | 4           | Washer-Flat        |
| 6           | 125-9696           | 1           | Link-Baffle        |
| 7           | 121-8374           | 1           | Mount-Cable        |


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 8           | 121-8256           | 1           | Clamp-Conduit      |
| 9           | 108-2992           | 4           | Pin-Hair           |
| 10          | 1-807513           | 2           | Bolt-CARR          |
| 11          | 120-4578           | 3           | Nut-HF             |
| 12          | 115-9830           | 1           | Screw-HSBH         |
| 13          | 3290-271           | 4           | Rivet-Pop          |
| 14          | 125-9699           | 4           | Damper-Foam        |
 
# Cylinder Block Assembly

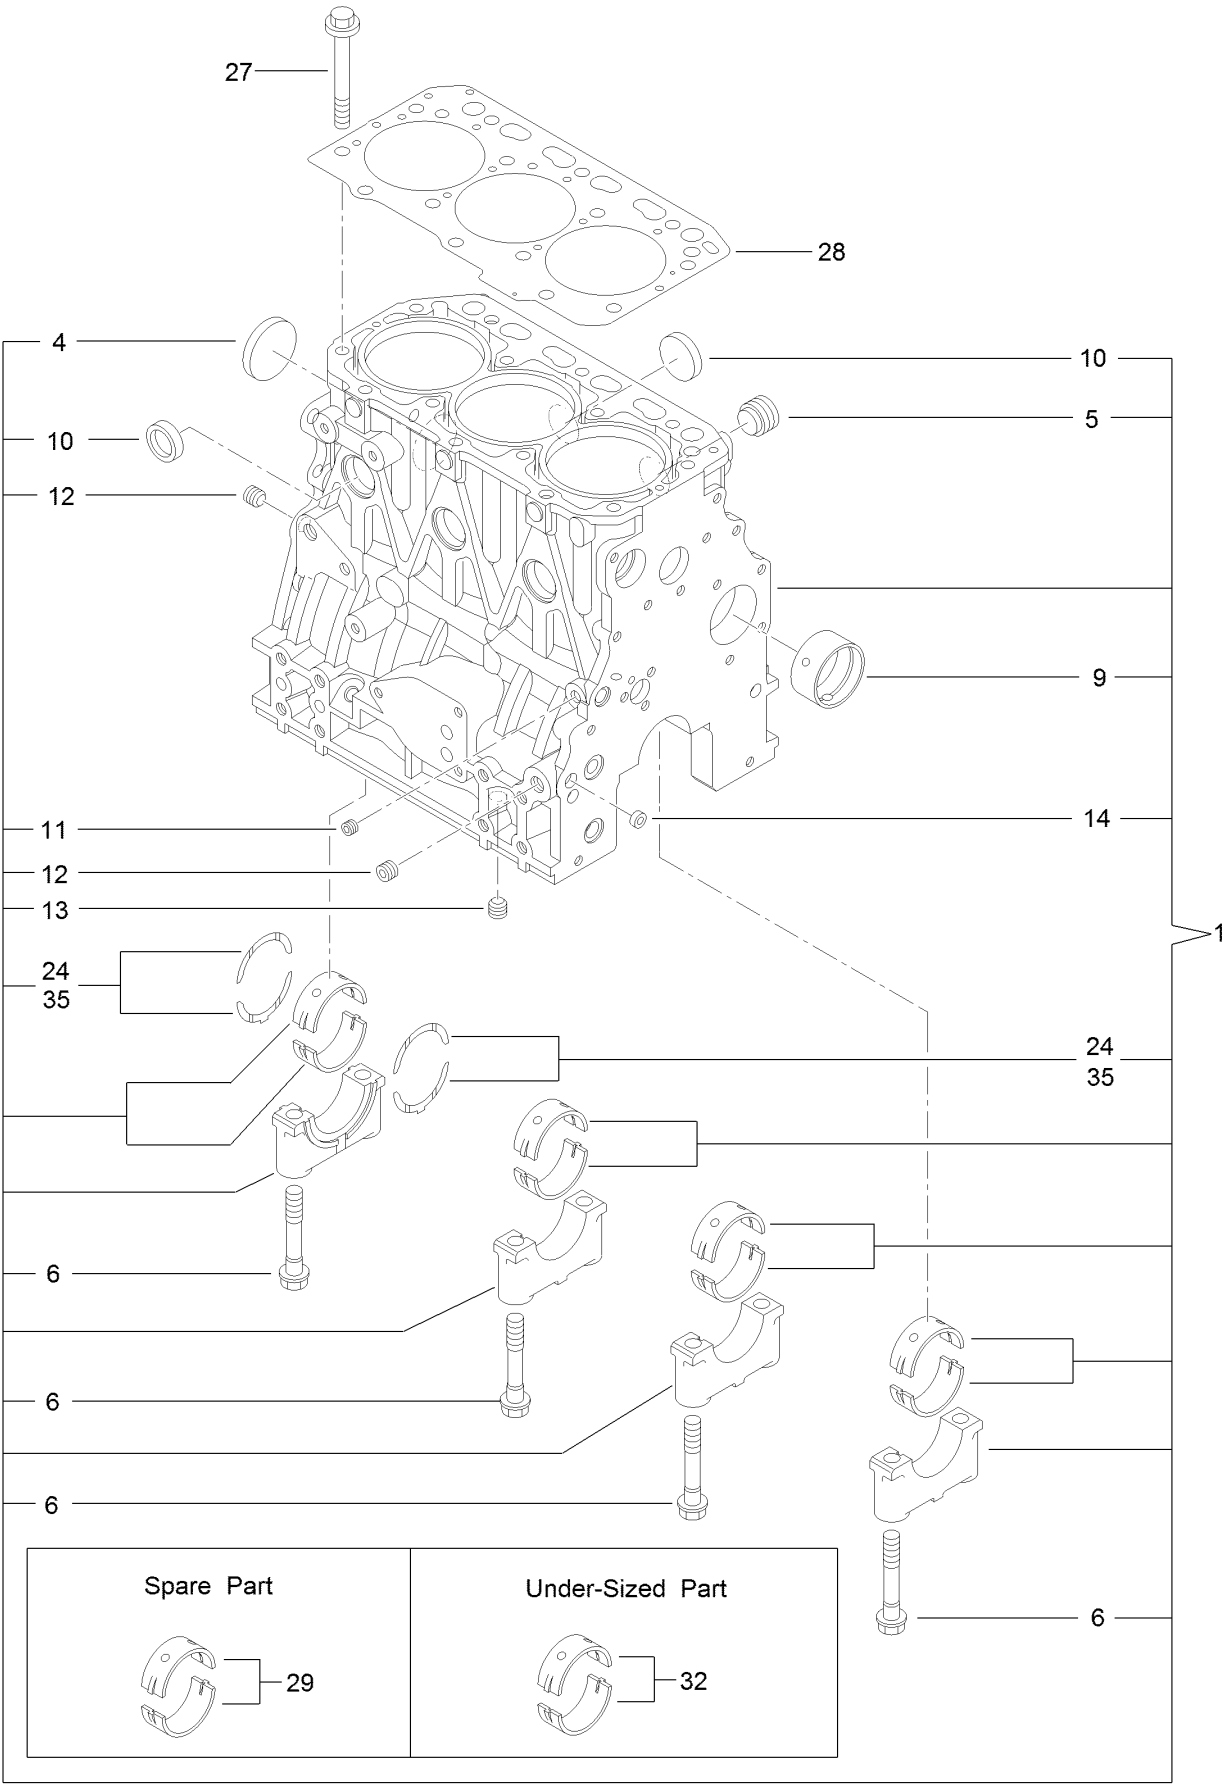

## Cylinder Block Assembly (continued)
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|---------------------|
| 1           | 127-4717           | 1           | Cylinder Block ASM | 13          | 125-6973           | 1           | Plug                |
| 4           | 125-6980           | 1           | Plug               | 14          | 125-7237           | 1           | Plug                |
| 5           | 125-7170           | 1           | Plug               | 24          | 125-7010           | 2           | Metal-Thrust        |
| 6           | 125-7007           | 8           | Bolt               | 27          | 125-7006           | 14          | Bolt                |
| 9           | 125-7108           | 1           | Bushing            | 28          | 127-4716           | 1           | Head Gasket ASM     |
| 10          | 125-7239           | 6           | Plug               | 29          | 125-6981           | 4           | Metal-Main          |
| 11          | 125-6969           | 1           | Plug               | 32          | 125-7009           | 4           | Metal-Main (0.25)   |
| 12          | 125-6973           | 2           | Plug               | 35          | 125-7011           | 1           | Metal-Thrust (0.25) |

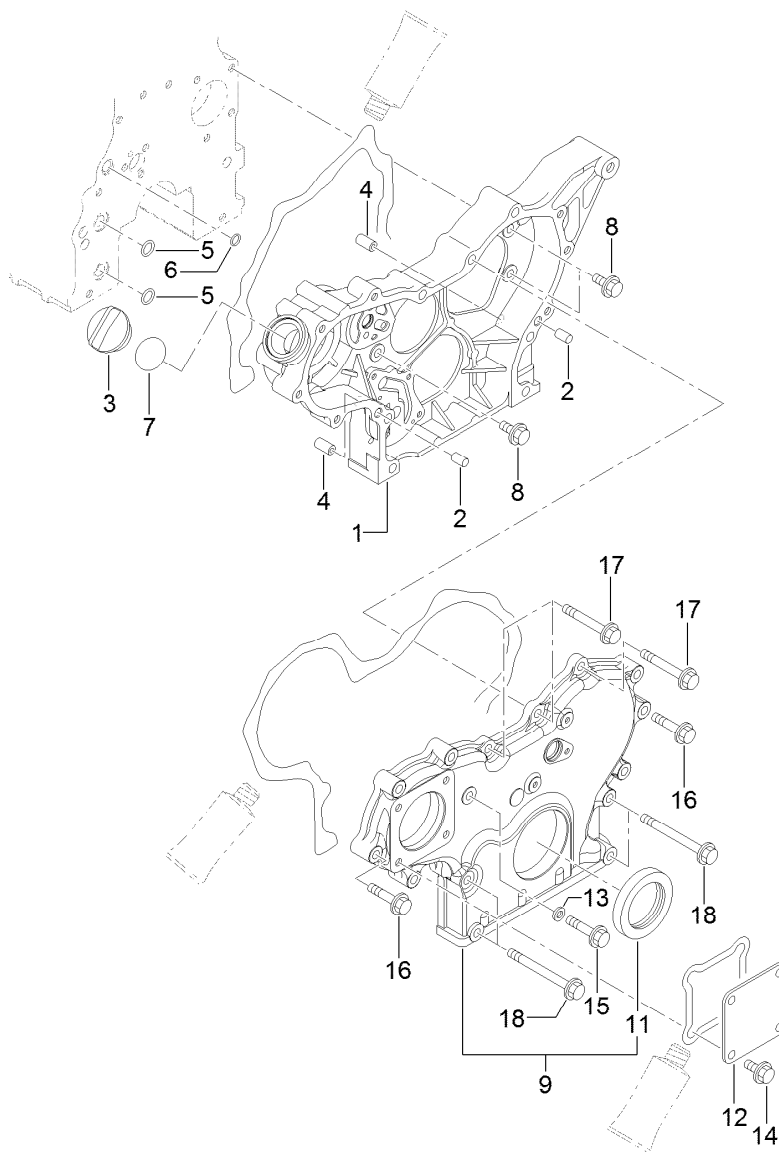


## Gear Housing Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-3023           | 1           | Case-Gear          |
| 2           | 125-6995           | 2           | Pin                |
| 3           | 125-6972           | 1           | Cover-Filler       |
| 4           | 125-7107           | 2           | Pipe               |
| 5           | 125-6909           | 2           | O-Ring             |
| 6           | 127-2973           | 1           | O-Ring             |
| 7           | 125-7197           | 1           | O-Ring             |
| 8           | 125-7214           | 3           | Bolt               |
| 9           | 127-3024           | 1           | Gearcase Cover ASM |
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 11          | 125-6944           | 1           | Seal-Oil           |
| 12          | 125-6977           | 1           | Cover              |
| 13          | 125-7174           | 1           | Washer-Seal        |
| 14          | 125-7214           | 4           | Bolt               |
| 15          | 125-7217           | 1           | Bolt               |
| 16          | 125-7218           | 7           | Bolt               |
| 17          | 125-7222           | 3           | Bolt               |
| 18          | 125-7224           | 4           | Bolt               |



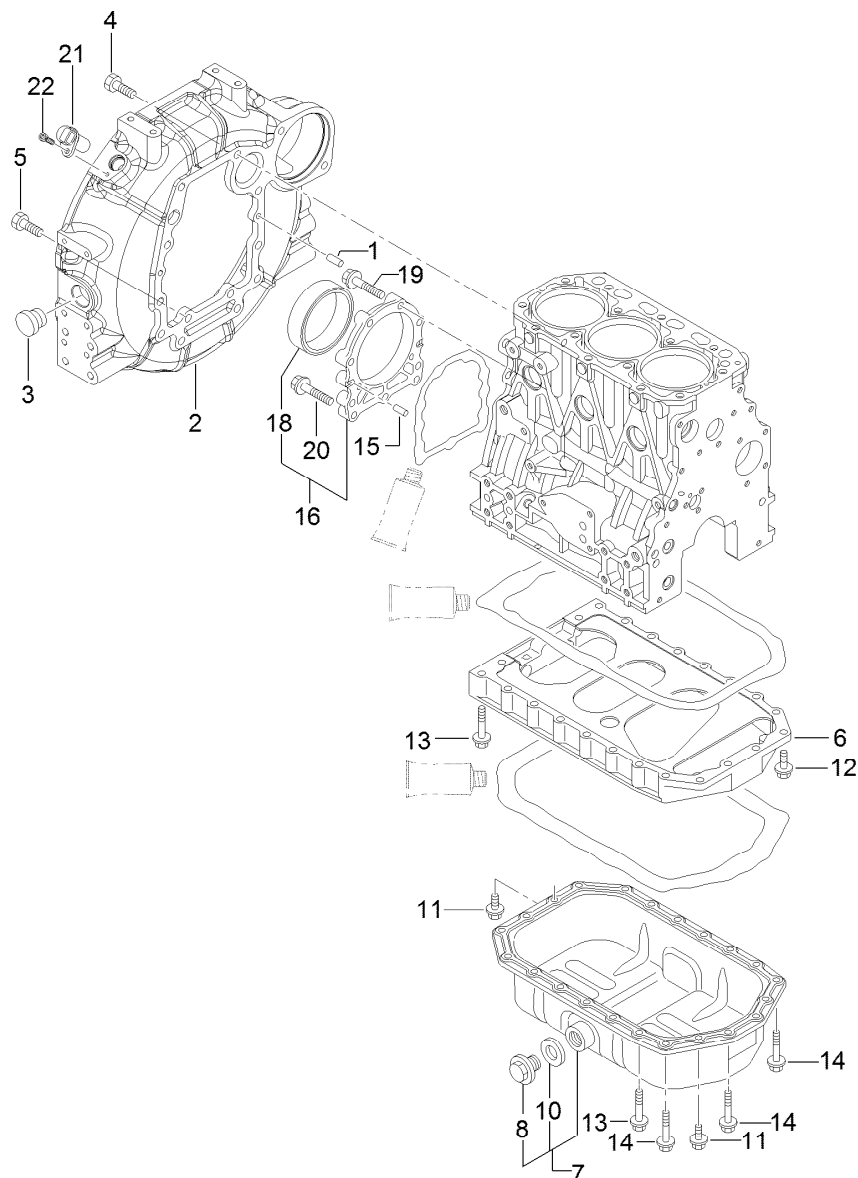


## Flywheel Housing and Oil Sump Assembly

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 125-6995    | 2    | Pin              |
| 2    | 127-4758    | 1    | Housing-Flywheel |
| 3    | 125-6910    | 1    | Cap              |
| 4    | 125-7226    | 6    | Bolt             |
| 5    | 125-7227    | 4    | Bolt             |
| 6    | 127-3756    | 1    | Spacer           |
| 7    | 131-2706    | 1    | Oil Sump ASM     |
| 8    | 125-6912    | 1    | Plug-Drain       |
| 10   | 125-7177    | 1    | Washer-Seal      |
| 11   | 125-7214    | 4    | Bolt             |


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 12   | 125-7215    | 2    | Bolt                 |
| 13   | 125-7219    | 16   | Bolt                 |
| 14   | 125-7220    | 4    | Bolt                 |
| 15   | 125-6995    | 2    | Pin                  |
| 16   | 125-6996    | 1    | Case ASM             |
| 18   | 125-7106    | 1    | Seal-Oil             |
| 19   | 125-7045    | 6    | Bolt                 |
| 20   | 125-7217    | 3    | Bolt                 |
| 21   | 127-3062    | 1    | Sensor-Rev, Flywheel |
| 22   | 127-3184    | 1    | Bolt                 |
 
# Cylinder Head and Cover Assembly

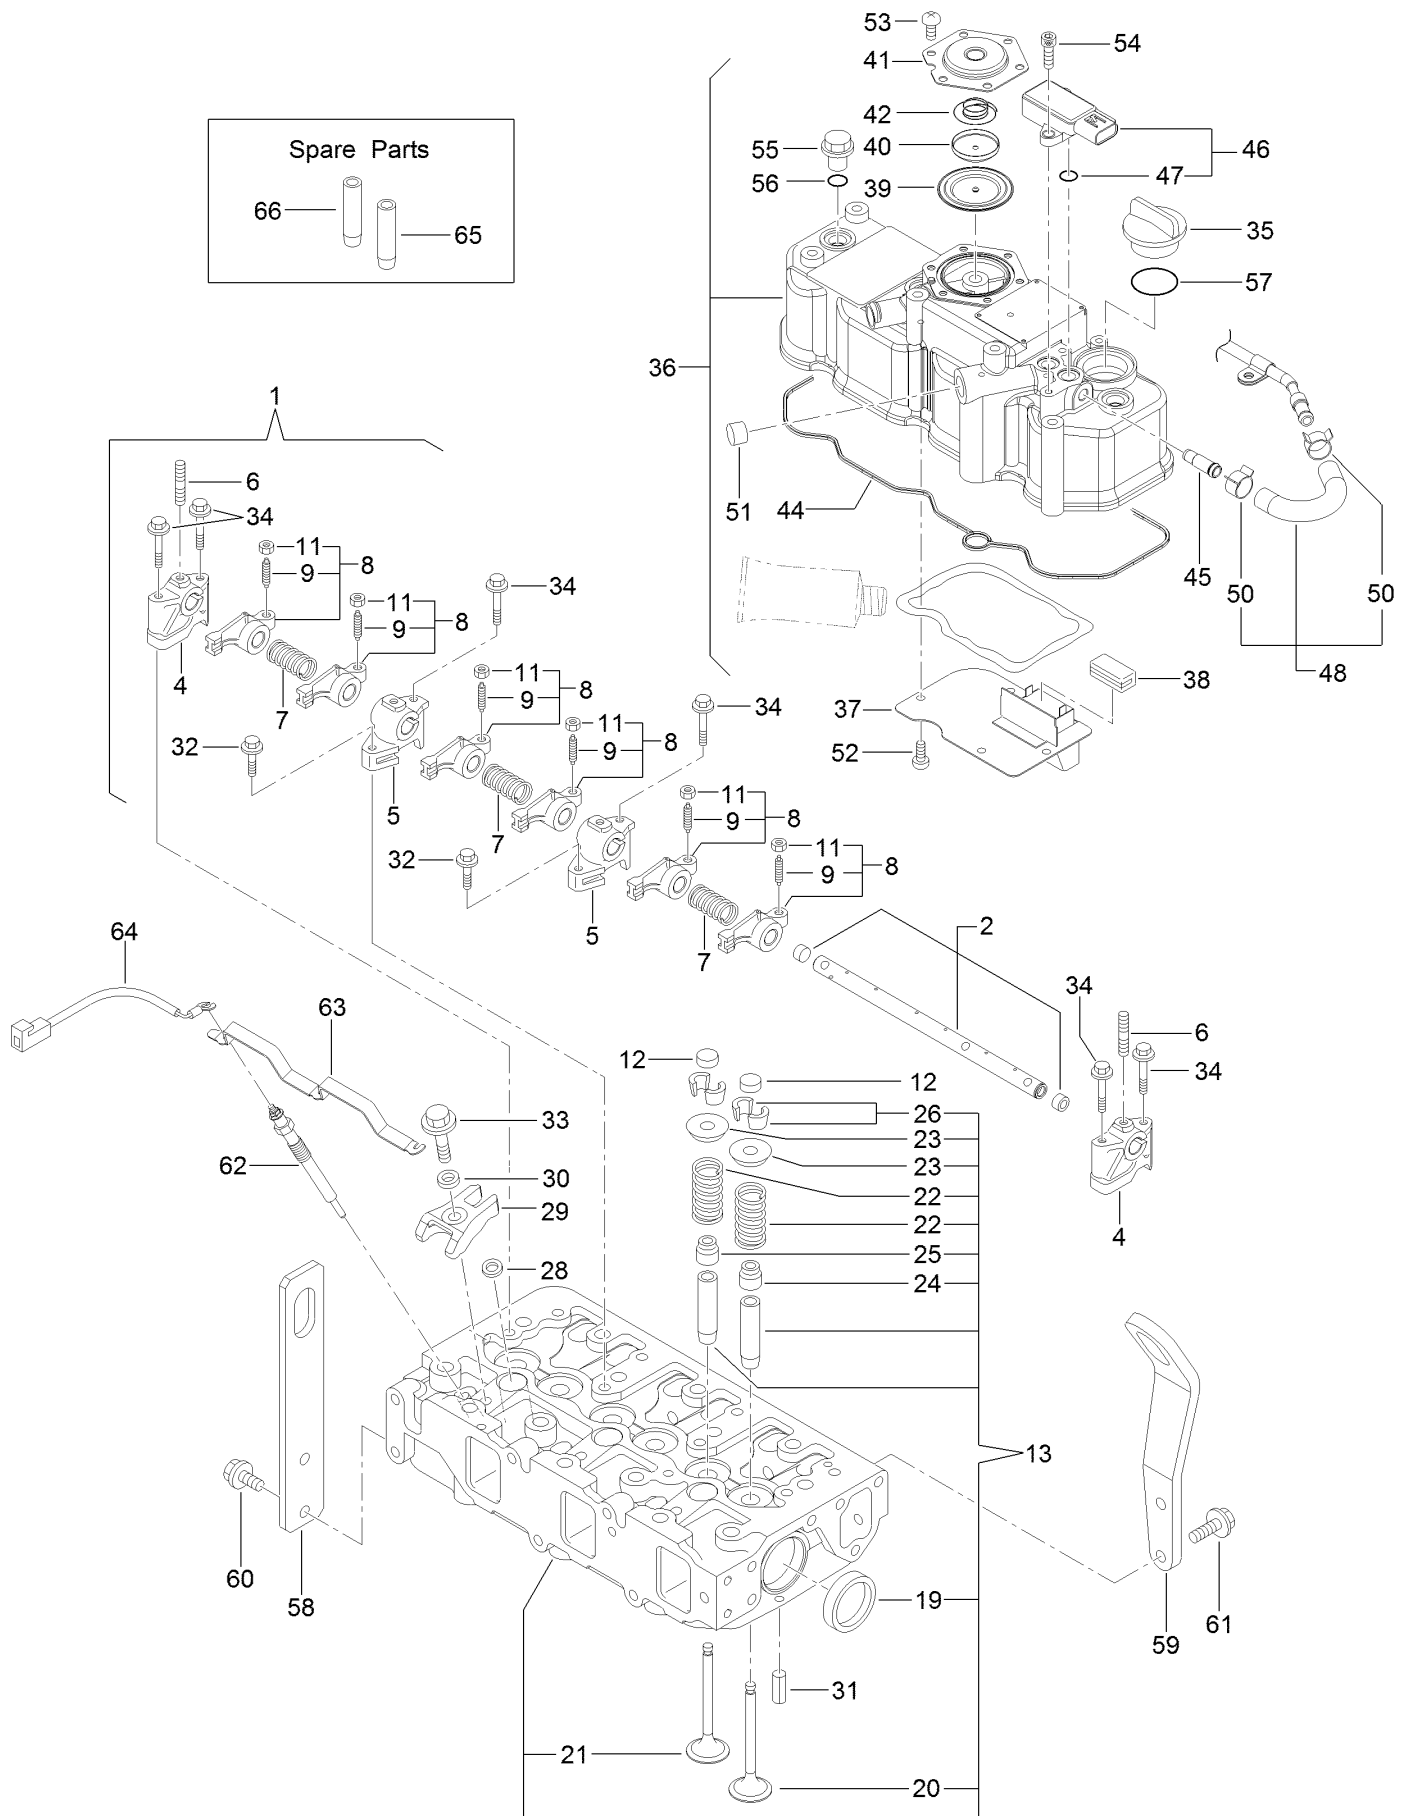

## Cylinder Head and Cover Assembly (continued)

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 127-3757           | 1           | Shaft ASM               | 37          | 127-2988           | 1           | Plate                   |
| 2           | 127-3758           | 1           | Shaft                   | 38          | 125-7012           | 1           | Baffle                  |
| 4           | 127-2974           | 2           | Support                 | 39          | 125-6959           | 1           | Diaphragm               |
| 5           | 127-2975           | 2           | Support                 | 40          | 125-6960           | 1           | Plate                   |
| 6           | 127-3759           | 3           | Stud                    | 41          | 125-6961           | 1           | Plate-Breather          |
| 7           | 127-2995           | 3           | Spring                  | 42          | 125-6962           | 1           | Spring-Diaphragm        |
| 8           | 127-2989           | 6           | Arm-Rocker              | 44          | 127-3856           | 1           | Gasket-Valve Cover      |
| 9           | 125-7013           | 6           | Screw-Adjust, Valve     | 45          | 127-3026           | 1           | Joint                   |
| 11          | 125-7014           | 6           | Nut                     | 46          | 127-3029           | 1           | Sensor-Pressure         |
| 12          | 127-2996           | 6           | Cap-Valve               | 47          | 127-3032           | 2           | O Ring-Sensor, Pressure |
| 13          | 127-4720           | 1           | Cylinder Head ASM       | 48          | 127-3040           | 1           | Hose ASM                |
| 19          | 125-7240           | 2           | Plug                    | 50          | 127-3041           | 2           | Clip-Hose               |
| 20          | 127-2990           | 3           | Valve                   | 51          | 125-6913           | 1           | Plug                    |
| 21          | 127-4710           | 3           | Valve                   | 52          | 125-7186           | 4           | Screw                   |
| 22          | 127-3012           | 6           | Spring                  | 53          | 125-7186           | 6           | Screw                   |
| 23          | 127-3013           | 6           | Retainer-Spring         | 54          | 127-3184           | 2           | Bolt                    |
| 24          | 127-2986           | 3           | Seal-Stem, Valve        | 55          | 125-6974           | 3           | Knob                    |
| 25          | 127-3027           | 3           | Seal-Stem, Valve        | 56          | 93-0418            | 3           | O-Ring                  |
| 26          | 127-3186           | 6           | Pin-Cotter              | 57          | 125-7197           | 1           | O-Ring                  |
| 28          | 127-3021           | 3           | Gasket-Injector         | 58          | 131-2707           | 1           | Lifter                  |
| 29          | 127-3028           | 3           | Retainer-Injector       | 59          | 131-2715           | 1           | Lifter-Engine           |
| 30          | 127-2980           | 3           | Washer-Injector         | 60          | 125-7214           | 2           | Bolt                    |
| 31          | 125-7184           | 2           | Pin-Spring              | 61          | 125-7595           | 2           | Bolt                    |
| 32          | 125-7215           | 2           | Bolt                    | 62          | 127-2991           | 3           | Plug-Glow               |
| 33          | 125-7217           | 3           | Bolt                    | 63          | 127-3768           | 1           | Connector-Plug, Glow    |
| 34          | 125-7220           | 6           | Bolt                    | 64          | 131-2704           | 1           | Harness-Wire            |
| 35          | 125-6972           | 1           | Cover-Filler            | 65          | 127-2979           | 3           | Guide                   |
| 36          | 127-4719           | 1           | Cylinder Head Cover ASM | 66          | 127-2997           | 3           | Guide-Valve             |

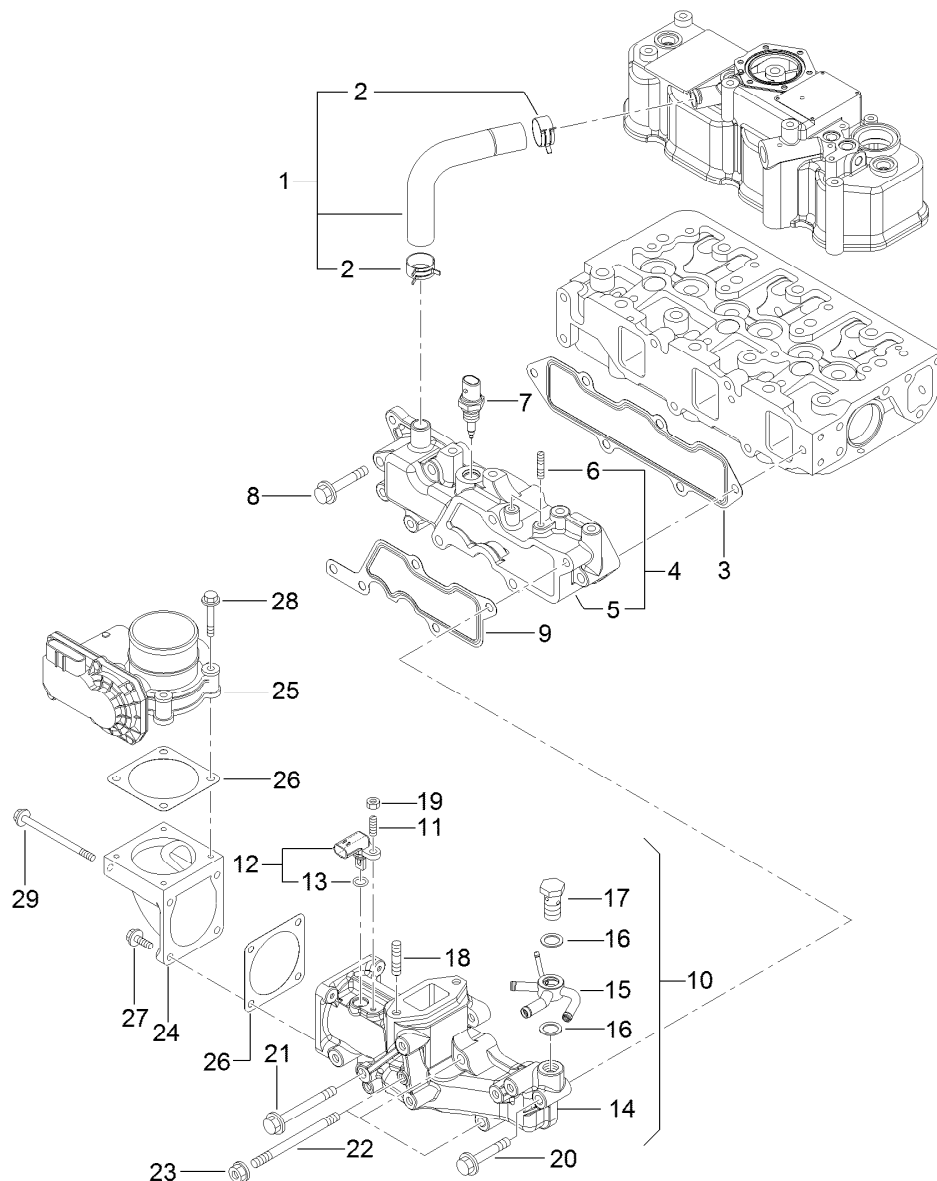

## Suction Manifold Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 127-4704    | 1    | Pipe                    |
| 2    | 125-7040    | 2    | Clip-Hose               |
| 3    | 127-3857    | 1    | Gasket-Manifold, Intake |
| 4    | 127-4722    | 1    | Intake Manifold ASM     |
| 5    | 127-4721    | 2    | Manifold-Intake         |
| 6    | 127-3180    | 2    | Stud                    |
| 7    | 127-3031    | 1    | Sensor-Temp, Air        |
| 8    | 125-7220    | 1    | Bolt                    |
| 9    | 127-3034    | 1    | Gasket-Collector        |
| 10   | 131-2716    | 1    | Intake Collector ASM    |
| 11   | 127-4701    | 2    | Stud                    |
| 12   | 127-3030    | 2    | Sensor-Temp, Air        |
| 13   | 127-3033    | 3    | O-Ring                  |
| 14   | 127-4724    | 2    | Collector-Intake        |
| 15   | 131-2729    | 2    | Joint-Hose, 4 Way       |
 
| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 16   | 127-3166    | 2    | Washer-Seal     |
| 17   | 131-2738    | 2    | Bolt-Joint, 8   |
| 18   | 127-4774    | 2    | Stud            |
| 19   | 127-4775    | 2    | Nut             |
| 20   | 125-7220    | 1    | Bolt            |
| 21   | 127-3178    | 1    | Bolt            |
| 22   | 127-3182    | 1    | Stud            |
| 23   | 125-7229    | 1    | Nut             |
| 24   | 127-3035    | 1    | Bend-Inlet      |
| 25   | 127-3036    | 1    | Body-Throttle   |
| 26   | 127-3037    | 1    | Gasket-Throttle |
| 27   | 125-7209    | 1    | Bolt            |
| 28   | 125-7211    | 1    | Bolt            |
| 29   | 127-3177    | 1    | Bolt            |

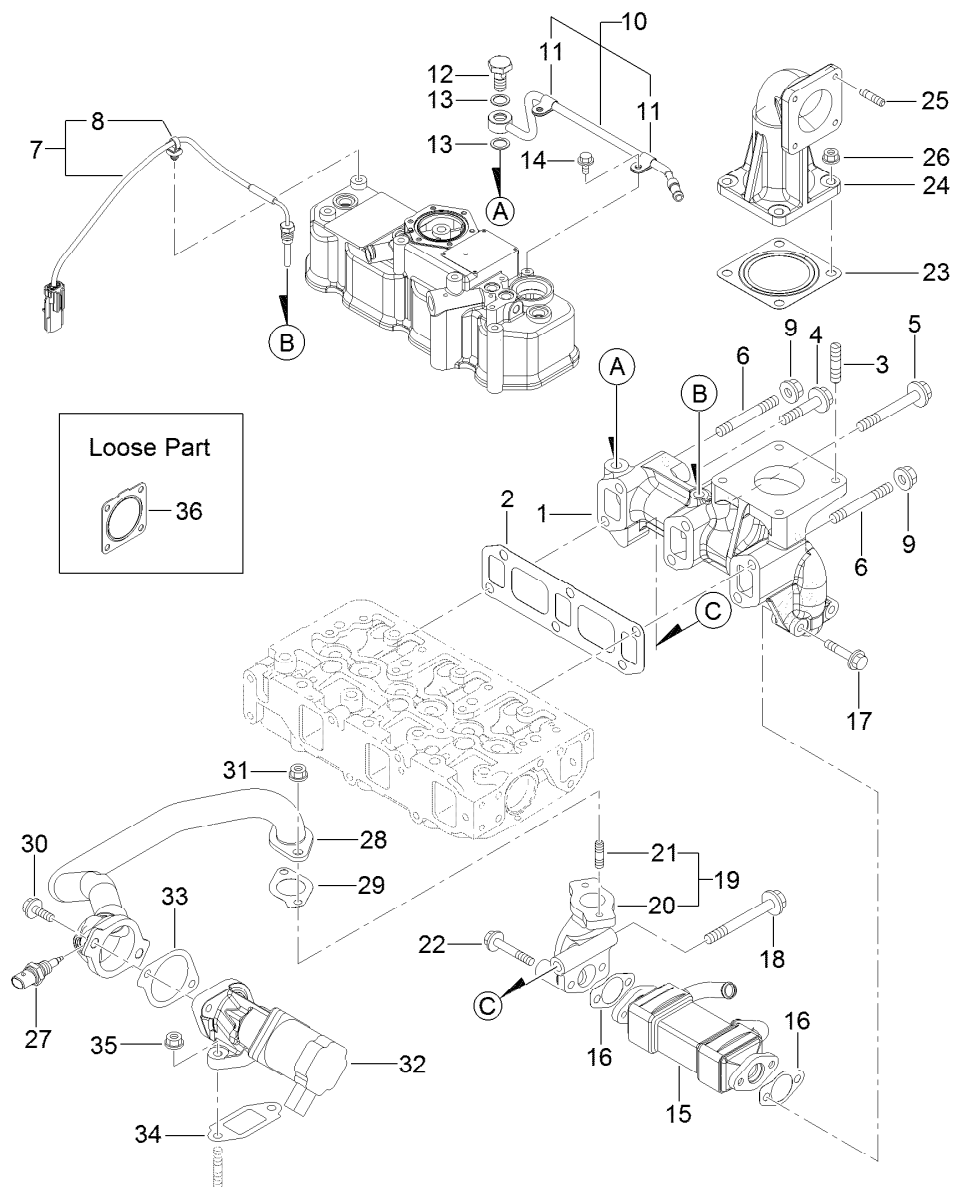


## Exhaust Manifold Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 127-4726    | 1    | Manifold-Exhaust         |
| 2    | 127-3775    | 1    | Gasket-Manifold, Exhaust |
| 3    | 127-2984    | 4    | Stud                     |
| 4    | 127-3094    | 1    | Bolt                     |
| 5    | 127-3044    | 3    | Bolt-M10                 |
| 6    | 127-4756    | 2    | Stud                     |
| 7    | 127-4729    | 1    | Sensor-Temp, Exhaust     |
| 8    | 127-3087    | 1    | Band-Clip                |
| 9    | 125-7230    | 2    | Nut                      |
| 10   | 127-3038    | 1    | Exhaust Pipe ASM         |
| 11   | 127-3173    | 2    | Clamp                    |
| 12   | 127-3039    | 1    | Bolt-Joint, Pipe         |
| 13   | 127-3174    | 2    | Gasket                   |
| 14   | 125-7206    | 2    | Bolt                     |
| 15   | 127-3042    | 1    | Cooler-E G R             |
| 16   | 127-3043    | 2    | Gasket-Cooler, E G R     |
| 17   | 127-2976    | 2    | Bolt                     |
| 18   | 127-3022    | 1    | Bolt-Flange              |

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 19   | 127-3048    | 1    | E G R Pipe ASM             |
| 20   | 127-3049    | 1    | Pipe-Out, E G R            |
| 21   | 125-7043    | 2    | Stud                       |
| 22   | 125-7220    | 2    | Bolt                       |
| 23   | 127-2987    | 1    | Gasket-Silencer            |
| 24   | 131-2717    | 1    | Pipe-Exhaust               |
| 25   | 125-6906    | 4    | Stud                       |
| 26   | 125-7230    | 4    | Nut                        |
| 27   | 127-3047    | 1    | Sensor-Gas Temp, E G R     |
| 28   | 127-3780    | 1    | E G R Pipe ASM             |
| 29   | 127-3016    | 1    | Gasket                     |
| 30   | 125-7215    | 2    | Bolt                       |
| 31   | 125-7229    | 2    | Nut                        |
| 32   | 127-3781    | 1    | Valve-E G R                |
| 33   | 127-3050    | 1    | Gasket-Intake Valve, E G R |
| 34   | 127-3051    | 1    | Gasket-Out Valve, E G R    |
| 35   | 125-7229    | 2    | Nut                        |
| 36   | 127-3019    | 1    | Gasket                     |

 
# Diesel Particulate Filter Assembly

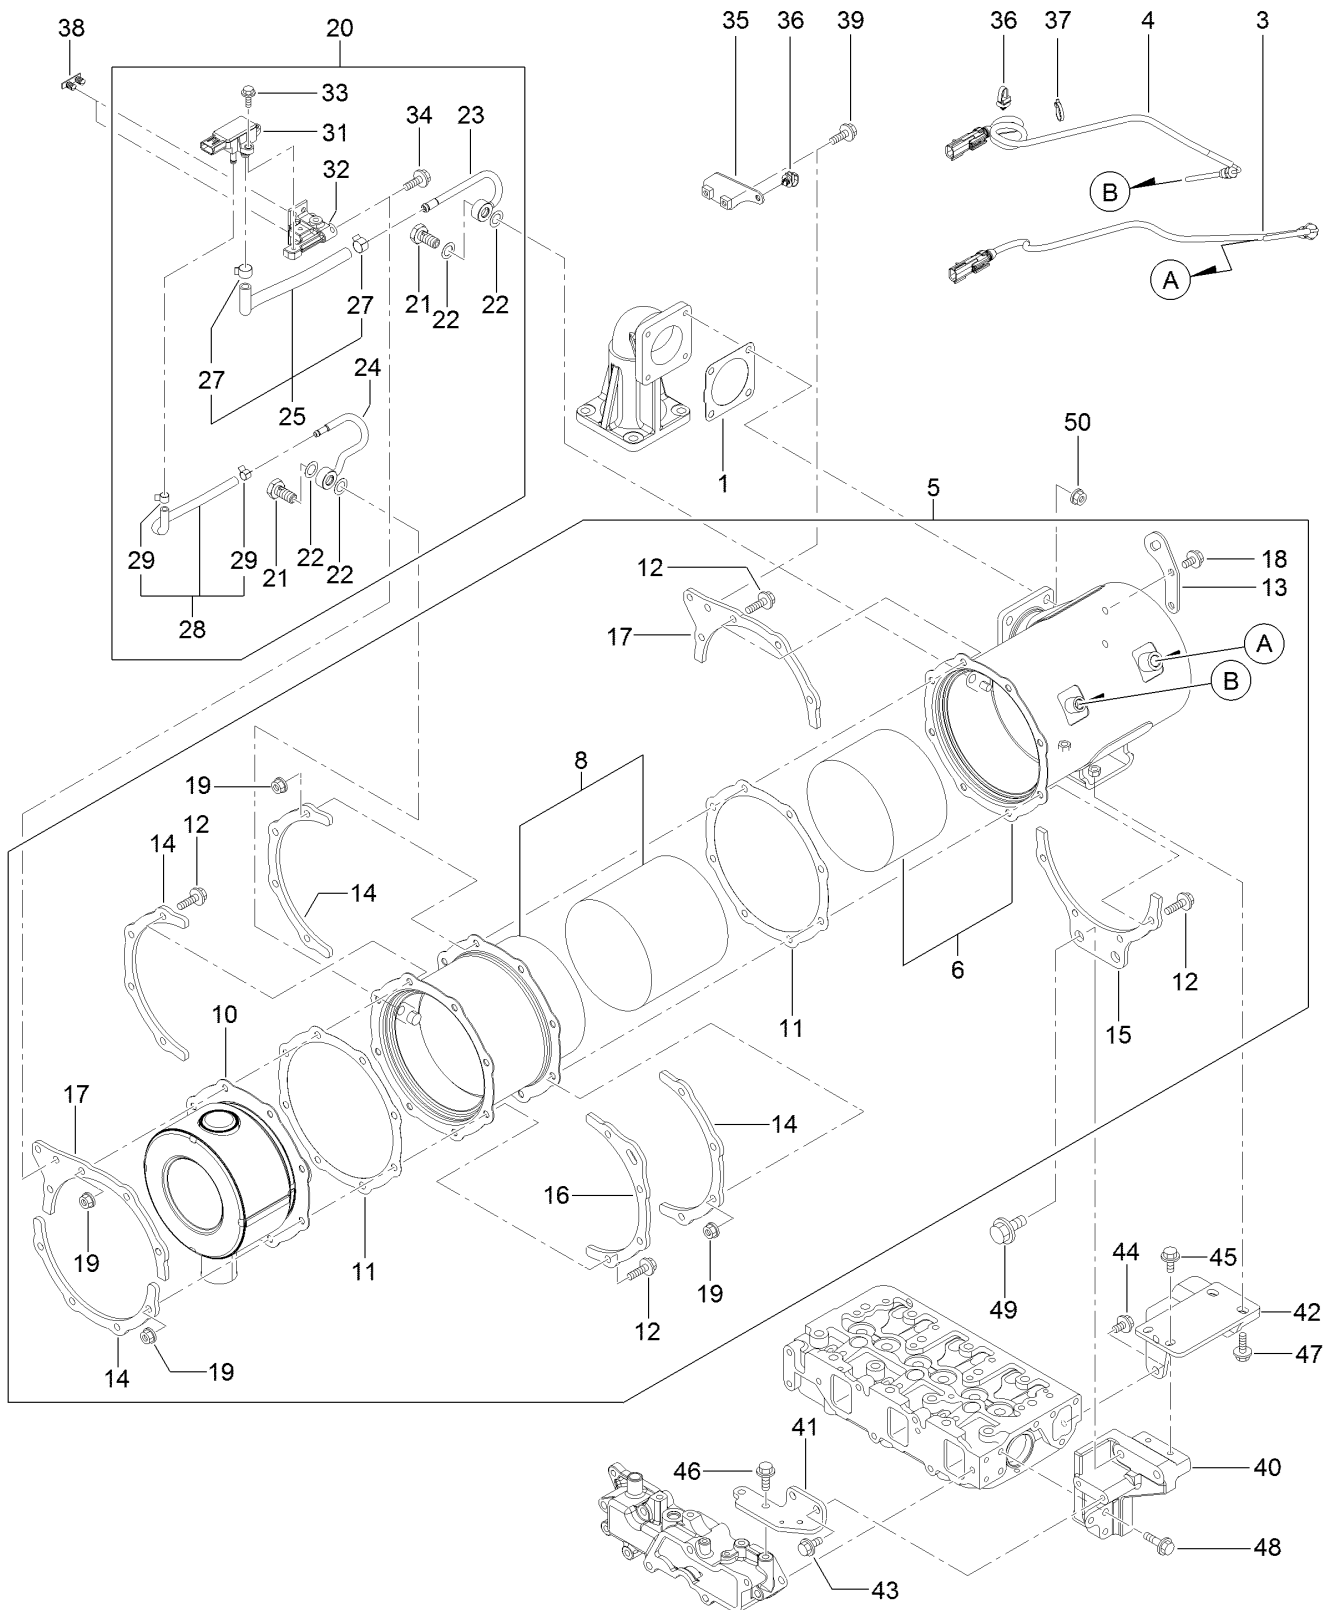

## Diesel Particulate Filter Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|------------------------|
| 1           | 127-3019           | 1           | Gasket               | 28          | 131-2726           | 1           | Exhaust Press Hose ASM |
| 3           | 131-2718           | 1           | Sensor-Temp, Exhaust | 29          | 127-3058           | 2           | Clip-Hose              |
| 4           | 131-2719           | 1           | Sensor-Temp, Exhaust | 31          | 127-3060           | 1           | Sensor-Pressure        |
| 5           | 131-2730           | 1           | D P F ASM            | 32          | 127-4750           | 1           | Bracket-Sensor         |
| 6           | 131-2720           | 1           | Case-Doc             | 33          | 125-7208           | 2           | Bolt                   |
| 8           | 127-4734           | 1           | Case-Filter, Soot    | 34          | 125-7595           | 2           | Bolt                   |
| 10          | 127-3786           | 1           | Silencer-D P F       | 35          | 131-2727           | 1           | Bracket-Harness        |
| 11          | 127-3859           | 2           | Gasket-D P F         | 36          | 127-3087           | 2           | Band-Clip              |
| 12          | 127-3055           | 16          | Bolt                 | 37          | 127-3124           | 1           | Band                   |
| 13          | 127-3788           | 1           | Lifter-D P F         | 38          | 127-3088           | 2           | Clip-Connector         |
| 14          | 127-3789           | 4           | Stiffener-D P F, A   | 39          | 125-7595           | 2           | Bolt                   |
| 15          | 131-2721           | 1           | Stiffener-D P F, B   | 40          | 131-2723           | 1           | Stay-D P F, A          |
| 16          | 127-3792           | 1           | Stiffener-D P F, C   | 41          | 131-2724           | 1           | Support-Stay, D P F    |
| 17          | 127-4736           | 2           | Stiffener-D P F, C   | 42          | 131-2725           | 1           | Stay-D P F, B          |
| 18          | 125-7213           | 2           | Bolt                 | 43          | 125-7214           | 2           | Bolt                   |
| 19          | 125-7229           | 16          | Nut                  | 44          | 125-7214           | 2           | Bolt                   |
| 20          | 131-2722           | 1           | Pressure Sensor Unit | 45          | 125-7214           | 2           | Bolt                   |
| 21          | 127-3039           | 2           | Bolt-Joint, Pipe     | 46          | 125-7595           | 2           | Bolt                   |
| 22          | 127-3056           | 4           | Gasket-Sensor        | 47          | 125-7215           | 2           | Bolt                   |
| 23          | 127-4744           | 1           | Sensor Pipe ASM      | 48          | 125-7216           | 3           | Bolt                   |
| 24          | 127-4745           | 1           | Sensor Pipe ASM      | 49          | 131-2741           | 2           | Bolt-Plated, M12X 20   |
| 25          | 127-3114           | 1           | Exhaust Hose ASM     | 50          | 125-7229           | 4           | Nut                    |
| 27          | 127-3057           | 2           | Clip-Hose            |             |                    |             |                        |

 
# Camshaft and Driving Gear Assembly

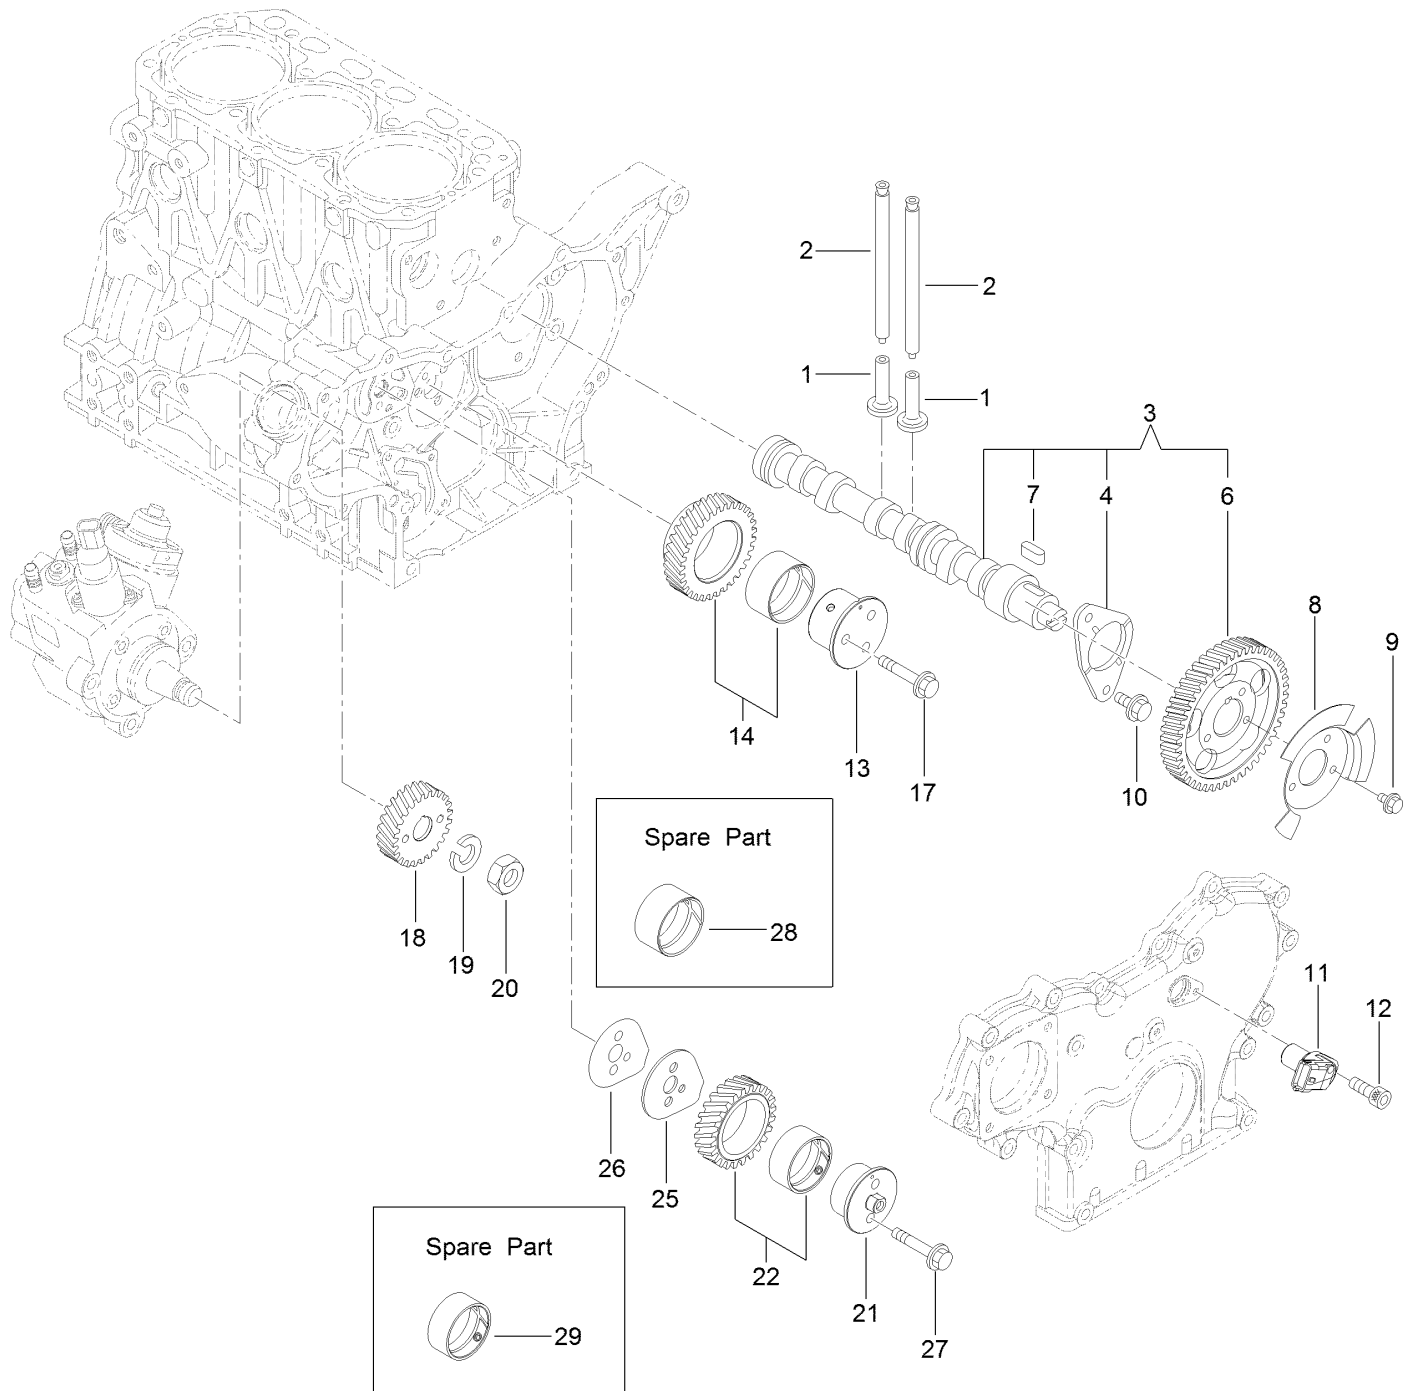



## Camshaft and Driving Gear Assembly (continued)

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------|
| 1           | 125-7016           | 6           | Tappet             | 14          | 127-3066           | 1           | Idle Gear A ASM      |
| 2           | 125-7017           | 6           | Rod-Push           | 17          | 125-7219           | 3           | Bolt                 |
| 3           | 127-3797           | 1           | Camshaft ASM       | 18          | 127-3070           | 1           | Gear-Pump, Supply    |
| 4           | 125-7008           | 1           | Metal-Thrust       | 19          | 127-3167           | 1           | Washer-Spring        |
| 6           | 127-3052           | 1           | Gear-Camshaft      | 20          | 127-3185           | 1           | Nut-Lock             |
| 7           | 125-7185           | 1           | Key                | 21          | 127-3064           | 1           | Shaft-Idle, Gear B   |
| 8           | 127-3053           | 1           | Pulser-Camshaft    | 22          | 127-3067           | 1           | Idle Gear B ASM      |
| 9           | 125-7205           | 3           | Bolt               | 25          | 127-3068           | 1           | Plate-Idle, Shaft    |
| 10          | 125-7213           | 2           | Bolt               | 26          | 127-3069           | 1           | Gasket-Idle, Shaft B |
| 11          | 127-3054           | 1           | Sensor-Rev, Gear   | 27          | 125-7218           | 2           | Bolt                 |
| 12          | 127-3184           | 1           | Bolt               | 28          | 125-6927           | 1           | Bushing              |
| 13          | 127-3063           | 1           | Shaft-Idle, Gear A | 29          | 127-3065           | 1           | Bushing              |

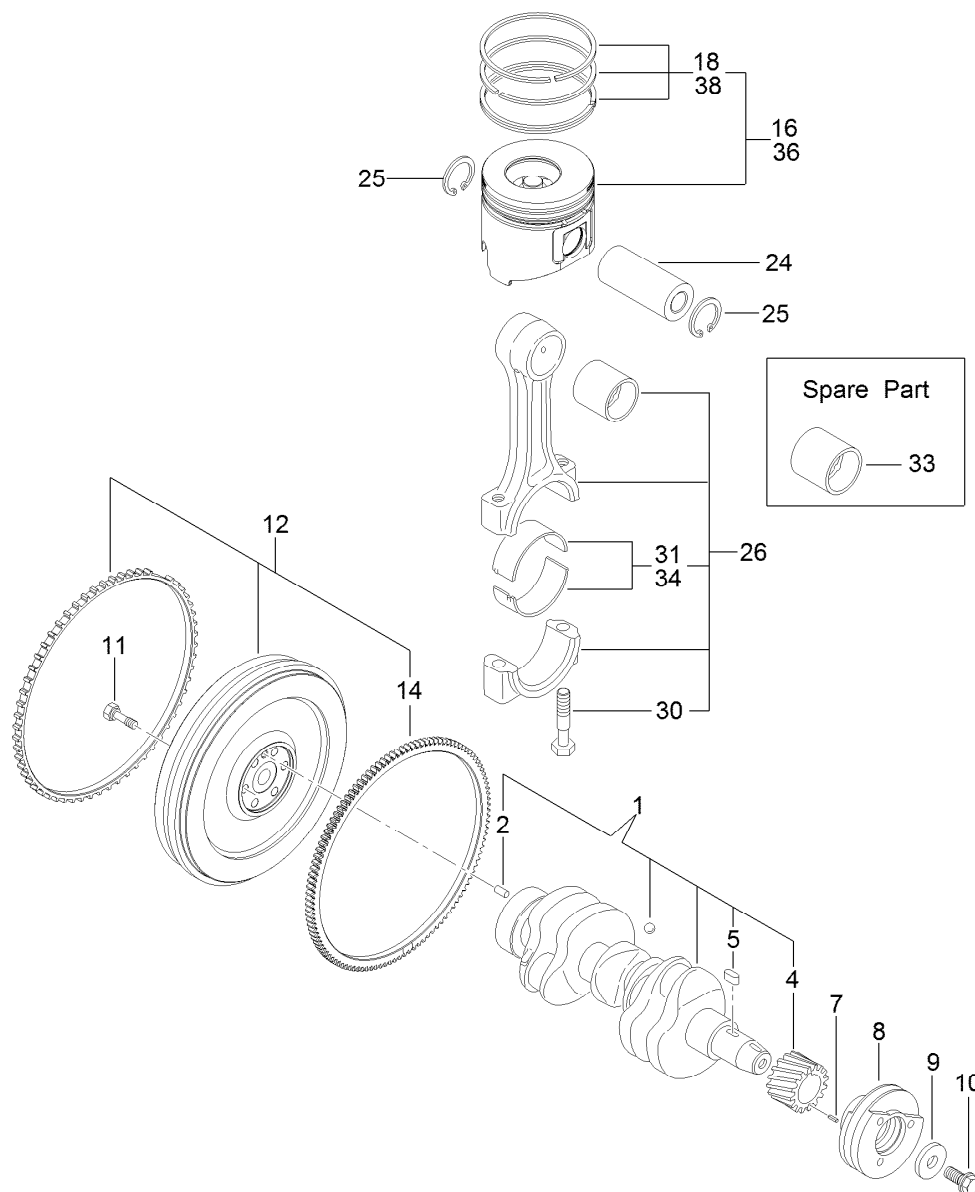

## Crankshaft and Piston Assembly

| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 1    | 127-3800    | 1    | Crankshaft ASM |
| 2    | 125-6995    | 1    | Pin            |
| 4    | 125-6937    | 1    | Gear           |
| 5    | 125-7185    | 1    | Key            |
| 7    | 125-7182    | 1    | Pin-Spring     |
| 8    | 127-3801    | 1    | Pulley-V       |
| 9    | 125-7109    | 1    | Washer         |
| 10   | 125-6956    | 1    | Bolt           |
| 11   | 125-6951    | 6    | Bolt           |
| 12   | 127-4761    | 1    | Flywheel ASM   |
| 14   | 127-4703    | 1    | Gear           |
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 16   | 127-4766    | 3    | Piston ASM            |
| 18   | 127-4751    | 3    | Piston Ring ASM       |
| 24   | 125-7030    | 3    | Pin                   |
| 25   | 125-7180    | 6    | Ring                  |
| 26   | 125-7242    | 3    | Connecting Rod ASM    |
| 30   | 125-6955    | 6    | Bolt                  |
| 31   | 125-7018    | 3    | Pin-Crank             |
| 33   | 125-6997    | 3    | Pin-Piston            |
| 34   | 125-7019    | 3    | Pin-Crank (.25)       |
| 36   | 127-4767    | 3    | Piston ASM (0.25 O S) |
| 38   | 127-4752    | 3    | Ring Set (0.25 O S)   |

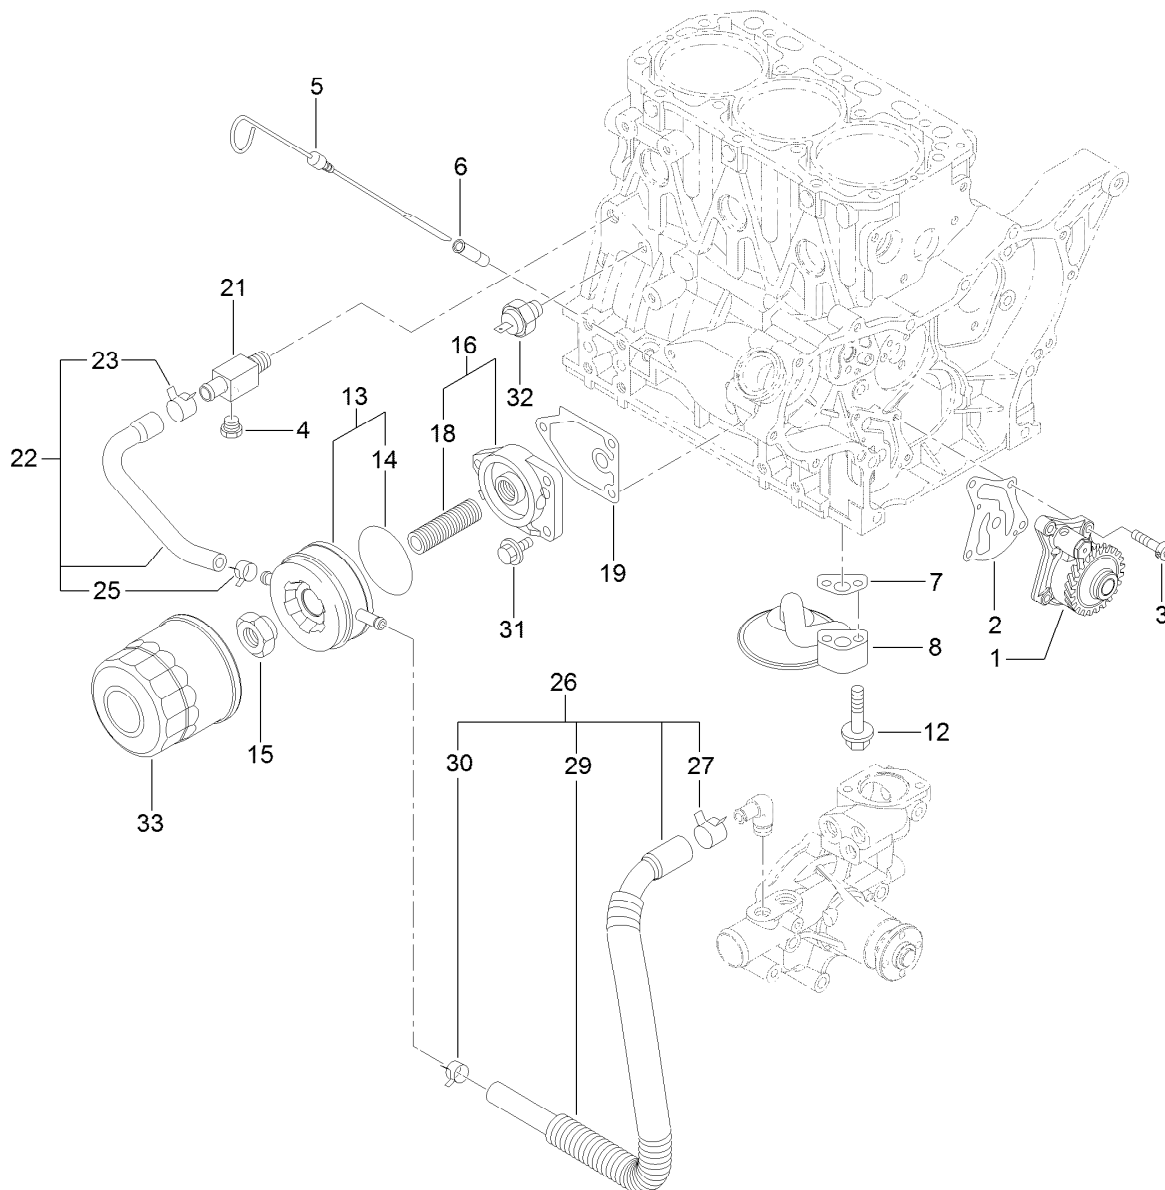


## Lubrication and Oil System Assembly

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 127-4753    | 1    | Oil Pump ASM    |
| 2    | 127-3004    | 1    | Gasket          |
| 3    | 125-7232    | 4    | Bolt            |
| 4    | 125-7171    | 1    | Plug-Drain      |
| 5    | 125-6987    | 1    | Dipstick        |
| 6    | 125-6954    | 1    | Guide-Dipstick  |
| 7    | 125-7022    | 1    | Gasket          |
| 8    | 125-7023    | 1    | Pipe ASM        |
| 12   | 125-7217    | 2    | Bolt            |
| 13   | 125-7074    | 1    | Cooler ASM      |
| 14   | 125-7075    | 1    | O-Ring          |
| 15   | 125-7041    | 1    | Nut-Cooler, Oil |
| 16   | 125-6989    | 1    | Bracket ASM     |

| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 18   | 125-7042    | 1    | Stud          |
| 19   | 125-7024    | 1    | Gasket        |
| 21   | 125-6990    | 1    | Joint         |
| 22   | 125-7078    | 1    | Pipe ASM      |
| 23   | 125-7162    | 1    | Clip          |
| 25   | 125-7191    | 1    | Clamp-Hose    |
| 26   | 127-3804    | 1    | Pipe ASM      |
| 27   | 125-7162    | 1    | Clip          |
| 29   | 127-3805    | 1    | Tube          |
| 30   | 125-7191    | 1    | Clamp-Hose    |
| 31   | 125-7595    | 3    | Bolt          |
| 32   | 125-6918    | 1    | Switch-Oil    |
| 33   | 125-7025    | 1    | Filter-Engine |

 
# Cooling Water System Assembly

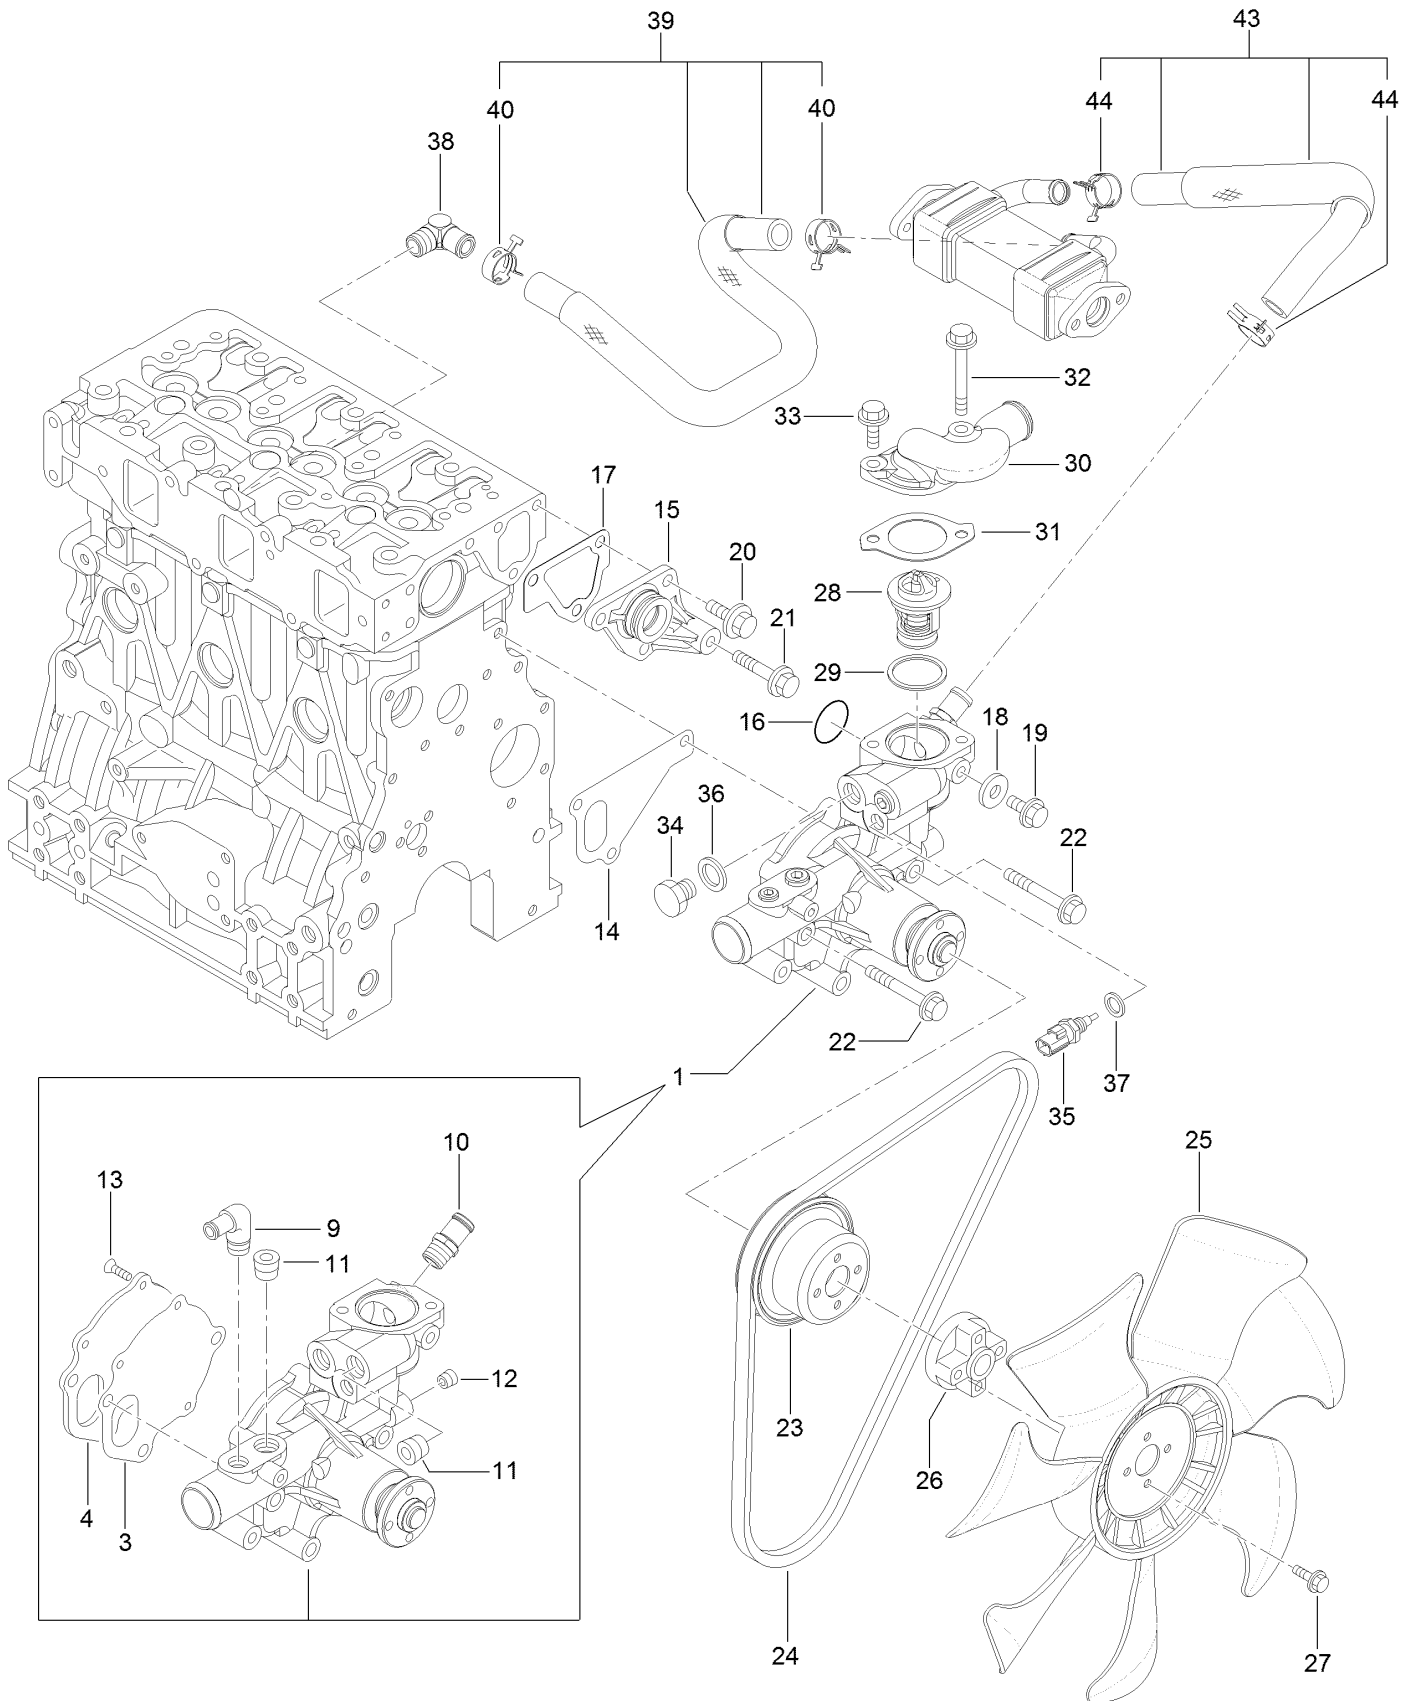

## Cooling Water System Assembly (continued)


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 131-2714           | 1           | Water Pump ASM     | 25          | 127-4702           | 1           | Fan                   |
| 3           | 125-6998           | 1           | Gasket             | 26          | 131-2705           | 1           | Spacer                |
| 4           | 125-6999           | 1           | Plate              | 27          | 131-2739           | 4           | Bolt                  |
| 9           | 125-7001           | 1           | Elbow              | 28          | 125-7029           | 1           | Thermostat            |
| 10          | 127-3017           | 1           | Joint              | 29          | 125-7026           | 1           | Gasket                |
| 11          | 125-7123           | 2           | Plug               | 30          | 131-2728           | 1           | Cover-Thermostat      |
| 12          | 125-7195           | 1           | Plug               | 31          | 125-7110           | 1           | Gasket                |
| 13          | 125-7234           | 3           | Screw              | 32          | 125-7594           | 1           | Bolt                  |
| 14          | 125-7047           | 1           | Gasket             | 33          | 125-7220           | 1           | Bolt                  |
| 15          | 125-6986           | 1           | Joint              | 34          | 125-6953           | 1           | Plug                  |
| 16          | 125-7048           | 1           | O-Ring             | 35          | 125-7124           | 1           | Sensor-Thermostat, CW |
| 17          | 125-6978           | 1           | Gasket             | 36          | 125-6979           | 1           | Gasket                |
| 18          | 125-7192           | 1           | Gasket             | 37          | 125-7176           | 1           | Washer-Seal           |
| 19          | 125-7212           | 1           | Bolt               | 38          | 127-4705           | 1           | Elbow                 |
| 20          | 125-7214           | 3           | Bolt               | 39          | 127-4757           | 1           | E G R-C Pipe ASM      |
| 21          | 125-7219           | 1           | Bolt               | 40          | 127-3020           | 2           | Clip-Hose             |
| 22          | 125-7222           | 3           | Bolt               | 43          | 127-3811           | 1           | CW Pipe ASM           |
| 23          | 127-4712           | 1           | V-Pulley           | 44          | 127-3020           | 2           | Clip-Hose             |
| 24          | 127-4771           | 1           | V-Belt             |             |                    |             |                       |
 
# Fuel System Assembly

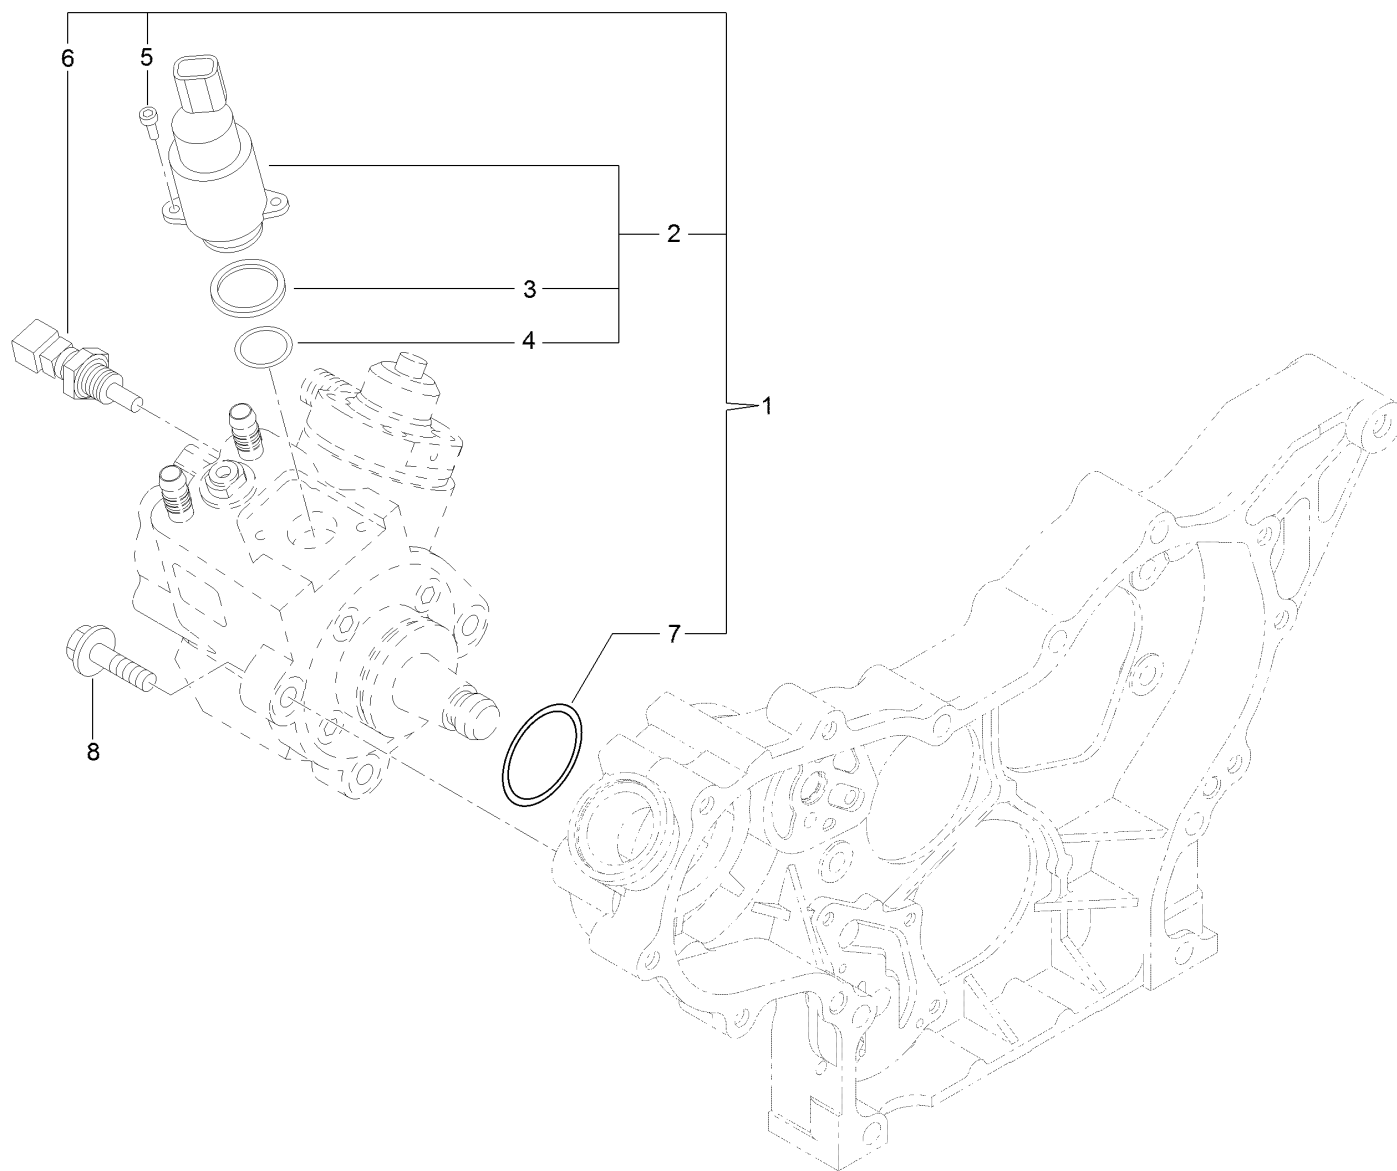

## Fuel System Assembly (continued)

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-3073           | 1           | Fuel Pump ASM      | 5           | 131-2107           | 2           | Bolt               |
| 2           | 131-2103           | 1           | Valve ASM          | 6           | 131-2108           | 1           | Sensor-Temperature |
| 3           | 131-2105           | 1           | Ring-Sealing       | 7           | 127-3074           | 1           | O-Ring             |
| 4           | 131-2106           | 1           | O-Ring             | 8           | 125-7216           | 3           | Bolt               |

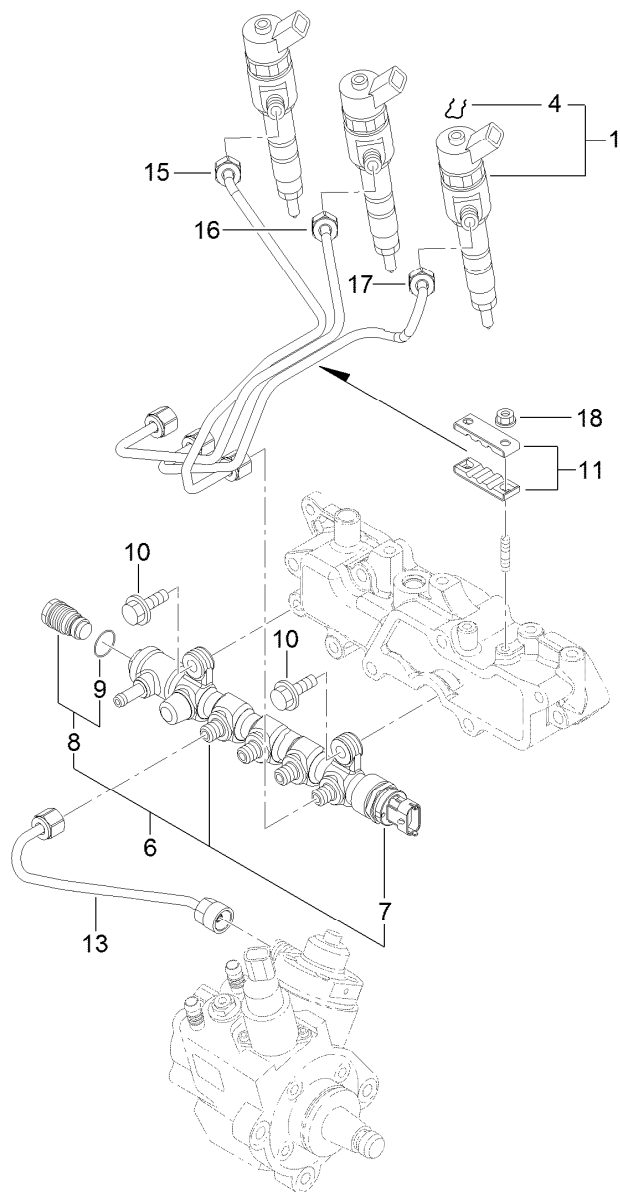

## Fuel Injection Valve Assembly
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 127-4754    | 3    | Injector ASM          |
| 4    | 131-2708    | 3    | Ring, Retaining       |
| 6    | 127-3812    | 1    | Rail ASM              |
| 7    | 131-2709    | 1    | Sensor-Pressure, Rail |
| 8    | 131-2710    | 1    | Valve ASM             |
| 9    | 131-2711    | 1    | O-Ring                |
| 10   | 125-7215    | 2    | Bolt                  |
| 11   | 127-3813    | 2    | Retainer              |
| 13   | 127-3082    | 1    | Rail In Pipe ASM      |
| 15   | 127-3814    | 1    | Injection Pipe ASM    |
| 16   | 127-3083    | 1    | Injection Pipe ASM    |
| 17   | 127-3084    | 1    | Injection Pipe ASM    |
| 18   | 125-7231    | 2    | Nut                   |



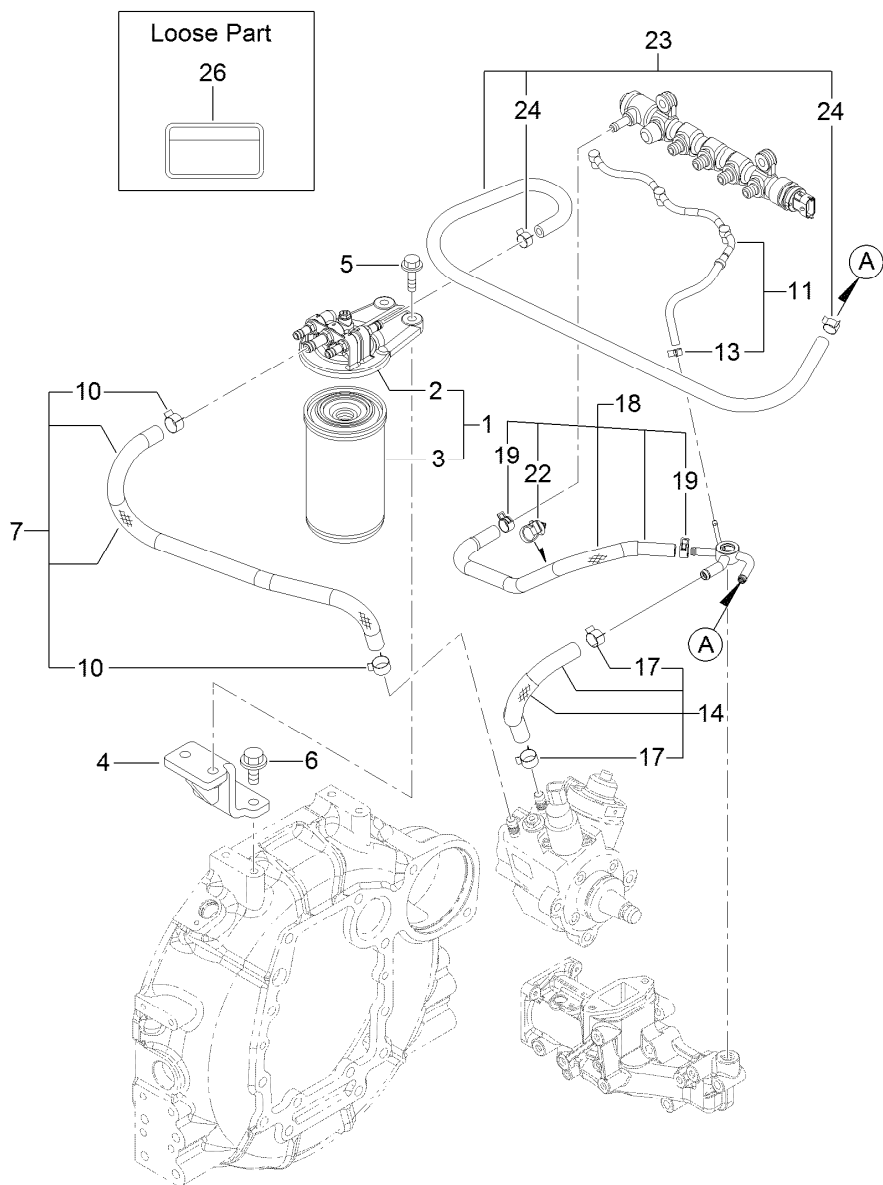


## Fuel Pipe Assembly

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 127-3075    | 1    | Fuel/Oil Filter ASM         |
| 2    | 127-3076    | 1    | Fuel/Oil Filter Bracket ASM |
| 3    | 125-8752    | 1    | Filter-Fuel/Oil             |
| 4    | 131-2731    | 1    | Bracket-Filter, Fuel        |
| 5    | 125-7216    | 2    | Bolt                        |
| 6    | 131-2740    | 1    | Bolt                        |
| 7    | 131-2732    | 1    | Fuel Pipe ASM               |
| 10   | 125-7191    | 2    | Clamp-Hose                  |
| 11   | 127-3816    | 1    | Fuel/Oil Return Pipe ASM    |

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 13   | 127-3172    | 1    | Clamp-Hose              |
| 14   | 127-3078    | 1    | Fuel Pipe ASM           |
| 17   | 125-7191    | 2    | Clamp-Hose              |
| 18   | 127-3817    | 1    | Fuel Pipe ASM           |
| 19   | 127-2950    | 2    | Clip-Hose               |
| 22   | 127-3087    | 1    | Band-Clip               |
| 23   | 131-2733    | 1    | Fuel Pipe ASM           |
| 24   | 127-2950    | 2    | Clip-Hose               |
| 26   | 125-6900    | 1    | Label-Caution, Fuel Oil |
 
# Starting Motor Assembly


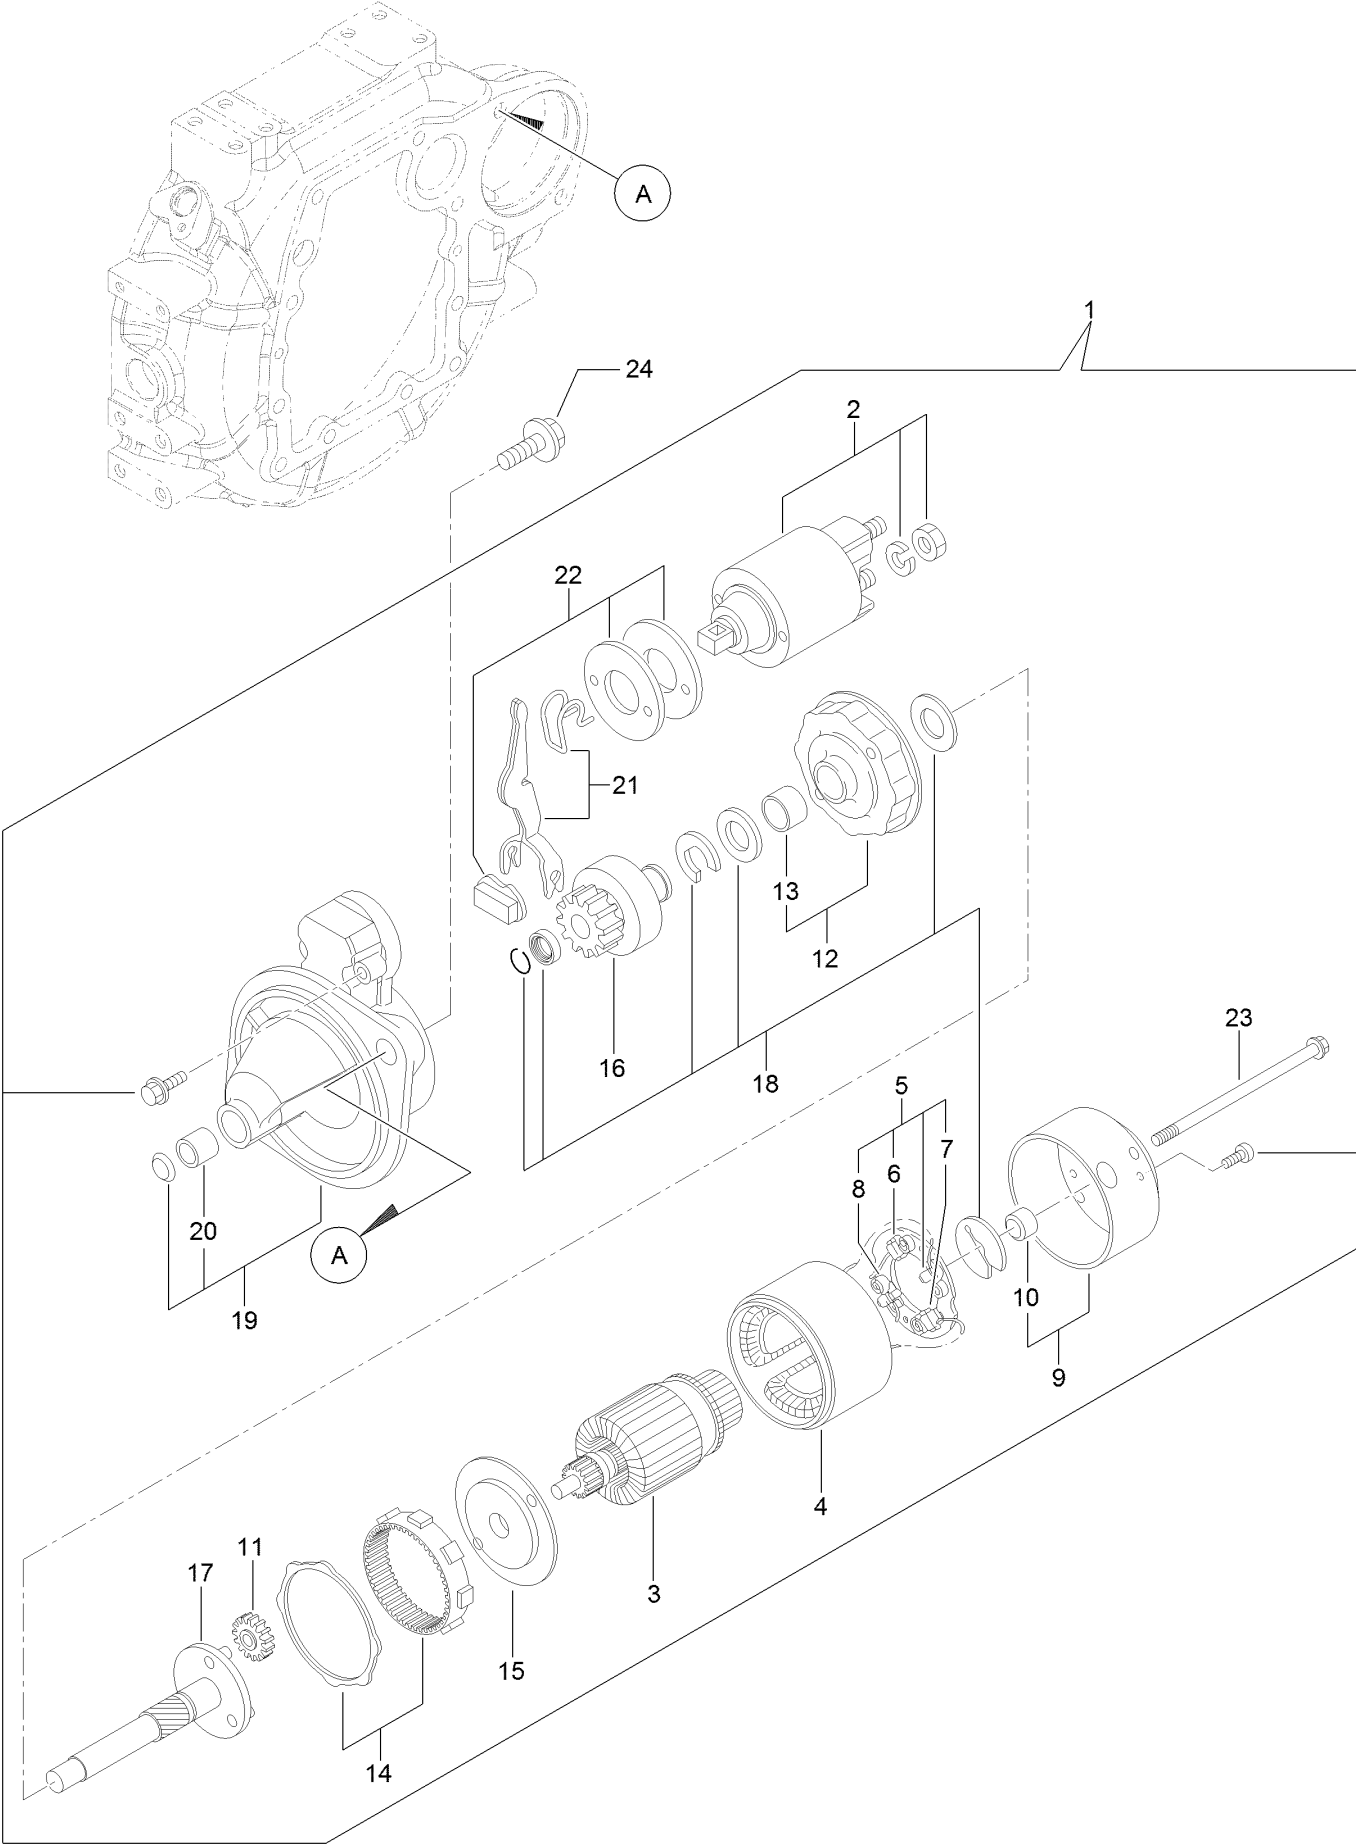


## Starting Motor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-3818           | 1           | Starter ASM        |
| 2           | 127-3819           | 1           | Switch ASM         |
| 3           | 127-3820           | 1           | Armature ASM       |
| 4           | 127-3821           | 1           | Yoke ASM           |
| 5           | 127-3822           | 1           | Brush Holder ASM   |
| 6           | 127-3823           | 2           | Brush              |
| 7           | 127-3824           | 1           | Brush Set          |
| 8           | 127-3825           | 4           | Spring             |
| 9           | 127-3826           | 1           | Cover ASM          |
| 10          | 127-3827           | 1           | Metal              |
| 11          | 127-3828           | 3           | Gear               |
| 12          | 127-3829           | 1           | Bracket            |


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 13          | 127-3830           | 1           | Bracket            |
| 14          | 127-3831           | 1           | Gear               |
| 15          | 127-3832           | 1           | Bracket            |
| 16          | 127-3833           | 1           | Pinion ASM         |
| 17          | 127-3834           | 1           | Shaft              |
| 18          | 127-3835           | 1           | Washer Set         |
| 19          | 127-3836           | 1           | Case ASM           |
| 20          | 127-3837           | 1           | Metal-Starter      |
| 21          | 127-3838           | 1           | Lever Set          |
| 22          | 127-3839           | 1           | Dust Cover ASM     |
| 23          | 127-3840           | 2           | Bolt-Through       |
| 24          | 125-7225           | 2           | Bolt               |
  
# Generator Assembly

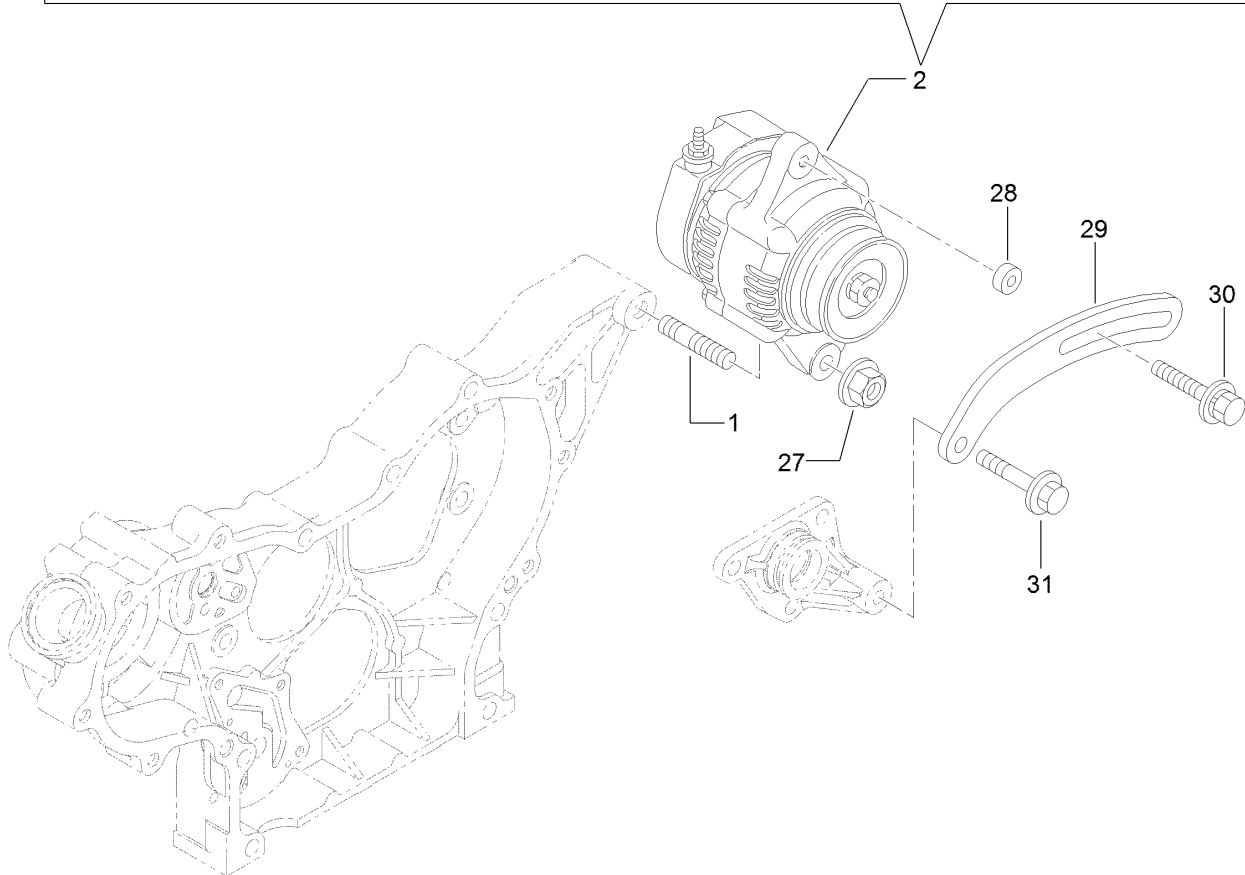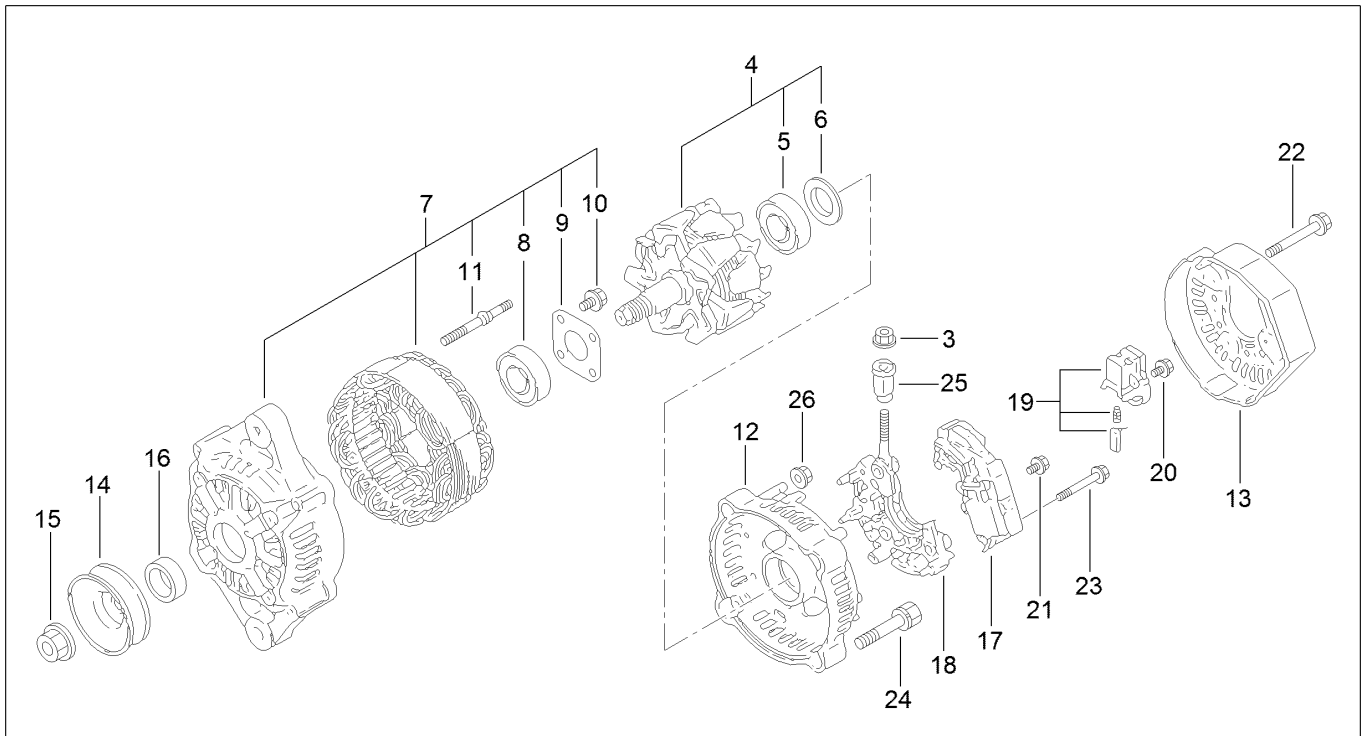


## Generator Assembly (continued)
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-3011           | 1           | Stud               | 17          | 127-3847           | 1           | Regulator ASM      |
| 2           | 127-3841           | 1           | Generator          | 18          | 127-3848           | 1           | Holder             |
| 3           | 127-3190           | 1           | Nut                | 19          | 127-2993           | 1           | Holder             |
| 4           | 127-3843           | 1           | Rotor ASM          | 20          | 127-2965           | 6           | Screw              |
| 5           | 127-2983           | 1           | Bearing-Ball       | 21          | 127-2966           | 1           | Screw              |
| 6           | 127-2962           | 1           | Cover              | 22          | 127-2967           | 3           | Bolt               |
| 7           | 127-3844           | 1           | Frame ASM          | 23          | 127-2968           | 2           | Screw              |
| 8           | 127-2958           | 1           | Bearing-Ball       | 24          | 127-2969           | 2           | Bolt               |
| 9           | 127-2959           | 1           | Plate-Retainer     | 25          | 127-2970           | 1           | Bushing-Insulation |
| 10          | 127-2960           | 4           | Screw              | 26          | 127-2971           | 2           | Nut                |
| 11          | 127-2961           | 2           | Stud               | 27          | 125-7230           | 1           | Nut                |
| 12          | 127-3845           | 1           | Frame              | 28          | 125-6947           | 1           | Spacer             |
| 13          | 127-3846           | 1           | Cover              | 29          | 127-2977           | 1           | Adjuster           |
| 14          | 127-2954           | 1           | Pulley             | 30          | 125-7134           | 1           | Bolt               |
| 15          | 127-2955           | 1           | Nut                | 31          | 125-7219           | 1           | Bolt               |
| 16          | 127-2957           | 1           | Collar             |             |                    |             |                    |

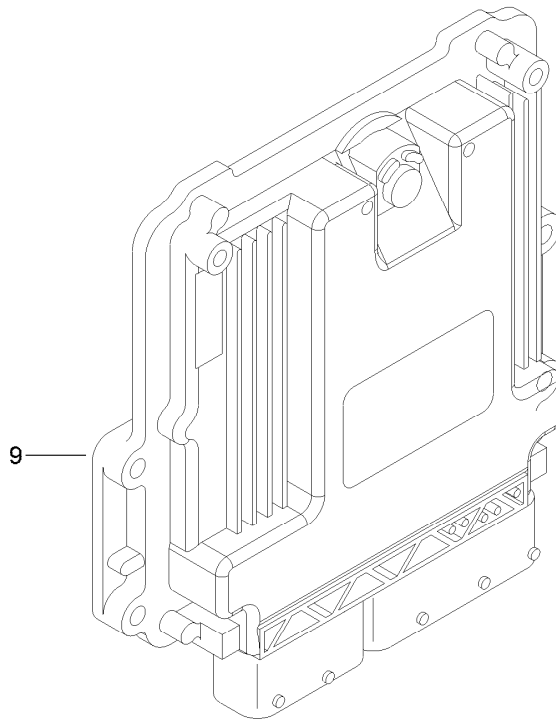

## Electronic Control Unit Assembly


 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 9           | 127-3085           | 1           | E C U ASM          |

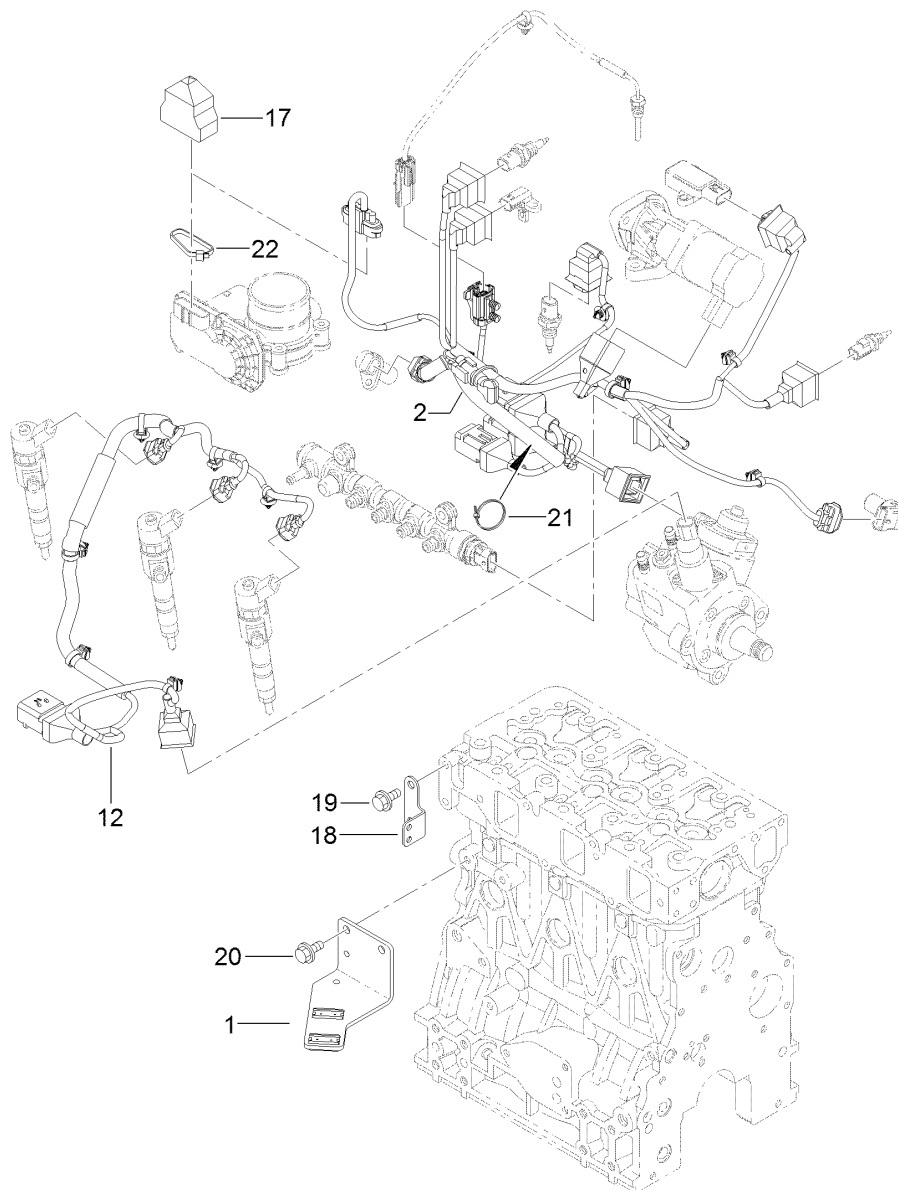

## Electric Parts Assembly

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 131-2735    | 1    | Bracket-Connector |
| 2    | 131-2736    | 1    | Harness-B         |
| 12   | 131-2712    | 1    | Harness           |
| 17   | 131-2713    | 1    | Boot-Cap          |
| 18   | 127-3090    | 1    | Bracket-Harness   |
| 19   | 125-7212    | 2    | Bolt              |
| 20   | 125-7213    | 2    | Bolt              |
| 21   | 127-3187    | 1    | Band              |
| 22   | 127-3188    | 1    | Band              |
  
# Gasket Set

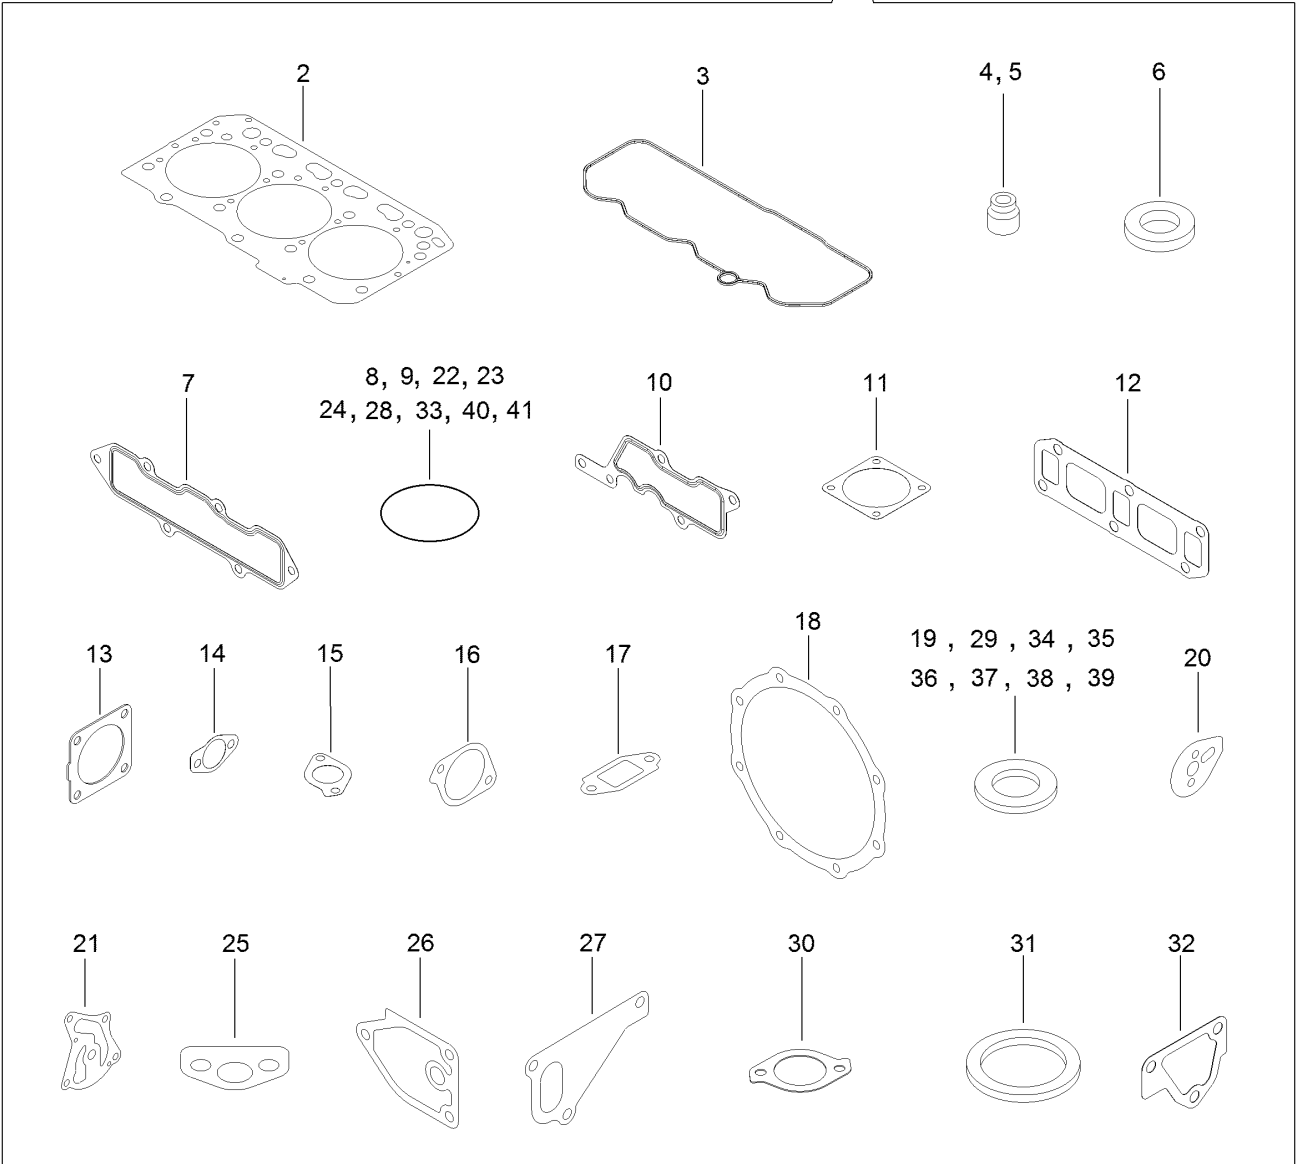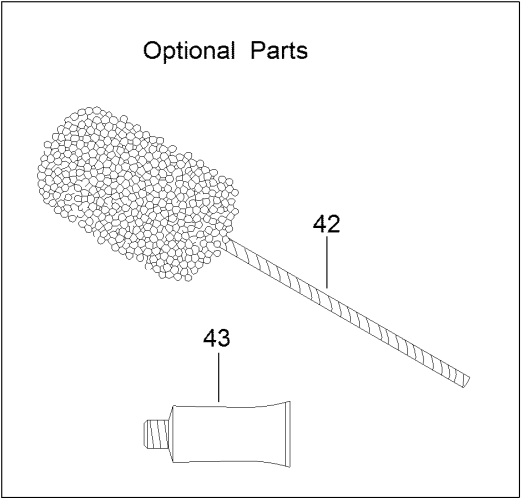



## Gasket Set (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 131-2737           | 1           | Packing                    | 23          | 127-2973           | 1           | O-Ring             |
| 2           | 127-4716           | 1           | Head Gasket ASM            | 24          | 125-7075           | 1           | O-Ring             |
| 3           | 127-3856           | 1           | Gasket-Valve Cover         | 25          | 125-7022           | 1           | Gasket             |
| 4           | 127-2986           | 3           | Seal-Stem, Valve           | 26          | 125-7024           | 1           | Gasket             |
| 5           | 127-3027           | 3           | Seal-Stem, Valve           | 27          | 125-7047           | 1           | Gasket             |
| 6           | 127-3021           | 3           | Gasket-Injector            | 28          | 125-7048           | 1           | O-Ring             |
| 7           | 127-3857           | 1           | Gasket-Manifold, Intake    | 29          | 125-6979           | 1           | Gasket             |
| 8           | 127-3032           | 2           | O Ring-Sensor, Pressure    | 30          | 125-7110           | 1           | Gasket             |
| 9           | 127-3033           | 1           | O-Ring                     | 31          | 125-7026           | 1           | Gasket             |
| 10          | 127-3034           | 1           | Gasket-Collector           | 32          | 125-6978           | 1           | Gasket             |
| 11          | 127-3037           | 2           | Gasket-Throttle            | 33          | 127-3074           | 1           | O-Ring             |
| 12          | 127-3775           | 1           | Gasket-Manifold, Exhaust   | 34          | 125-7174           | 1           | Washer-Seal        |
| 13          | 127-2987           | 1           | Gasket-Silencer            | 35          | 125-7176           | 1           | Washer-Seal        |
| 14          | 127-3043           | 2           | Gasket-Cooler, E G R       | 36          | 127-3166           | 2           | Washer-Seal        |
| 15          | 127-3016           | 1           | Gasket                     | 37          | 125-7177           | 1           | Washer-Seal        |
| 16          | 127-3050           | 1           | Gasket-Intake Valve, E G R | 38          | 125-7192           | 1           | Gasket             |
| 17          | 127-3051           | 1           | Gasket-Out Valve, E G R    | 39          | 127-3174           | 2           | Gasket             |
| 18          | 127-3859           | 2           | Gasket-D P F               | 40          | 93-0418            | 3           | O-Ring             |
| 19          | 127-3056           | 4           | Gasket-Sensor              | 41          | 125-7197           | 2           | O-Ring             |
| 20          | 127-3069           | 1           | Gasket-Idle, Shaft B       | 42          | 127-3000           | 1           | Hone               |
| 21          | 127-3004           | 1           | Gasket                     | 43          | 125-7248           | 1           | Gasket-Liquid      |
| 22          | 125-6909           | 2           | O-Ring                     |             |                    |             |                    |

# Attachments and Accessories

## For 31202 Groundsmaster 360 4-Wheel Drive Multi-Purpose Machine with Cab

| Product Name                                                                                                                       | Model/Part  |
|------------------------------------------------------------------------------------------------------------------------------------|-------------|
| Green Diesel Cap .....                                                                                                             | 107-2172    |
| Premium Transmission/Hydraulic Tractor Fluid (55 Gallon Drum).....                                                                 | 108-1183    |
| Premium Transmission/Hydraulic Tractor Fluid (5 Gallon Pail) .....                                                                 | 108-1184    |
| 5in Air Cleaner Safety Element.....                                                                                                | 114-4057    |
| MVP Filter Kit.....                                                                                                                | 30261       |
| Wireless Hourmeter .....                                                                                                           | 115-4754    |
| Speed Reduction Kit, 2015 and After Groundsmaster 360 Multi-Purpose Machine .....                                                  | 30287       |
| Beacon Kit .....                                                                                                                   | 120-0256    |
| Electrical Accessory Kit .....                                                                                                     | 115-0019    |
| Registration Plate Kit .....                                                                                                       | 120-6678    |
| Jack Stand Kit.....                                                                                                                | 30579       |
| Hitch Kit .....                                                                                                                    | 130-8716    |
| Tire (23x10.50-12) .....                                                                                                           | 136-5375    |
| Quick Attach Front Frame.....                                                                                                      | 30509       |
| V-Plow Mounting Kit.....                                                                                                           | 30378       |
| Diagnostic Display Box .....                                                                                                       | 85-4750     |
| Weight Transfer Kit .....                                                                                                          | 120-6683    |
| Auxiliary Power Unit.....                                                                                                          | 120-6675    |
| Winter Attachment Joystick Kit .....                                                                                               | 31219       |
| 72in Side Discharge Deck.....                                                                                                      | 30481       |
| Blade-Belt Kit, 72in Side Discharge Deck .....                                                                                     | 105-7272    |
| Atomic Blade Kit (3 Blade Pack) .....                                                                                              | 119-8020    |
| Premium Engine Oil 15w40 (55 Gallon Drum) .....                                                                                    | 121-6394    |
| Blade-Rotary, Atomic (24.5in).....                                                                                                 | 110-0624-03 |
| Premium Engine Oil 15w40 (5 Gallon Pail) .....                                                                                     | 121-6395    |
| Blade-Rotary, Medium Flow (24.5in).....                                                                                            | 110-0621-03 |
| Leaf Mulching Kit .....                                                                                                            | 108-5273    |
| 72in Side Discharge Mower (CE).....                                                                                                | 30354       |
| CE Kit, 72in Side Deck With French Guards .....                                                                                    | 30679       |
| 72in Guardian and Rear Discharge CE Mower Cover Kit.....                                                                           | 30685       |
| 72in Base Deck.....                                                                                                                | 30353       |
| Blade-Belt Kit, 72in Guardian Only .....                                                                                           | 105-7271    |
| 72in Guardian Recycler Completion Kit .....                                                                                        | 30304       |
| 72in Guardian Fine Recycler Completion Kit .....                                                                                   | 30346       |
| Bahiagrass Baffle Kit .....                                                                                                        | 105-7269    |
| Blade-Flat .....                                                                                                                   | 112-9586-03 |
| 72 Inch Rear Discharge Completion Kit .....                                                                                        | 30549       |
| Road Light Kit (North American) .....                                                                                              | 30517       |
| Work Light Kit .....                                                                                                               | 114-5610    |
| Cloth Backrest Extension Kit.....                                                                                                  | 120-0567    |
| CE Guard Kit.....                                                                                                                  | 30689       |
| 100in Rear Discharge Deck .....                                                                                                    | 31101       |
| Adapter Kit, 100in Rear Discharge Mower for 2-Wheel Drive or 2013 and Before 4-Wheel Drive<br>Groundsmaster 360 Traction Unit..... | 31102       |
| Adapter Kit, 100 Inch Rear Discharge Deck for 2014 and After Groundsmaster 360 4-Wheel Drive Traction<br>Unit .....                | 31103       |

Attachments and Accessories (continued)

Leaf Mulching Kit for 100in Rear Discharge Deck .....31105

100in CE Mower Cover Kit..... 30687

Standard Blade Kit for 100 Inch Rear Discharge Deck ..... 131-3364

Blade-Combination (19in)..... 106-7166-03

Blade-Combination (25.18in) ..... 125-9444-03



**Count on it.**