

48" Dozer Blade 5XI Garden Tractor Model No. 79355-210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form \mathbf{nX} \mathbf{y} . The \mathbf{n} represents the quantity of the part, the \mathbf{X} is the multiplication symbol, and the \mathbf{y} represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	3		
Blade Assembly	4		
Mounting Assembly	5		
Maintenance	6–7		


Accessories

Description Model / Part No. Description Model / Part No.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ			slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	=	SRH	
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head		-
	thread forming		

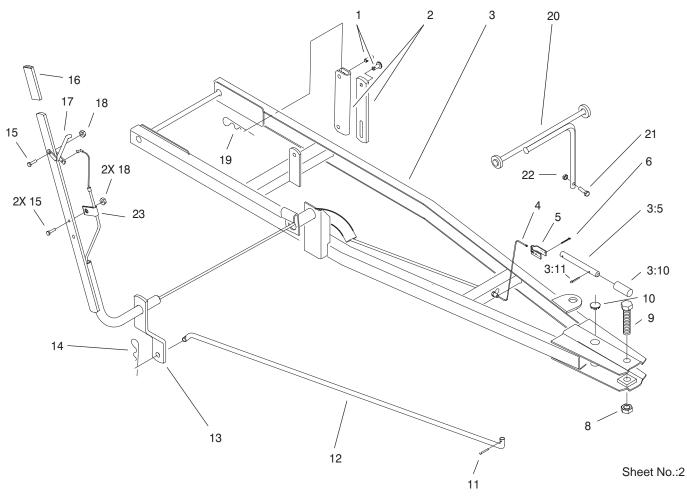

Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	283–2	2	Pin-Clevis
1	98–5055	2	Pin-Weld
2	94–7987–03	1	Link – Lift
2	94–7793–03	1	Link – Lift
3	104-5023-01	1	Frame
3:5	88–6520	1	Pin-Index
3:10	2354	1	Spring-Compression
3:11	3272–11	1	Pin-Cotter
4	104–2483	1	Cable-Indexing
5	94–7782	1	Bracket – Cable End
6	3272–12	1	Pin-Cotter
8	9156404	1	Nut-Lock
9	3216–7	1	Screw-HH
10	4944	2	Plug
11	3272–11	1	Pin-Cotter
12	94–7787	1	Rod – Blade Control
13	104–5022–01	1	Lever-Indexing
14	9335124	1	Pin-Hair
15	321–6	3	Screw-HH
16	5359	1	Grip
17	98–1743	1	Lever
18	32146–17	3	Nut-Lock
19	9335054	2	Pin-Hair
20	99–9699–03	1	Stabilizer
21	322–6	1	Screw-HH
22	3296–29	1	Nut-Lock


Ref. No.	Part No.	Qty.	Description
Ref. No. 23	Part No. 2412–32	Qty.	Description R-Clamp-Throttle/Coke

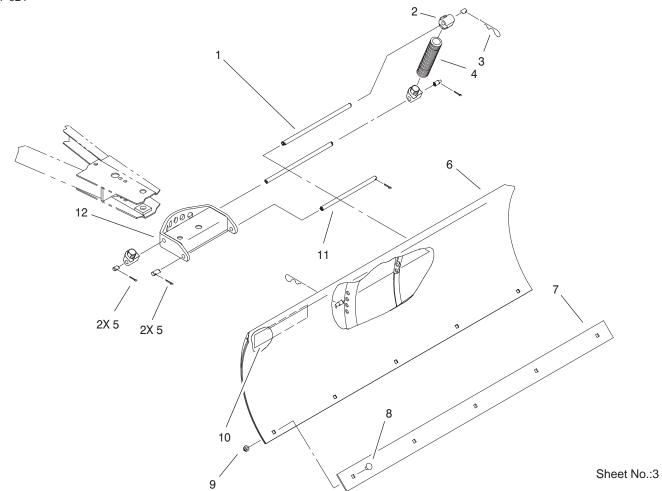

Blade Assembly

Ref. No.	Part No.	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12		242241155111	Rod-Blade Pivot Lug-Spring Pin-Hair Spring-Trip Return Pin-Cotter Blade ASM Plate - Blade Edge Screw-CARR Nut-Lock, NI Decal-Attachment Rod-Lower Plated Quadrant

Ref. No.	Part No.	Qty.	Description

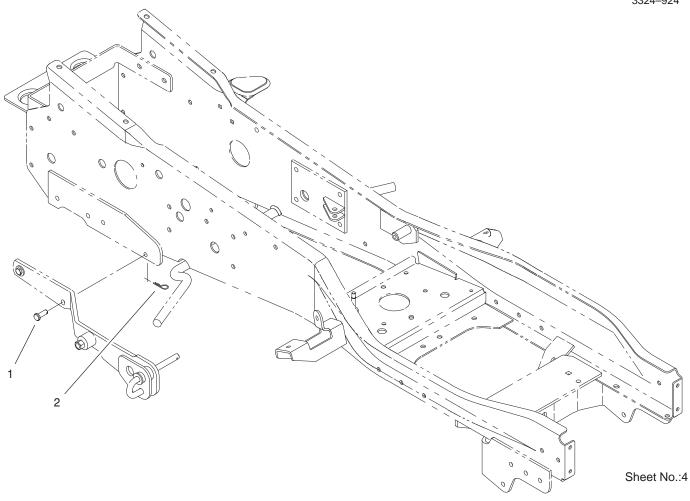

Mounting Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1 2	283–2 9335044	2	Pin-Clevis Pin-hair				

Maintenance Record

Date				

Maintenance Record

Date				

