TORO_®

Stand Kit Z Master[®] 100 Series Attachment Model No. 105–1621

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001 All Rights Reserved

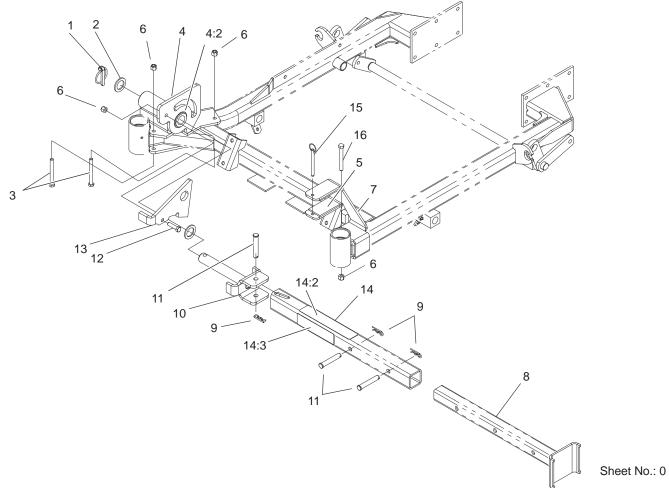

Stand Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1 2 3 4 4:2 5 6 7 8 9 10 11 12 13 14 14:2 14:3 15 16	100-6547 3296-39 100-6538-01 105-1612-01 3290-355 100-9692-01 283-55 323-8 100-9686-01 105-1642 104-7758 104-7759 105-1647	1 2 2 2 4 1 1 3 1 3 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Pin–Lynch Washer–Thrust Screw–HH Hub & Clamp ASM Bushing–Special Cushion – Rubber Nut–Lock, NI Bracket–Cradle Inner Leg ASM Pin–Hair Pivot Pin ASM Pin–Clevis Screw–HH Bracket–Latch Leg ASM Decal–Z Stand Decal–Warning Pin – Hitch, Cotterless Screw–HH				