# **TORO**<sub>®</sub>

## **Smooth Castor Wheel**

Timecutter<sup>™</sup> Z Riding Mower Part No. 105–1856

### Parts Catalog

#### **Ordering Replacement Parts**

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

#### **Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

#### **Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2001 All Rights Reserved

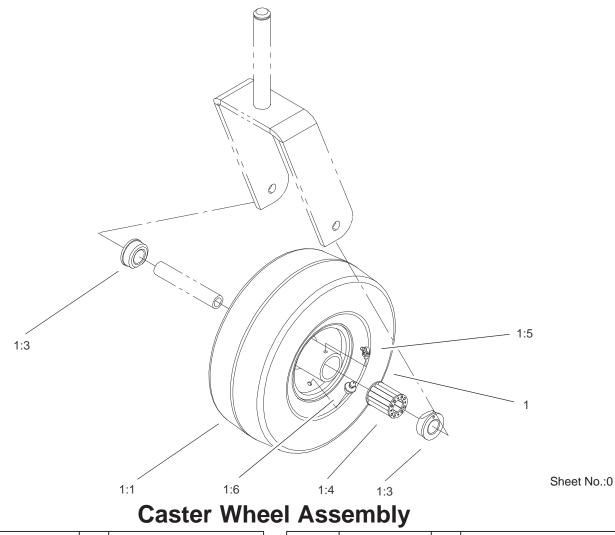

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1 1:1 1:3 1:4 1:5	105–1863 105–1864 62–5580 83–4740 302–11 232–21	2 1 2 1 1 1 1 1	Caster Wheel ASM Tire-410/350 X 4 Bearing-Outside Bearing Fitting-Lube, 45° Valve -Stem Tube-Inner w/Valve				

Not illustrated \*