

Part No. 105-0898

Parking Brake ProLine Mid-Size Hydro Mower Attachment

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

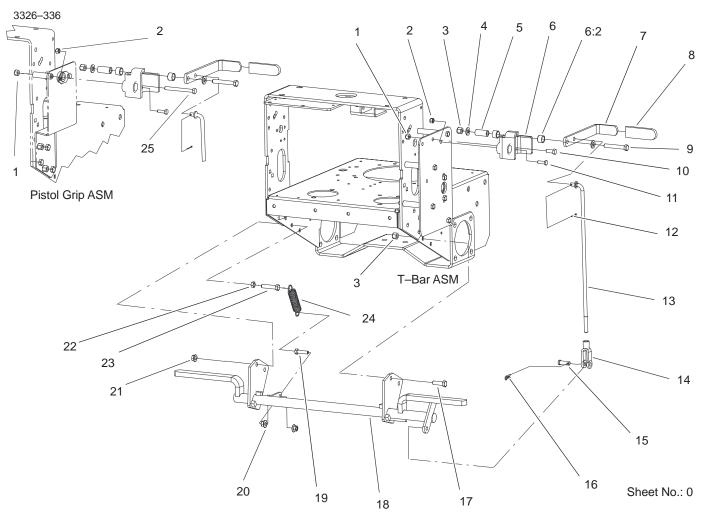

Parking Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	3296–29	1	Nut-Lock NI
2	3296-42	1	Nut-Lock, NI
3	3296–39	4	· ·
4		2	
5		1	Bushing-Pivot
6		1	
6:2	1	2	Sleeve-Bushing
1	105-0881-01	1	Handle-Parking Brake
1	1-303020	1	Grip,Lever
9		1	Screw-HH
	322–4	1	Screw-HH
11	1	1	Screw-HH
12	3272-4	1	Pin-Cotter
13	105-0880	1	Rod-Link
14	1–633131	1	Yoke–Linkage, Brake
15	1-808285	1	Pin-Clevis
	3290–307	1	Pin-Hair
17	323–7	3	Screw-HH
18	105-0865-01	1	Brake ASM
19	322–6	1	Screw-HH
20	32128–20	2	Nut–HF
21	3290-357	1	Nut–Flange, Lock
22	3218–3	1	Nut-Jam
23	323–9	1	Screw-HH
24	1-323161	1	Spring-Idler
25	322–20	1	Screw-HH

Ref. No.	Part No.	Qty.	Description