



Count on it.

Parts Catalog

**Fuel Pump Replacement Kit
Diesel-Powered Traction Unit**

Model No. 144-4020



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 360	4
Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 3280	5
Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 7200 Series	6
Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 4000 Series	7
Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 3500 Series and Reelmaster 3100 and 3500 Series	8
Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 4500, 4700 and Reelmaster 7000	9
Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 4300 Series and Reelmaster 5000 Series	10
Fuel Pump Replacement Kit Assembly 144-4020 Reelmaster 7600	11
Fuel Pump Replacement Kit Assembly 144-4020 Multi Pro 5800	12
Fuel Pump Replacement Kit Assembly 144-4020 Workman MDX-D	13
Fuel Pump Replacement Kit Assembly 144-4020 Workman HDX-D	14
Fuel Pump Replacement Kit Assembly 144-4020 Workman HDX-D	15
Fuel Pump Replacement Kit Assembly 144-4020 Workman HDX-D	16
Fuel Pump Replacement Kit Assembly 144-4020 Greensmaster 3400 Series	17
Fuel Pump Replacement Kit Assembly 144-4020 TX 1000	18
Fuel Pump Replacement Kit Assembly 144-4020 TX 525	19

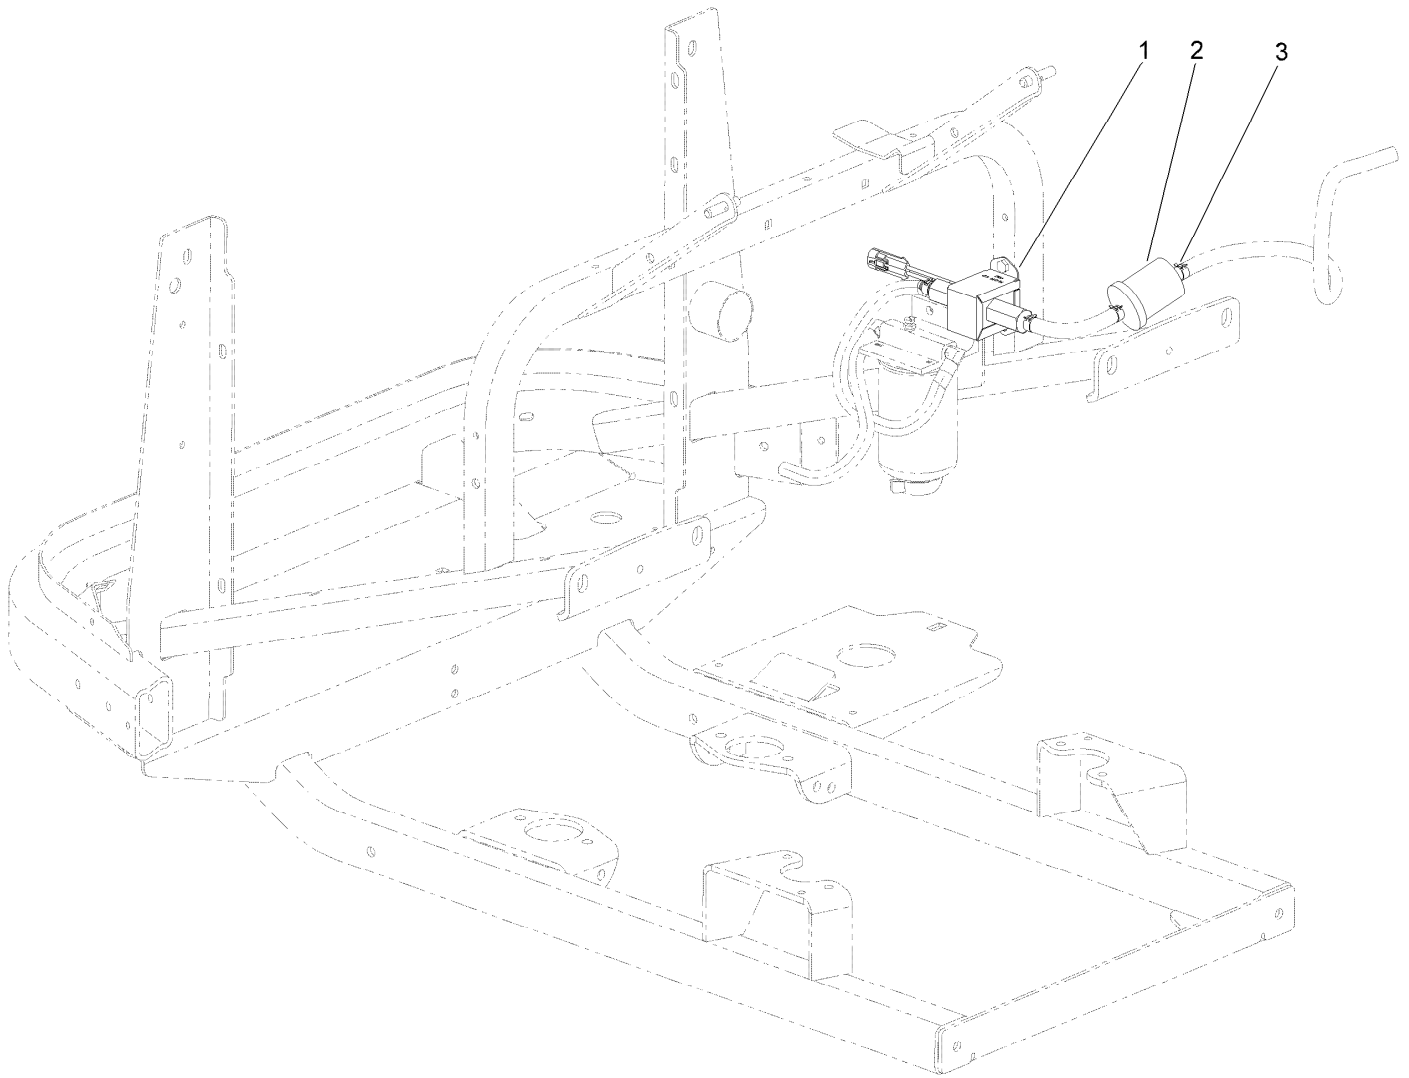


Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 360

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-3160	1	Pump-Fuel, Electric
2	98-7612	1	Filter-Fuel
3	92-2379	4	Clamp-Hose

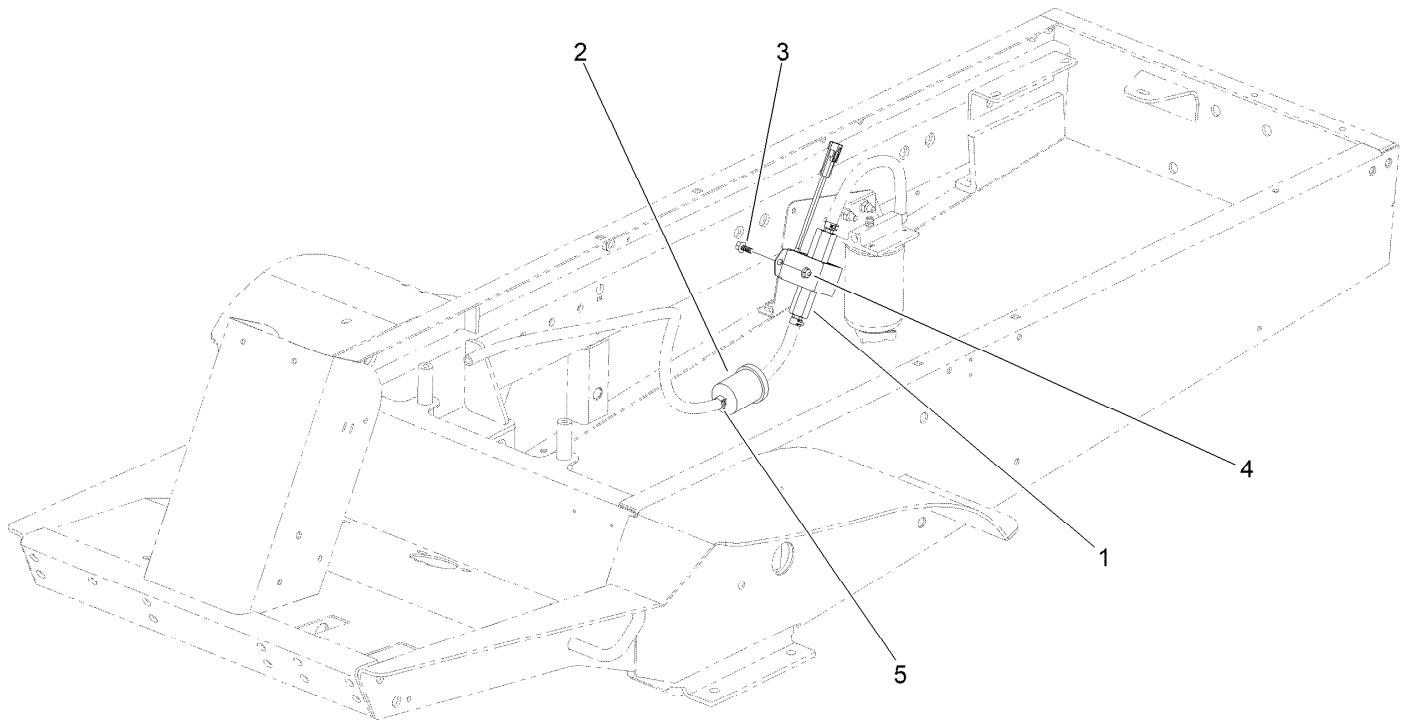


Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 3280

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-3160	1	Pump-Fuel, Electric
2	98-7612	1	Filter-Fuel
3	99-6810	2	Screw-HHF
4	104-7201	2	Nut-HF, NI
5	92-2379	4	Clamp-Hose

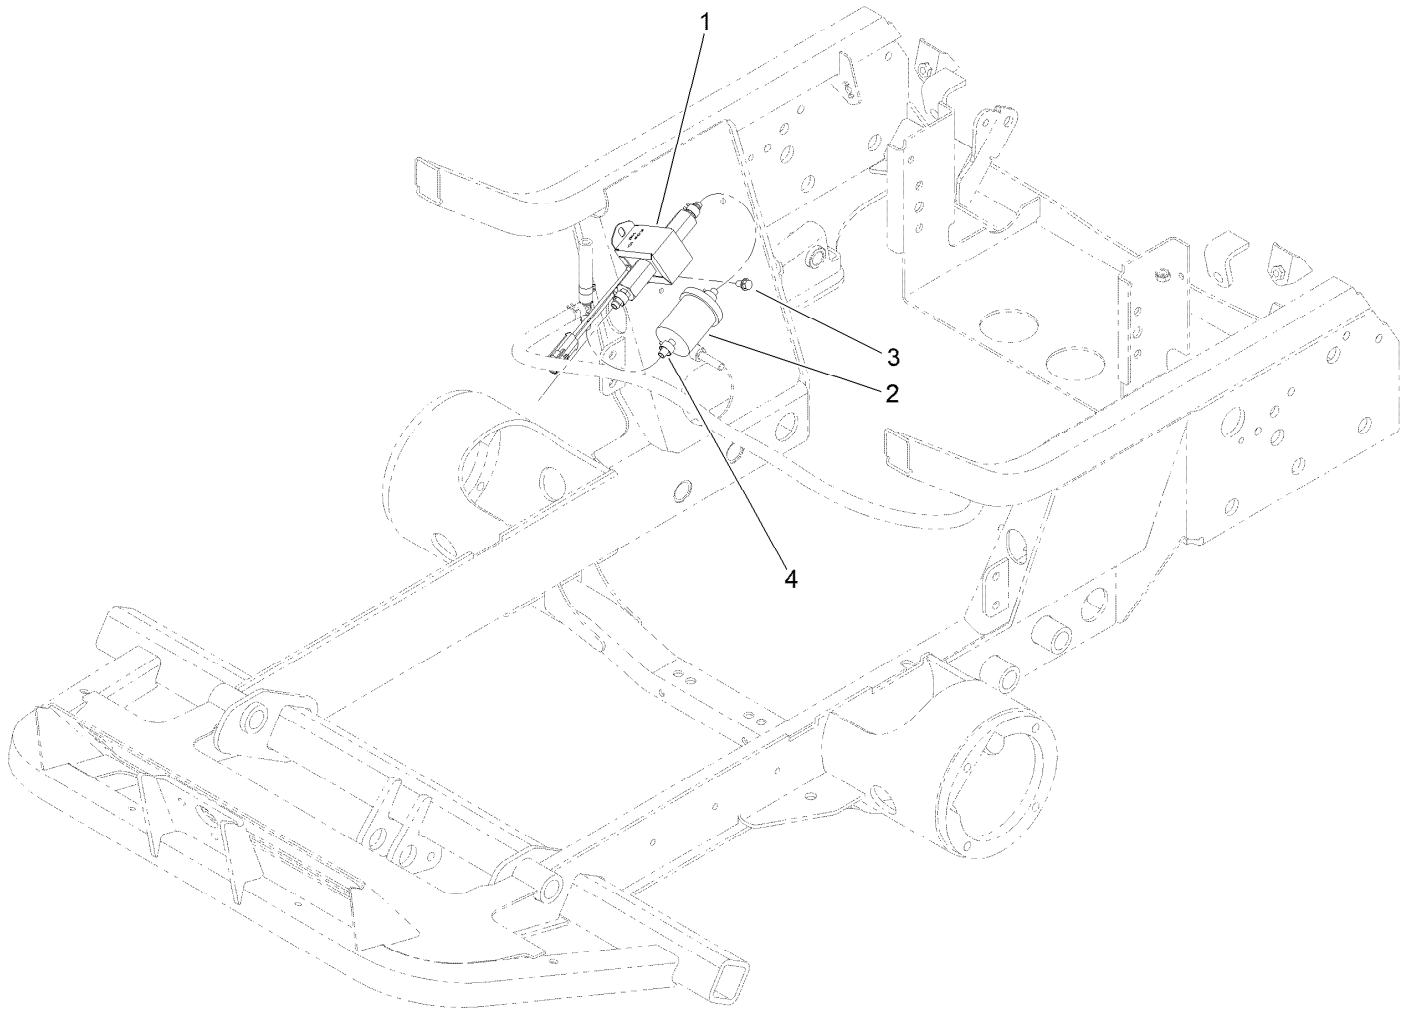


Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 7200 Series

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-3160	1	Pump-Fuel, Electric
2	98-7612	1	Filter-Fuel
3	32144-4	1	Screw-HWH
4	92-2379	4	Clamp-Hose

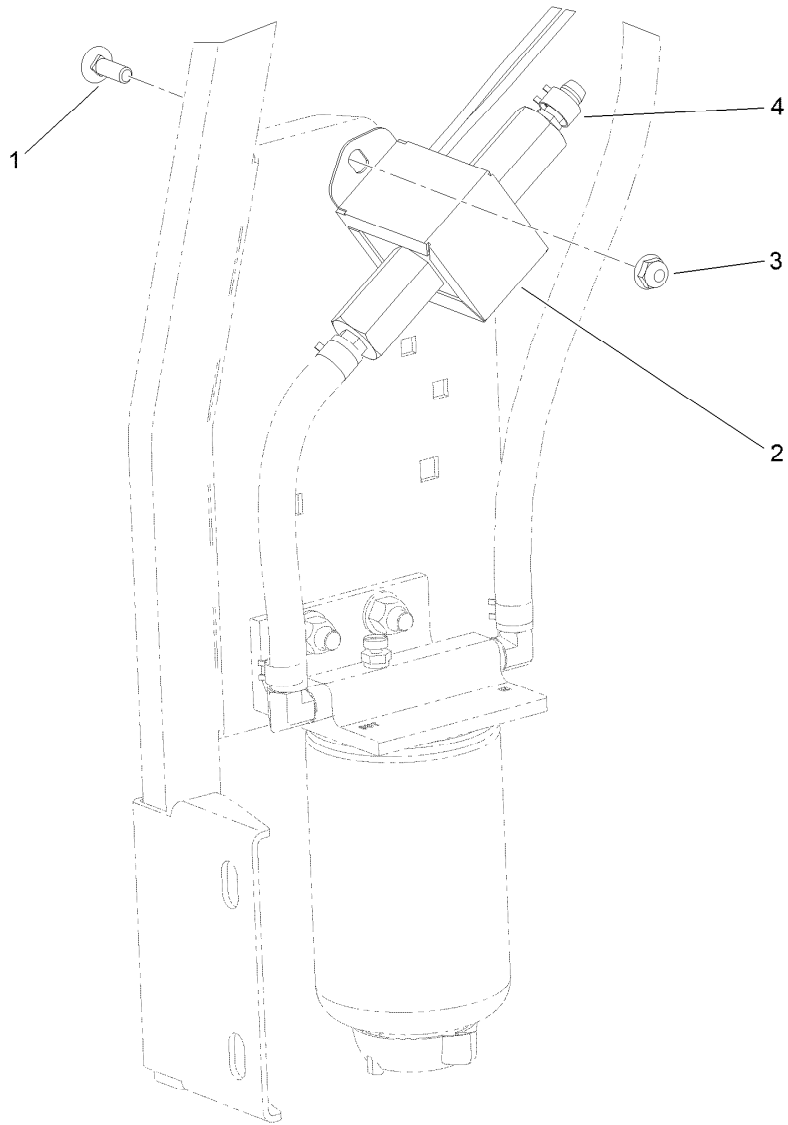


Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 4000 Series

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-807512	2	Bolt-CARR
2	145-3160	1	Pump-Fuel, Electric
3	104-7201	2	Nut-HF, NI
4	92-2379	2	Clamp-Hose

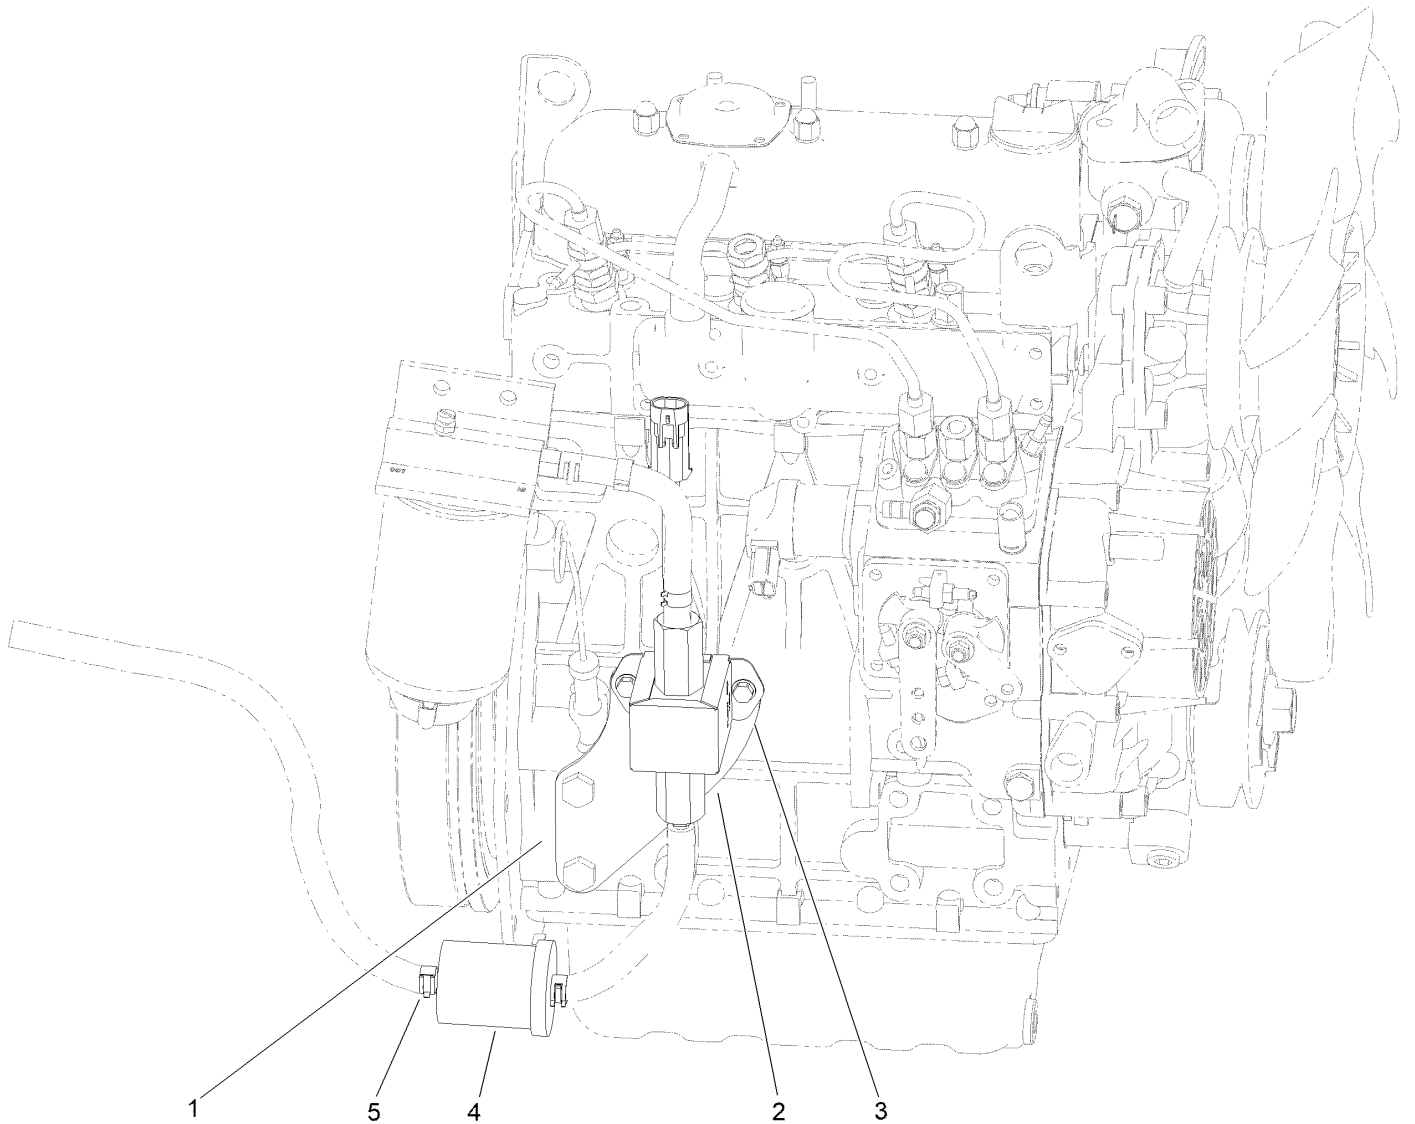


Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 3500 Series and Reelmaster 3100 and 3500 Series

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-3818-0P	1	Plate-Fuel Pump
2	145-3160	1	Pump-Fuel, Electric
3	32144-4	2	Screw-HWH
4	98-7612	1	Filter-Fuel
5	92-2379	4	Clamp-Hose

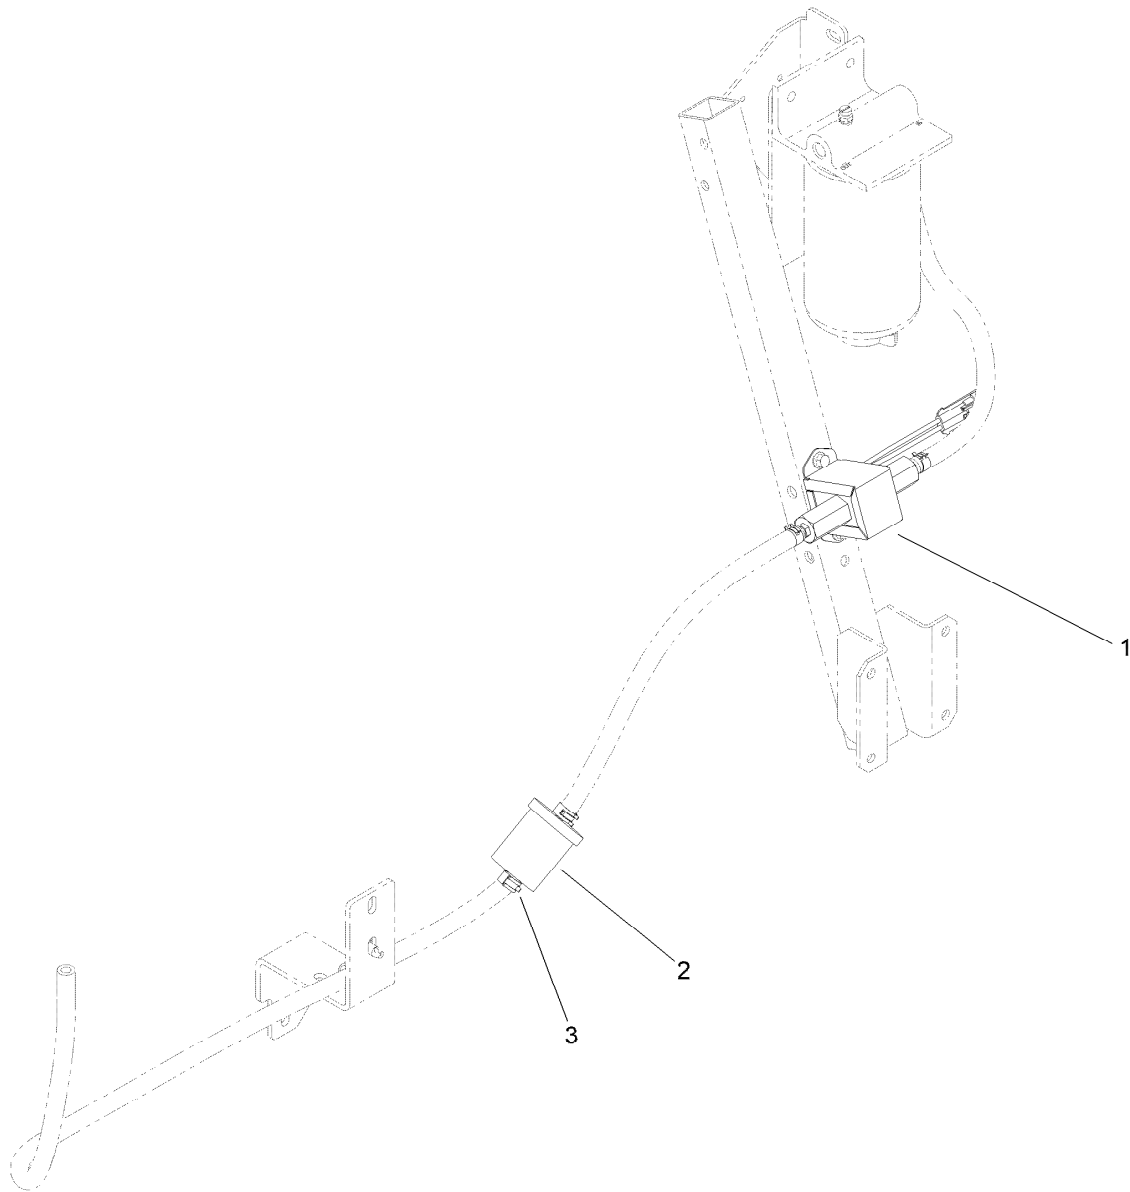


Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 4500, 4700 and Reelmaster 7000

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-3160	1	Pump-Fuel, Electric
2	98-7612	1	Filter-Fuel
3	92-2379	4	Clamp-Hose

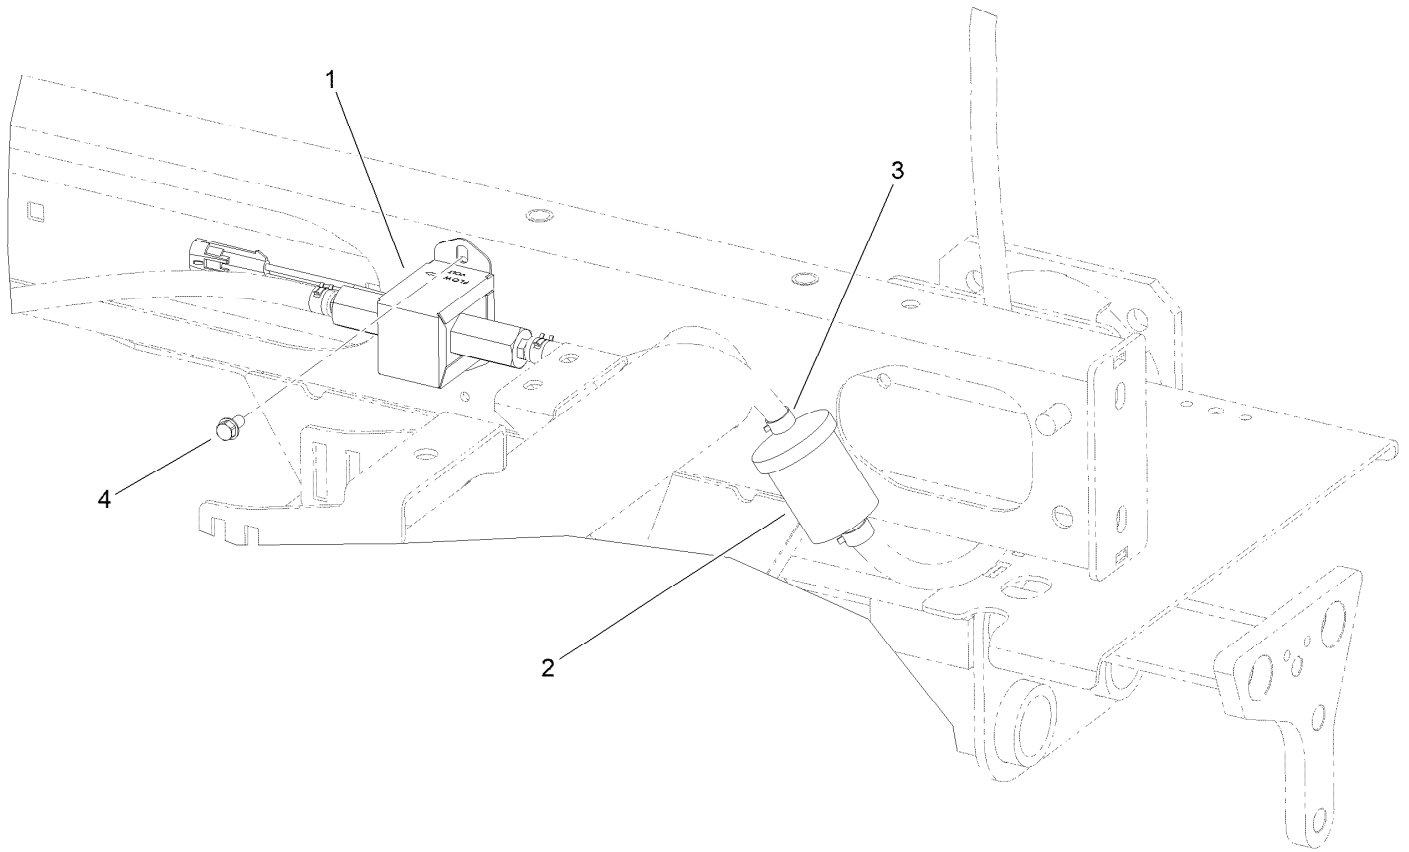


Fuel Pump Replacement Kit Assembly 144-4020 Groundsmaster 4300 Series and Reelmaster 5000 Series

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-3160	1	Pump-Fuel, Electric
2	98-7612	1	Filter-Fuel
3	92-2379	4	Clamp-Hose
4	32144-4	2	Screw-HWH

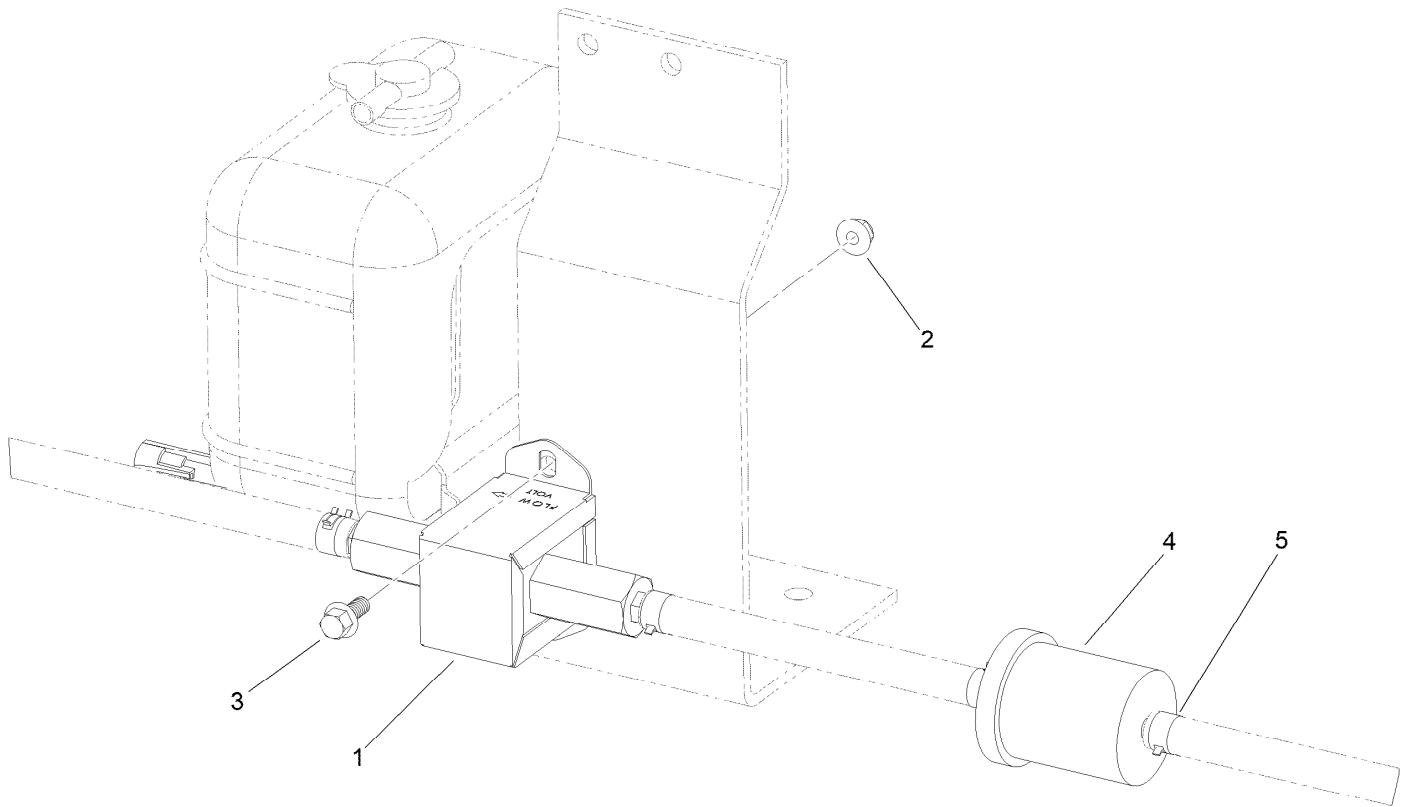


Fuel Pump Replacement Kit Assembly 144-4020 Reelmaster 7600

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-3160	1	Pump-Fuel, Electric
2	104-7201	2	Nut-HF, NI
3	99-6810	2	Screw-HHF
4	98-7612	1	Filter-Fuel
5	92-2379	4	Clamp-Hose

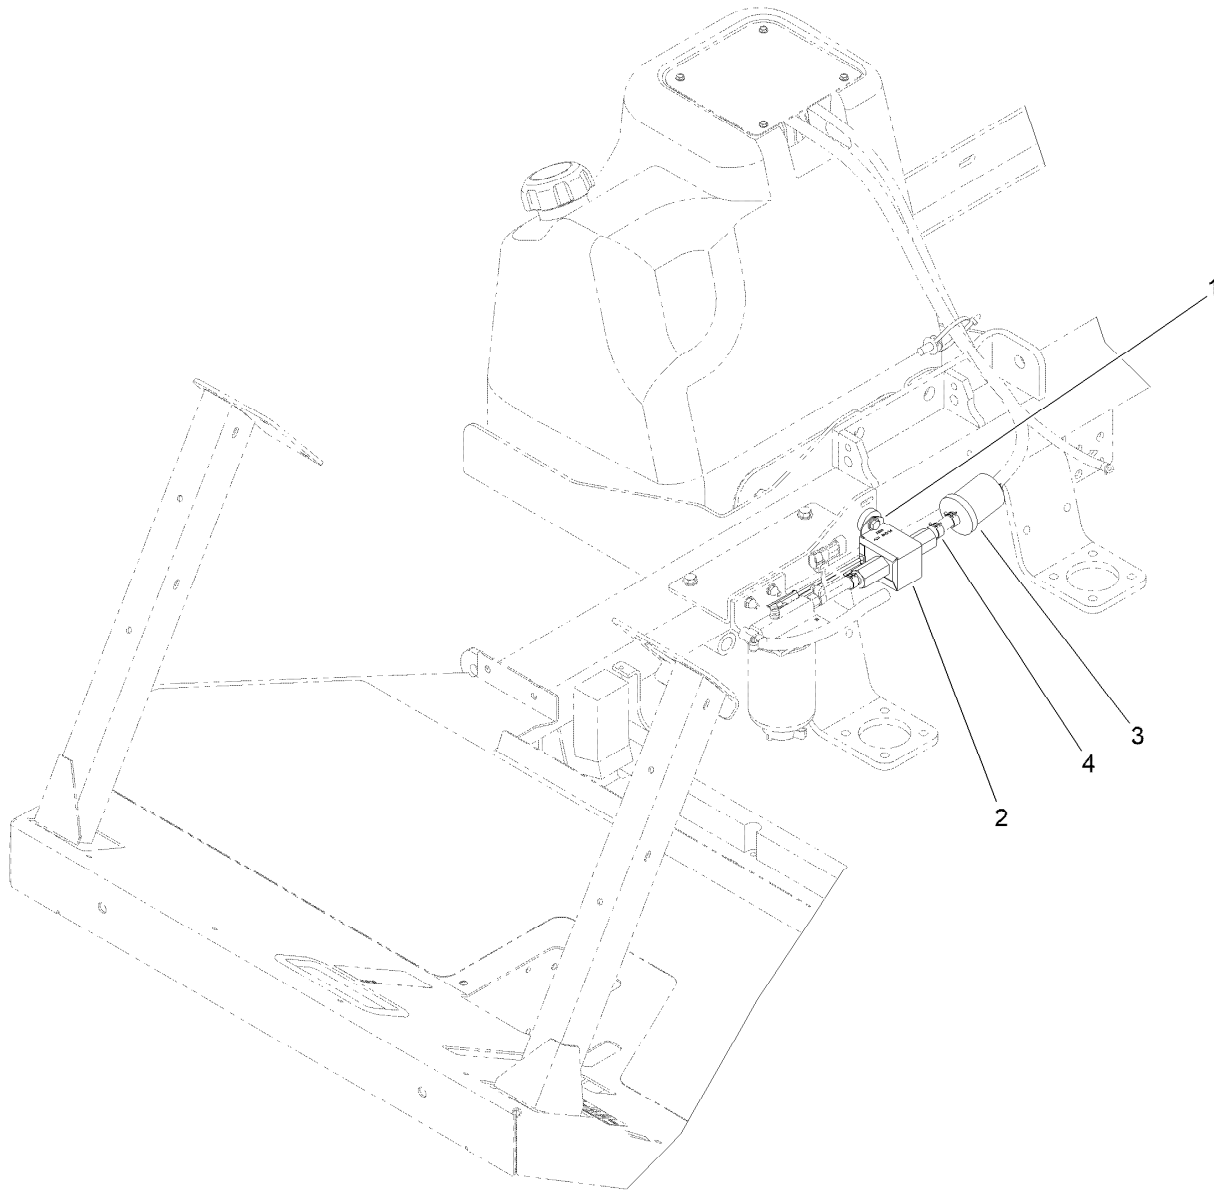


Fuel Pump Replacement Kit Assembly 144-4020 Multi Pro 5800

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-3657	1	Spacer
2	145-3160	1	Pump-Fuel, Electric
3	98-7612	1	Filter-Fuel
4	92-2379	4	Clamp-Hose

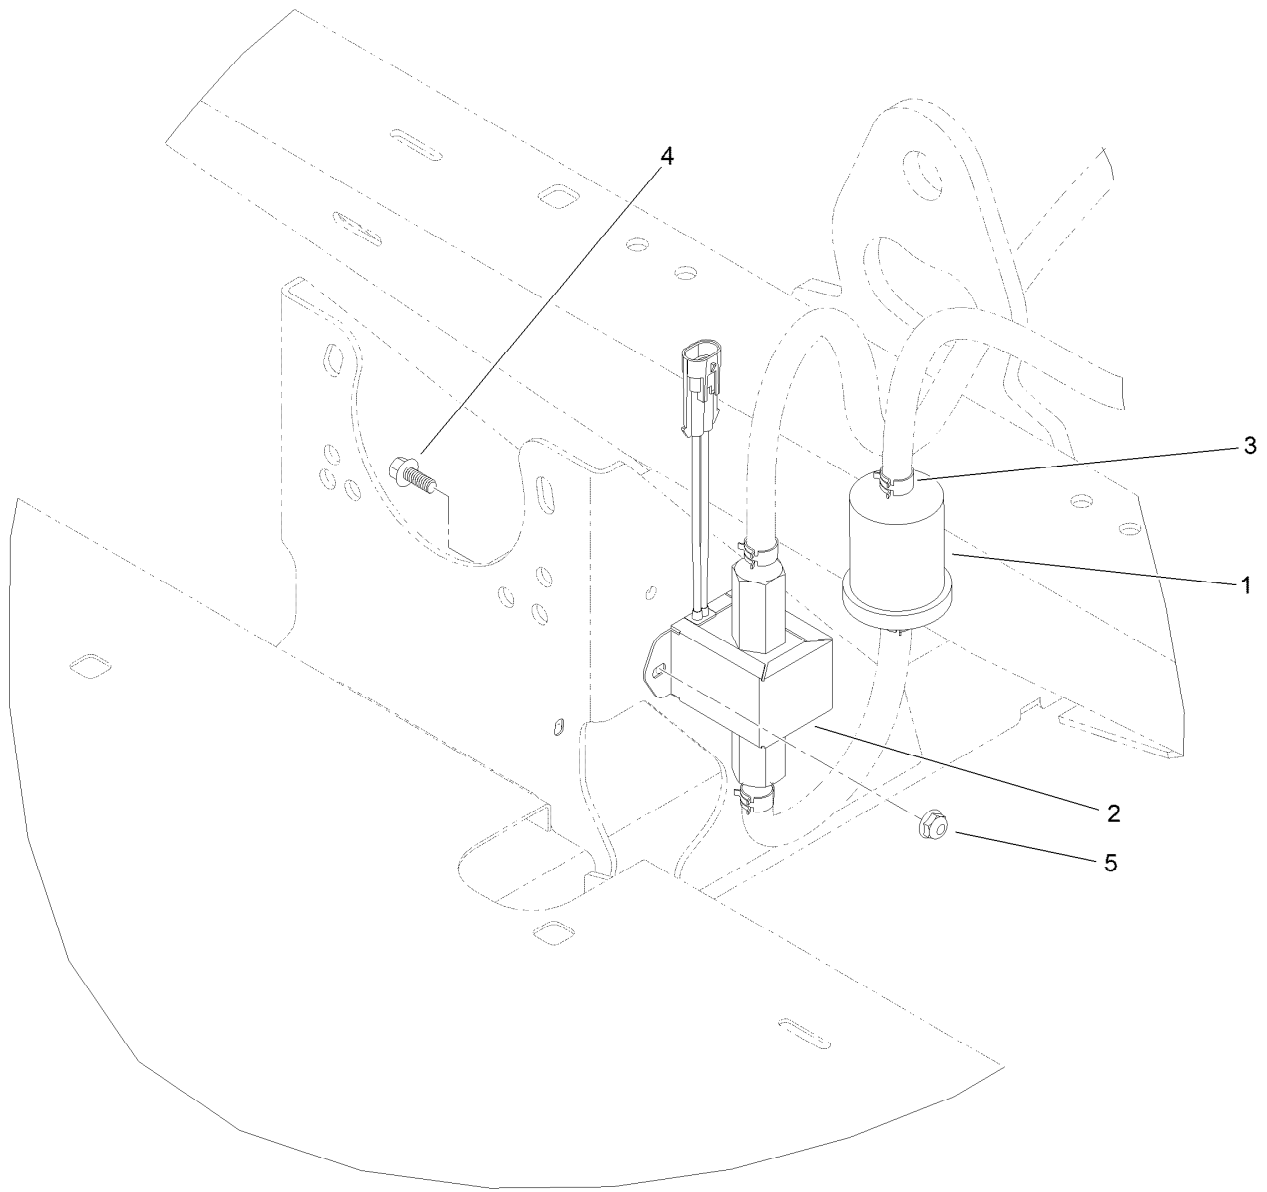


Fuel Pump Replacement Kit Assembly 144-4020 Workman MDX-D

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	98-7612	1	Filter-Fuel
2	145-3160	1	Pump-Fuel, Electric
3	92-2379	4	Clamp-Hose
4	99-6810	2	Screw-HHF
5	104-7201	2	Nut-HF, NI

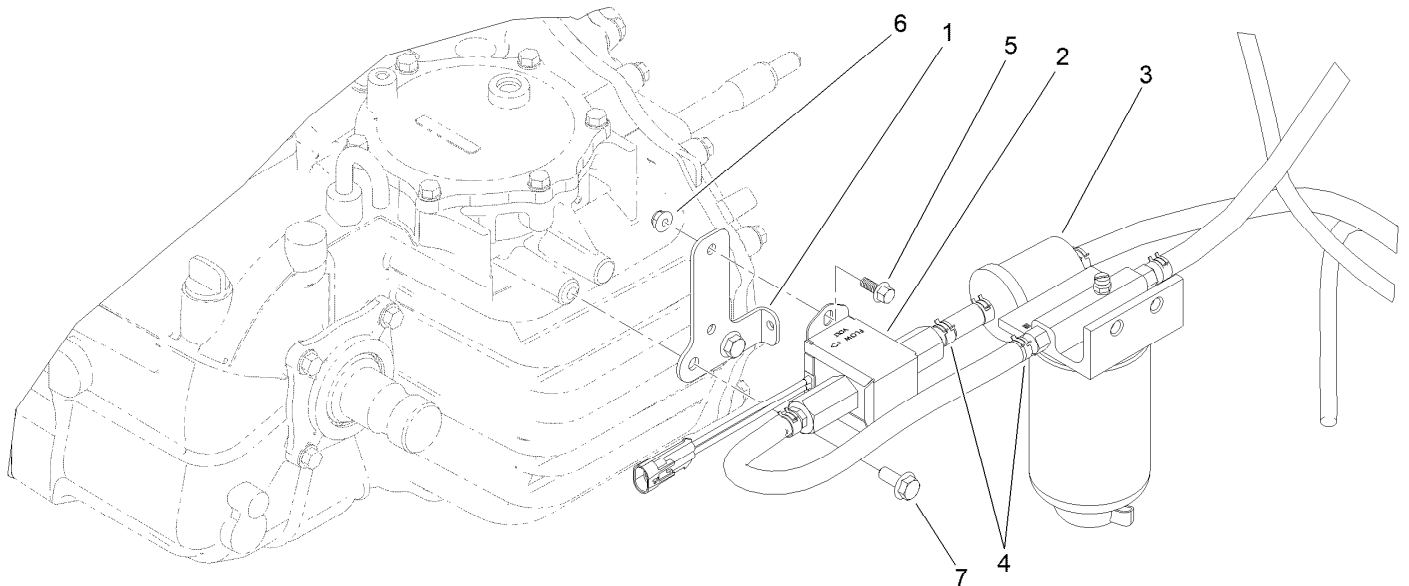


Fuel Pump Replacement Kit Assembly 144-4020 Workman HDX-D

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2083	1	Bracket-Pump, Fuel
2	145-3160	1	Pump-Fuel, Electric
3	98-7612	1	Filter-Fuel
4	92-2379	4	Clamp-Hose
5	99-6810	2	Screw-HHF
6	104-7201	2	Nut-HF, NI
7	98-7977	1	Screw-HHF

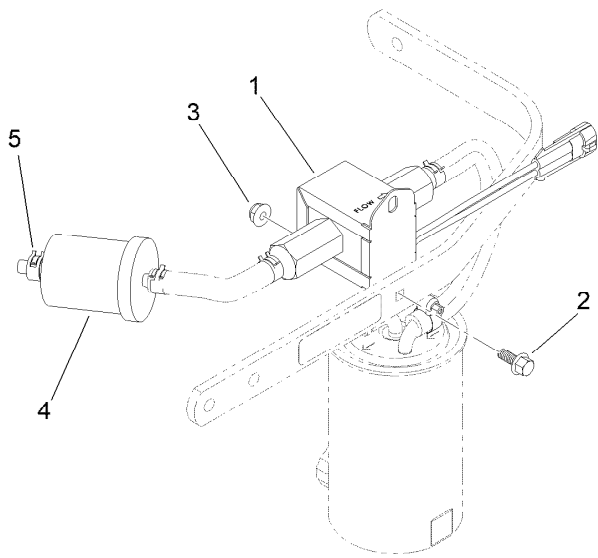


DOMESTIC

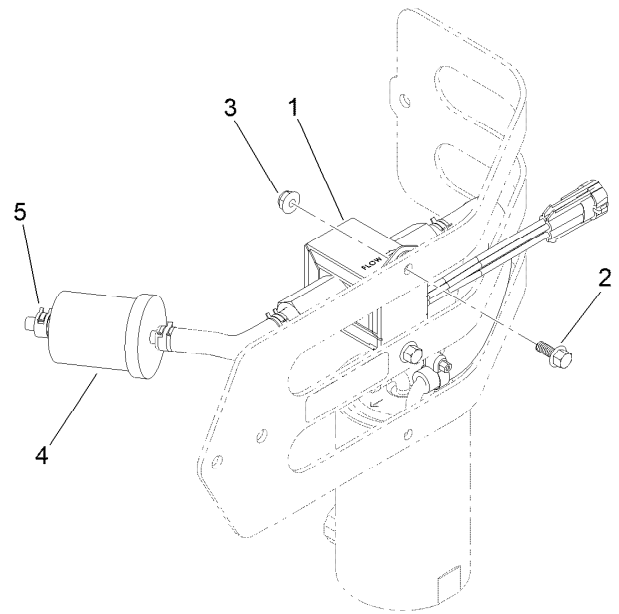

INTERNATIONAL


Fuel Pump Replacement Kit Assembly 144-4020 Workman HDX-D

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-3160	1	Pump-Fuel, Electric
2	99-6810	2	Screw-HHF
3	104-7201	2	Nut-HF, NI
4	98-7612	1	Filter-Fuel
5	92-2379	4	Clamp-Hose

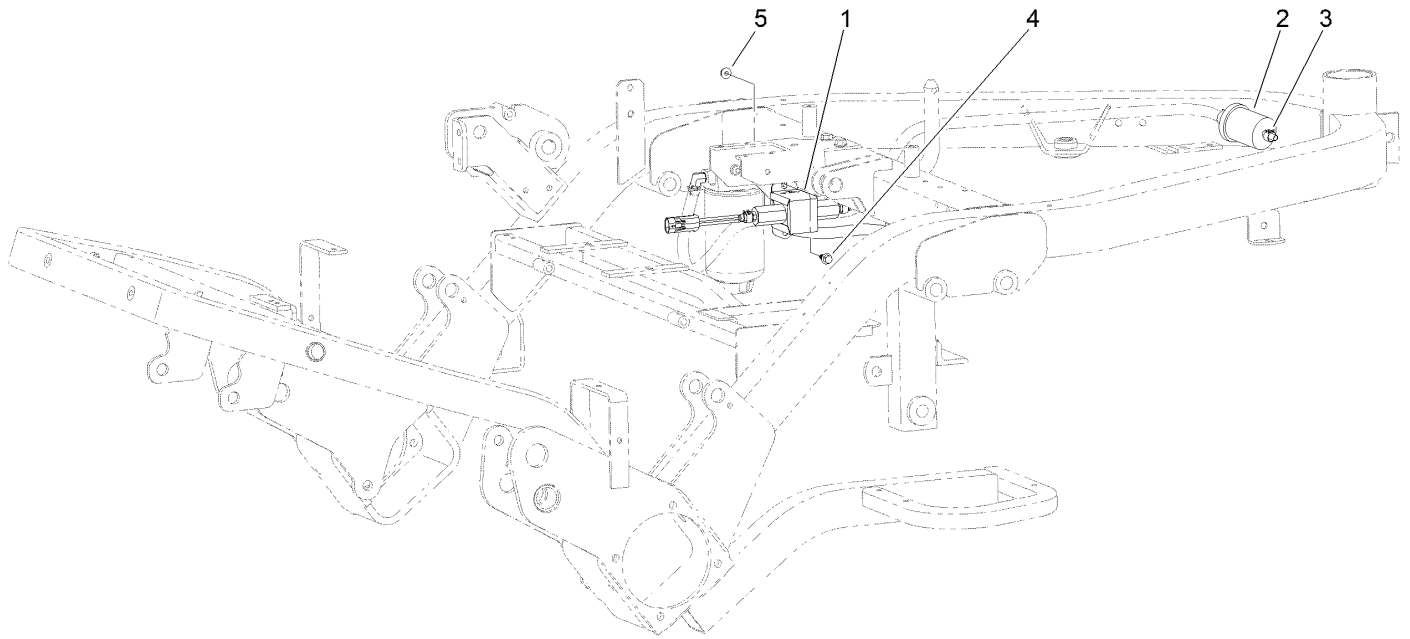


Fuel Pump Replacement Kit Assembly 144-4020 Workman HDX-D

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-3160	1	Pump-Fuel, Electric
2	98-7612	1	Filter-Fuel
3	92-2379	4	Clamp-Hose
4	99-6810	1	Screw-HHF
5	104-7201	1	Nut-HF, NI

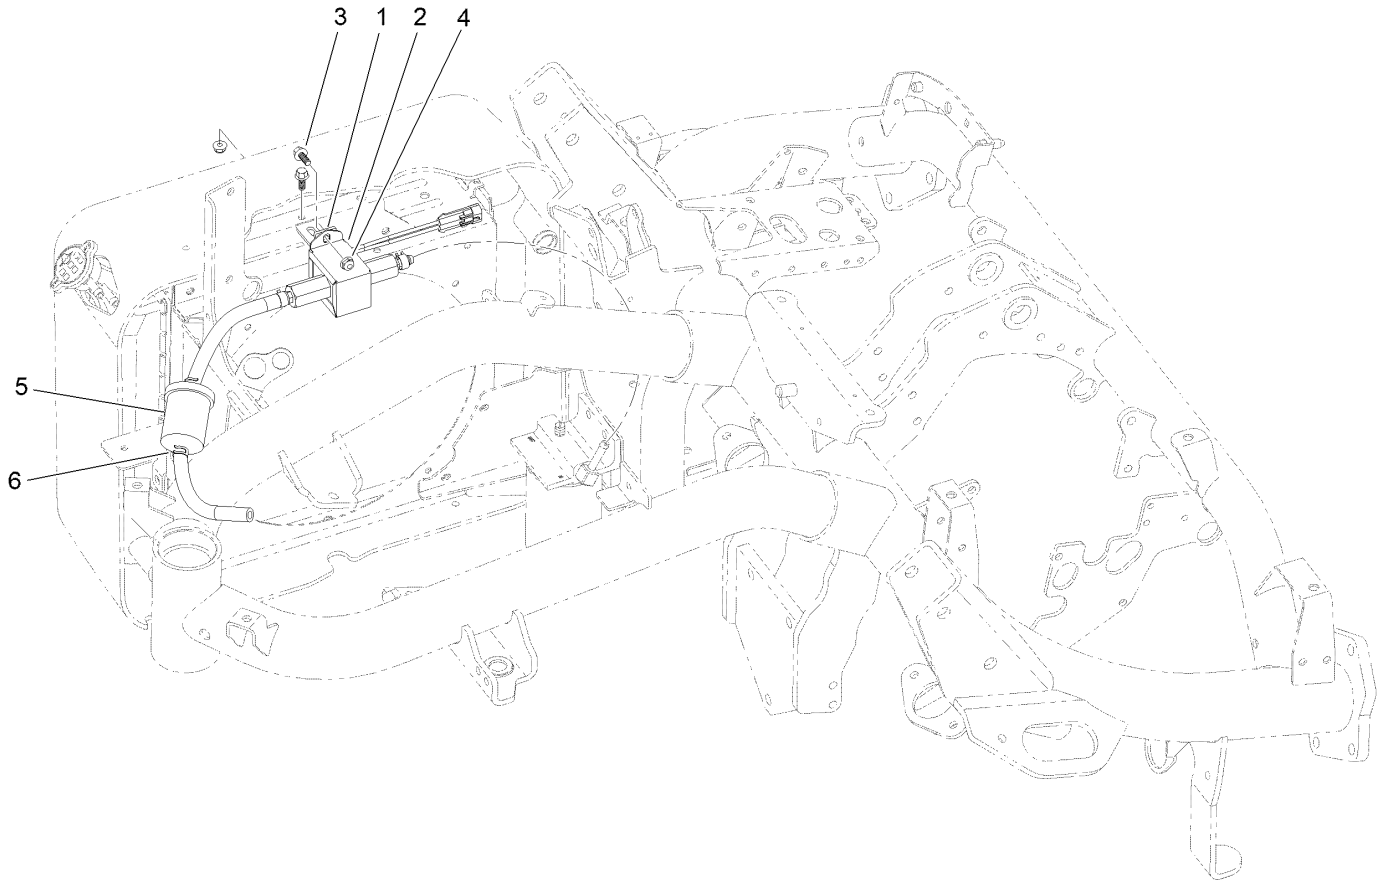


Fuel Pump Replacement Kit Assembly 144-4020 Greensmaster 3400 Series

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-4021	1	Plate-Pump, Fuel
2	145-3160	1	Pump-Fuel, Electric
3	99-6810	2	Screw-HHF
4	104-7201	2	Nut-HF, NI
5	98-7612	1	Filter-Fuel
6	92-2379	4	Clamp-Hose

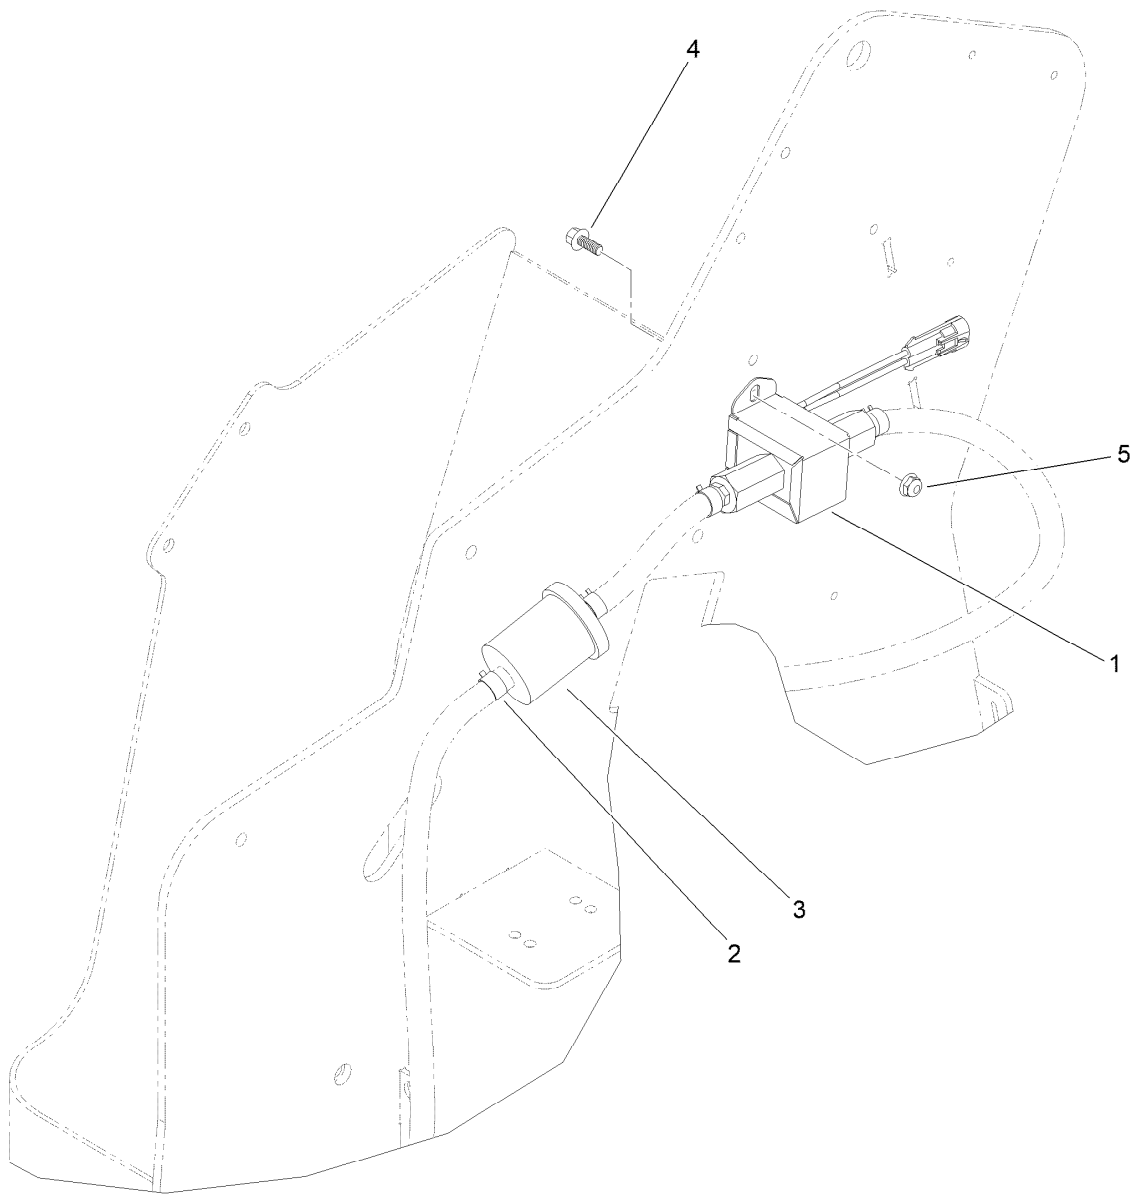

Fuel Pump Replacement Kit Assembly 144-4020 TX 1000

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-3160	1	Pump-Fuel, Electric
2	92-2379	4	Clamp-Hose
3	98-7612	1	Filter-Fuel
4	99-6810	2	Screw-HHF
5	104-7201	2	Nut-HF, NI

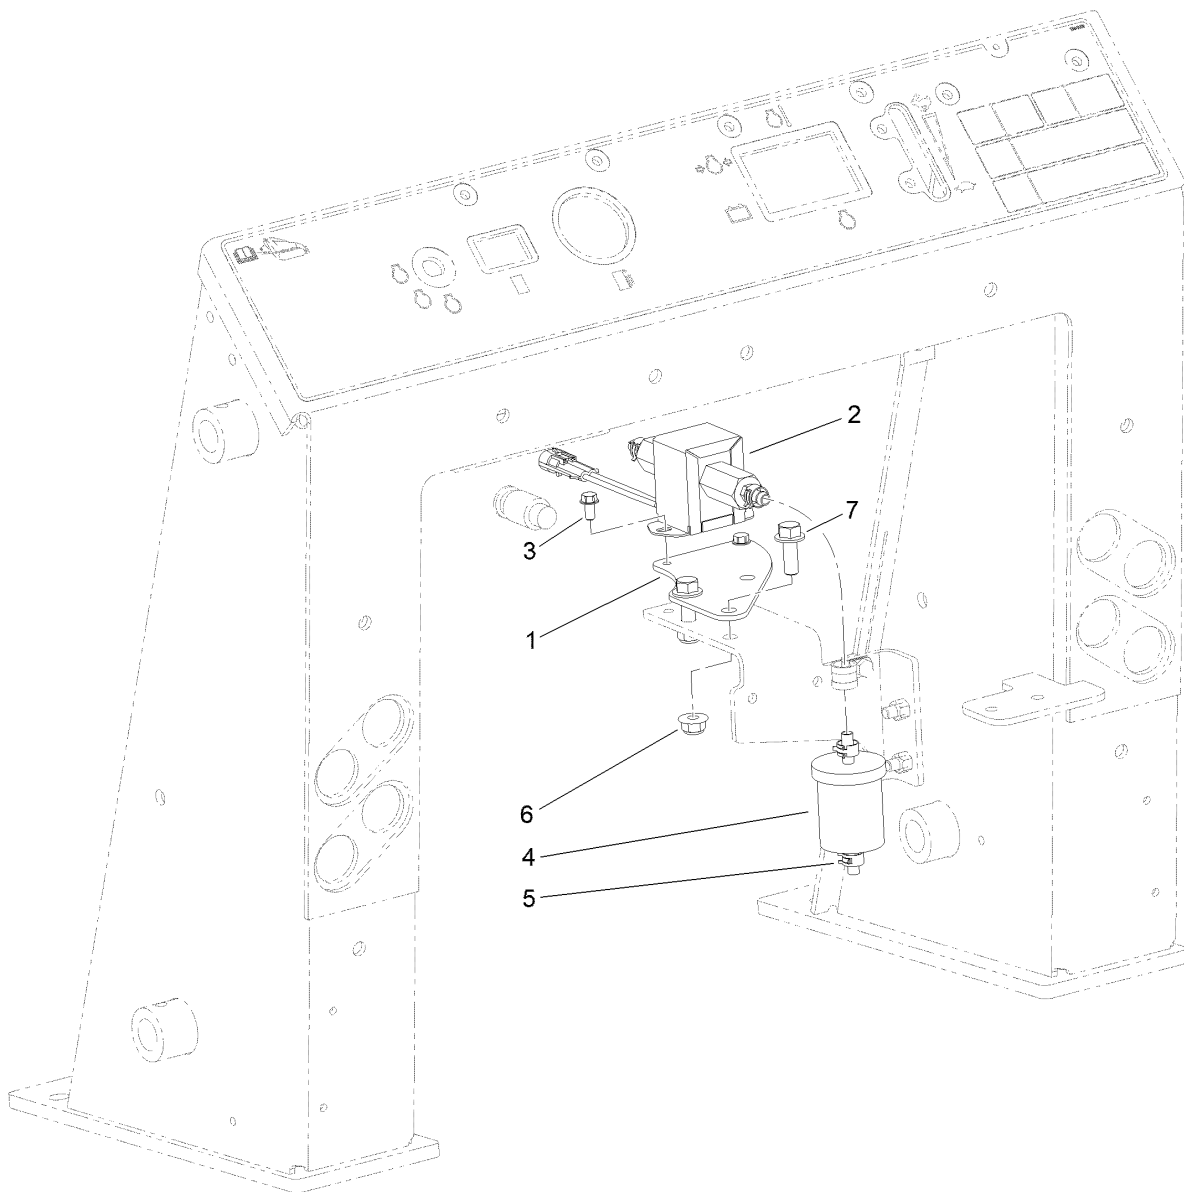

Fuel Pump Replacement Kit Assembly 144-4020 TX 525

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-3818-0P	1	Plate-Fuel Pump
2	145-3160	1	Pump-Fuel, Electric
3	32144-4	2	Screw-HWH
4	98-7612	1	Filter-Fuel
5	92-2379	4	Clamp-Hose
6	104-8301	2	Nut-HF, NI
7	3234-42	2	Screw-HHF



Count on it.