
TORO_®

MODEL NO. 23370-800001 & UP

PARTS CATALOG

21" WHIRLWIND HEVI-DUTY H.P.

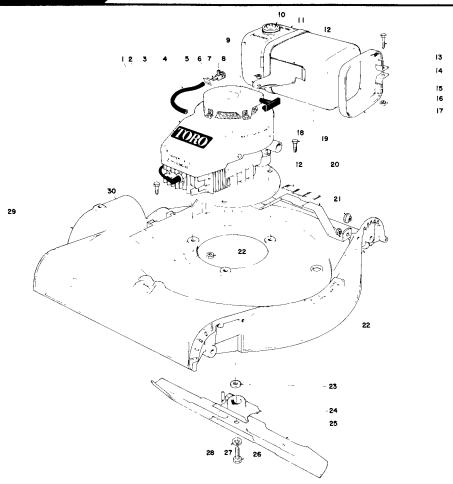


ENGINE ASSEMBLY

	-		
Ref. No.	Part No.	Description	No. Used
1	37-4560	Decal Commercial 2 Cycle	
		Engine	1
2	23-0810	Decal Toro	1
3	221-598	Engine	1
4	36-8930	Gas Hose	1
5	2210-87	Clamp	2
6	304-71	Fuel Control Valve	1
7	36-8690	Bracket Tank Mounting	1
8	2210-216	Nut Recoil Mounting	1
9	2210-204	Decal — Warning 24:1	1
10	222-15	Cap	1
11	2210-206	Decal — Fuel Mix Chart	1
12	36-8970	Felt Strip Tank Support	2
13	321-8	Capscrew	2
14	36-8960	Felt Strip	2
15	222-14	Fuel Tank Assembly	
		(Incl. Ref. #10)	1

Ref. No.	Part No.	Description	No. Used
16	32152-4	Locknut	2
17	36-8940	Tank Strap	
18	37-1280	Decal Operating Instructions	1
19	322-5	Capscrew	3
20	36-8670	Tank Bracket	1
21	36-8770	Spacer	2
22	32152-1	Locknut	5
23	36-8760	Spacer Blade Retainer	1
24	36-8800	Blade Retainer	1
25	37-0090	Blade	1
26	3-5246	Screw Special	1
27	3253-22	Lockwasher	1
28	21-5070	Key Square	1
29	36-8920	Housing	1
30	36-8910	Exhaust Baffle	1



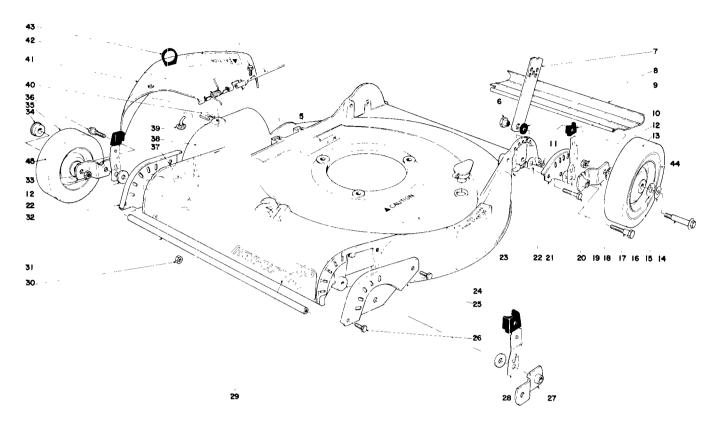


HOUSING ASSEMBLY

1	L	Description	No. Used
1	20-4330	Decal - Deflector Caution	1
2	28-3270	Sleeve Spring	1
3	12-3270	Screw Special	2
	3-2644	Hinge Pin	1
5	3-7643	Decal Warning	1
_	27-6520	Pivot Nut	2
7	27-7080	Handle Latch	2
8	27-6510	Spacer Handle Latch	2
9	28-3780	Rear Safety Shield	1
10	25-7740	Knob Arm	4
11	33-3201	Rod Shield	1
12	32146-6	Locknut	4
13	36-8850	Wheel Assembly	
		(Incl. Ref. #34 & 44)	2
14	3-2652	Wheel Bolt	4
15	3290-393	Wave Washer	4
16	26-7500	Felt Washer	8
17	28-8880	Pivot Screw	2
18	37-1160	Pivot Arm "B"	1
*	37-1180	Pivot Arm "A"	1
19	322-10	Capscrew	2
20	36-8890	Spring Arm Rear	2
21	36-8710	Wheel Quadrant L.H.	1
22	5-4460	Pivot Washer	6
23	6-4500	Washout Port	1

Ref. No.	Part No.	Description	No. Used
24	29-4720	Decal Safety Instructions	1
25	36-8700	Wheel Quadrant L.H.	1
26	32104-38	Screw Thread Cutting	4
27	36-8830	Pivot Arm "C"	1
28	36-8900	Spring Arm Assembly (Front)	2
29	26-7740	Decal Hevi-Duty 21	1
30	32146-5	Locknut	2
31	36-8810	Bumper	1
32	36-8680	Wheel Quadrant R.H.	1
*	36-8720	Wheel Quadrant R.H.	1
33	36-8820	Pivot Arm Assembly "D"	1
34	251-180	Bearing	8
35	36-8840	Wheel Assembly	
		(Incl. Ref. #34 & 45)	2
36	25-3440	Pivot Screw	2
37	32104-114	Screw Thread Forming	2
38	12-2990	Safety Bar	1
39	28-3260	Pin Bag Chute	1
40	28-3250	Clip Bag Chute Pin	1
41	36-2970	Deflector	1 1
42	28-1560	Spring Torsion Deflector	1
43	28-1430	Lift Loop Deflector	1
44	36-8990	Tire	2
45	36-8980	Tire	2

^{*}Not Illustrated

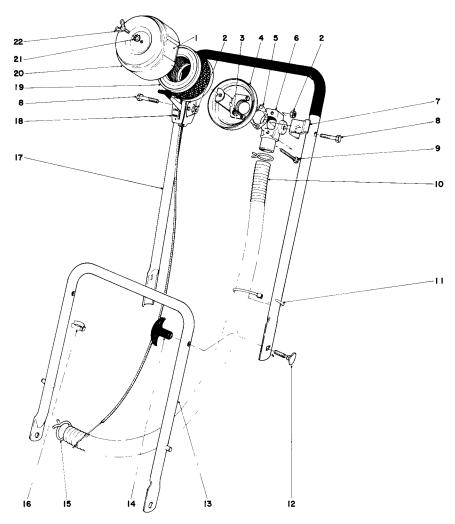


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1†	550201	Air Cleaner Decal	1
2	32152-4	Locknut	2
3†	650457	Locknut	2
4†	450230	Air Cleaner Pan	1
5†	27272	Gasket	1
6†	32388	Elbow	1
7	36-8750	Support Air Cleaner	1
8	321-9	Capscrew	2
9	3290-423	Slotted Hex Hd. Machine Screw	2
10	37-0130	Air Cleaner Hose	1
11	3290-378	Cable Ty	2
12	6-6330	Handle Screw	2
1	1	1	1


Ref. No.	Part No.	Description	No. Used
	Part No. 27-7050 233-41 2412-69 218-465 36-8880 29-8610 450229 450231 3255-17 650715 8-2259	Description Lower Handle Knob Handle Clamp Clip Handle Upper Throttle Control Air Cleaner Element Air Cleaner Ever Lockwasher Ext. Tooth Wing Screw Loose Parts Bag	

ENGINE TECUMSEH MODEL NO. AV-600-660-31

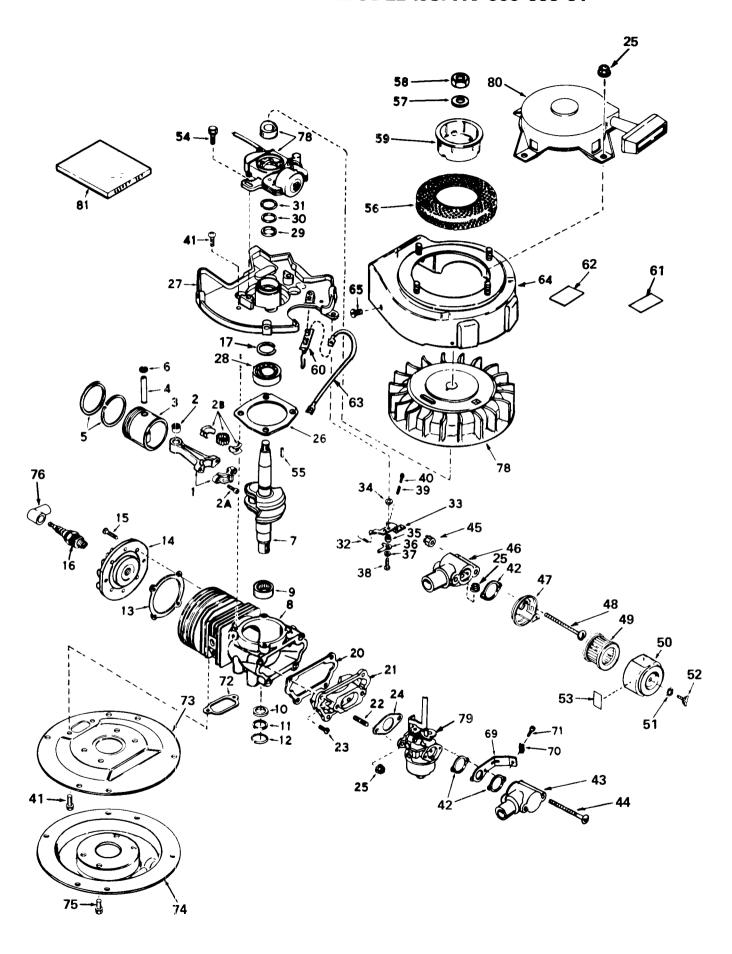

ENGINE TECUMSEH MODEL NO. AV-600-660-31


310246 530104A 650633 530150 310230A 310178 310190 310167 290496 250263A 530143A 510145 510143 510142 *510274	Rod Assy., Connecting (Incl. Nos. 2, 2A & 2B) Bearing, Cartridge Screw, Connecting Rod Bearing & Liner Set, Needle Piston Assy. (Incl. Nos. 4, 5 & 6) Pin, Piston Ring Set, Piston Ring, Piston Pin Retaining Crankshaft Block Assy., Cylinder (Incl. Nos. 9 thru 12) Bearing, Needle Seal, Crankshaft Retainer, Crankshaft Seal	1 1 2 1 1 1 1 2 1	41 42 43 44 45 46 47 48 49 50 51 52	650497 27272 32389 650605 33450 32388 450230 29786 450229 450231 650518	Screw, Pan Flex Hd. Gasket, Air Cleaner Elbow, Carburetor Screw, Rd. Hd. Mach. Nut, Hex Lock Elbow, Air Cleaner Base Assy., Air Cleaner Screw, Rd. Hd. Mach. Filter, Air Cleaner Cover, Air Cleaner	6 3 1 2 2 2 1 1 1 2 1 1 1 1 1
650633 530150 310230A 310178 310190 310167 290496 250263A 530143A 510145 510143 510142 *510274	Bearing, Cartridge Screw, Connecting Rod Bearing & Liner Set, Needle Piston Assy. (Incl. Nos. 4, 5 & 6) Pin, Piston Ring Set, Piston Ring, Piston Pin Retaining Crankshaft Block Assy., Cylinder (Incl. Nos. 9 thru 12) Bearing, Needle Seal, Crankshaft	1 2 1 1 1 1 2 1	42 43 44 45 46 47 48 49 50 51 52	27272 32389 650605 33450 32388 450230 29786 450229 450231	Gasket, Air Cleaner Elbow, Carburetor Screw, Rd. Hd. Mach. Nut, Hex Lock Elbow, Air Cleaner Base Assy., Air Cleaner Screw, Rd. Hd. Mach. Filter, Air Cleaner Cover, Air Cleaner	1 2 2 1 1 2 1
650633 530150 310230A 310178 310190 310167 290496 250263A 530143A 510145 510143 510142 *510274	Screw, Connecting Rod Bearing & Liner Set, Needle Piston Assy. (Incl. Nos. 4, 5 & 6) Pin, Piston Ring Set, Piston Ring, Piston Pin Retaining Crankshaft Block Assy., Cylinder (Incl. Nos. 9 thru 12) Bearing, Needle Seal, Crankshaft	2 1 1 1 1 2 1 1	44 45 46 47 48 49 50 51 52	650605 33450 32388 450230 29786 450229 450231	Screw, Rd. Hd. Mach. Nut, Hex Lock Elbow, Air Cleaner Base Assy., Air Cleaner Screw, Rd. Hd. Mach. Filter, Air Cleaner Cover, Air Cleaner	2 1 1 2 1 1
530150 310230A 310178 310190 310167 290496 250263A 530143A 510145 510143 510142 *510274	Bearing & Liner Set, Needle Piston Assy. (Incl. Nos. 4, 5 & 6) Pin, Piston Ring Set, Piston Ring, Piston Pin Retaining Crankshaft Block Assy., Cylinder (Incl. Nos. 9 thru 12) Bearing, Needle Seal, Crankshaft	1 1 1 1 2 1	45 46 47 48 49 50 51 52	33450 32388 450230 29786 450229 450231	Nut, Hex Lock Elbow, Air Cleaner Base Assy., Air Cleaner Screw, Rd. Hd. Mach. Filter, Air Cleaner Cover, Air Cleaner	2 1 1 2 1
310230A 310178 310190 310167 290496 250263A 530143A 510145 510143 510142 *510274	Piston Assy. (Incl. Nos. 4, 5 & 6) Pin, Piston Ring Set, Piston Ring, Piston Pin Retaining Crankshaft Block Assy., Cylinder (Incl. Nos. 9 thru 12) Bearing, Needle Seal, Crankshaft	1 1 1 2 1 1	46 47 48 49 50 51 52	33450 32388 450230 29786 450229 450231	Nut, Hex Lock Elbow, Air Cleaner Base Assy., Air Cleaner Screw, Rd. Hd. Mach. Filter, Air Cleaner Cover, Air Cleaner	1 1 2 1 1
310178 310190 310167 290496 250263A 530143A 510145 510143 510142 *510274	Pin, Piston Ring Set, Piston Ring, Piston Pin Retaining Crankshaft Block Assy., Cylinder (Incl. Nos. 9 thru 12) Bearing, Needle Seal, Crankshaft	1 1 2 1 1	47 48 49 50 51 52	32388 450230 29786 450229 450231	Elbow, Air Cleaner Base Assy., Air Cleaner Screw, Rd. Hd. Mach. Filter, Air Cleaner Cover, Air Cleaner	1 1 1
310190 310167 290496 250263A 530143A 510145 510143 510142 *510274	Pin, Piston Ring Set, Piston Ring, Piston Pin Retaining Crankshaft Block Assy., Cylinder (Incl. Nos. 9 thru 12) Bearing, Needle Seal, Crankshaft	1 1 2 1 1	47 48 49 50 51 52	450230 29786 450229 450231	Base Assy., Air Cleaner Screw, Rd. Hd. Mach. Filter, Air Cleaner Cover, Air Cleaner	
310167 290496 250263A 530143A 510145 510143 510142 *510274	Ring Set, Piston Ring, Piston Pin Retaining Crankshaft Block Assy., Cylinder (Incl. Nos. 9 thru 12) Bearing, Needle Seal, Crankshaft	2 1 1 1	48 49 50 51 52	29786 450229 450231	Screw, Rd. Hd. Mach. Filter, Air Cleaner Cover, Air Cleaner	
310167 290496 250263A 530143A 510145 510143 510142 *510274	Ring, Piston Pin Retaining Crankshaft Block Assy., Cylinder (Incl. Nos. 9 thru 12) Bearing, Needle Seal, Crankshaft	2 1 1 1	49 50 51 52	450229 450231	Filter, Air Cleaner Cover, Air Cleaner	
290496 250263A 530143A 510145 510143 510142 *510274	Crankshaft Block Assy., Cylinder (Incl. Nos. 9 thru 12) Bearing, Needle Seal, Crankshaft	1 1 1	50 51 52	450231	Cover, Air Cleaner	
250263A 530143A 510145 510143 510142 *510274	Block Assy., Cylinder (Incl. Nos. 9 thru 12) Bearing, Needle Seal, Crankshaft	1 1	51 52			
530143A 510145 510143 510142 *510274	Nos. 9 thru 12) Bearing, Needle Seal, Crankshaft	1	52	000010	Washer, Lock	
510145 510143 510142 *510274	Bearing, Needle Seal, Crankshaft	1		650715	Screw, Thumb	
510145 510143 510142 *510274	Seal, Crankshaft		53	550201	Decal, Air Cleaner	1
510143 510142 *510274	! · ·		54	650747	Screw, Hex Washer Hd.	2
510142 *510274		1	5 4 55	610961	Key, Flywheel	1
*510274	1	1		590417	1 1	
	Spring, Crankshaft Seal Retainer		56 57	1	Screen, Air	1
250240A	Gasket, Cylinder Head	1		650763	Washer, Belleville	
	Head, Cylinder	1	58	650390	Nut, Flywheel	
650477	Screw, Pan Flex Hd.	6	59	590416	Cup, Starter	
34251	Resistor Spark Plug		60	610973	Terminal	
-70000	1		T .	į.	1	
	-				1 '	
	1		1	i	1	
1			i	1	1 -	1
					1	4
	1		1	1	1	,
	1	1			1	<i>'</i>
		6		1	1	1
		1		*510314		•
350388	Base Assy., Housing		1	330175	Ring, Adapter	•
	(Incl. Nos. 29, 30 & 31)	1	74	390297	Muffler	•
530110	Bearing, Ball	1	75	650797	Screw, Flanged Hex Hd.	4
510105	Seal, Crankshaft	1	76	610118	Cover, Spark Plug	٠
510106A	Retainer, Crankshaft Seal	1	78	610794A	Magneto (The complete mag-	
510109A	Spring, Crankshaft Seal Retainer	1			neto is not available as an	
570417	Spring, Governor	1			assembly. The magneto	
570421	i i	1			number is shown for refer-	ĺ
570422	Washer	1			ence purposes only. Order	
570412	Spacer	1				
570415	Lever, Adjustment	1			as shown in parts list.)	-
650583	Washer, Flat	1	79	632074	Carburetor (Incl. No. 24)	
650544		1	80	590420		
	1	1	l l		I ·	3
3	1	1			(
	470149 650700 650579 *510110 650457 *510292 350388 530110 510105 510106A 570417 670421 570422 570412 670415 650583	*510282A Gasket, Reed Plate 470149 Plate Assy., Reed (Incl. No. 22) 650700 Stud, Carburetor 650579 Screw, Pan Flex Hd. *510110 Gasket, Carburetor Nut, Hex Whiz-Lock *510292 Gasket, Housing Base 8350388 Base Assy., Housing (Incl. Nos. 29, 30 & 31) 6530110 Bearing, Ball 6510105 Seal, Crankshaft 6510106A Retainer, Crankshaft Seal 6570417 Spring, Governor 6570421 Lever, Control 6570422 Washer 6570412 Spacer 6570415 Lever, Adjustment 650583 Washer, Flat 650544 Screw, Pan Flex Hd. 831342 Spring	670630 Ring, Retaining 1 *510282A Gasket, Reed Plate 1 470149 Plate Assy., Reed (Incl. No. 22) 1 650700 Stud, Carburetor 2 650579 Screw, Pan Flex Hd. 4 *510110 Gasket, Carburetor 1 650457 Nut, Hex Whiz-Lock 6 *510292 Gasket, Housing Base 1 350388 Base Assy., Housing (Incl. Nos. 29, 30 & 31) 1 530110 Bearing, Ball 1 510105 Seal, Crankshaft 1 510106A Retainer, Crankshaft Seal 1 570417 Spring, Crankshaft Seal Retainer 1 570417 Spring, Governor 1 570420 Washer 1 570412 Spacer 1 570415 Lever, Adjustment 1 650583 Washer, Flat 1 650544 Screw, Pan Flex Hd. 1 31342 Spring 1	670630 Ring, Retaining 1 62 *510282A Gasket, Reed Plate 1 63 470149 Plate Assy., Reed (Incl. No. 22) 1 64 650700 Stud, Carburetor 2 65 650579 Screw, Pan Flex Hd. 4 69 *510110 Gasket, Carburetor 1 70 650457 Nut, Hex Whiz-Lock 6 71 *510292 Gasket, Housing Base 1 72 350388 Base Assy., Housing 73 (Incl. Nos. 29, 30 & 31) 1 74 530110 Bearing, Ball 1 75 75 510105 Seal, Crankshaft 1 76 510106A Retainer, Crankshaft Seal 1 78 510109A Spring, Governor 1 78 570417 Spring, Governor 1 79 570420 Washer 1 79 570415 Lever, Adjustment 1 79 650583 Washer, Flat 1 79 650544 Screw, Pan Flex Hd. 1 <td< td=""><td>670630 Ring, Retaining 1 62 550208 *510282A Gasket, Reed Plate 1 63 610974 470149 Plate Assy., Reed (Incl. No. 22) 1 64 350393 650700 Stud, Carburetor 2 65 650356 650579 Screw, Pan Flex Hd. 4 69 570420 *510110 Gasket, Carburetor 1 70 27793 650457 Nut, Hex Whiz-Lock 6 71 28942 *510292 Gasket, Housing Base 1 72 *510314 350388 Base Assy., Housing 73 330175 6501010 Bearing, Ball 1 74 390297 530110 Bearing, Ball 1 75 650797 510105 Seal, Crankshaft 1 76 610118 510106A Retainer, Crankshaft Seal 1 78 610794A 570417 Spring, Governor 1 78 610794A 570412 Spacer 1 79 632074 570415 Lever, Adjustment</td><td>570630 Ring, Retaining 1 62 550208 Decal, Fuel Mix *510282A Gasket, Reed Plate 1 63 610974 Wire, Ground 470149 Plate Assy., Reed (Incl. No. 22) 1 64 350393 Housing, Blower 650700 Stud, Carburetor 2 65 650356 Screw, Hex Washer Hd. 650579 Screw, Pan Flex Hd. 4 69 570420 Bracket, Boden Wire *510110 Gasket, Carburetor 1 70 27793 Clip, Conduit *510292 Gasket, Housing Base 1 72 *510314 Gasket, Exhaust *350388 Base Assy., Housing 73 330175 Ring, Adapter *510105 Gasket, Housing Base 1 74 390297 Muffler 530110 Bearing, Ball 1 75 650797 Screw, Flanged Hex Hd. 510105 Seal, Crankshaft Seal 1 78 610118 Cover, Spark Plug 510109A Spring, Governor 1 78</td></td<>	670630 Ring, Retaining 1 62 550208 *510282A Gasket, Reed Plate 1 63 610974 470149 Plate Assy., Reed (Incl. No. 22) 1 64 350393 650700 Stud, Carburetor 2 65 650356 650579 Screw, Pan Flex Hd. 4 69 570420 *510110 Gasket, Carburetor 1 70 27793 650457 Nut, Hex Whiz-Lock 6 71 28942 *510292 Gasket, Housing Base 1 72 *510314 350388 Base Assy., Housing 73 330175 6501010 Bearing, Ball 1 74 390297 530110 Bearing, Ball 1 75 650797 510105 Seal, Crankshaft 1 76 610118 510106A Retainer, Crankshaft Seal 1 78 610794A 570417 Spring, Governor 1 78 610794A 570412 Spacer 1 79 632074 570415 Lever, Adjustment	570630 Ring, Retaining 1 62 550208 Decal, Fuel Mix *510282A Gasket, Reed Plate 1 63 610974 Wire, Ground 470149 Plate Assy., Reed (Incl. No. 22) 1 64 350393 Housing, Blower 650700 Stud, Carburetor 2 65 650356 Screw, Hex Washer Hd. 650579 Screw, Pan Flex Hd. 4 69 570420 Bracket, Boden Wire *510110 Gasket, Carburetor 1 70 27793 Clip, Conduit *510292 Gasket, Housing Base 1 72 *510314 Gasket, Exhaust *350388 Base Assy., Housing 73 330175 Ring, Adapter *510105 Gasket, Housing Base 1 74 390297 Muffler 530110 Bearing, Ball 1 75 650797 Screw, Flanged Hex Hd. 510105 Seal, Crankshaft Seal 1 78 610118 Cover, Spark Plug 510109A Spring, Governor 1 78

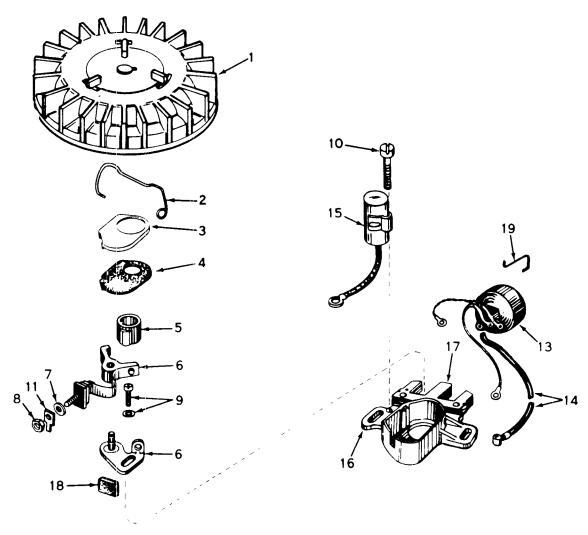

MAGNETO* NO. 610794A

Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
310781A	Flywheel (Incl. Nos. 3 & 4)	1	11	33356	Tab, Ground Terminal	1
30551	Spring, Breaker Box Dust Cover	1	13	30560A	Coil Assembly (Incl. No. 14)	1
610947	Cover, Breaker Box Dust	1	14	30554	Wire, Ignition Lead	1
310948	Gasket, Dust Cover	1	15	30548A	Condenser	1
80552	Cam, Breaker	1	16	30545	Core & Plate Group	1
80547A	Breaker Assembly	1	17	30561B	Stator Assembly (Incl. Nos.	
10385	Washer, Terminal	1			2, 3, 4, 6 thru 11, 13, 15,	
310408	Nut, Terminal	1			16, 18 & 19)	1
9181	Screw & Washer Assy., Breaker	1	18	30549	Felt, Cam Wiper	1
10593	Screw, Condenser Fastening	1	19	31311	Clip, Coil Locking	1
5 3 5 5 5	10781A 0551 10947 10948 0552 0547A 10385 10408 9181	10781A Flywheel (Incl. Nos. 3 & 4) 0551 Spring, Breaker Box Dust Cover 10947 Cover, Breaker Box Dust 10948 Gasket, Dust Cover 0552 Cam, Breaker 0547A Breaker Assembly 10385 Washer, Terminal 10408 Nut, Terminal 9181 Screw & Washer Assy., Breaker	10781A Flywheel (Incl. Nos. 3 & 4) 1 0551 Spring, Breaker Box Dust Cover 1 10947 Cover, Breaker Box Dust 1 10948 Gasket, Dust Cover 1 0552 Cam, Breaker 1 0547A Breaker Assembly 1 10385 Washer, Terminal 1 10408 Nut, Terminal 1 9181 Screw & Washer Assy., Breaker 1	10781A Flywheel (Incl. Nos. 3 & 4) 1 11 0551 Spring, Breaker Box Dust Cover 1 13 10947 Cover, Breaker Box Dust 1 14 10948 Gasket, Dust Cover 1 15 0552 Cam, Breaker 1 16 0547A Breaker Assembly 1 17 10385 Washer, Terminal 1 10408 Nut, Terminal 1 9181 Screw & Washer Assy., Breaker 1 18	10781A Flywheel (Incl. Nos. 3 & 4) 1 11 33356 0551 Spring, Breaker Box Dust Cover 1 13 30560A 10947 Cover, Breaker Box Dust 1 14 30554 10948 Gasket, Dust Cover 1 15 30548A 0552 Cam, Breaker 1 16 30545 0547A Breaker Assembly 1 17 30561B 10385 Washer, Terminal 1 10408 Nut, Terminal 1 9181 Screw & Washer Assy., Breaker 1 18 30549	10781A


^{*}The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list.

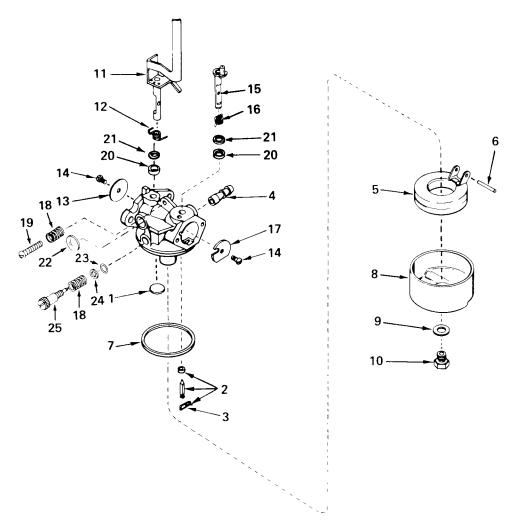

CARBURETOR NO. 632074

Ref. No.	Part No.	Description	No. Used
1	631027	Plug, Welch	1
2	631021	Inlet Needle, Seat & Clip	
		Assy. (Incl. No. 3)	1
3	631022	Clip, Inlet Needle	1
4	631803	Fitting, Fuel Inlet	1
5	632019	Float, Carburetor	1
6	631024	Shaft, Float	1
7	631028	"O" Ring, Bowl-To-Body	1 1
8	631700	Bowl, Float	1
9	631334	Gasket, Bowl-To-Body	1 1
10	632073	Nut, Float Bowl	1
11	631255	Shaft & Lever Assy., Throttle	1
12	631767	Spring, Throttle Return	1

Ref. No.	Part No.	Description	No. Used
13	631036	Shutter, Throttle	1
14	650506	Screw, Rd. Washer Hd. Mach.	2
15	631302	Shaft & Lever Assy., Choke	1
16	631476	Spring, Choke Return	1
17	631890	Shutter, Choke	1
18	630766	Spring, Regulating Screw	2
19	650417	Screw, Idle Regulating	1
20	631183	Washer, Felt	2
21	631184	Washer, Steel	2
22	630748	Plug, Welch	1
23	630740	"O" Ring	1
24	630739	Washer	1
25	630898	Screw, Idle Adjustment	1
	:		

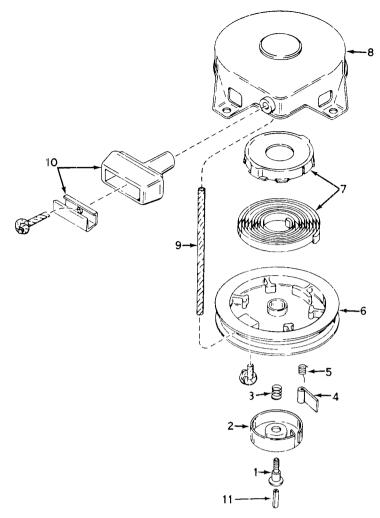

REWIND STARTER NO. 590420

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1 2 3 4 5 6	590409A 590410 590411 590148 590412 590413A	Screw, Retainer Retainer, R.H. Spring, Brake Dog, Starter Spring, R.H. Dog Pulley	1 1 1 1 1	7 8 9 10 11	590414 590415 590386 590387 590459	Spring & Keeper Assy. Housing Assy., Starter (Incl. No. 1) Rope, Starter Handle Assy., Starter Pin, Centering	1 1 1 1

The Toro Promise

A One Year Limited Warranty on Turf Products Other Than Walk Rotary Mowers

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply

The costs of parts and labor are included, but the customer pays the transportation costs on walk rotary mowers.

Should you feel your TORO is defective and wish to rely on The Toro Promise, the following procedure is recommended:

- Contact your Authorized TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
- 2. The TORO Distributor will advise you on the arrangements that can be made to inspect and repair your product.
- 3. The TORO Distributor will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write.

TORO Turf Products Service Department 8111 Lyndale Avenue South Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Distributor is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitation on how long implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

The Toro Company is not liable for indirect, incidental or consequential damages in connection with the use of the product including any cost or expense of providing substitute equipment or service during periods of malfunction or non-use.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Mower has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on the mower housing between the rear wheels. In any correspondence concerning the mower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information.

- 1. Model and serial numbers of the mower.
- 2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

Keep Your TORO All Toro



Insist on Genuine Toro Parts

MAINTENANCE RECORD

Date	Hours Used	Air Cleaner Service	Lubrication	Winter Storage	Spring Service	Spark Plug Gap

MAINTENANCE RECORD

Date	Hours Used	Air Cleaner Service	Lubrication	Winter Storage	Spring Service	Spark Plug Gap
,						

V17-211 11

MAINTENANCE RECORD

Date	Hours Used	Air Cleaner Service	Lubrication	Winter Storage	Spring Service	Spark Plug Gap