



Rear Light Kit

Greensmaster® 3360 or 3370 eTriFlex Traction Unit

Model No. 137-7945

Installation Instructions

Installation

1

Preparing the Machine

No Parts Required

Procedure

1. Park the machine on a level surface.
2. Engage the parking brake.
3. Lower the cutting units.
4. Shut off the machine and remove the key.
5. Disconnect the main-power connectors; refer to your machine *Operator's Manual*.

2

Installing the Lights

Parts needed for this procedure:

1	Light assembly
1	Bracket
1	U-bolt
2	Nut (3/8 inch)

Procedure

1. Use the bolt, washer, and nut included with the light assembly to install the light on the bracket as shown in [Figure 1](#).

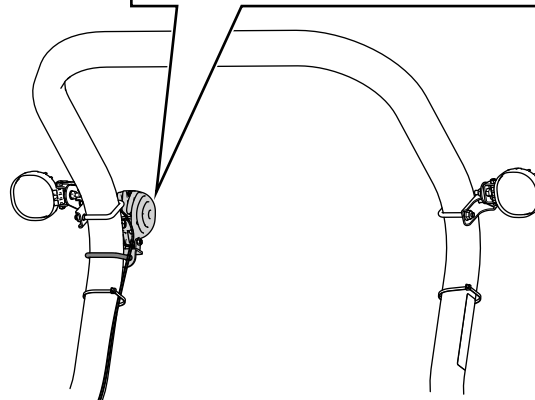
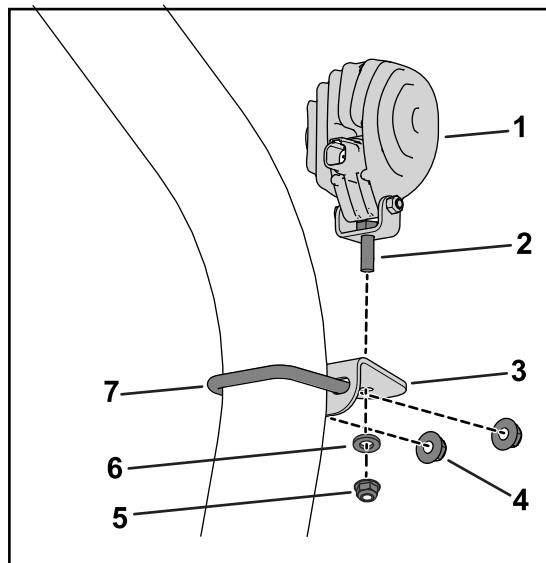


Figure 1

g326364

- | | |
|--|--|
| 1. Light | 5. Nut (included with light assembly) |
| 2. Bolt (included with light assembly) | 6. Washer (included with light assembly) |
| 3. Bracket | 7. U-bolt |
| 4. Nut (3/8 inch) | |

2. Install the bracket onto the right side of the roll bar using a U-bolt and 2 nuts (3/8 inch) as shown in [Figure 1](#).

Note: Observe the length of the wire-harness connector labeled REAR WORK LIGHT. Position the light in an area that allows this connector to be installed to the light.

3. Remove the cap from the connector labeled REAR WORK LIGHT and connect it to the light.



3

Completing the Installation

No Parts Required

Procedure

1. Connect the main-power connectors; refer to your machine *Operator's Manual*.
2. Use the switch (Figure 2) to test if the rear light is functioning:
 - Moving the switch to the RIGHT position activates the headlights and rear light).
 - Moving the switch to the MIDDLE position turns off the lights.
 - Moving the switch to the LEFT position activates the headlights only.

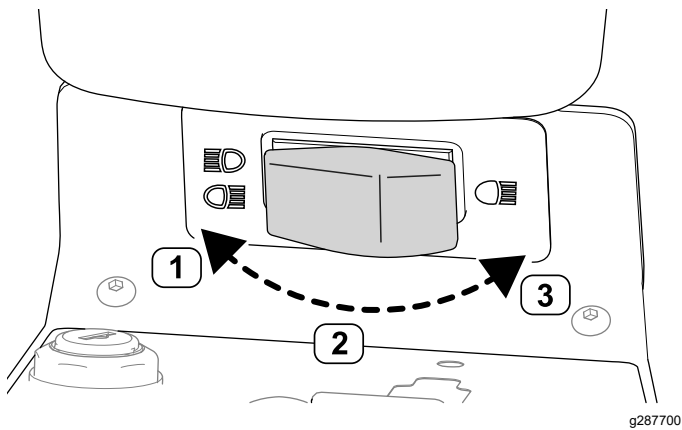


Figure 2

1. RIGHT position
2. MIDDLE position
3. LEFT position