



Count on it.



Parts Catalog

Out-Front Brush Kit

**Greensmaster® 1018, 1021, or 1026 Series
Mower**

Model No. 04136



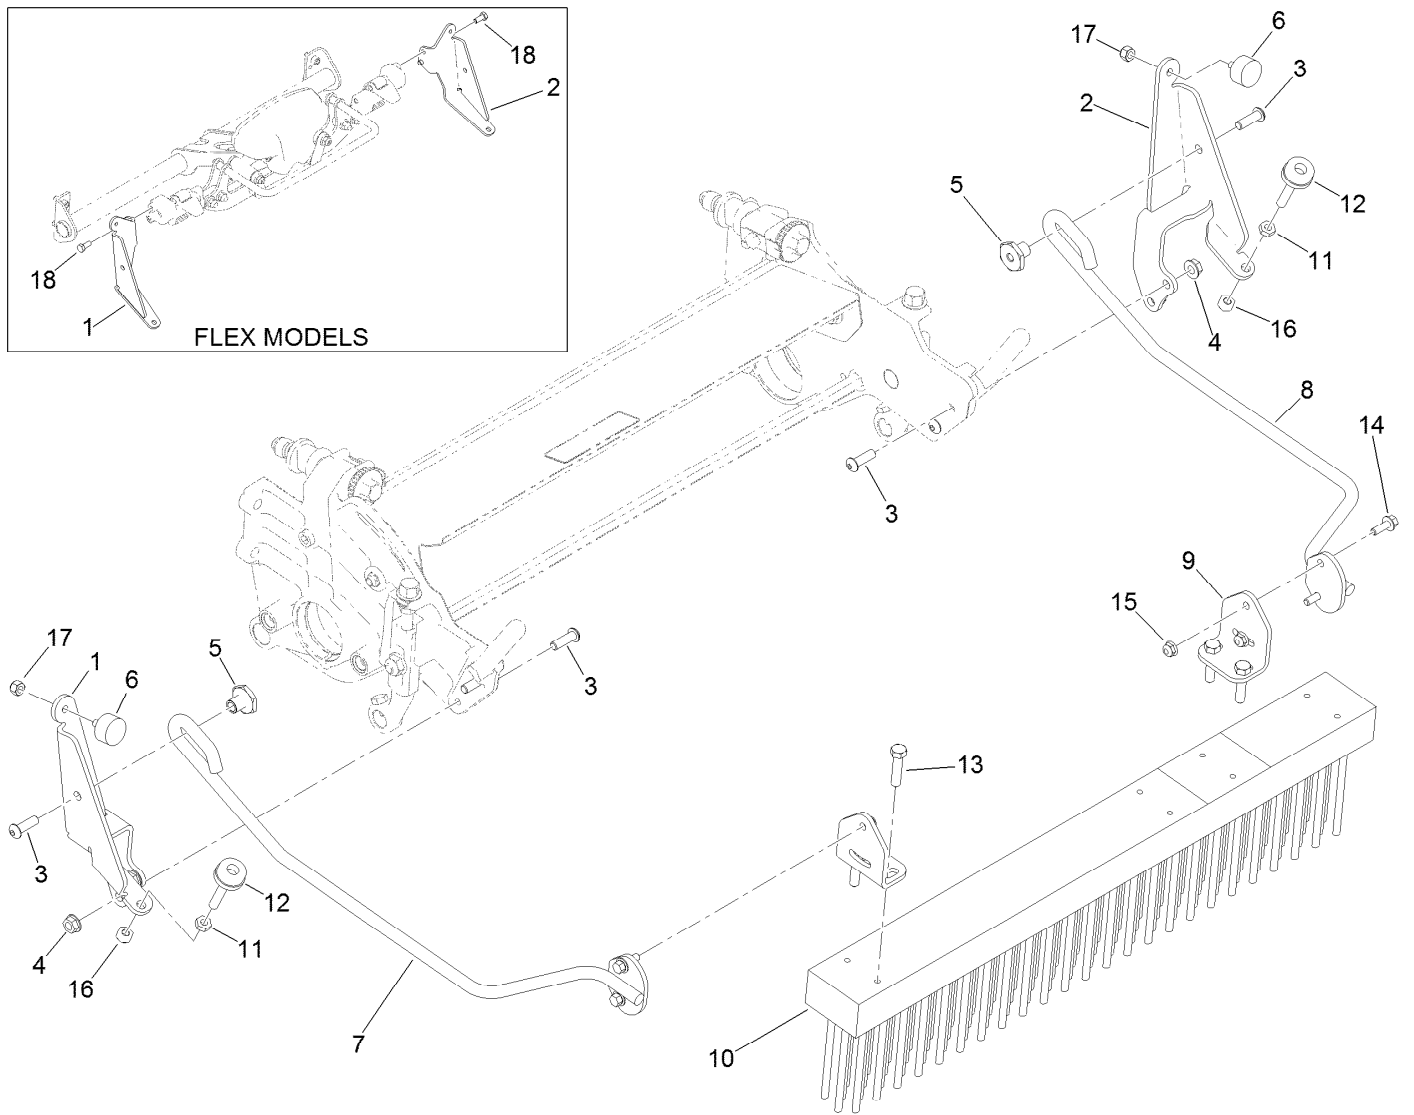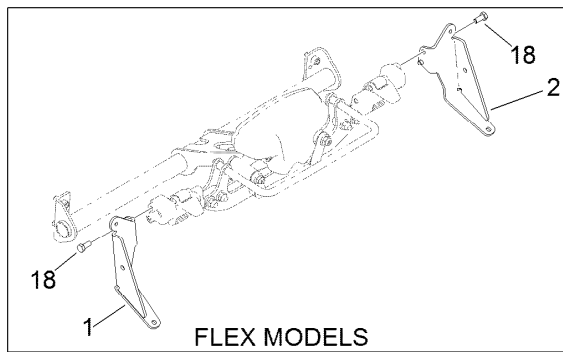

Out-Front Brush Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	140-3372-01	1	Bracket-Rod, Brush RH (Flex Models)	7	140-9202	1	Brush Rod ASM, RH
1	140-9207-01	1	Bracket-Mount, Brush RH (Fixed Models)	8	140-9204	1	Brush Rod ASM, LH
2	140-3373-01	1	Bracket-Rod, Brush LH (Flex Models)	9	140-9205	2	Tab-Brush
2	140-9208-01	1	Bracket-Mount, Brush LH (Fixed Models)	10	139-7416	1	Brush-Greensmower
3	109-4872	6	Screw-HSH	11	120-9638	2	Nut-Jam
4	32128-25	4	Nut-HF	12	32141-36	2	Screw-Adjustment, Level
5	139-7428	2	Nut-Spacer	13	108505	4	Screw-HLH
6	109-2365	2	Bumper-Rubber	14	120-9678	4	Screw-HHF
				15	137-3005	4	Nut-HF
				16	119-4038	2	Nut-Hex
				17	3296-42	2	Nut-Lock, NI
				18	137-3052	4	Screw-HH