Installation Instructions

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	No parts required	_	Prepare the machine.
2	LED light Light mount Mount cap Bolt (3/8 inch) Bolt (5/16 inch) Nut (3/8 inch) Nut (5/16 inch)	2 2 2 2 2 2 2	Install the lights.
3	Wire harness	1	Install the wire harness.
4	Switch	1	Install the switch.

If you install this kit to a Model 04860 or 04861 traction unit, ensure that the part number for the kit wire harness is 122-2178.

If you have an older wire harness (Part Number 122-1418), replace it with the new wire harness (Part Number 122-2178); refer to your authorized Toro distributor for the new wire harness.



Preparing the Machine

No Parts Required

Procedure

- 1. Park the machine on a level surface.
- 2. Engage the parking brake.
- Shut off the engine.
- Remove the spark-plug wire from the spark plug; refer to your machine Operator's Manual.





Installing the Lights

Parts needed for this procedure:

2	LED light
2	Light mount
2	Mount cap
2	Bolt (3/8 inch)
2	Bolt (5/16 inch)
2	Nut (3/8 inch)
2	Nut (5/16 inch)

Procedure

- 1. Use 2 bolts (3/8 inch), 2 bolts (5/16 inch), 2 nuts (3/8 inch), and 2 nuts (5/16 inch) to secure the light mounts to the machine frame (Figure 1).
- Install the mount caps onto the mounts (Figure 1).
- 3. Use the washers and nuts provided with each LED light to secure the lights to the mounts (Figure 1).

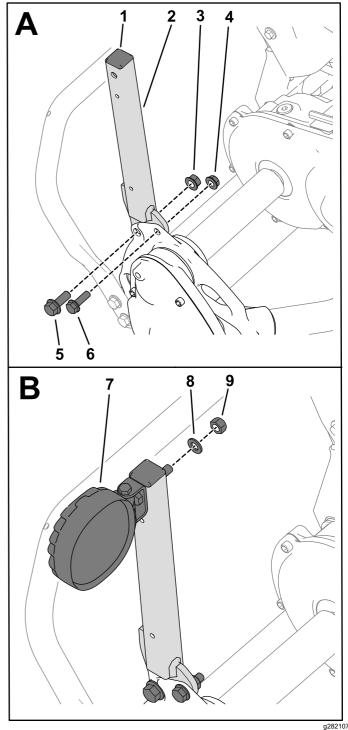


Figure 1

- 1. Mount cap
- 2. Light mount
- 3. Nut (3/8 inch)
- 4. Nut (5/16 inch)
- 5. Bolt (3/8 inch)
- 6. Bolt (5/16 inch)
- 7. LED light
- 8. Washer—LED light assembly
- 9. Nut—LED light assembly

Installing the Wire Harness

Parts needed for this procedure:

1 Wire harness

Procedure

Refer to Figure 2 for this procedure.

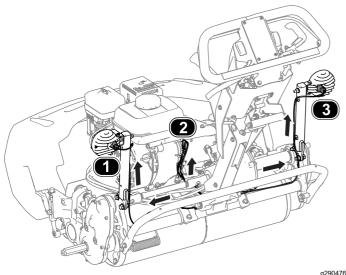


Figure 2

- 1. P02 (wire harness) to left light
- 3. P01 (wire harness) to right light
- 2. Refer to step 3.
- 1. Connect the wire-harness end labeled P02 to the light on the left side of the machine.
- 2. Connect the wire-harness end labeled P01 to the light on the right side of the machine.
- Perform the appropriate step for your machine as follows:

For machines **not equipped** with the Wireless Hour Meter (WHM) Kit:

- Connect the kit-wire-harness end labeled J02 to the white end of the machine wire harness labeled J4.
- Connect the kit-wire-harness end labeled J01 to the female connection of the engine wire harness.

For machines **equipped** with the Wireless Hour Meter (WHM) Kit:

- Connect the WHM wire-harness end labeled J01 to the white end of the engine wire harness.
- Connect the WHM wire-harness end labeled J02 to the black end of the light-kit wire harness labeled J02.
- Connect the WHM wire-harness end labeled J03 to engine mounting bolt as a ground.
- Connect the WHM wire-harness end labeled J04 to the white end of the main wire harness.
- Connect the WHM wire-harness end labeled J05 to the green end of the engine wire harness.
- Connect the white end of the light-kit wire harness (labeled J01) to the green end of the main wire harness.




Installing the Switch

Parts needed for this procedure:

1 Switch

Procedure

- 1. Remove the plug from the handle (Figure 3).
- 2. Connect the switch with the 8-socket connector of the wire harness (Figure 3).

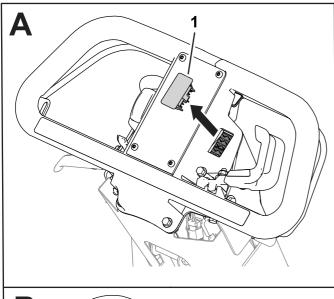

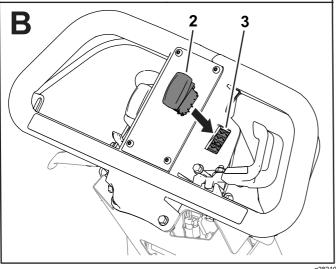


Figure 3

1. Plug

8-socket connector

2. Switch

Operation

Operating the Lights

- Turn on the lights: Press the top of the switch (Figure 4).
- **Turn off the lights:** Press the bottom of the switch (Figure 4).

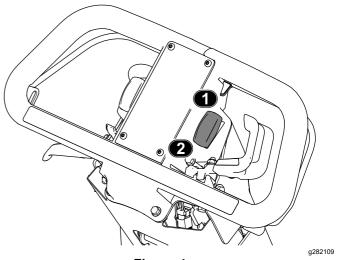


Figure 4

- 1. Turn on the lights.
- 2. Turn off the lights.