TORO_®

52in Discharge Chute Kit Z Master 100 and 200 Series

Model No. 106–5470 Model No. 106–5451

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002 All Rights Reserved

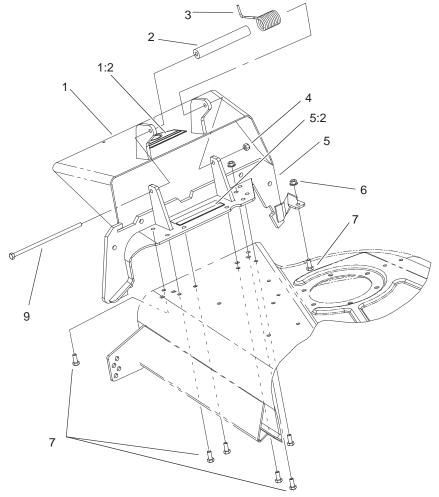

Sheet No.:0 C-3035

Discharge Chute Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1 1:2 3 4 5 5:2 6 7 9 *99	105-4622 104-8554 3296-29 106-5454 104-8569 32128-25 322-3 322-50	1 1 1 1 1 1 1 7 7 1 2	Deflector ASM Decal–Danger Spacer Spring–Torsion Nut–Lock, NI Plate–Discharge Decal–Warning Nut–Flange Screw–HH Screw–HH Kit–Valve, Shock (only on:105–5451)				

* Not illustrated