TORO_®

62in Discharge Chute Kit Z Master 200 Series

Model No. 106-5450

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002 All Rights Reserved

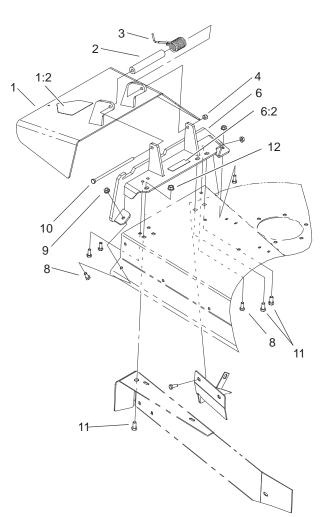

Sheet No.:0 C-3033

Discharge Chute Assembly

Ref. No.	Part No.	Qty.	Description		Ref. No.	Part No.	Qty.	Description
1	105–3605	1	Deflector ASM					
1:2	93–1122	1	Decal–Danger					
2	105–4622	1	Spacer					
3	104–8554	1	Spring–Torsion					
4	3296–29	1	Nut–Lock, NI					
6	106–5453	1	Plate–Discharge					
6:2		1	Decal–Danger					
8	322–3	6	Screw–HH					
9	32128–25	6	Nut–Flange					
10	322–50	1	Screw-HH					
11	323–4	3	Screw-HH					
12		3	Nut–HF					
*99	106–2053	2	Kit–Valve, Shock					
				IL				

* Not illustrated