



Count on it.

Parts Catalog

8in Earth Auger

Model No. 58630—Serial No. 321000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity



In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Powerhead Assembly 4
Auger Assembly 6



Powerhead Assembly

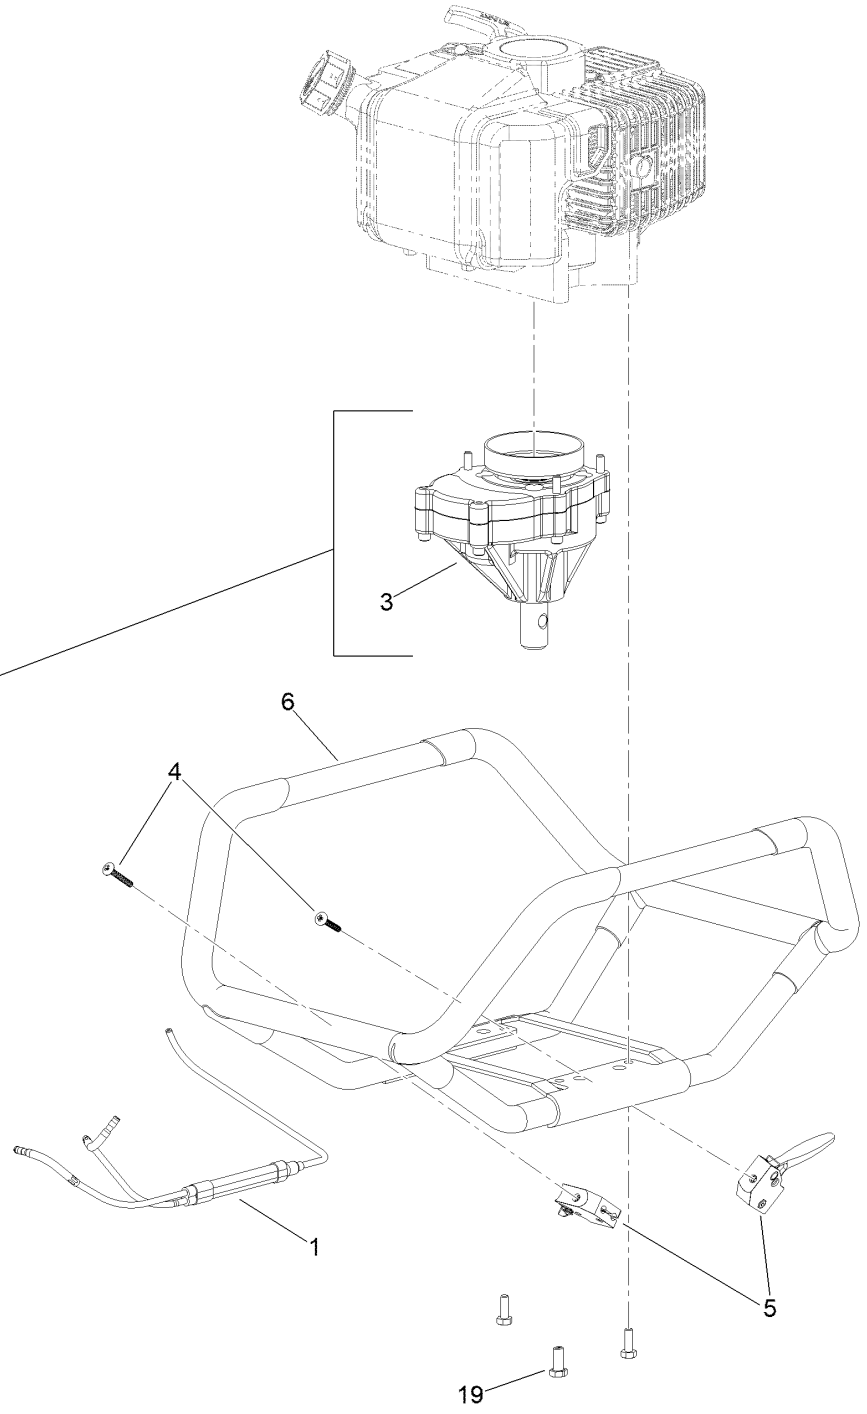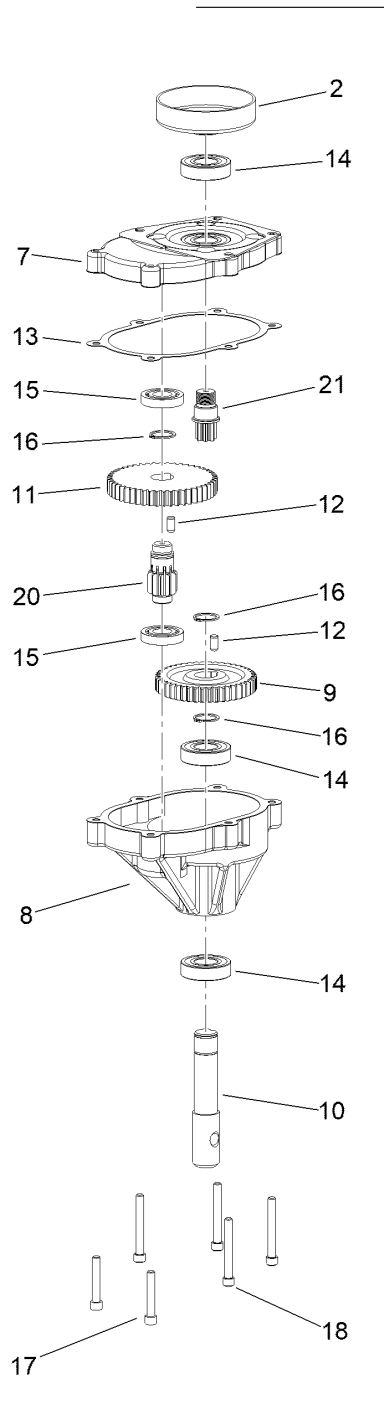

Powerhead Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-5145	1	Cable ASM	12	144-5222	2	Pin-Dowel
2	144-5204	1	Drum-Clutch	13	144-5223	1	Gasket-Transmission
3	144-5206	1	Transmission ASM	14	144-5224	3	Bearing-Ball
4	144-4776	2	Screw-PTH	15	144-5225	2	Bearing-Ball
5	144-5215	2	Trigger ASM	16	144-5021	3	Ring-Retaining
6	144-5216	1	Handlebar	17	144-5226	2	Screw-SHCS
7	144-5217	1	Case-Transmission Upper	18	144-5227	4	Screw-SHCS
8	144-5218	1	Case-Transmission Lower	19	144-5228	4	Screw-HH
9	144-5219	1	Gear-44T	20	144-5229	1	Pinion-10T
10	144-5220	1	Shaft-Output	21	144-5230	1	Pinion-7T
11	144-5221	1	Gear-48T				

Auger Assembly

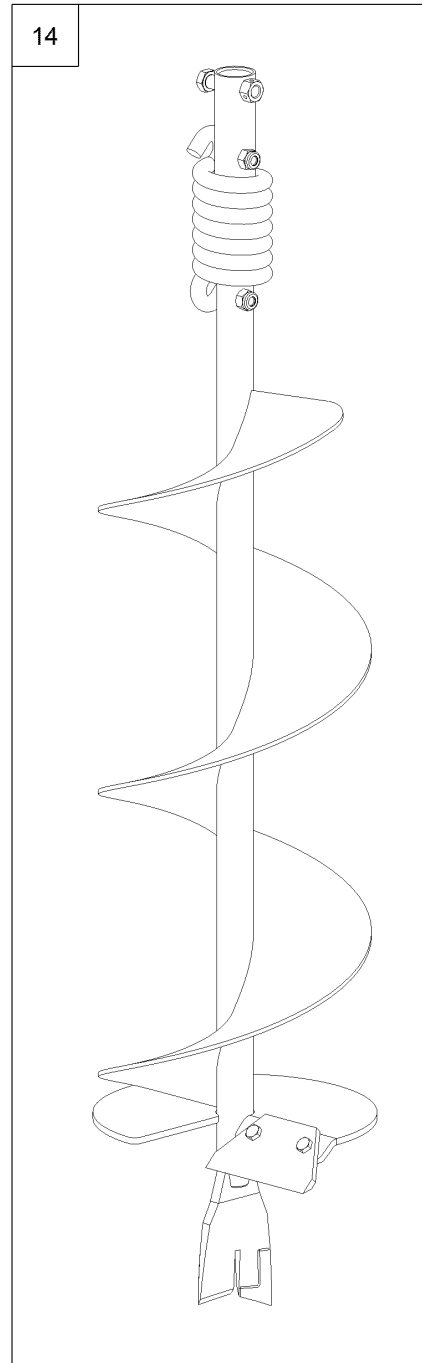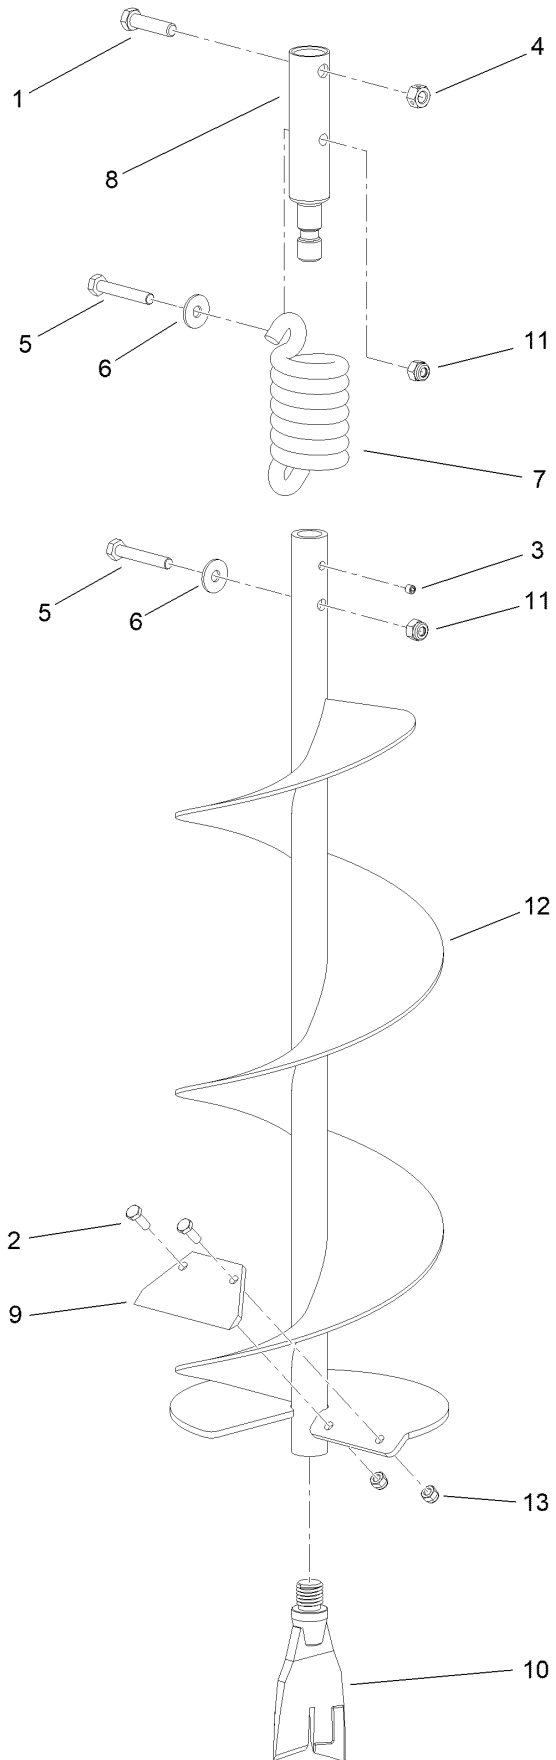

Auger Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-5149	1	Screw-HHCS	8	144-5209	1	Top-Shock
2	144-4981	2	Screw-HHCS	9	144-5210	1	Blade
3	144-5201	2	Screw-Scpc	10	144-5211	1	Fishtail Point
4	144-5202	1	Nut-Hex	11	144-4738	2	Nut-Hex
5	144-5203	2	Screw-HHCS	12	144-5214	1	Auger-8 Inch
6	144-4936	2	Washer-Flat	13	144-4836	2	Nut-Hex
7	144-5208	1	Spring-Shock	14	147-4294	1	Auger ASM



Count on it.