

Heavy Duty Spring Kit TimeCutter® MyRide® Riding Mower

Model No. 161-4525

Installation Instructions

Preparing the Machine

Gas Models Only

- 1. Park the machine on a level surface.
- 2. Disengage the blade-control switch.
- 3. Move the motion-control levers outward to the PARK position.
- 4. Shut off the machine and remove the key.
- 5. Wait for all moving parts to stop.
- 6. Allow machine components to cool.
- 7. Disconnect the spark-plug.

Preparing the Machine


Electric Models Only

- 1. Park the machine on a level surface.
- 2. Disengage the blade-control switch.
- 3. Move the motion-control levers outward to the NEUTRAL position.
- 4. Engage the parking brake.
- 5. Shut off the machine and remove the key.
- 6. Wait for all moving parts to stop.
- 7. Allow machine components to cool.
- 8. Remove the battery packs from the machine.



Removing the Existing Front Spring

- 1. Place a 38 x 89 mm (2 x 4 inches) board under the foot rest to block the front of the platform.
- 2. Remove the 2 shoulder bolts and 2 locknuts (3/8 inch) securing the existing front spring. Retain the hardware.
- 3. Remove the existing front spring.

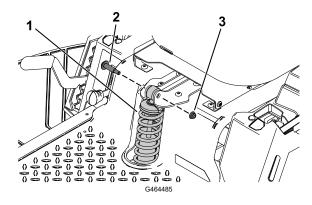

- 1 Front spring
- (2) Shoulder bolt

3 Locknut (3/8 inch)


Installing the New Heavy-Duty Spring

Install the new spring using the previously removed 2 shoulder bolts and 2 locknuts.

Installing the Spring Spacers

- 1. Raise the seat.
- 2. Place the spring-lift tube onto the end of the torsion spring.


Note: Ensure that the spring-lift tube is securely seated on the end of the torsion spring.

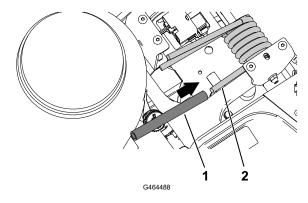

Spring-lift tube


- (2) Torsion spring
- 3. Slide the spring spacer onto the swing-arm post.
- 4. Use one hand to lift the end of the torsion spring off the swing-arm post and slide the spacer between the torsion spring and swing-arm post.

Page 2 3465-283 A

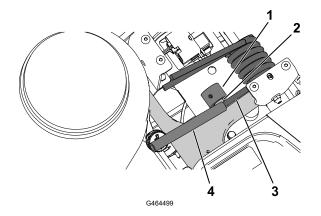

- 1 Spring spacer
- 2 Swing-arm post

- 3 Torsion spring
- 4 Spring-lift tube
- 5. Secure the spring spacer to the swing-arm post using the set screw.

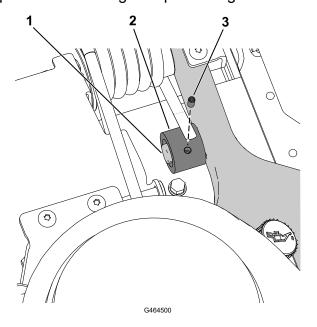

- 1 Swing-arm post
- 2 Spring spacer

- 3 Set screw
- 6. Repeat this procedure on the other side.
- 7. Lower the seat.

3465-283A Page 3

