

Count on it.

Parts Catalog

Hydra Borer Maxi Sneaker™ 370 Vibratory Plow

Model No. 25532E

Model No. 25532T



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

ydra Borer Assembly	
ydraulic Motor Assembly No. AUH673156	6

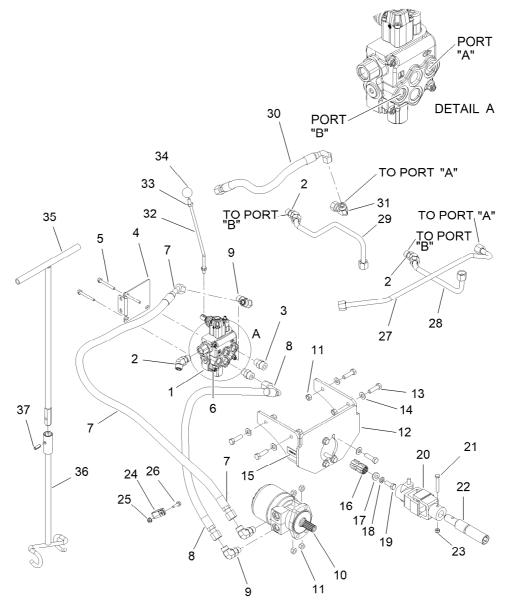


Hydra Borer Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	130-4310	1	Hydro Valve ASM	15:3	147-5747	1	California Prop 65 Warning
2	147-5728	3	Connector (10S-10O45)				- Parts ●
3	147-5727	2	Connector (10S-10O)	16	AUH312314	1	Adapter
4	130-4311-03	1	Bracket-Hydro Valve	17	AUH435886	1	Retainer-Adapter
5	33104-070	3	Screw-HHF	18	3253-7	1	Washer-Lock
6	33024-00	3	Nut-Lock, NI	19	106-0378	1	Screw
7	147-5739	1	Hose (10Ofx45-53"-3000)	20	AUH511113	1	U-Joint ASM
8	147-5740	1	Hose (100fx90L-54"-3000)	21	323-47	1	Screw-HH
9	147-5706	3	Connector (10S-10O90)	22	147-5745	1	Adapter
10	AUH673156	1	HYD Motor ASM	23	97-1204	1	Nut-Hex
11	97-1206	8	Locknut	24	2412-137	1	Clamp-R, Double
12	147-5749	1	Mount - Hydrabore	25	104-8300	1	Nut-HF, NI
13	121-1524	8	Screw-HH	26	3234-29	1	Screw-HHF
14	AU496-21053	8	Washer-Flat	27	147-5744	1	Hardline (-10 Hydraborer To
15		1	Hydrabore Decal Kit ■				Trencher)
15:1	147-5746	2	Danger Rotating Shaft ●	28	147-5743	1	Hardline (-10 Hydraborer To
15:2	147-5748	1	Hydra Bore Control ●				Return)

Not illustrated

[■] Not serviced separately

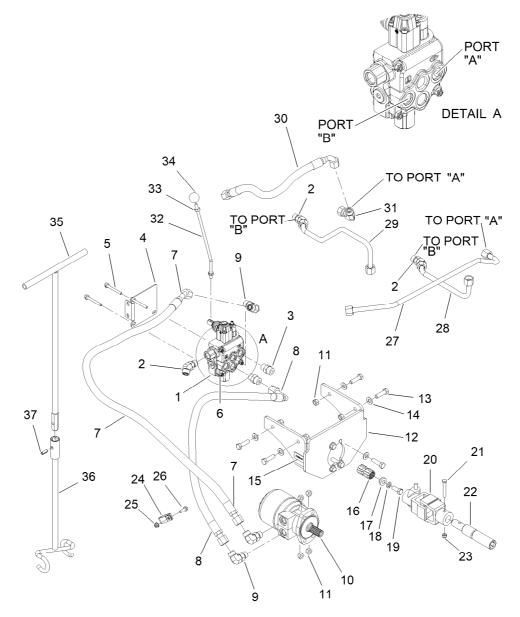


Hydra Borer Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
29	147-5741	1	Hardline (Hydrabore To	33	33015-00	2	Nut-Hex
			Return)	34	130-7377	1	Knob-Round
30	147-5742	1	Hose (10Ofx90S-18"-3000)	35	106-7740-03	1	Handle-Tool, Guide
31	340-160	1	Elbow-90	36	104-5988-03	1	Tool-Guide, Rod
31:1	237-65	1	O-Ring ●	37	32121-41	1	Pin-Roll
32	130-4349	1	Lever				

Not illustrated

■ Not serviced separately

Hydraulic Motor Assembly No. AUH673156

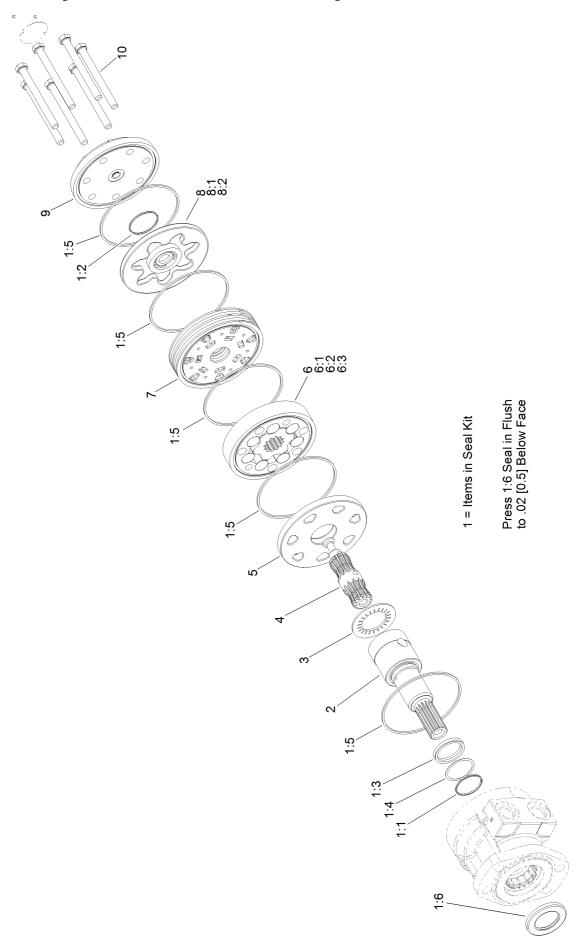

Hydraulic Motor Assembly No. AUH673156 (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	112-8405	1	Seal Kit	6	76-0970	1	Rotor Set
1:1		1	Ring-Backup ●	6:1		1	Rotor ●
1:2		1	Seal-Commutator ●	6:2		7	Vane ●
1:3		1	Seal-Shaft ●	6:3		1	Stator ●
1:4		1	Washer-Backup ●	7	92-9755	1	Manifold
1:5		5	Ring-Seal ●	8	106-1982	1	Commutator ASM
1:6		1	Seal-Dirt And Water ●	8:1		1	Commutator ●
2		1	Shaft-Coupling ●	8:2		1	Ring-Commutator ●
3	76-0850	1	Bearing-Thrust	9	76-0940	1	End Cover ASM
4	76-0960	1	Link-Drive	10		7	Bolt-Special ●
5	92-9754	1	Plate-Wear				-

7

Not serviced separately

