



**Count on it.**

**Parts Catalog**

**Stand-On E-Spreader/Sprayer**

Model No. 34230—Serial No. 412800000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Frame Assembly.....	4
Knee Pad Assembly.....	6
Steering Assembly.....	8
Steering Linkage Assembly No. 126-7185.....	10
Ground Drive Assembly.....	12
Transaxle Cover Assembly No. 126-1462.....	14
Engine Assembly.....	16
Electrical Assembly.....	18
Spray System Assembly.....	20
Sprayer Tank Assembly No. 126-0286.....	22
Strainer Assembly No. 126-4358.....	24
Control Valve Manifold and Hose Assembly.....	26
Control Valve Manifold Assembly No. 142-7292.....	28
Left Nozzle Assembly No. 126-3667.....	30
Right Nozzle Assembly No. 126-3669.....	32
Center Nozzle Assembly No. 126-3668.....	34
Spreader Assembly.....	36
Spreader Hopper Assembly.....	38
Side Deflector Assembly.....	40

# Frame Assembly

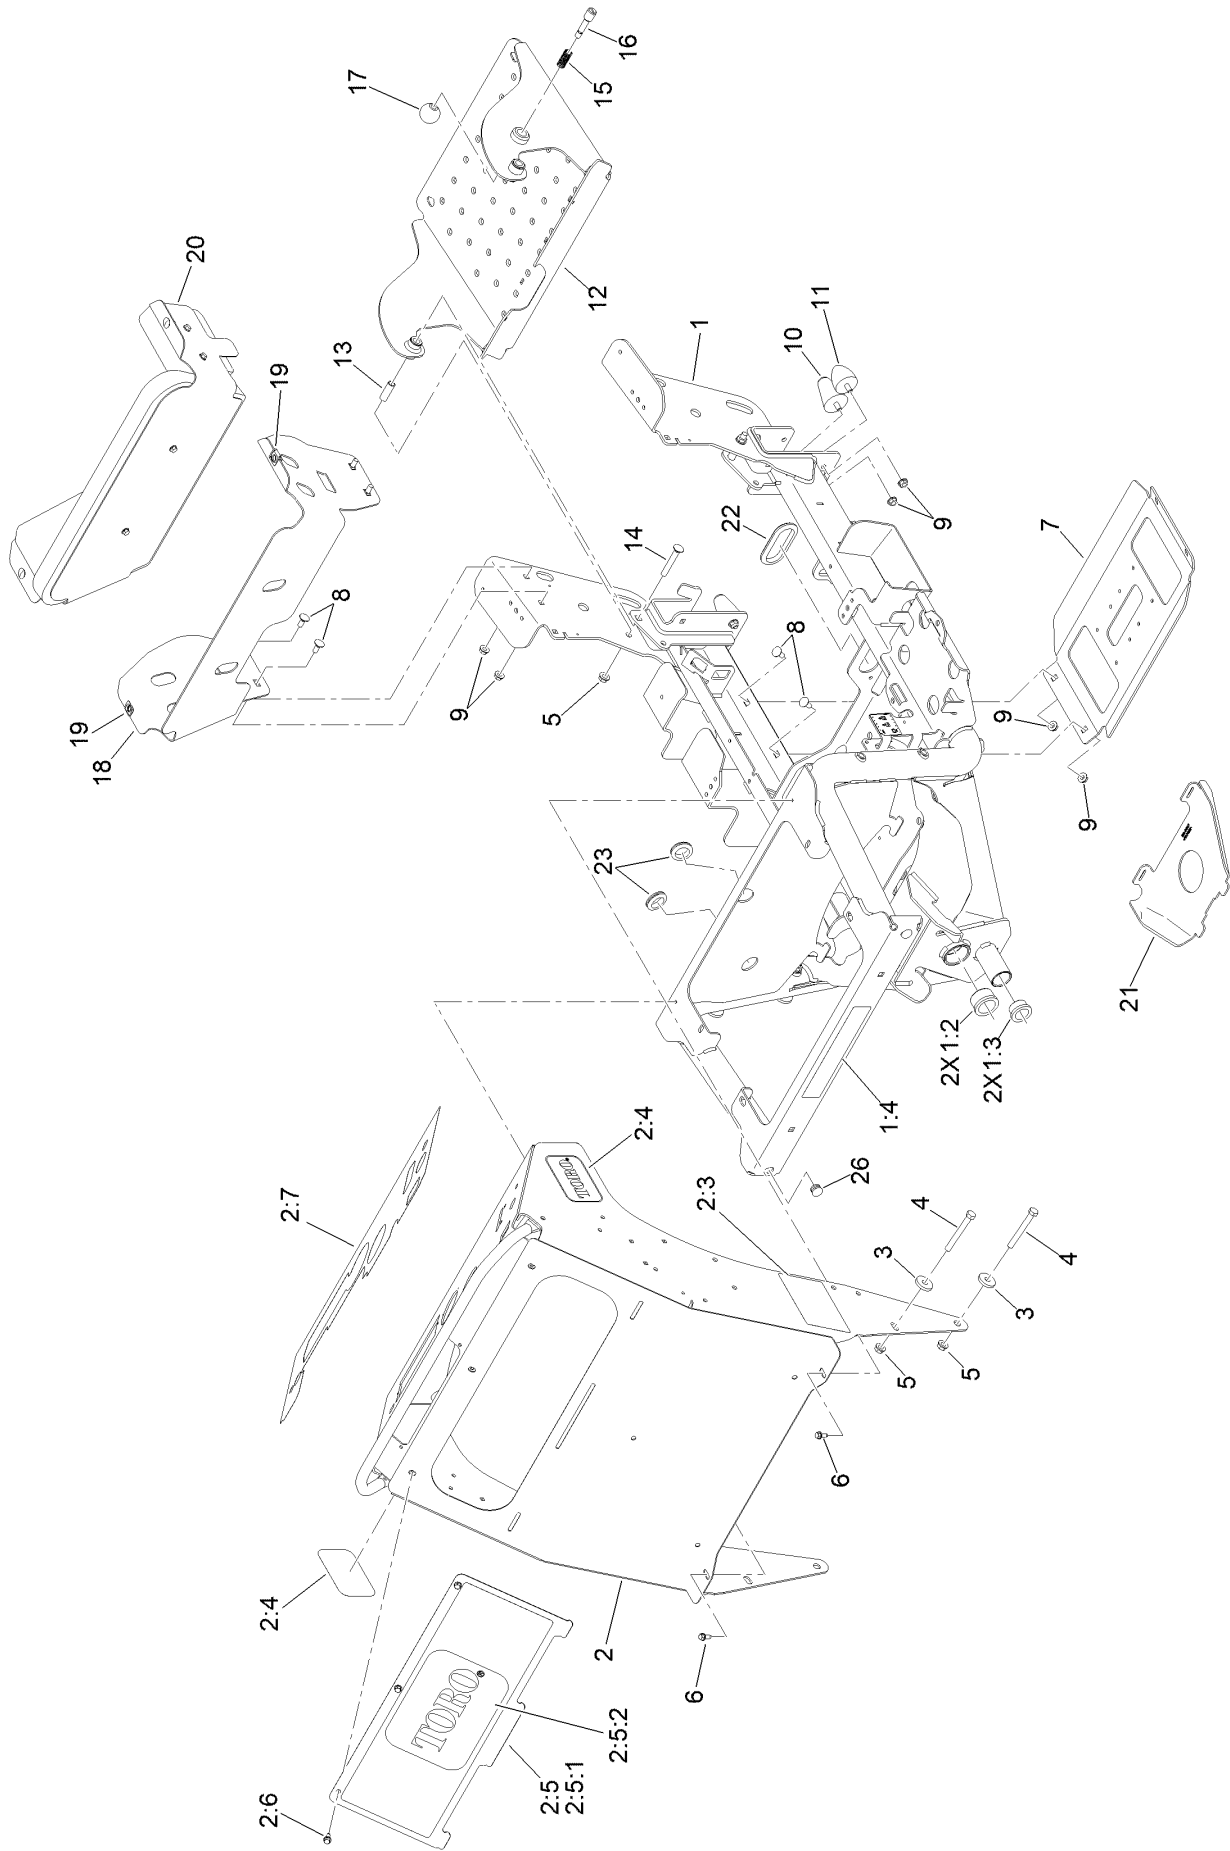


## Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2788	1	Frame ASM	8	126-0695	8	Screw-CARR
1:2	126-3008	2	Bearing-Flanged	9	135-2881	12	Nut-HF
1:3	126-3002	2	Bearing-Flanged	10	114-1925	2	Bumper-Rubber
1:4	126-4994	1	Decal-Down, Tie	11	114-1926	2	Bumper-Rubber
2	142-7689	1	Control Tower ASM	12	126-0435	1	Operator Platform ASM
2:3	126-5186	1	Decal-Service Aid	13	126-0434	2	Bushing-Pivot, Platform
2:4	126-5060	2	Decal-Logo, Toro	14	126-0702	2	Screw-CARR
2:5	126-7216	1	Access Panel W/ Decal	15	114-5348	1	Spring
2:5:1	126-6402-01	1	Panel-Access	16	119-8650	1	Pin-Latch
2:5:2	126-7225	1	Decal-Toro	17	1-603175	1	Knob-Ball
2:6	32144-10	3	Screw-HWH	18	126-1234-03	1	Mount-Pad, Knee
2:7	146-0563	1	Decal-Control	19	119-1730	2	Receptacle-Clip, Mini
3	126-3875	4	Washer	20		1	Knee Pad ASM ●
4	126-2661	4	Screw-HH	21	126-2567	1	Shield-Dust
5	135-2882	6	Nut-HF	22	237-164	2	Grommet
6	32144-10	2	Screw-HWH	23	240-5	2	Grommet
7	126-1415	1	Guard-Lower	26	126-5147	2	Plug-Tube

● Not serviced separately


# Knee Pad Assembly

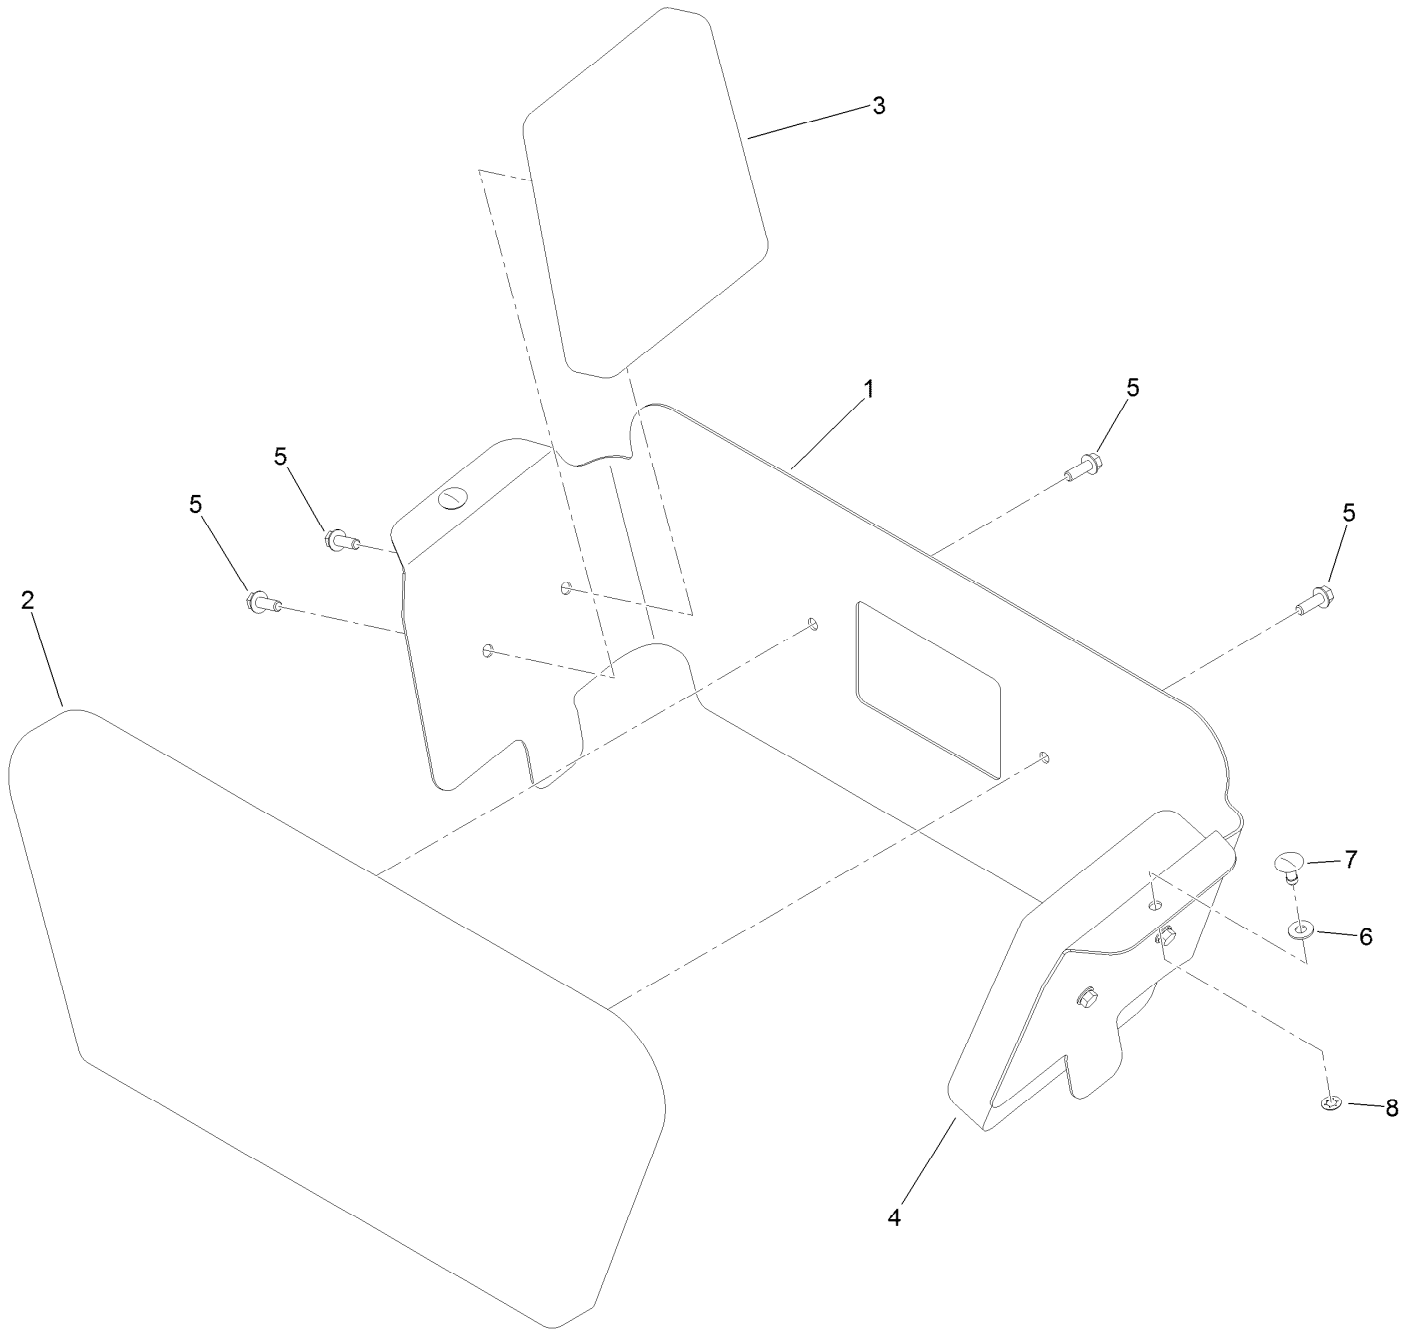

## Knee Pad Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1244-03	1	Bracket-Pad, Knee	5	117-8304	6	Screw-HHF
2	142-2754	1	Pad-Knee, Center	6	360-0140	2	Washer-Flat
3	126-2780	1	Pad-Knee, Side (LH)	7	119-1728	2	Stud-1/4 Turn
4	126-2781	1	Pad-Knee, Side (RH)	8	119-1729	2	Retainer-Stud

# Steering Assembly

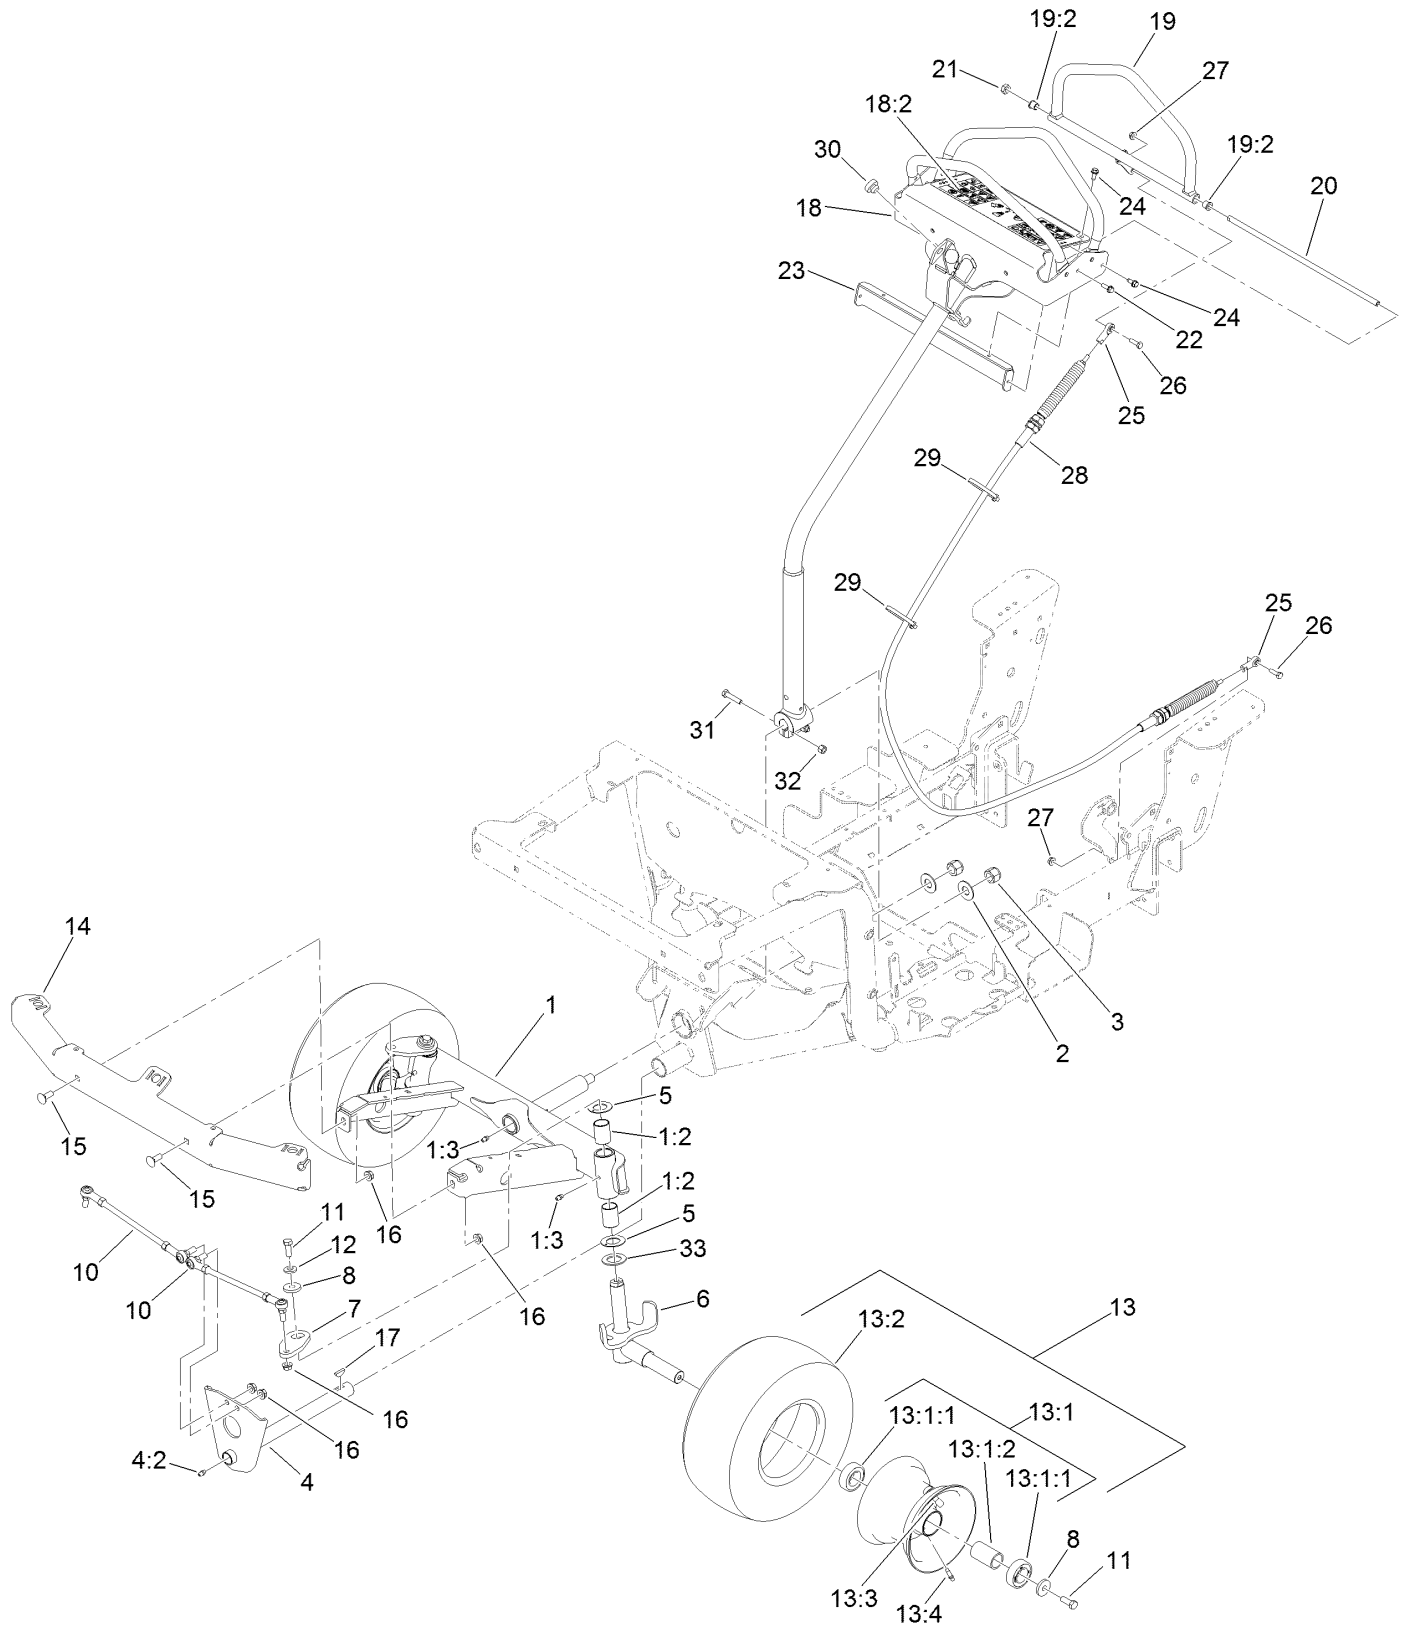




## Steering Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7045	1	Front Axle ASM	15	126-0980	2	Screw-CARR
1:2	126-7048	4	Bearing-Sleeve	16	135-2882	6	Nut-HF
1:3	126-1375	3	Zerk-Grease	17	3257-7	1	Key-Woodruff
2	126-0656	1	Washer-Flat	18	135-3155	1	Motion Handle ASM
3	126-3841	1	Nut-Hex, NI	18:2	135-2844	1	Decal-Warning
4	135-3156	1	Steering Shaft ASM	19	126-1598	1	Motion Handle ASM
4:2	126-1375	1	Zerk-Grease	19:2	103-9928	2	Bearing
5	126-7044	4	Washer-Thrust	20	126-0496	1	Shaft-Pivot, Speed Control
6	126-6733	2	Front Axle ASM	21	116-4198	1	Spacer-Shaft, Drive Lever
7	126-7069	2	Arm-Steering	22	117-8304	2	Screw-HHF
8	126-3875	4	Washer	23	126-1604-03	1	Panel-Rear, Steering
10	126-7185	2	Steering Linkage ASM	24	32144-10	4	Screw-HWH
11	135-1711	4	Screw-HH	25	2411-41	2	Rod End-Ball Joint
12	98-5975	2	Washer-Belleville	26	126-0498	2	Screw-HH
13	126-7221	2	Wheel And Tire ASM	27	135-2880	2	Nut-HF
13:1	126-7261	1	Wheel ASM	28	126-2169	1	Cable-Motion
13:1:1	116-0720	2	Bearing-Ball	29	3290-378	2	Tie-Cable
13:1:2	126-7260	1	Spacer	30	104-1412	2	Bumper-Rubber
13:2	126-1509	1	Tire	31	3210-9	2	Screw-HH
13:3	232-27	1	Stem-Valve	32	32152-5	2	Nut-Hex
13:4	302-62	1	Fitting-Grease	33	126-7050	2	Spacer-Relief
14	116-9789	1	Bumper-Front				

# Steering Linkage Assembly No. 126-7185

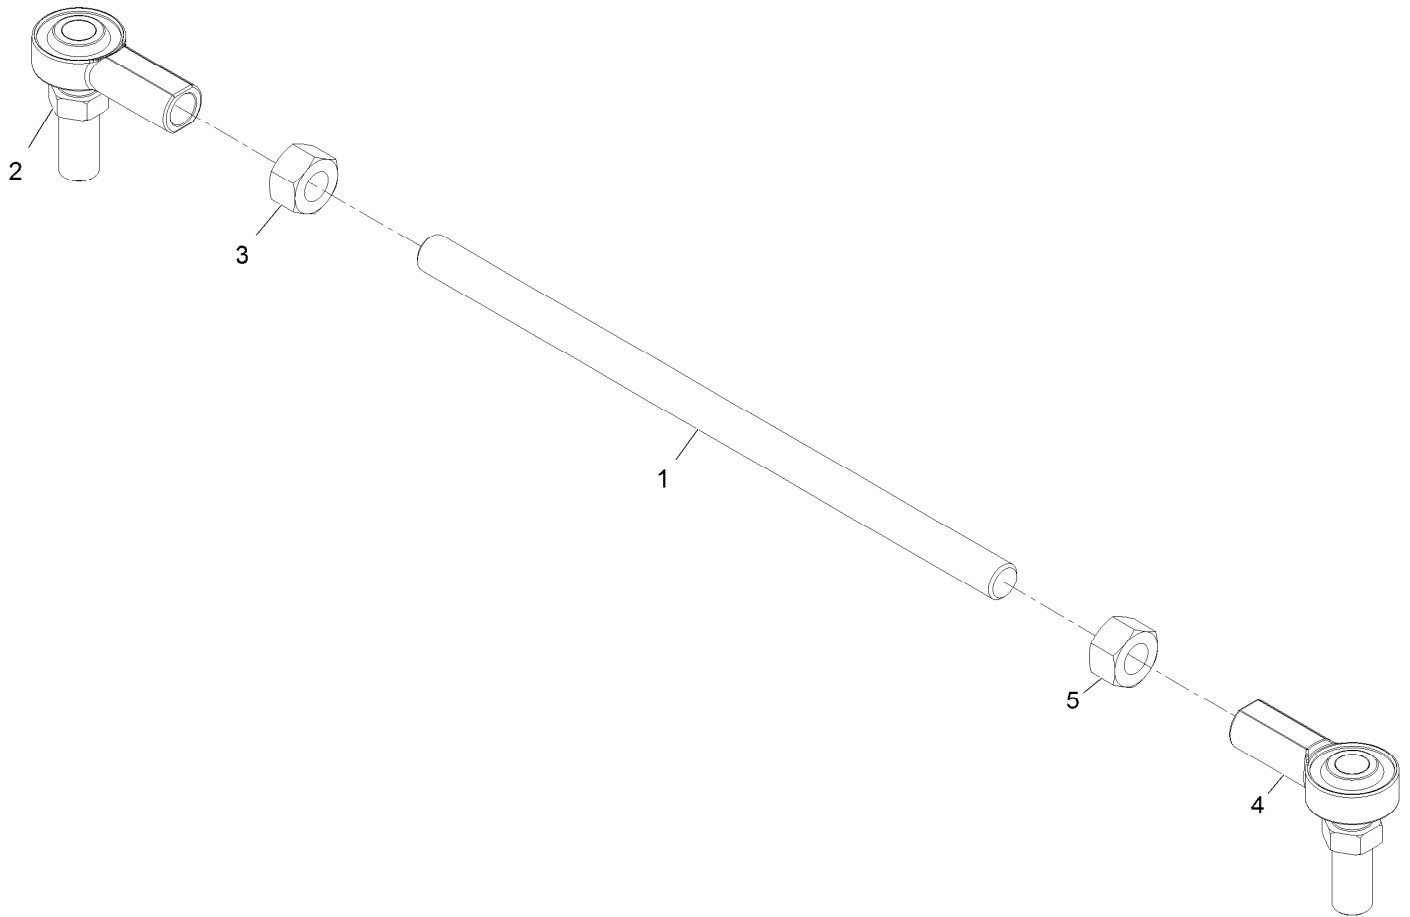

# Steering Linkage Assembly No. 126-7185 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7183	1	Rod-Linkage, Steering
2	126-7181	1	Rod-End, RH
3	126-0687	1	Nut-Hex

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	126-7182	1	Rod-End, LH
5	126-0688	1	Nut-Hex, LH




## Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2814	1	Transaxle	26	135-2880	4	Nut-HF
1:99	126-9688	1	Kit-Seal ●	27	126-3937-03	1	Arm-Brake
1:99	135-3175	1	Kit-Transmission Seal ●	28	126-0520	1	Screw-HH
1:99	142-4793	1	Plug-Bore 20 ●	29	135-2882	2	Nut-HF
2	3230-26	4	Screw-CARR	30	126-0433	1	Brake Lever ASM
3	135-2881	2	Nut-HF	30:2	116-4279	2	Bearing-Flange
4	135-1898	2	Wheel And Tire ASM (Grey)	31	92-1057	1	Bolt-Shoulder
4:1	119-8907	1	Tire-4 Ply	32	2411-41	1	Rod End-Ball Joint
4:2	135-1899	1	Wheel (Grey)	33	1-303334	2	Washer-Spring
4:3	232-27	1	Stem-Valve	34	126-4009	1	Screw-HH
4:99	107-2491	1	Tube-Tire ●	35	3220-1	1	Nut-Jam
6	135-1711	2	Screw-HH	36	3256-78	2	Washer-Flat
7	126-2983	1	Spacer-Shaft, Input	37	1-323245	1	Spring-Compression
8	3290-317	1	Washer-Spring	38	612503	1	Spacer
9	116-9787	1	Hub-Shaft, Transaxle	39	321-8	1	Screw-HH
10	605256	1	Spacer	40	126-4423-03	1	Bracket-Mount, Tank
11	32151-61	1	Ring-Retaining	41	126-0695	2	Screw-CARR
12	27-6590	4	Spacer-Coupling, Rubber	42	126-2927	1	Fitting-90 DEG
13	115-4523	2	Coupling-Rubber	42:1	237-42	1	O-Ring
14	3210-8	4	Screw-HH	43	126-2578	1	Tank ASM
15	3256-3	4	Washer-Flat	43:1	126-2579	1	Cap-Tank
16	32152-5	8	Nut-Hex	44	126-2842	1	Hose-Expansion
17	135-5223-03	1	Shaft-Drive	45	126-3749	2	Clamp
18	125-9249	4	Spacer-Coupler, Rubber	46	119-1730	2	Receptacle-Clip, Mini
19	3210-5	4	Screw-HH	47	126-1462	1	Transaxle Cover ASM
20	116-9788	1	Hub-Shaft, Engine	48	126-2980	1	Fan-7 Inch
21	3246-18	2	Setscrew	49	1-543610	2	Washer-Clutch
22	126-6243-03	1	Arm-Motion	52	104-8300	4	Nut-HF, NI
23	126-4295	1	Pin-Spiral	53	126-9884	2	Wheel Hub ASM
24	126-2811-03	1	Arm-Release	53:2	10-6830	4	Stud-Type, Drive
25	126-0498	3	Screw-HH	54	242-50	4	Nut-Lug

● Not illustrated

# Transaxle Cover Assembly No. 126-1462

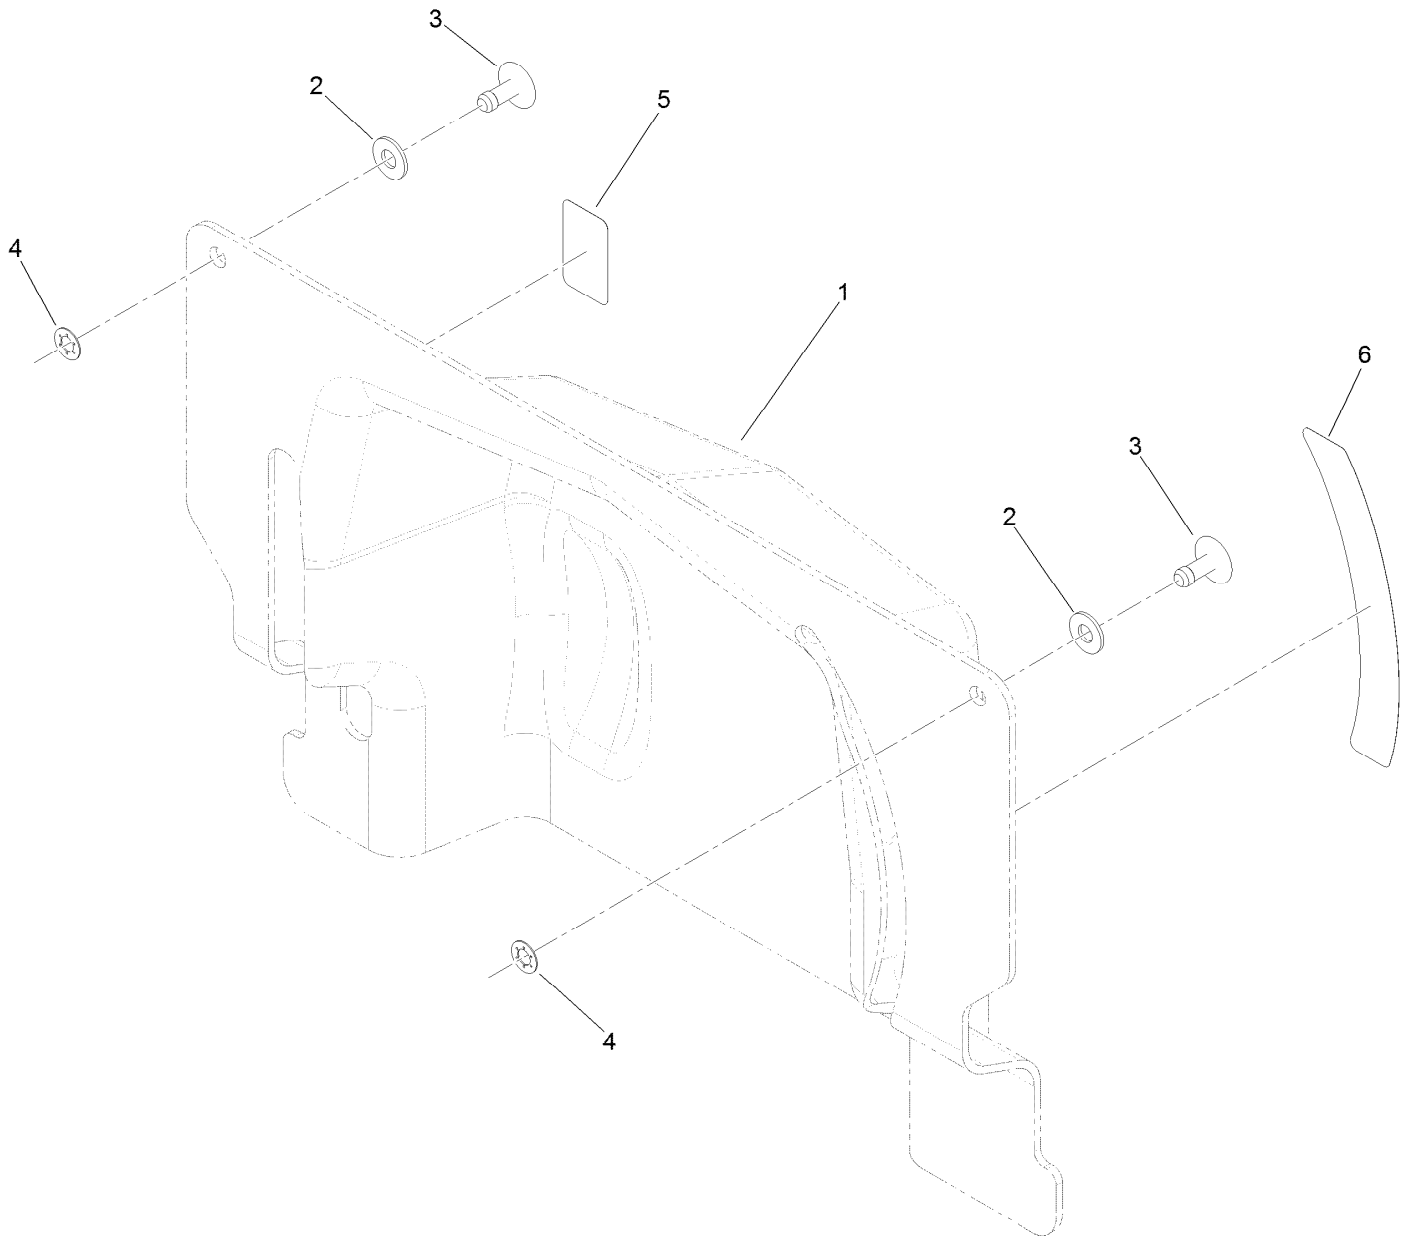


# Transaxle Cover Assembly No. 126-1462 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Cover-Transaxle ●	4	119-1729	2	Retainer-Stud
2	360-0140	2	Washer-Flat	5	126-2620	1	Decal-Brake, Park
3	119-1728	2	Stud-1/4 Turn	6	126-2621	1	Decal-Release, Drive

● Not serviced separately

# Engine Assembly

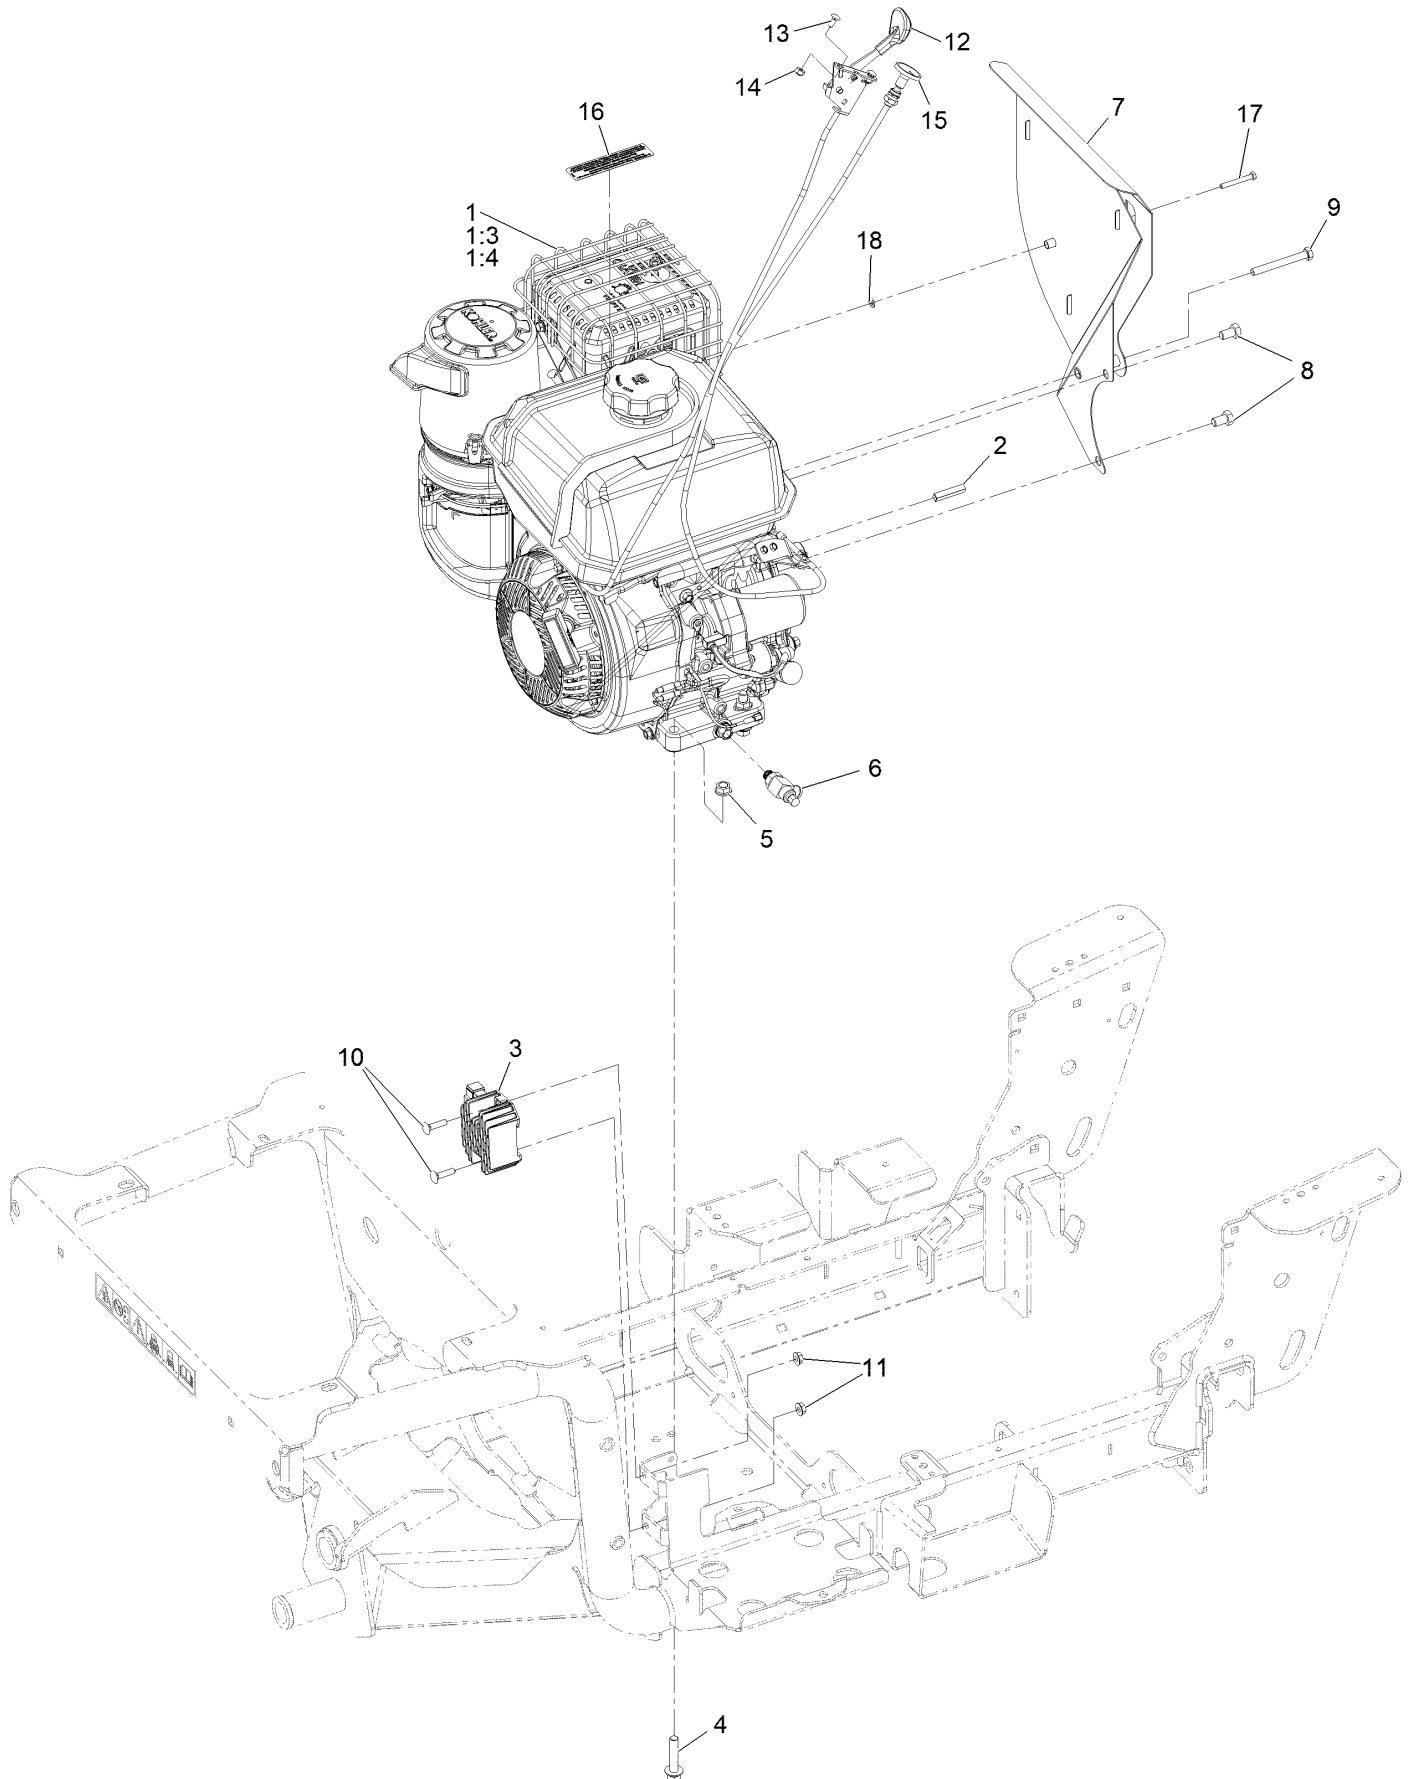




## Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1359	1	Engine-Kohler, Ch395	9	120-1177	1	Screw-HH 5/16-24 X 2 3/4
1:3	142-9962	1	Cage-Ch395 17_314_197 Bird	10	126-1455	2	Screw-Carriage 1/4-20 X 1 SS
1:4	138-3103	1	Deflector-Exhaust, Kohler	11	135-2880	2	Nut-Hex Flange 1/4-20 SS
2	135-3980	1	Key-Square, 7MM	12	135-3149	1	Control-Throttle
3	135-7026	1	Regulator-Trombetta, 18A	13	1-807513	2	Bolt-Carriage #10-24 X 1/2
4	126-2710	4	Screw-HHF 3/8-16 X 1 3/4 Serrated SS	14	3296-2	2	Nut-Nyloc #10-24
5	135-2882	4	Nut-Hex Flg 3/8-16 SS W/Patch	15	135-3150	1	Cable-Choke, Push/Pull
6	126-9978	1	Valve-Drain, Oil	16	133-8062	1	Decal-Spark Arrestor
7	126-2225	1	Heat Shield ASM	17	135-4328	1	Bolt-M5X0.8Mm X 40 MM Long
8	115-8486	2	Screw-HH 3/8-16 X 5/8 W/Patch	18	126-0759	1	Washer-Flat

# Electrical Assembly

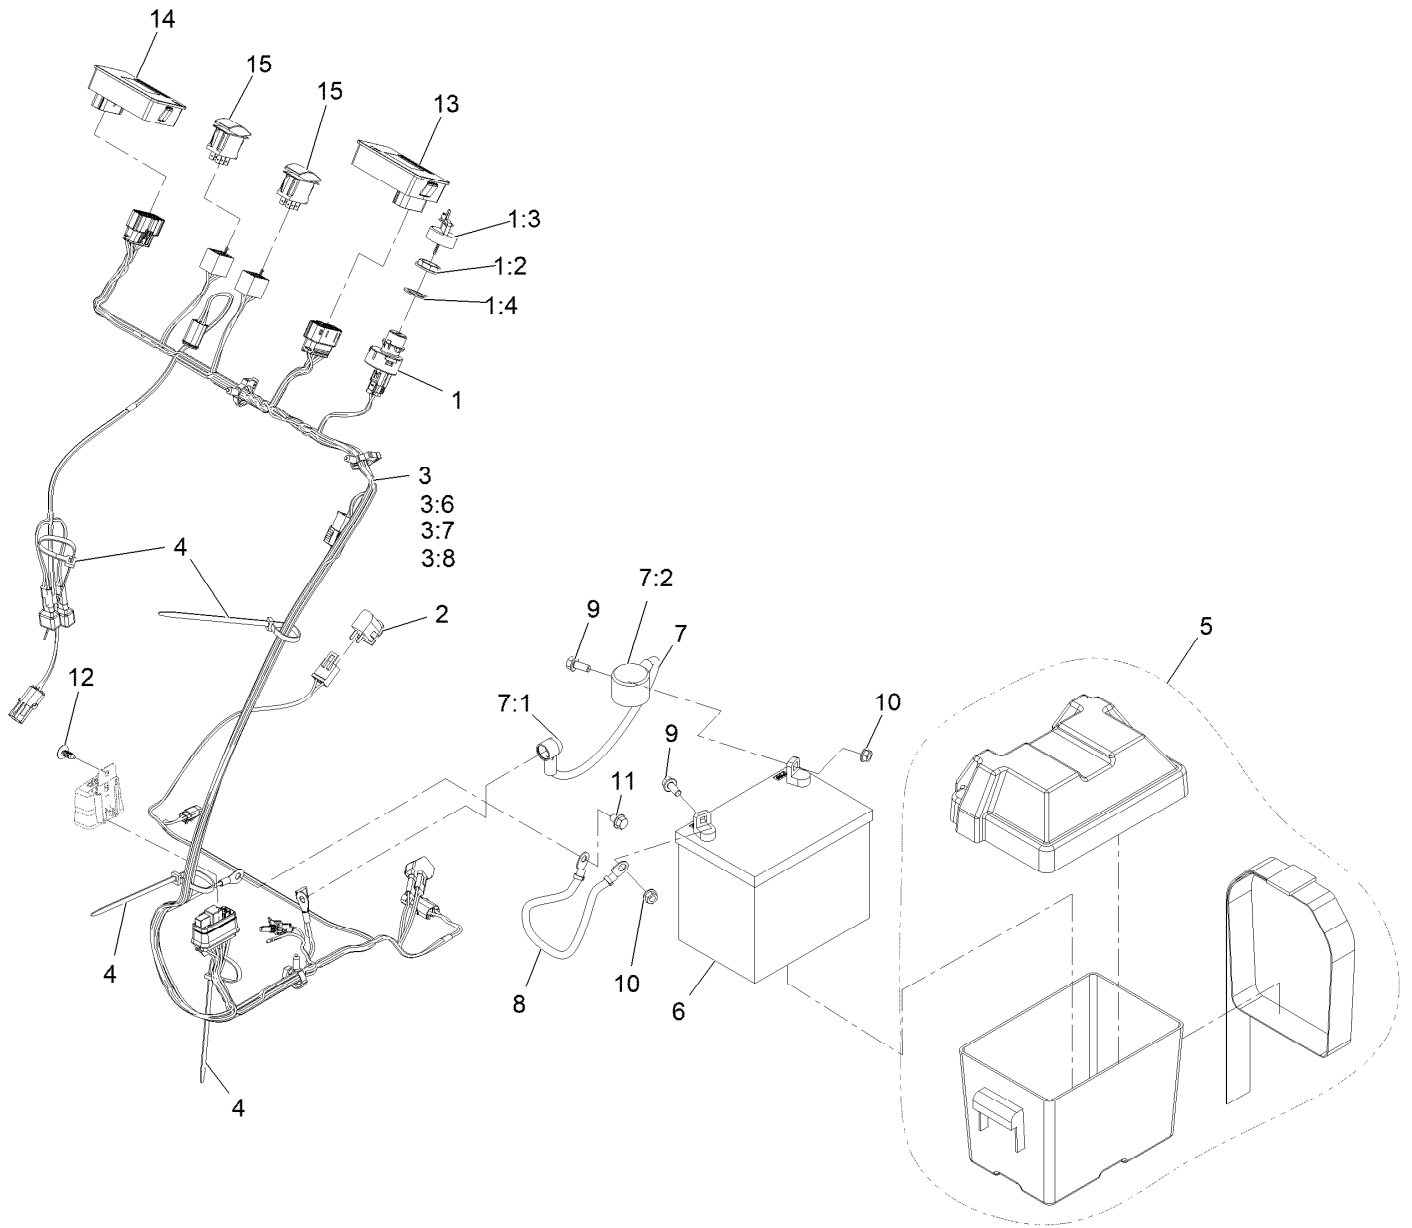


## Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-6285	1	Ignition Switch ASM	7	135-4669	1	Positive Battery Cable ASM
1:2	108-8660	1	Nut-Mounting	7:1	1-543393	1	Insulator-Solenoid
1:3	106-5270	1	Ignition Key Set	7:2	109-2407	1	Insulator-Battery
1:4	108-8659	1	Washer-Backup	8	114-9715	1	Cable-Battery, Negative
2	82-2190	1	Switch	9	126-2712	2	Screw-HHF 5/16-18 X 3/4 Serrated SS
3	135-6127	1	Harness-Wire	10	135-2881	2	Nut-HF
3:6	121-8868	2	Fuse-Mini Blade, 20 Amp	11	68-9410	1	Screw-HH M8-1.25 X 12Mm
3:7	126-3991	1	Relay-Micro	12	117-2382	1	Plug-Plastic
3:8	135-5221	1	Relay-Coil, NC, Mp280	13	135-6674	1	Hour Meter ASM
4	3290-378	4	Tie-Cable	14	135-6675	1	Hour Meter ASM
5	126-1424	1	Battery Box	15	100-1535	2	Switch-Rocker, (On)-Off-(On)
6		1	Battery- Wet, 12V, 300 CCA ●				

● Not serviced separately

# Spray System Assembly

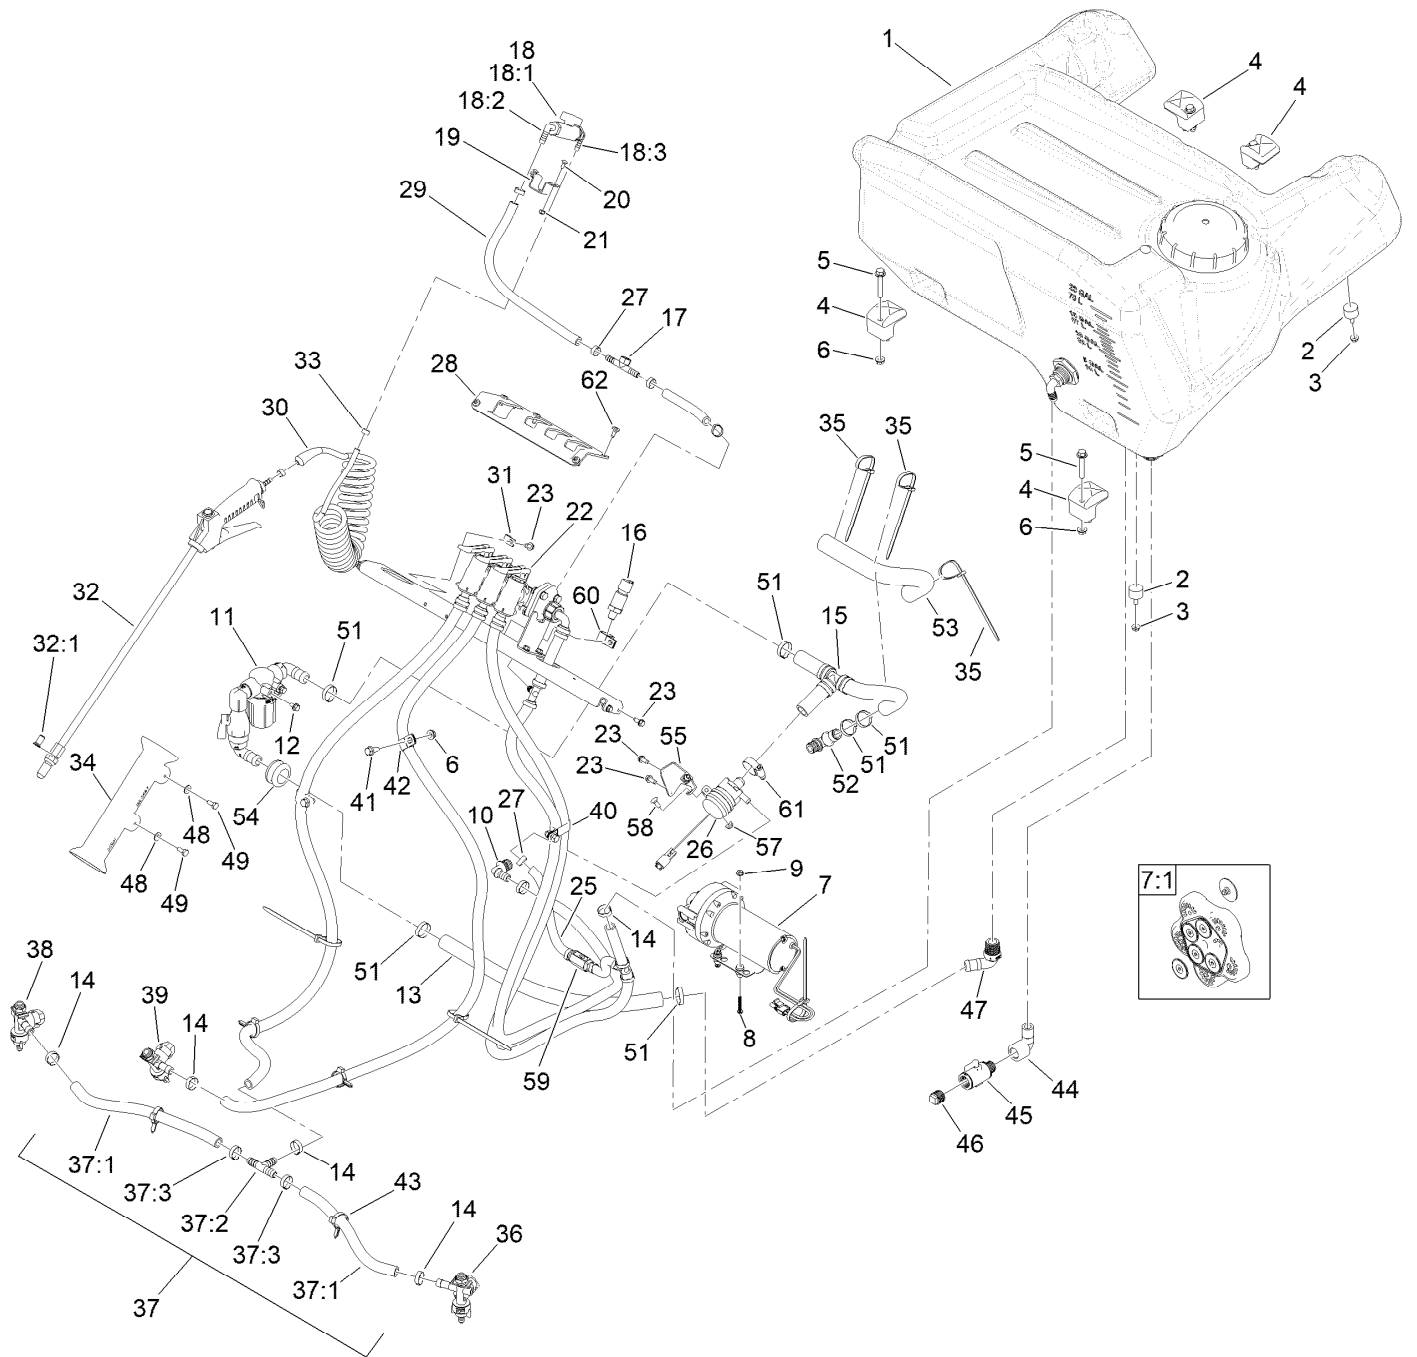


## Spray System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0286	1	Tank-Sprayer	31	2412-89	1	Clamp-R
2	1-523420	4	Bumper	32	126-8000	1	Spray Wand ASM
3	135-2880	4	Nut-HF	32:1	126-3943	1	Strainer-Nozzle, 50M 5PSI Check
4	107-4543	4	Clamp	33	126-2707	2	Clamp
5	126-2711	4	Screw-HHF	34	126-3987	1	Holder-Wand
6	135-2881	7	Nut-HF	35	3290-378	5	Tie-Cable
7	142-2301	1	Pump-Diaphragm, 3.8 GPM	36	126-3667	1	Left Nozzle Sub ASM
7:1	135-2477	1	Kit-Diaphragm Pump	37	126-2252	1	Hose ASM
8	692501	4	Screw-SHWH	37:1	126-2264	2	Hose-Water
9	126-2645	4	Nut-HF	37:2	126-0968	1	Fitting-Tee
10	126-0961	1	Fitting-Elbow, Barbed	37:3	142-3662	2	Clamp Oetiker 0.716" Closed 0.826" Open
11	126-4358	1	Strainer ASM	38	126-3669	1	Right Nozzle Sub ASM
12	126-2713	2	Screw-HHF	39	126-3668	1	Center Nozzle Sub ASM
13	126-4422	1	Hose-Water	40	120-1959	1	Clamp
14	142-3662	8	Clamp Oetiker 0.716" Closed 0.826" Open	41	126-2712	3	Screw-HHF
15	142-2192	1	ASM-, 3/4 Pvc Reinforced Water Hose	42	1-633396	2	Clip-Loom
16	142-4495	1	Transducer-Pressure	43	105-1853	4	Clamp-Hose
17	126-2348	1	Fitting-Tee	44	108-3573	1	Elbow-90 DEG
18		1	Wand Control ASM ●	45	126-1494	1	Microvalve
18:1	126-0242	1	Valve-Ball	46	363-3125	1	Plug-Hdpe Black
18:2	126-4992	1	Fitting-Elbow-90	47	119-0490	1	Elbow-Hosebarb
18:3	126-4993	1	Fitting-Elbow-90	48	360-0140	2	Washer-Flat
19	126-0239-03	1	Bracket-Valve	49	126-1290	2	Screw-HH
20	1-807513	2	Bolt-CARR	51	126-4779	6	Clamp
21	3296-2	2	Nut-Lock, NI	52	126-4420	1	Fitting-Elbow
22		1	Manifold-Valve, Control ASM ●	53	126-5065	1	Sleeve-Corrugated, Split
23	32144-10	7	Screw-HWH	54	126-7410	1	Grommet
25	142-2213	1	Hose-Water	55	135-7913-03	1	Brkt-Recir Pump
26	135-7843	1	Pump-Centrifugal	57	104-7201	2	Nut-HF, NI
27	126-3749	5	Clamp	58	3229-11	2	Screw-CARR
28	142-7735	1	Cover-Controls	59	142-2180	1	Valve-3/8 Check
29	126-5847	1	Hose-Water, 3/8 Pvc Red	60	132-7590	1	R-Clamp
30	126-1493	1	Hose-Coiled	61	2412-129	1	Clamp-Hose
				62	120-7950	5	Screw-Torx

● Not serviced separately

# Sprayer Tank Assembly No. 126-0286

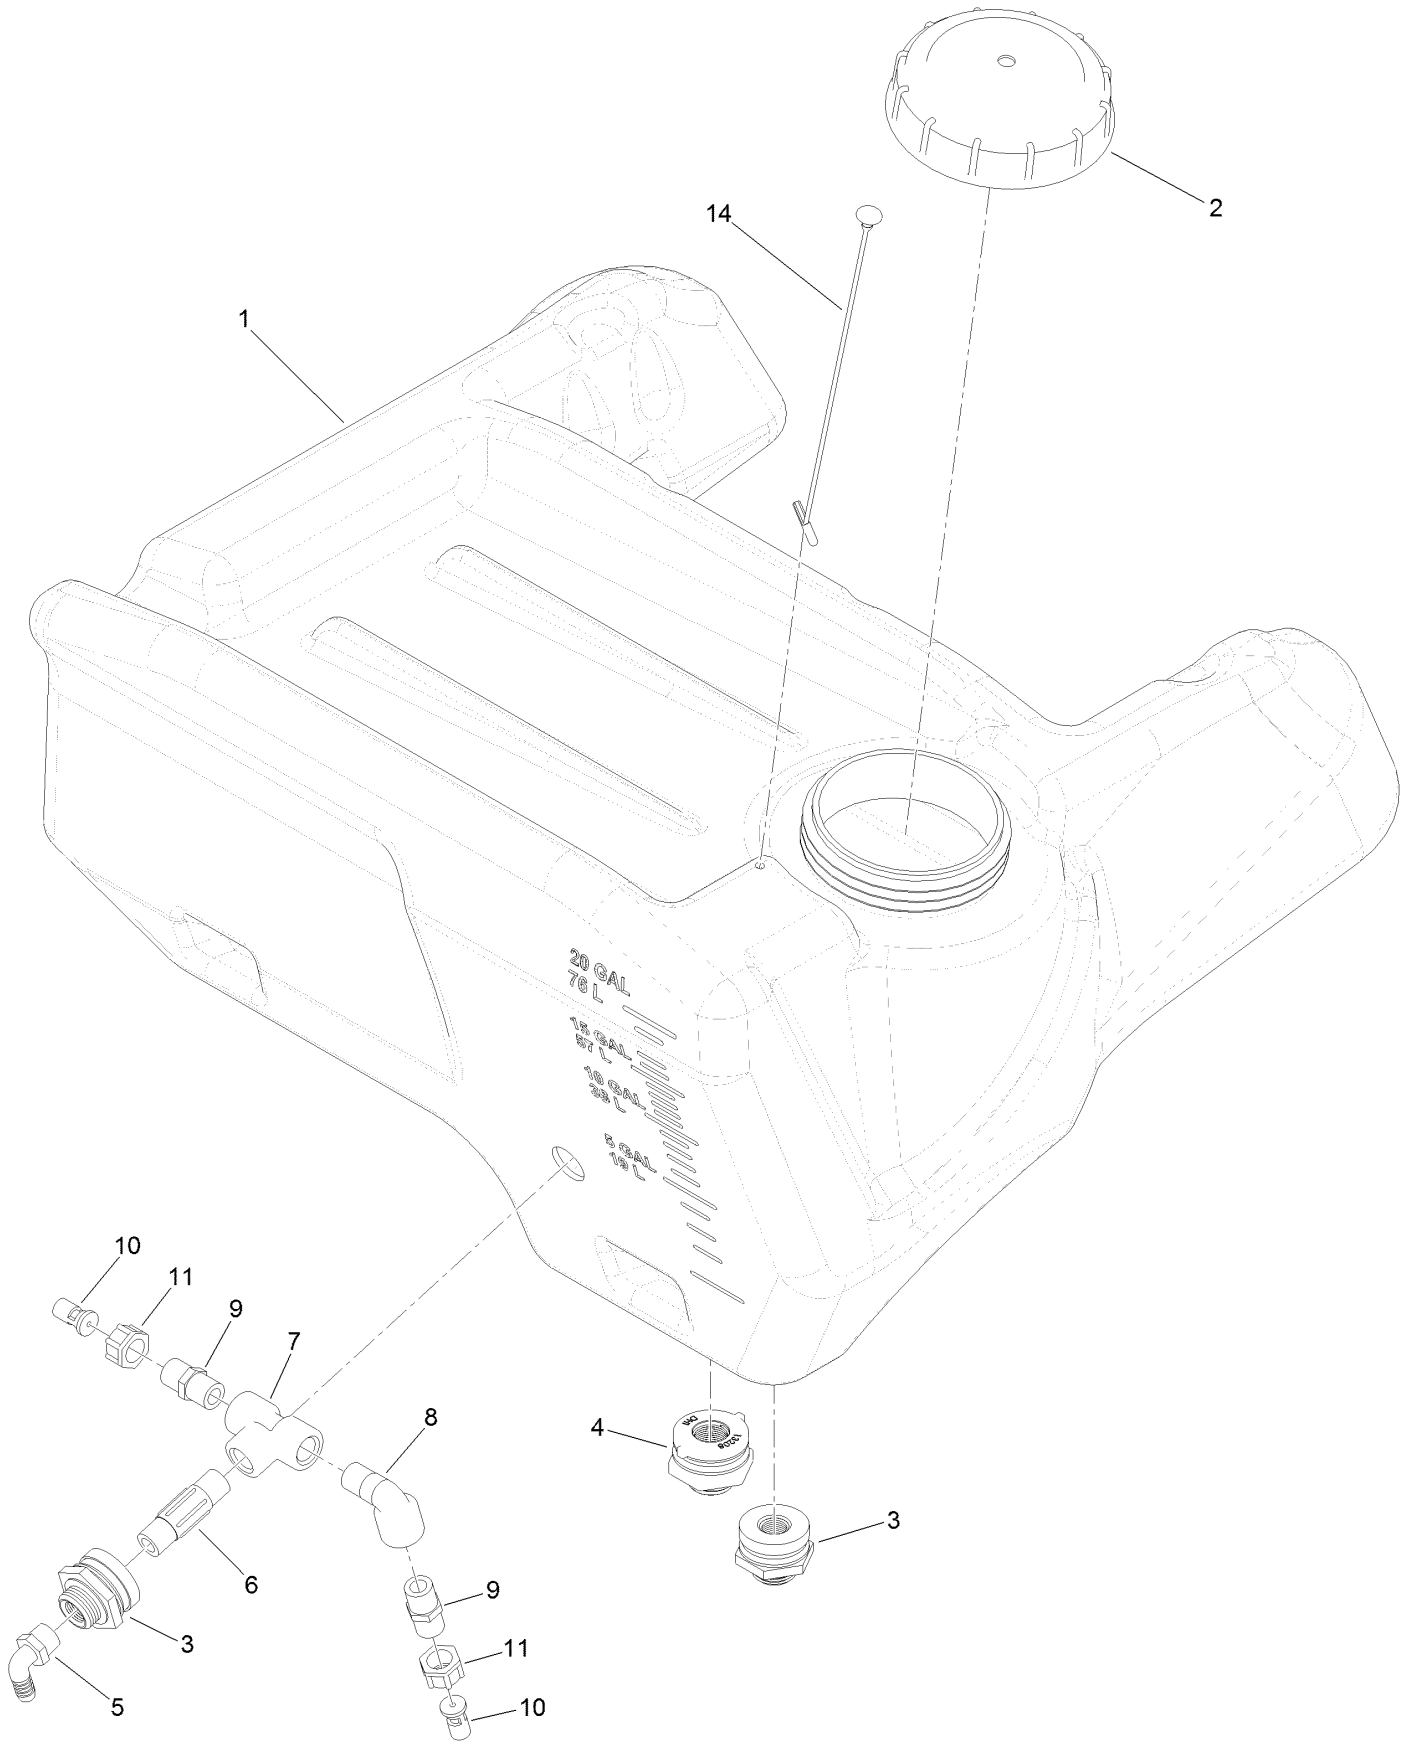


# Sprayer Tank Assembly No. 126-0286 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Tank-Sprayer ●	8	108-3573	1	Elbow-90 DEG
2	126-0285	1	Cap-Water, 5 Inch Vent	9	108-3574	2	Nipple-Short
3	126-0400	2	Fitting-Bulkhead	10	100-6705	2	Nozzle-Agitation
4	126-4393	1	Fitting-Bulkhead	11	99-0766	2	Nut
5	42046	1	Elbow-90 DEG	14	126-3381	1	Lanyard-Cap, Self Anchoring (12 Inch)
6	94-7103	1	Nipple				
7	94-7100	1	Tee				

● Not serviced separately

# Strainer Assembly No. 126-4358

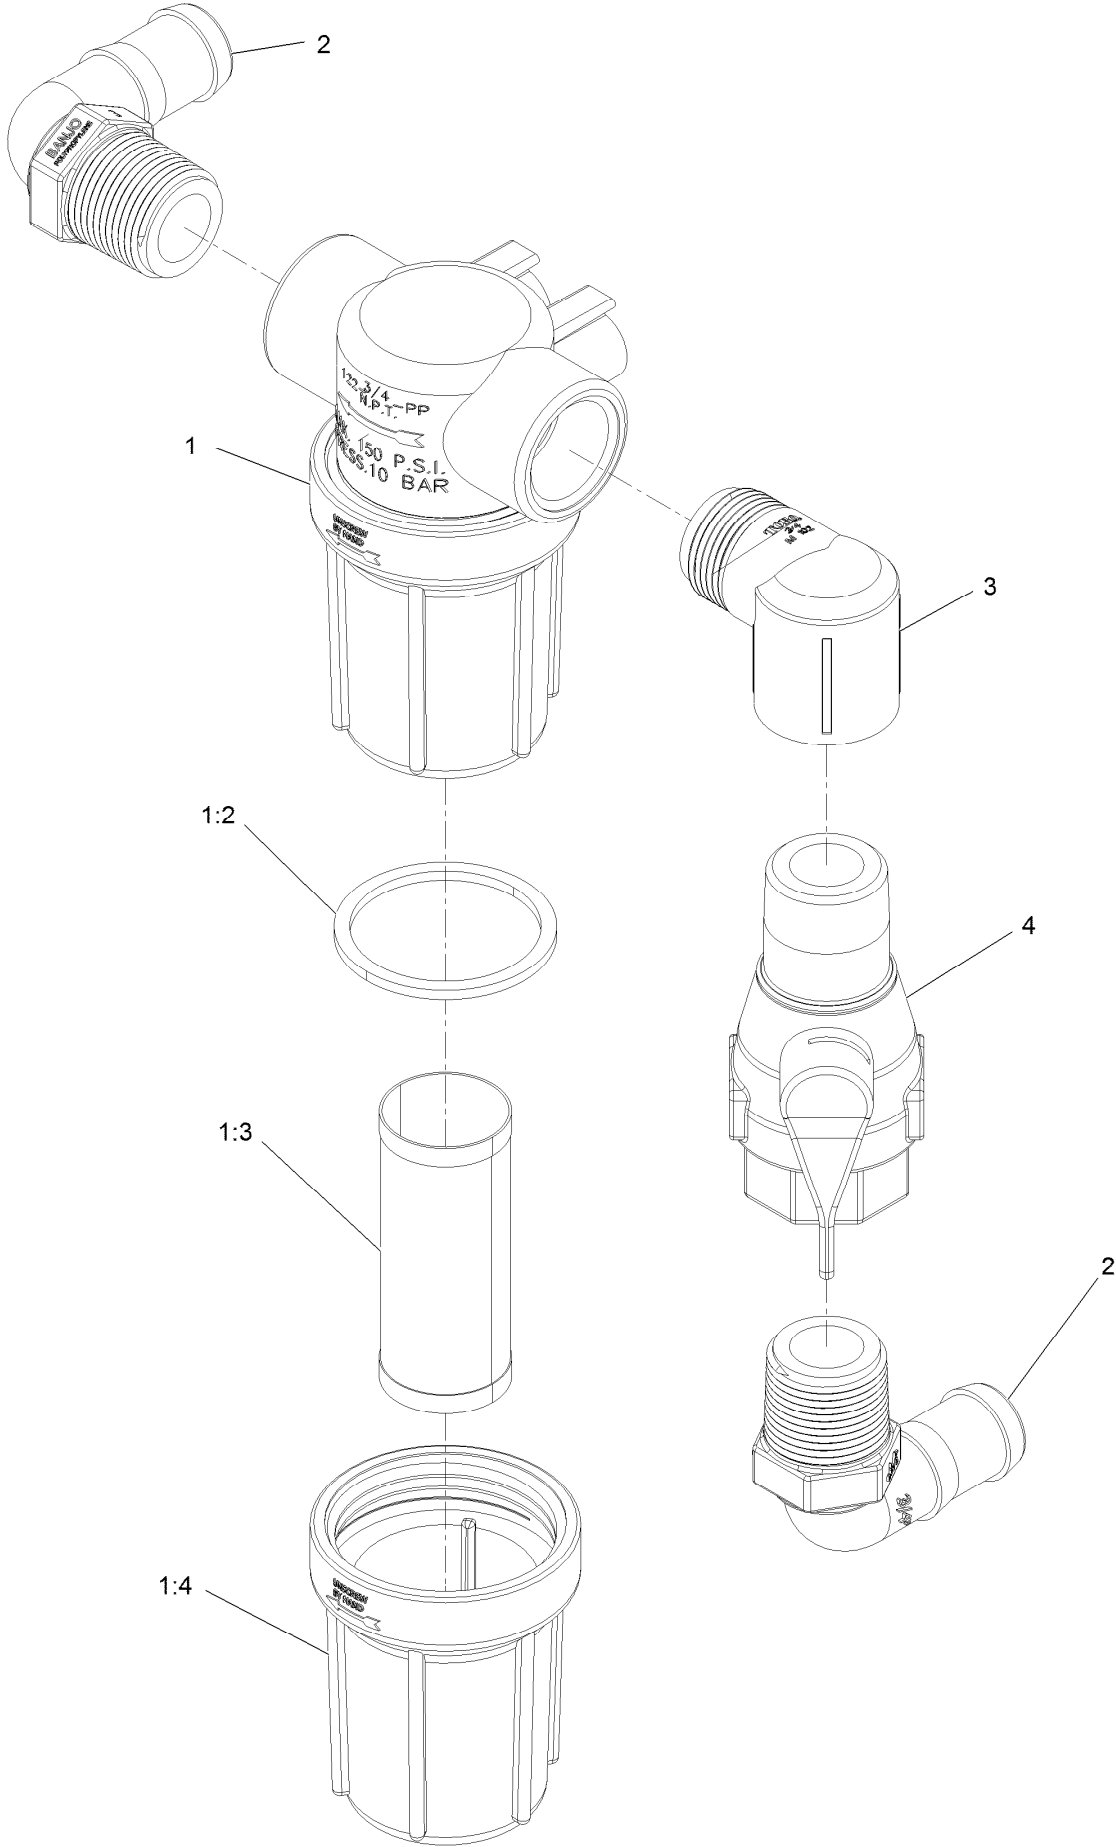




## Strainer Assembly No. 126-4358 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-4374	1	Strainer-Line
1:2	126-2272	1	Gasket-Head, Line Strainer
1:3	126-2273	1	Screen-Strainer, 30 Mesh SS

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:4	126-7195	1	Bowl-Strainer
2	119-0490	2	Elbow-Hosebarb
3	102-4272	1	Elbow
4	126-4451	1	Valve-Ball

# Control Valve Manifold and Hose Assembly

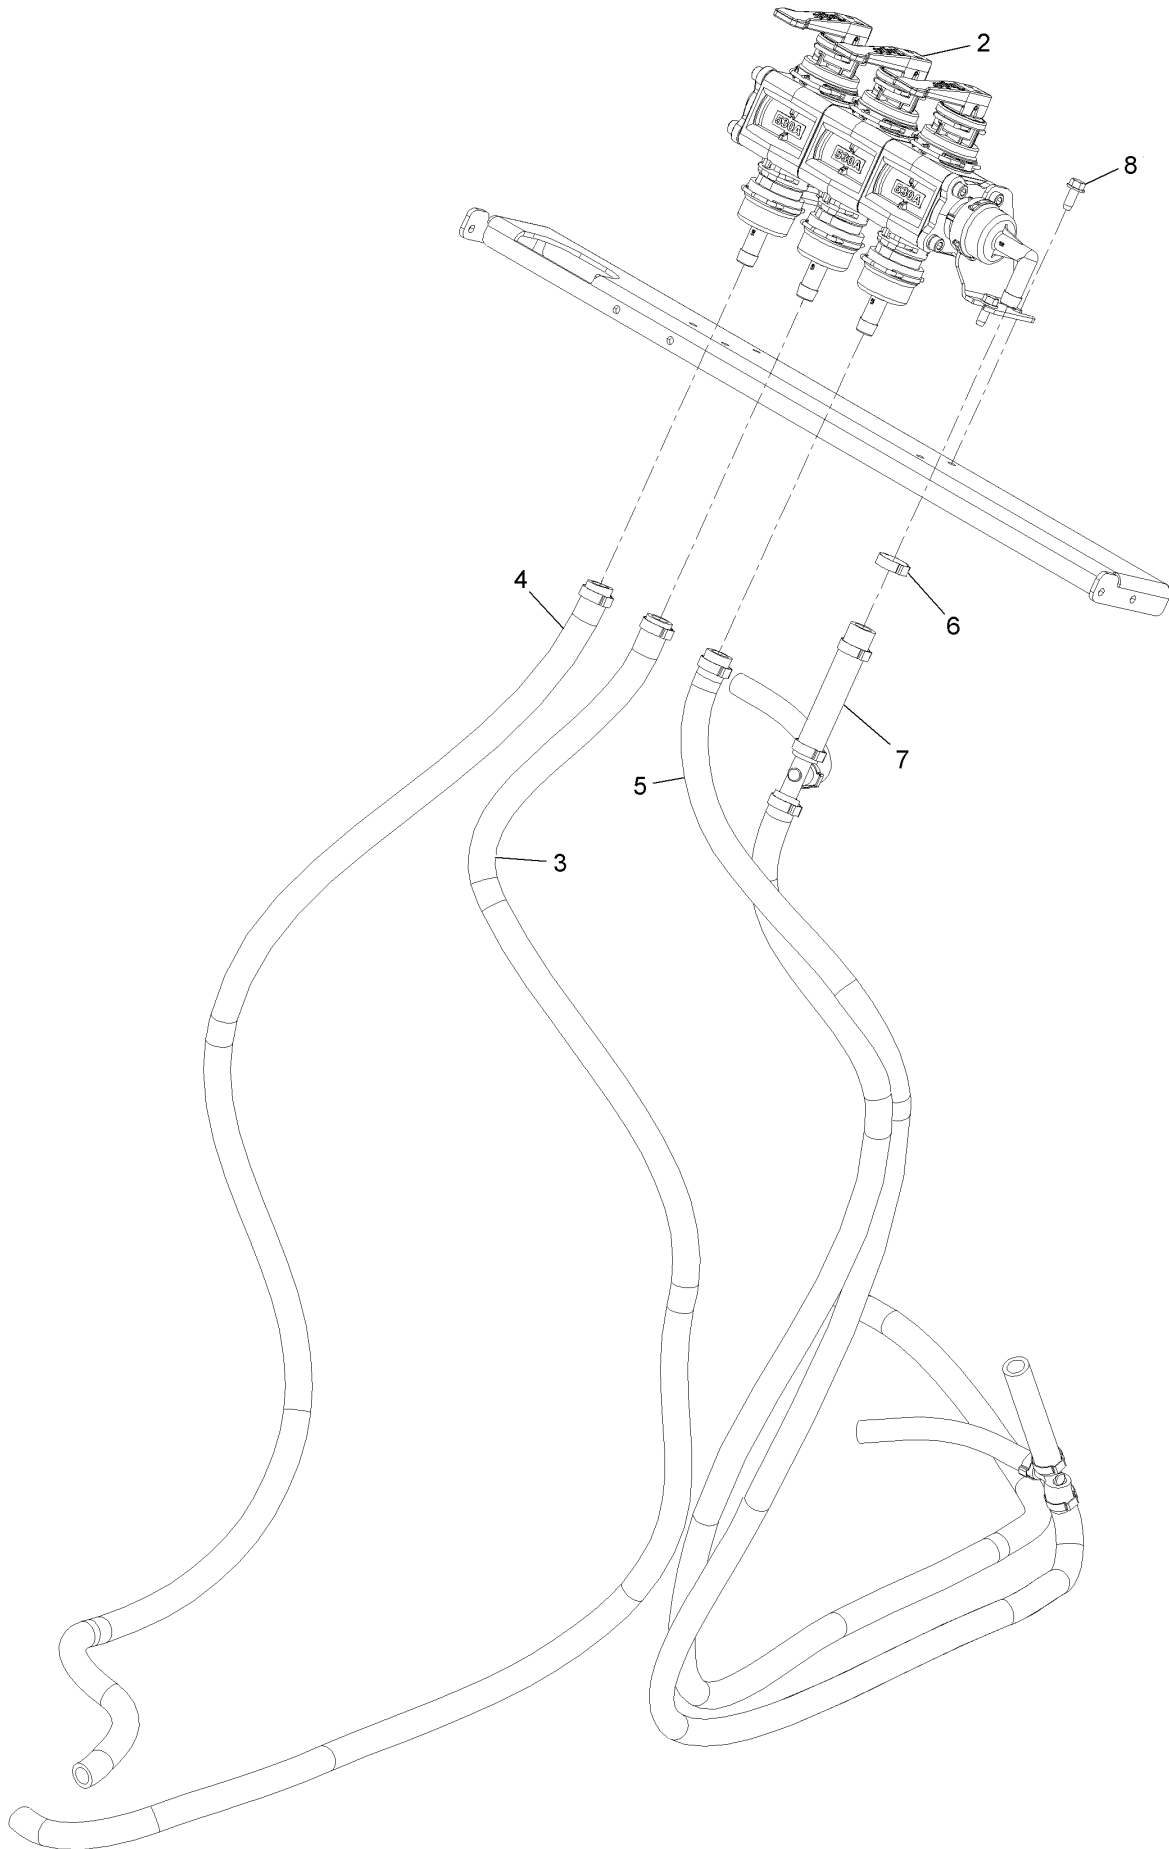


## Control Valve Manifold and Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	142-7292	1	Manifold-Valve, Control
3	126-2261	1	Hose-Water
4	126-2263	1	Hose-Water
5	142-3560	1	Hose ASM

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	142-3662	5	Clamp Oetiker 0.716" Closed 0.826" Open
7	142-7995	1	Hose ASM
8	32144-10	4	Screw-HWH 1/4-20 X .62


# Control Valve Manifold Assembly No. 142-7292

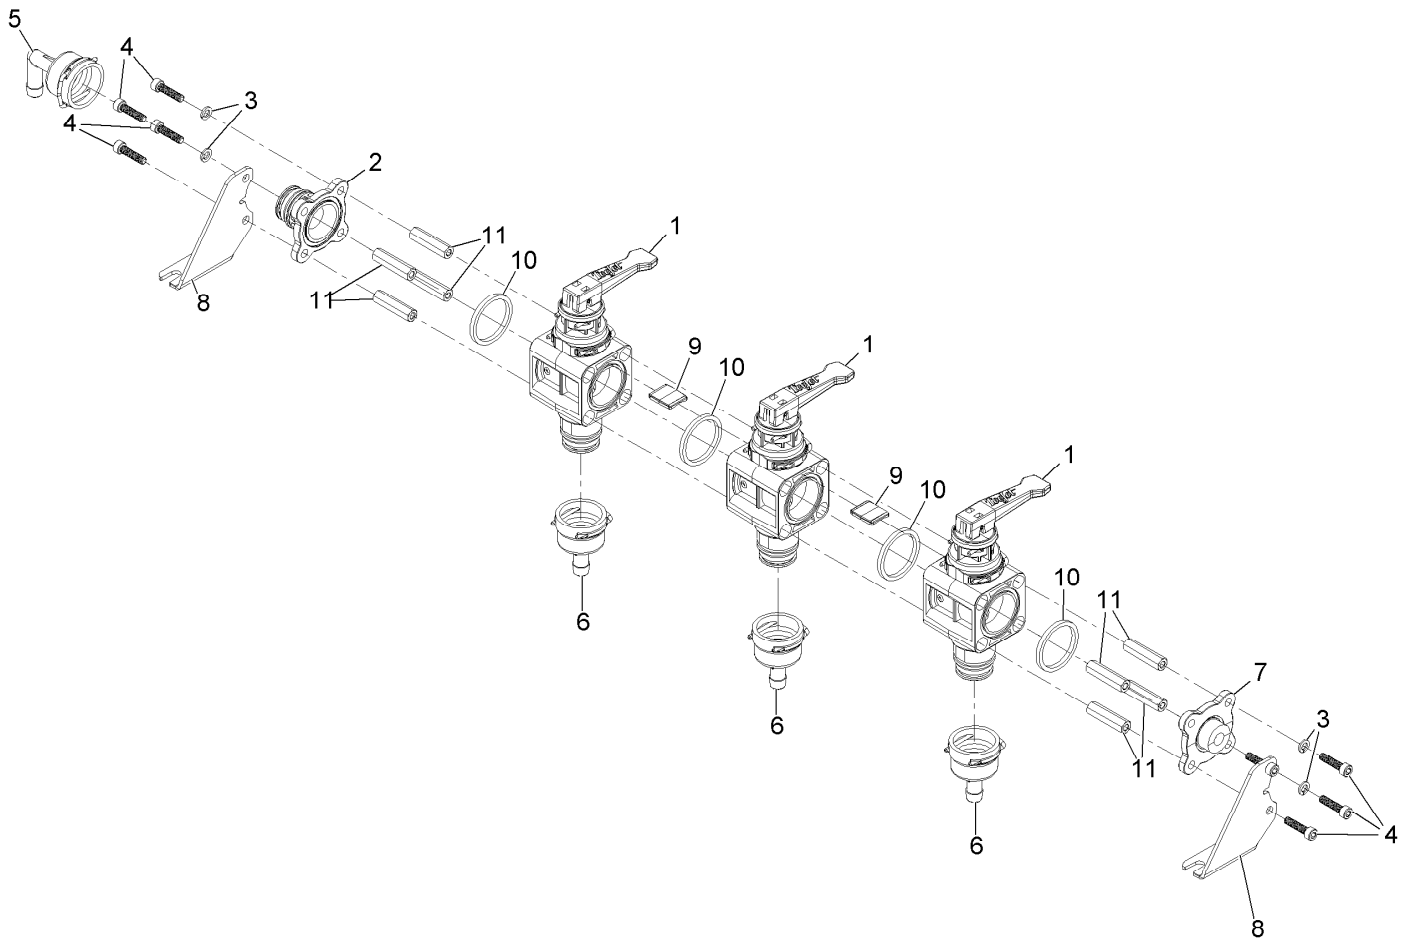

# Control Valve Manifold Assembly No. 142-7292 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-7042	3	ASM-Valve Section, Grey	6	142-6187	3	Kit-1/2 Hb, STR, Qc
2	142-6347	1	Adaptor-Male Qc Bolted Flanged	7	142-7993	1	Cap
3	142-4415	4	Washer	8	142-7624	2	Brkt-Sprayer Manifold
4	142-6348	8	Screw-Hscs 6 MM X 25.0 MM SS	9	142-7496	2	Alignment Piece
5	142-7967	1	Kit-Hose Barb, 1/2 90, Qc	10	142-7497	4	Gasket
				11	142-7498	8	M6X1 Metric Hex Stand-Off

# Left Nozzle Assembly No. 126-3667

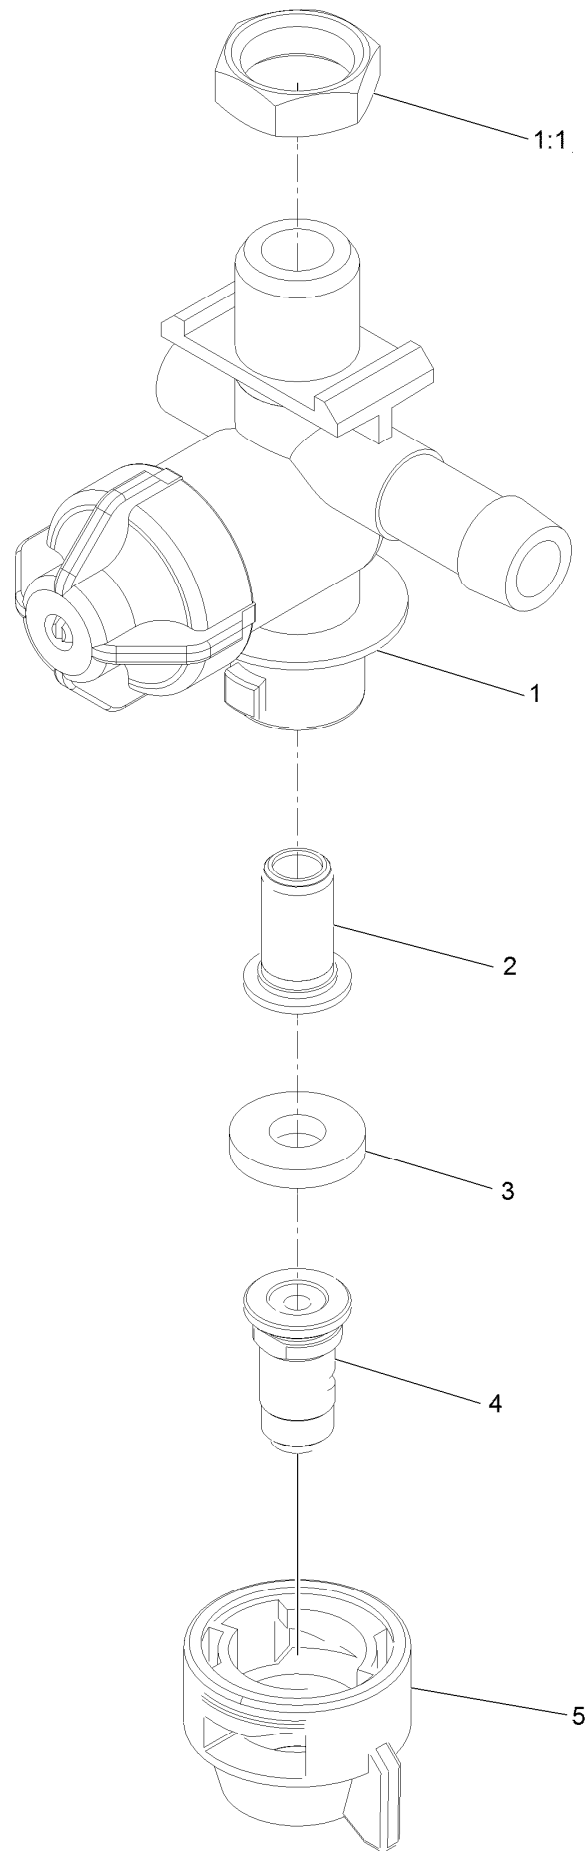


## Left Nozzle Assembly No. 126-3667 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9790	1	LH Nozzle Body ASM	5	116-9796	1	Cap-Nozzle
1:1	126-2801	1	Nut-Nylon	99	126-7172	1	Nozzle-Spray, Blue ●■
2	126-1212	1	Strainer-Tip	99	126-7171	1	Nozzle-Spray, Brown ●■
3	116-9797	1	Gasket-Seal	99	126-7170	1	Nozzle-Spray, Gray ●■
4	116-9798	1	Nozzle-Spray, White	99	126-2566	1	Nozzle-Spray, Red ●■

● Not illustrated

■ Sold separately

# Right Nozzle Assembly No. 126-3669

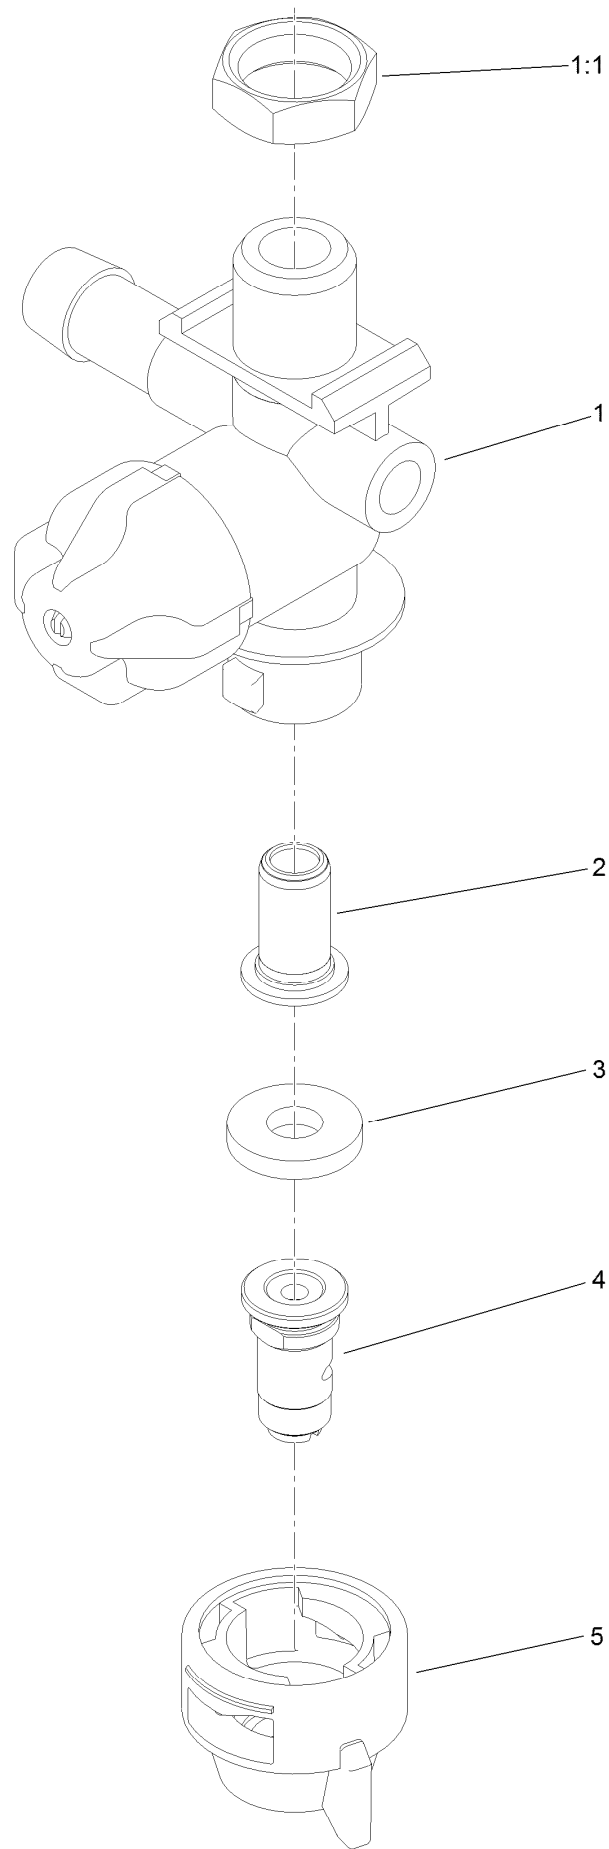




## Right Nozzle Assembly No. 126-3669 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM	5	116-9796	1	Cap-Nozzle
1:1	126-2801	1	Nut-Nylon	99	126-7172	1	Nozzle-Spray, Blue ●
2	126-1212	1	Strainer-Tip	99	126-7171	1	Nozzle-Spray, Brown ●
3	116-9797	1	Gasket-Seal	99	126-7170	1	Nozzle-Spray, Gray ●
4	116-9798	1	Nozzle-Spray, White	99	126-2566	1	Nozzle-Spray, Red ●

● Not illustrated

# Center Nozzle Assembly No. 126-3668

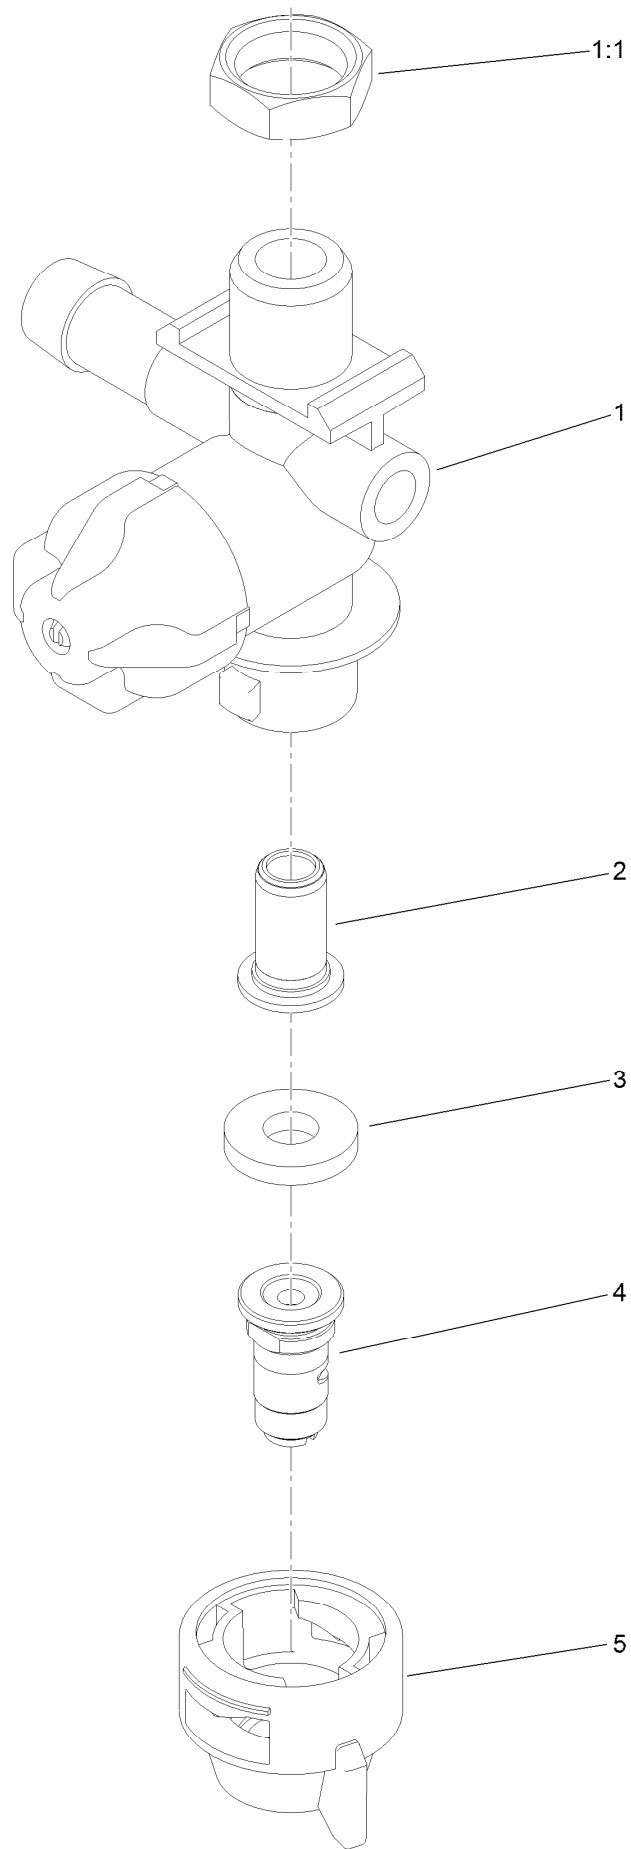


## Center Nozzle Assembly No. 126-3668 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM	5	116-9796	1	Cap-Nozzle
1:1	126-2801	1	Nut-Nylon	99	126-7170	1	Nozzle-Spray, Gray ●■
2	126-1212	1	Strainer-Tip	99	116-9798	1	Nozzle-Spray, White ●■
3	116-9797	1	Gasket-Seal	99	126-7171	1	Nozzle-Spray, Brown ●■
4	126-2566	1	Nozzle-Spray, Red	99	126-7172	1	Nozzle-Spray, Blue ●■

● Not illustrated

■ Sold separately

# Spreader Assembly

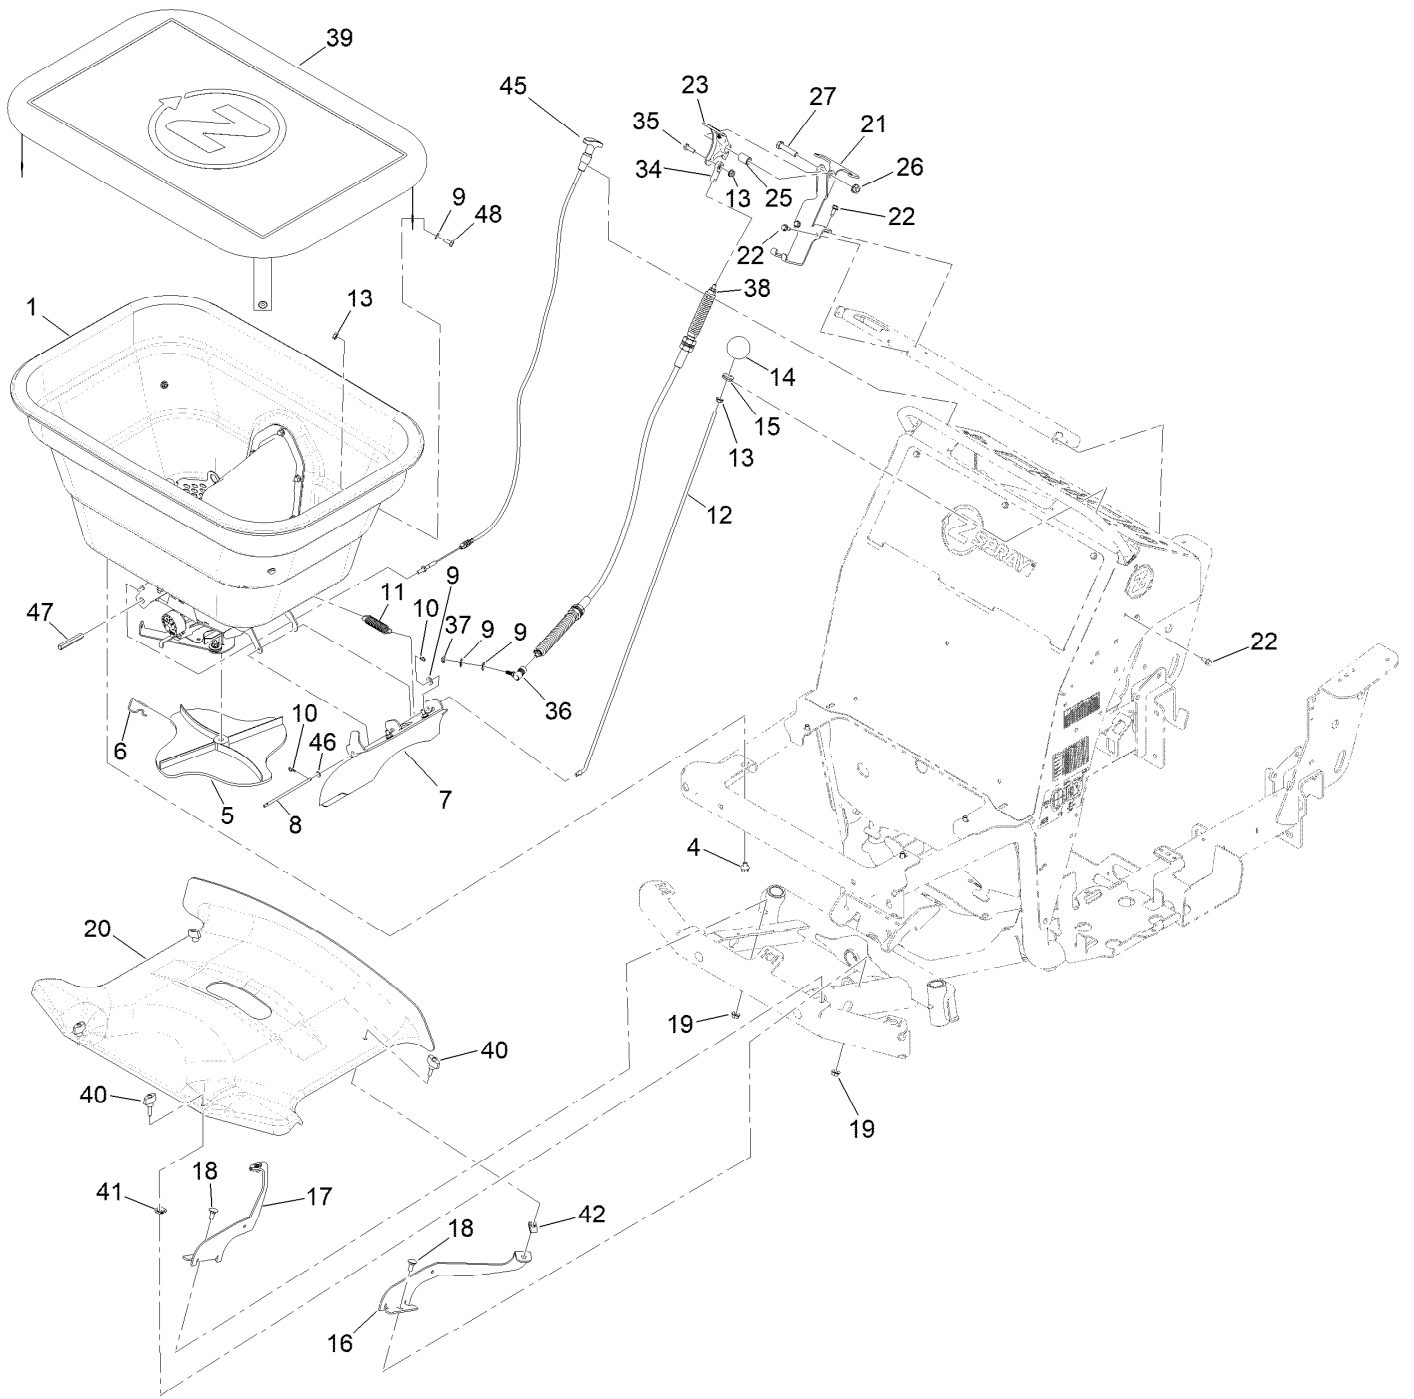


## Spreader Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Spreader Hopper ASM ●	21	142-7702	1	Mount-Handle, Fert Gate
4	142-4255	4	Screw-HHF	22	32144-10	3	Screw-HWH
5	142-3506	1	Spinner-Spreader	23	146-0418	1	Lever-Spread, Wide
6	142-3541	1	Clip-Spinner	25	142-7728	1	Spacer
7		1	Side Deflector ASM ●	26	135-2882	1	Nut-HF
8	135-2558	1	Pin-Deflector	27	323-9	1	Screw-HH
9	360-0140	9	Washer-Flat	34	2411-41	1	Rod End-Ball Joint
10	126-1631	2	Pin-Cotter, Hair	35	126-0498	1	Screw-HH
11	126-2127	1	Spring-Extension	36	126-2005	1	Ball-Joint
12	126-2190	1	Rod-Control, Deflector	37	126-2725	1	Nut-Hex, NI
13	135-2880	6	Nut-HF	38	126-1783	1	Cable
14	121-1877	1	Knob-Rate, Flow	39	126-2815	1	Cover-Hopper
15	1-633630	1	Grommet	40	126-5846	4	Knob-T
16	126-2145	1	Bracket-Cover, Front (LH)	41	126-3740	2	Nut-Retainer, U Style
17	126-2146	1	Bracket-Cover, Front (RH)	42	126-3739	2	Nut-Retainer
18	126-0695	2	Screw-CARR	45	126-4150	1	Cable-Control, Turn Lock
19	135-2881	2	Nut-HF	46	126-0759	1	Washer-Flat
20	126-2063	1	Cover-Front, Spreader/Sprayer	47	126-4655	1	Post-Hex, Diffuser Guide
				48	126-1290	4	Screw-HH

● Not serviced separately

# Spreader Hopper Assembly

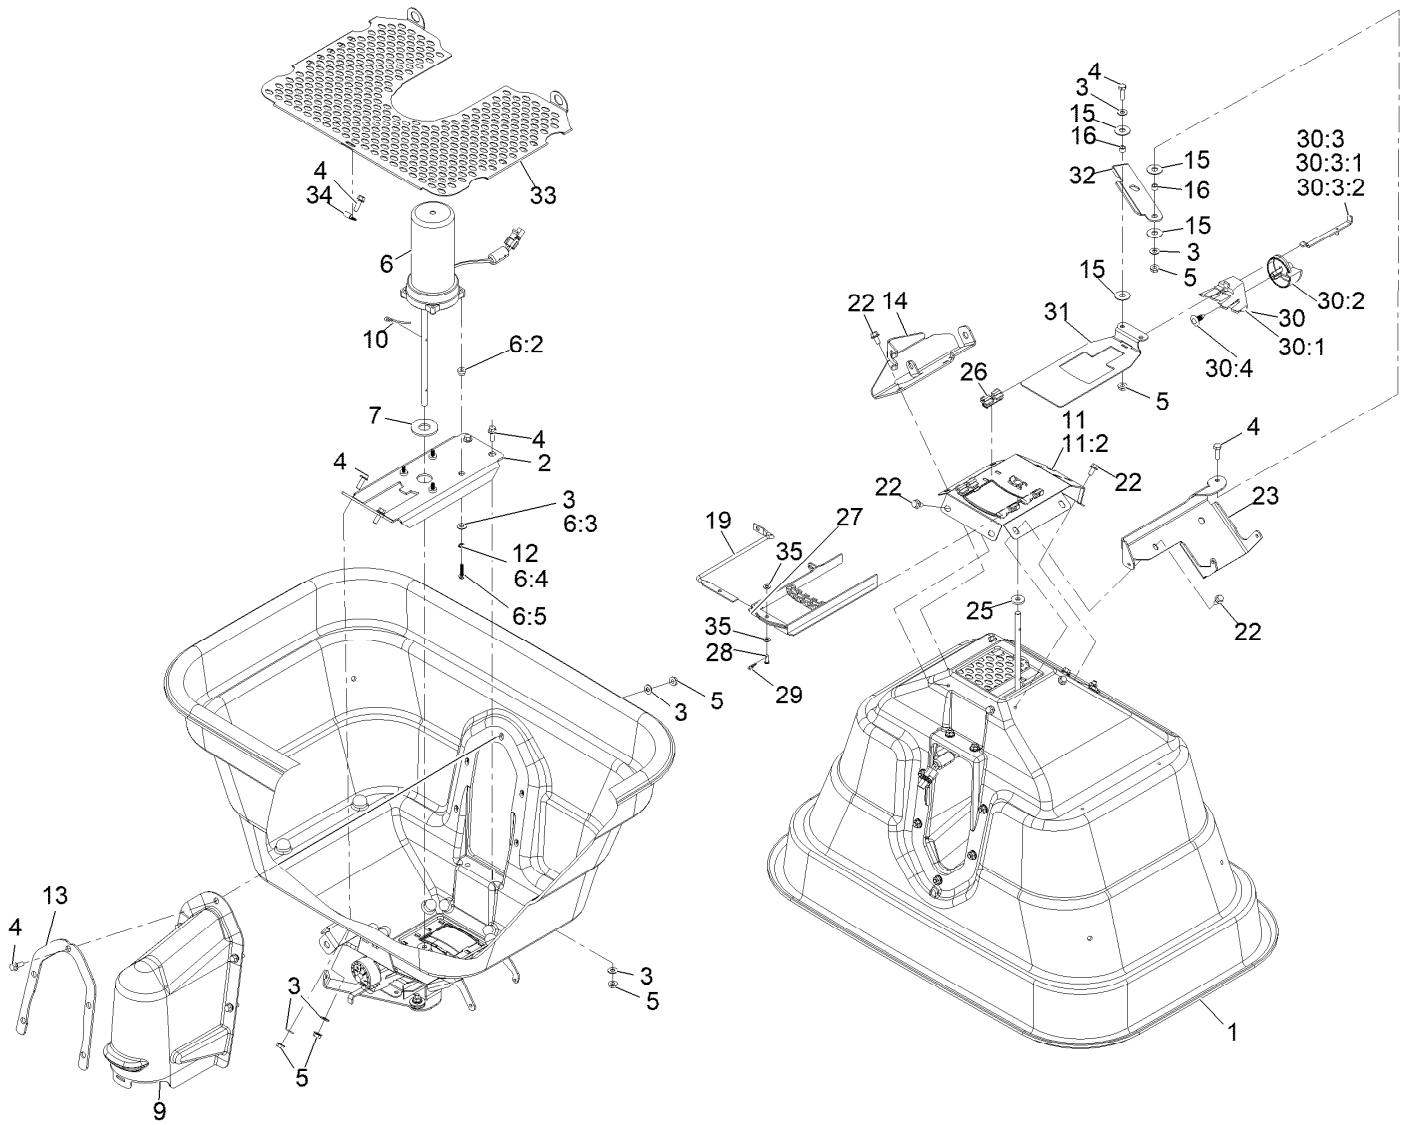


## Spreader Hopper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2734	1	Hopper-Spreader, 175 Lb	22	135-6280	8	Screw-HHF 1/4-20 X 1/2 Serrated SS
2	126-4245	1	Bracket-Mount, Motor	23	142-3602	1	Bracket-Lever, Hopper Gate
3	360-0140	16	Washer-Flat	25	142-3665	1	Washer-Felt
4	126-0498	2	Screw-HH 1/4-20 X 7/8 SS	26	142-3316	4	Guide-Rate, Gate
5	135-2880	12	Nut-HF	27	142-3406	1	Diffuser
6	126-6231	1	Spreader Motor ASM	28	126-3729	1	Pin-Clevis
6:2	135-3989	4	Spacer-Flanged	29	126-1631	1	Pin-Cotter, Hair
6:3	360-0140	4	Washer-Flat	30	142-3821	1	Rate Dial ASM
6:4	363-8641	4	Washer-Lock, Int	30:1	142-3319	1	Mount-Dial
6:5	739001	4	Screw-SHWH 10-32 X 7/8	30:2	142-3359	1	Dial
7	83-2400	1	Spacer	30:3		1	Rate Gate Link ASM ●
9	126-1348	1	Cover-Motor	30:3:1	126-0987	1	Link-Gate, Rate
10	142-3666	1	Wire-Agitator	30:3:2	126-4196	1	Screw-Shoulder, Slotted
11	142-4040	1	Hopper Plate W/ Bearing ASM	30:4	88-1080	1	Footpad Fastener
11:2	142-4042	1	Hopper Bottom Bearing	31	142-4342	1	Rate Gate
12	363-8641	4	Washer-Lock, Int	32	126-4112	1	Lever-Gate
13	126-6334	1	Flange-Cover, Motor	33	126-3143	1	Screen-Hopper, Large Hole
14	126-4650	1	Bracket-Hopper, Gate Controls	33	126-3240	1	Screen-Hopper, Medium Hole
15	93-1633	4	Washer	33	126-3242	1	Screen-Hopper, Small Hole
16	126-3684	2	Spacer	34	126-1624	1	Clamp-Loop
19	126-1646	1	Rod-Control, Diffuser	35	126-0759	2	Washer-Flat

● Not serviced separately

# Side Deflector Assembly

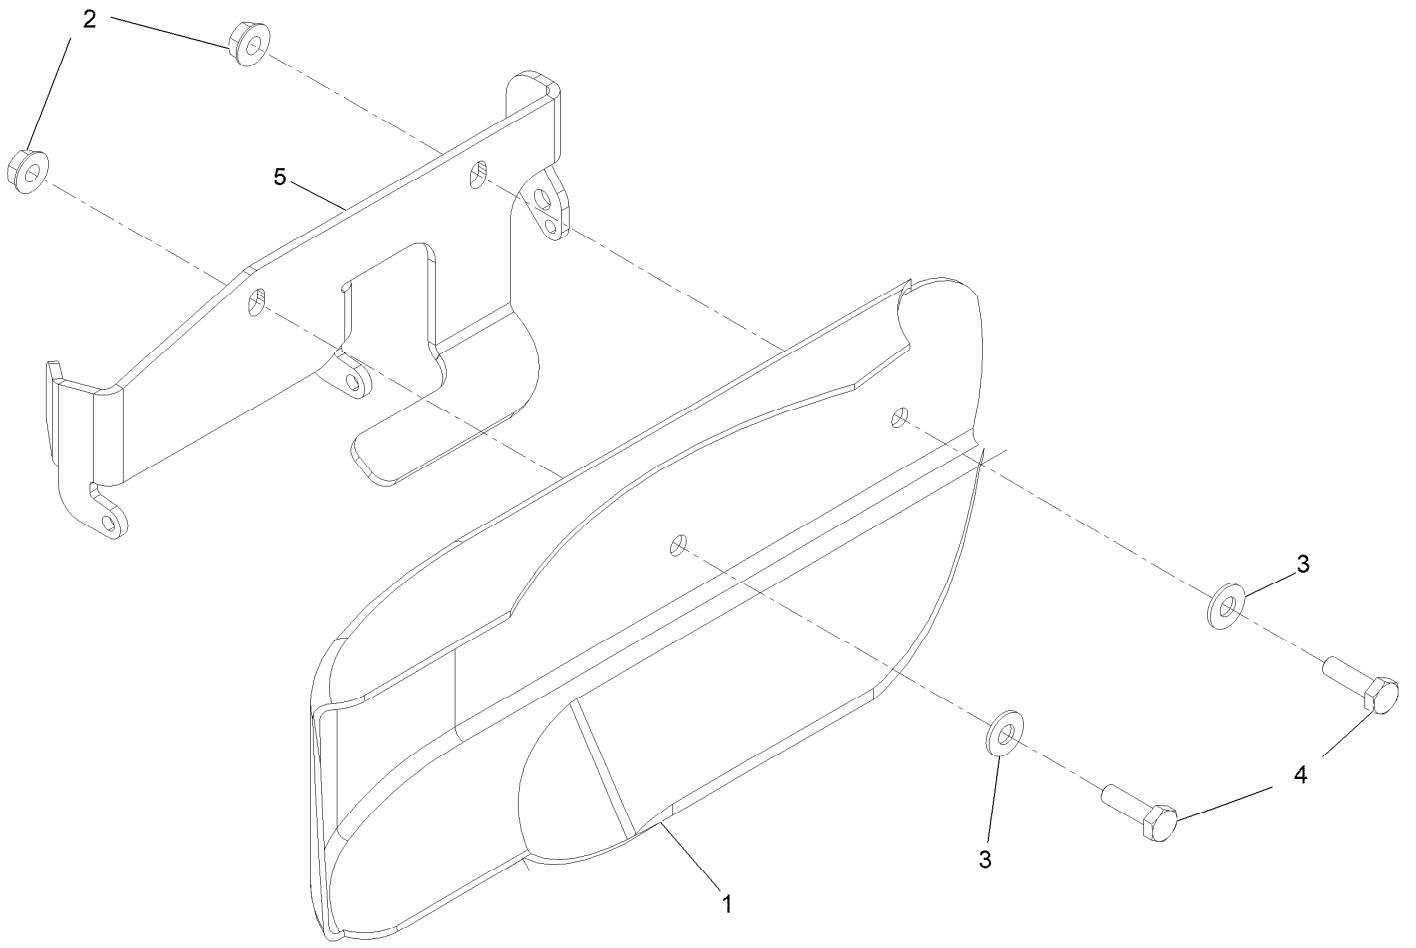



## Side Deflector Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-3619	1	Deflector-Side	4	126-0498	2	Screw-HH 1/4-20 X 7/8 SS
2	135-2501	1	Bracket-Deflector, Side	5	135-2880	2	Nut-HF
3	360-0140	2	Washer-Flat				

**Notes:**

**Notes:**



**Count on it.**