

Controls Overview

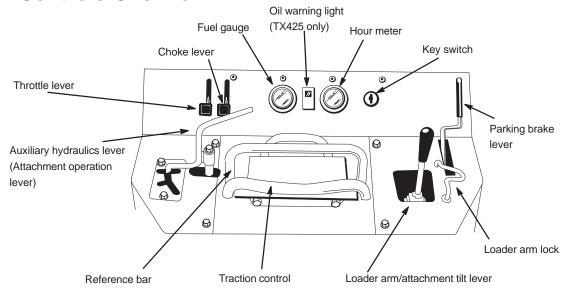

Part No. 106-5713

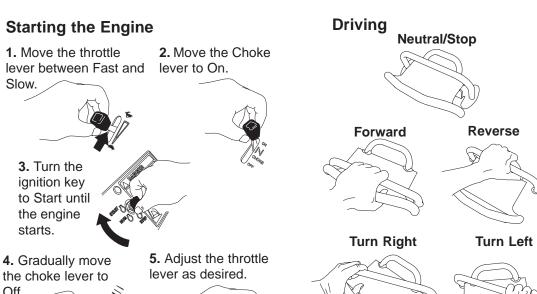

4. Gradually move the choke lever to Off.



 
m-7019

Stopping the Engine

1. Move the throttle lever to Slow.



3. Turn the ignition key to Stop.



m-6564/6569/6568

2. Lower the loader arms.

 


4. Remove the ignition key.




Operating Tips


Carry loads as low as possible.





  
On slopes or when loading onto a trailer, keep the heavy end uphill. With no attachment, an empty bucket, or another light attachment the back is the heavy end; with a full bucket or a hydraulic attachment, the front is the heavy end.






Connecting an Attachment

1.

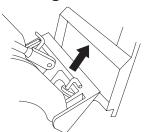

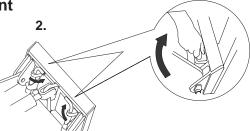


3. Ensure that the pins are engaged in the holes in the attachment mounting plate.

m-6571


Connecting Hydraulics


engine.

 1. Stop the **2.** Slowly cycle the hydraulics lever 3 times. hydraulics lever into



 4. Clean the couplers and then push the attachment hydraulic couplers into the couplers on the traction unit.



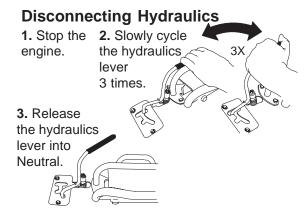

4. Pull back the collar on the female hydraulic couplers and pull the attachment couplers from the traction unit couplers.

Place the caps over the traction unit couplers.

