



Count on it.

Parts Catalog

eS3000SD 72V

TORO® 76cm

Model No. 75500—Serial No. 321000867 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Deck Assembly	4
Chassis Assembly	6
Transmission Assembly	8
Transmission Assembly No. 134-6166	10
Front Wheel Assembly	12
Steering Assembly	14
Steering Rack Assembly No. 134-6201	16
Steering Rod Assembly No. 134-6202	18
Body Styling Assembly	20
Battery Controller Assembly	22
Light Assembly	24
Seat Assembly	26
Deck Lift Assembly	28


Deck Assembly

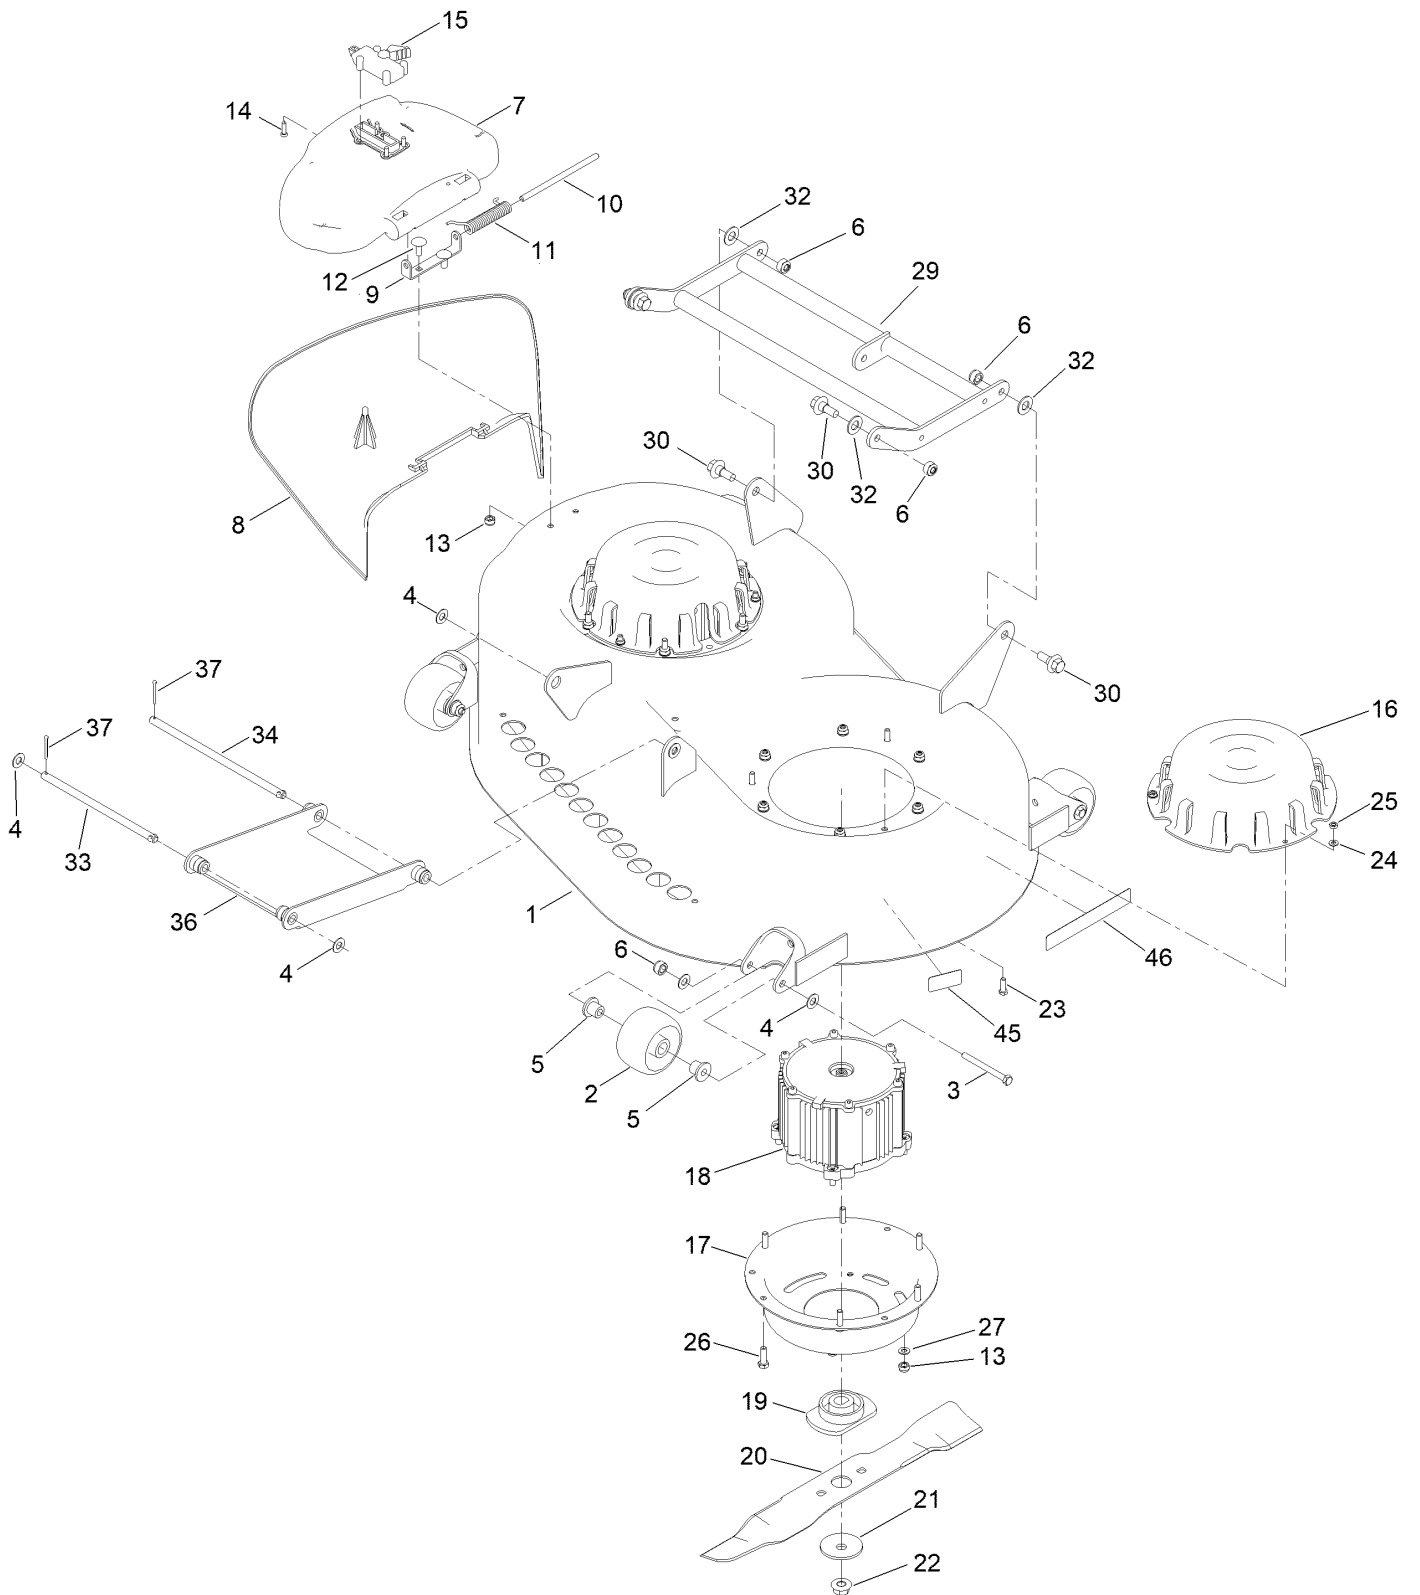

Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-6133	1	Welded Deck ASM	20	134-5725	2	Blade, Deck
2	134-5706	4	Wheel, Deck	21	134-5726	2	Washer, Blade
3	09703	4	Bolt-HH	22	134-5727	2	Nut, Blade
4	ZWP1H000U	12	Washer-Plain	23	ZDH1E016U	6	Screw-HH
5	134-5709	8	Insert, Deck Wheel	24	09470	6	Washer
6	09441	8	Nut-Hex, NI	25	09430	6	Nut-Nyloc
7	134-5712	1	Cover, Deck Chute	26	134-3739	12	Screw-HHF
8	134-5378	1	Chute, Deck	27	ZWP1F000U	20	Washer
9	134-5714	1	Bracket, Discharge Flap	29	134-6145	1	Rear HOC Lifting ASM
10	134-5715	1	Rod, Discharge Flap	30	134-7178	4	Bolt, Flange
11	134-5716	1	Spring, Discharge Flap	32	09479	4	Washer-Plain
12	09570	2	Bolt-Carriage	33	134-6148	1	Rod, Front Deck Mouting (Short)
13	09438	22	Nut-Nyloc				
14	134-5719	4	Bolt	34	134-5739	2	Rod, Front Deck Mouting
15	134-6596	1	Deck Chute Clip, ASM	36	134-6149	1	Mounting Bracket ASM, Deck
16	134-5721	2	Top Cover, Deck Motor				
17	134-5722	2	Bottom Cover, Deck Motor	37	134-5742	2	Pin, Split
18	134-5723	2	Motor, Deck	45	134-6069	2	Decal - No Spray
19	134-5724	2	Hub, Blade Motor	46	134-6027	2	Decal - Deck Warning


Chassis Assembly

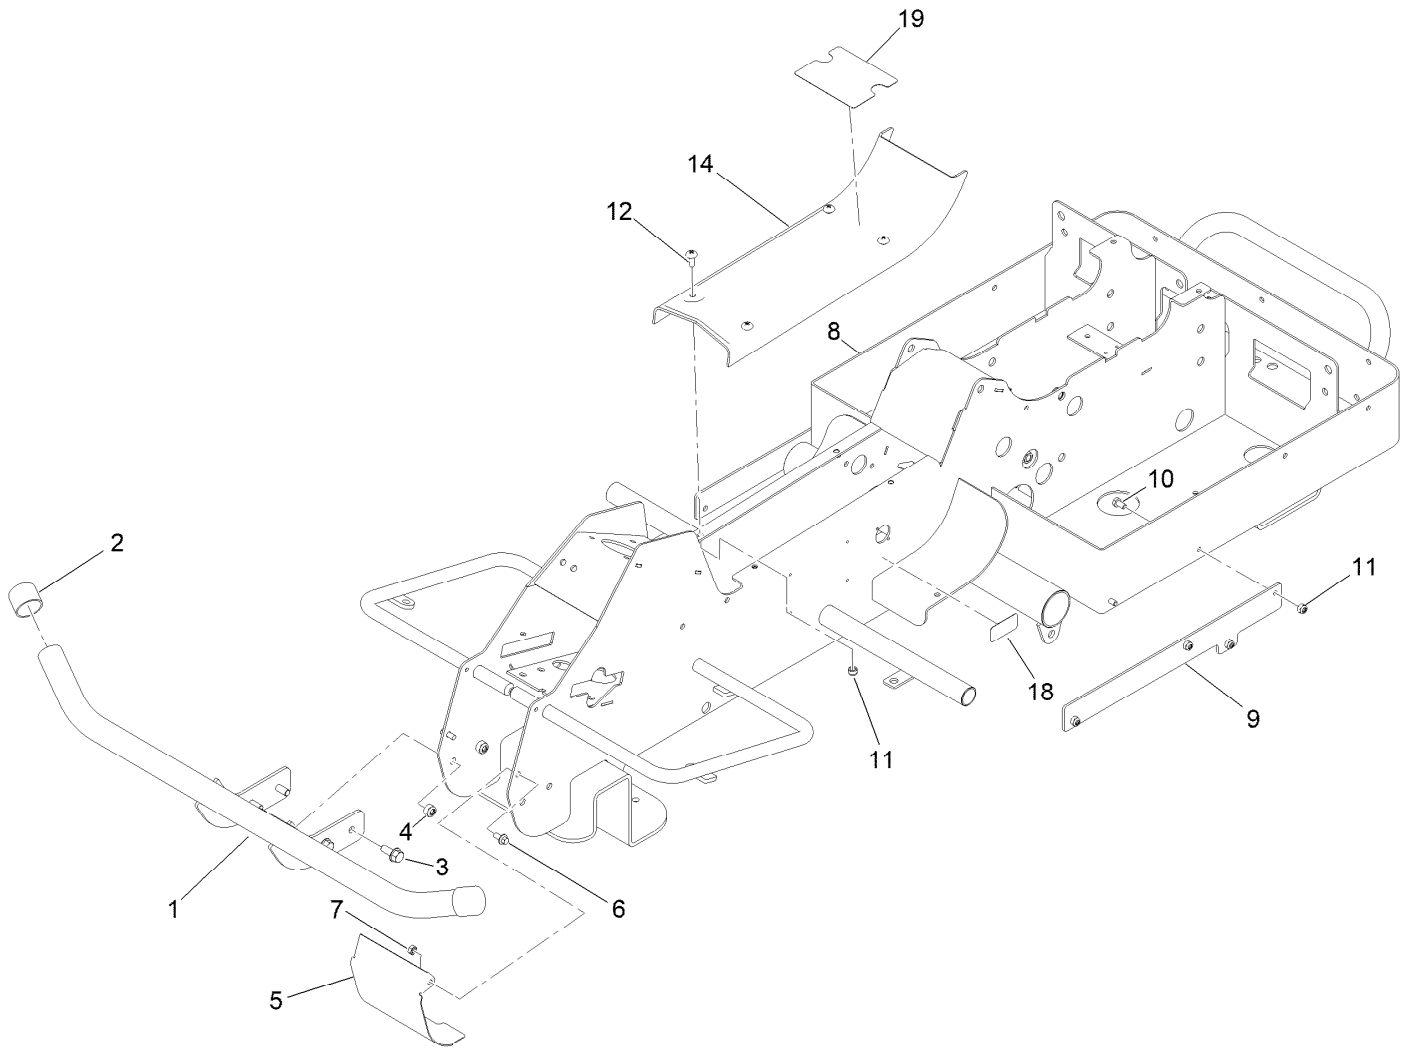

Chassis Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-6508	1	Bumper Bar, ASM	9	134-5752	2	Mounts, Side Pannel
2	134-5745	2	Cap, Bumper Bar	10	09361	4	Screw-HH
3	134-3746	4	Screw-HHF	11	09438	12	Nut-Nyloc
4	09441	4	Nut-Hex, NI	12	134-7193	4	Bolt
5	134-5748	1	Front Plate, Main Chassis	14	134-5756	1	Top Cover, Chassis
6	134-5749	2	Bolt, Flange	18	134-6026	1	Decal - Charging Port
7	134-5750	2	Nut	19	134-6031	1	Decal - Danger
8	134-6297	1	Chassis ASM				


Transmission Assembly

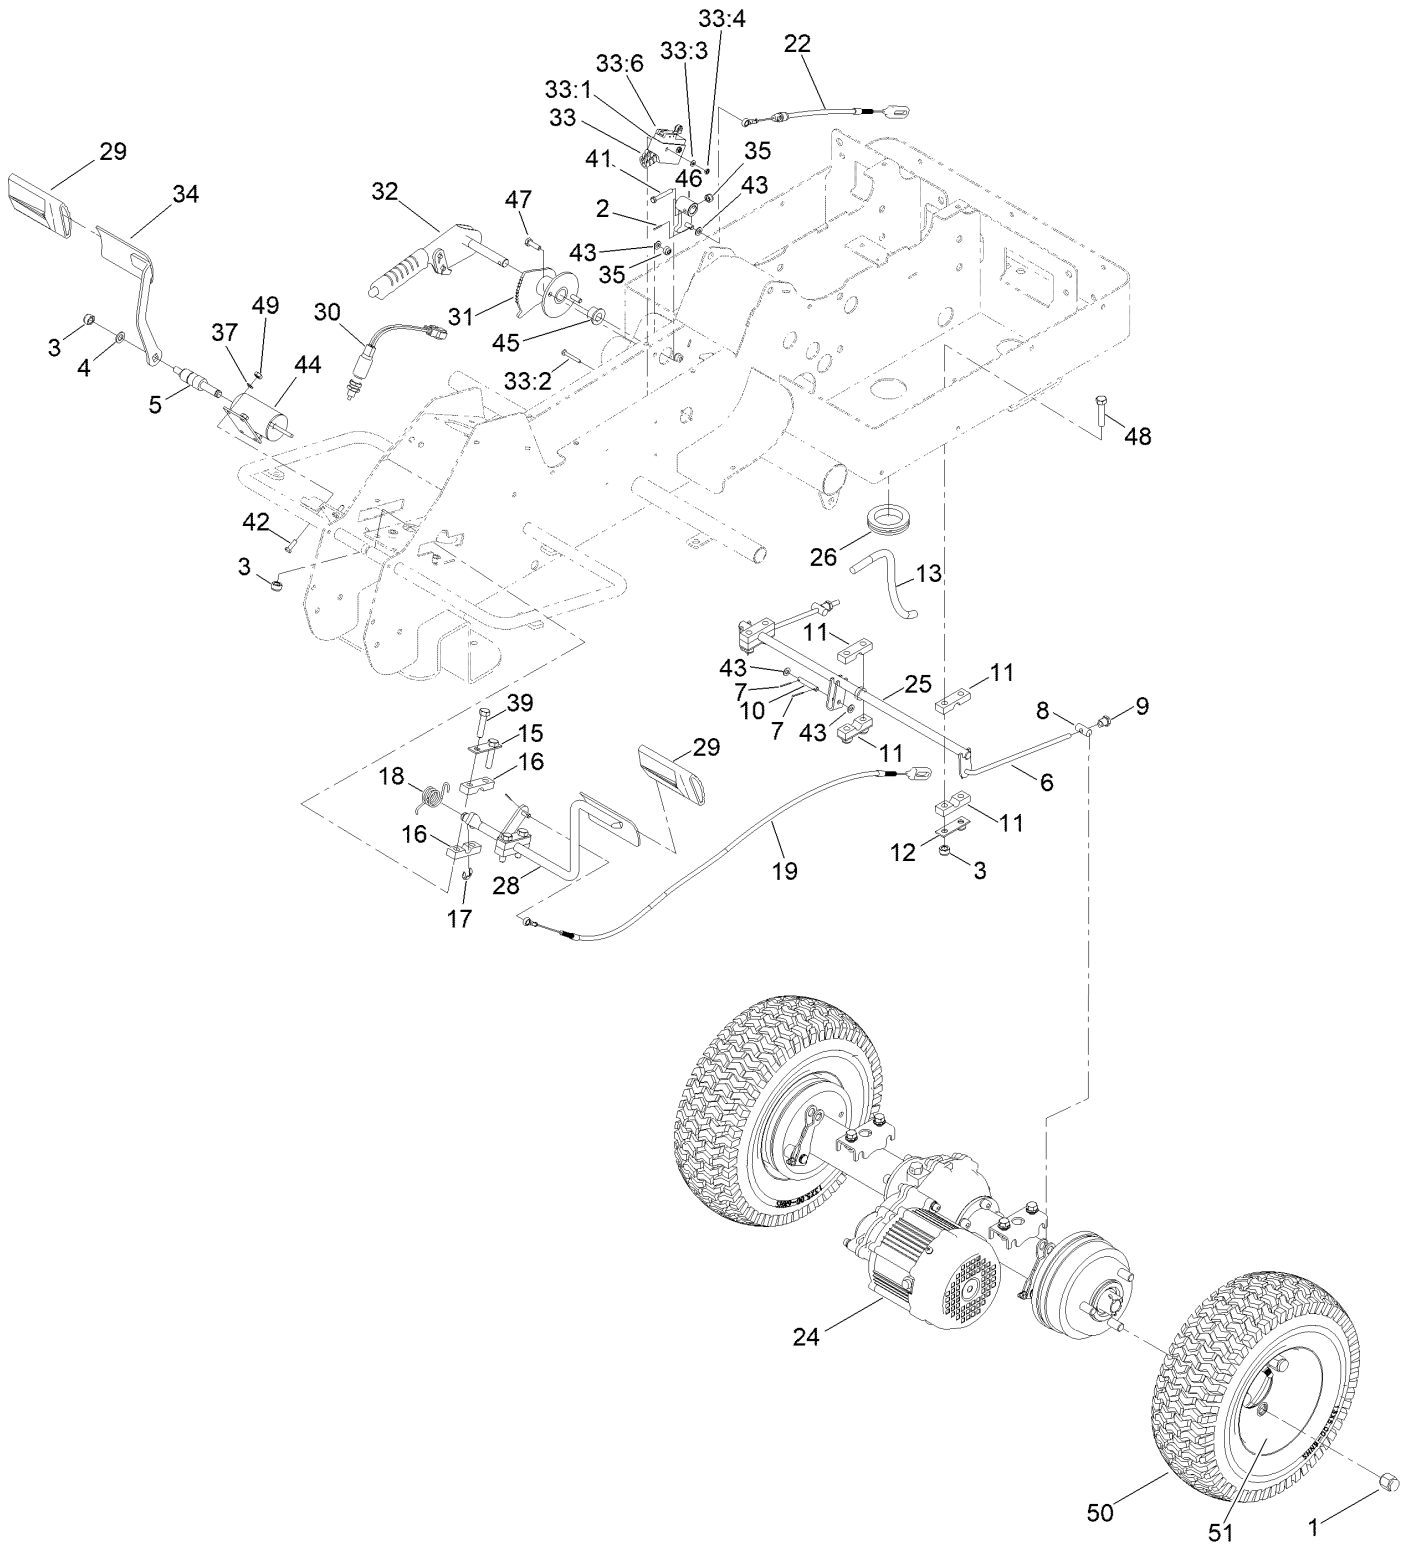

Transmission Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-5761	6	Nut	30	134-6189	1	Braking Switch ASM
2	134-6306	1	Bobby Pin	31	134-6193	1	Hand Brake, Hub ASM
3	09441	11	Nut-Hex, NI	32	134-6196	1	Hand Brake, Handle ASM
4	134-6465	1	Washer	33	134-6200	1	Switch ASM
5	134-6466	1	Shaft, Throttle	33:1	134-5831	1	Cover, Switch
6	134-5786	2	Rod, Brake Connection	33:2	134-5832	2	Bolt
7	134-5787	5	Bobby Pin	33:3	09658	2	Washer
8	134-5788	2	Pin, Brake Connection (Flat)	33:4	134-5834	2	Nut
9	134-5789	2	Nut , Brake Adjustment	33:6	134-6473	1	Housing, Braking Switch
10	134-5791	1	Pin, Brake Cable	34	134-6458	1	Pedal Throttle
11	134-5792	6	Mounting, Brake Rod	35	09438	1	Nut-Nyloc
12	134-5793	3	Plate, Brake Mouting	37	09470	4	Washer
13	134-5796	1	Cover, Wire	39	09631	4	Bolt
15	134-5812	2	Plate, Pedal Mouting	41	ZBH1E035U	1	Bolt
16	134-5813	4	Block, Pedal Holder	42	ZDH1E016U	4	Screw-HH
17	134-5814	2	Clip	43	ZWP1F000U	4	Washer
18	134-5815	1	Spring, Pedal	44	134-6514	1	Throttle Sensor
19	134-6506	1	Cable, Pedal Brake	45	134-6471	1	Bushing, Parking Brake
22	134-6507	1	Cable, Hand Brake	46	134-6472	1	ASM, Switch Pivot
24	134-6166	1	Transmission Assembly	47	09363	2	Screw-HH
25	134-6178	1	Rear Transision ASM	48	09681	6	Bolt
26	134-6182	1	Insert, Wire (Small)	49	134-7225	4	Nut
28	134-6184	1	Brake Pedal ASM	50	134-6164	2	Tyre, Wheel
29	134-6188	2	Cover, Pedal	51	134-7214	2	Hub, Rear Wheel


Transmission Assembly No. 134-6166

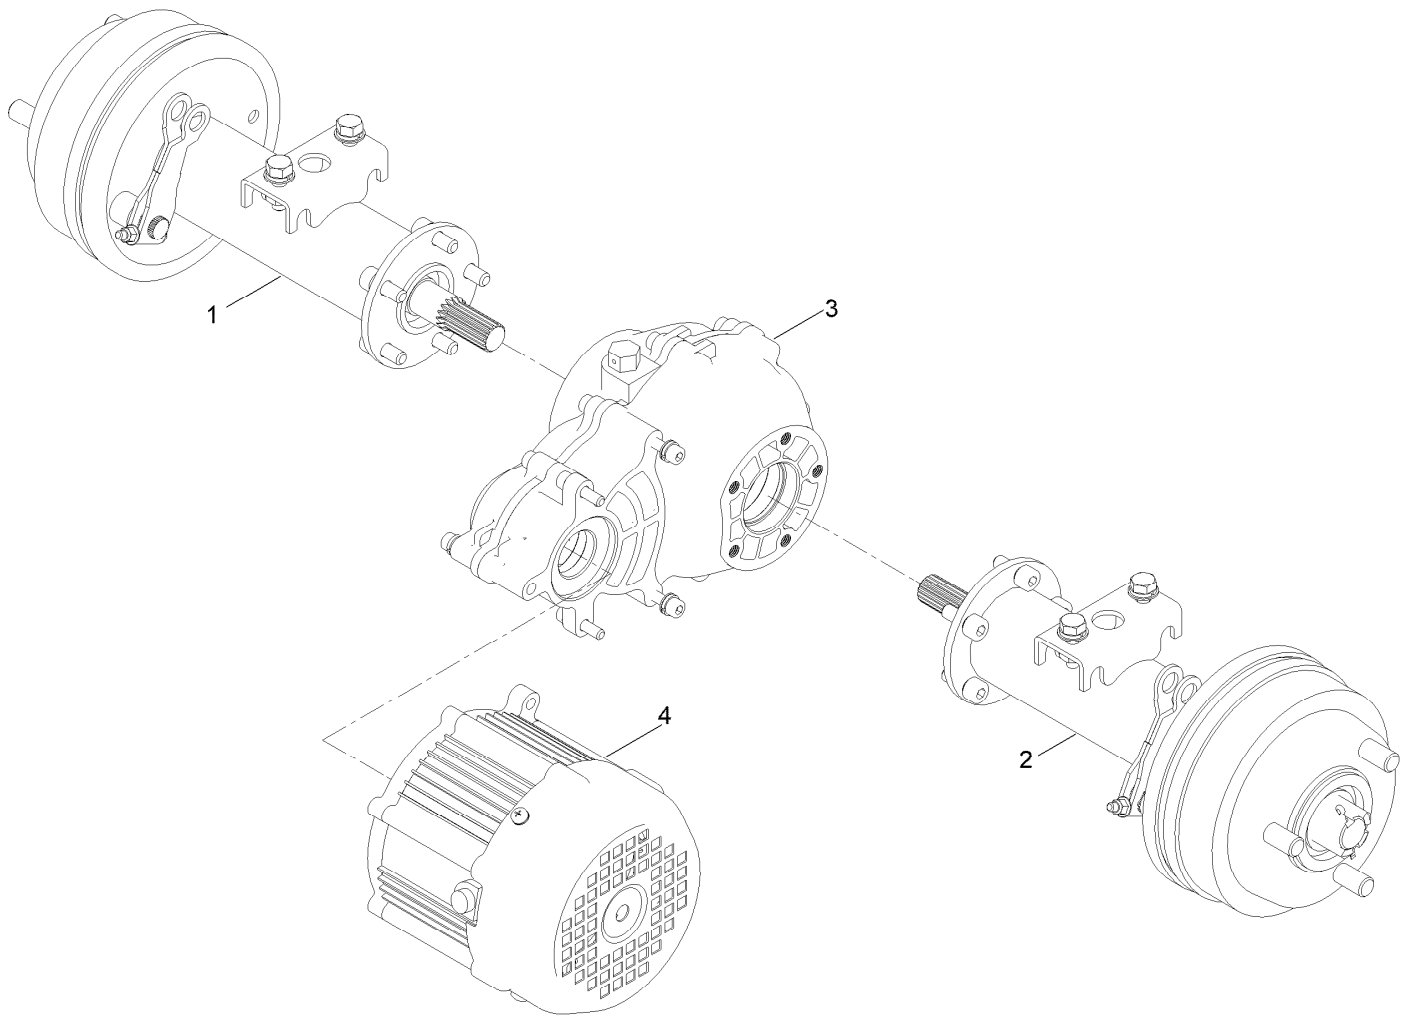

Transmission Assembly No. 134-6166 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-6167	1	Semi Axle ASM (RH)	3	134-6304	1	Reduction Gearbox ASM
2	134-6172	1	Semi Axle ASM (LH)	4	134-6177	1	Rear Motor ASM


Front Wheel Assembly

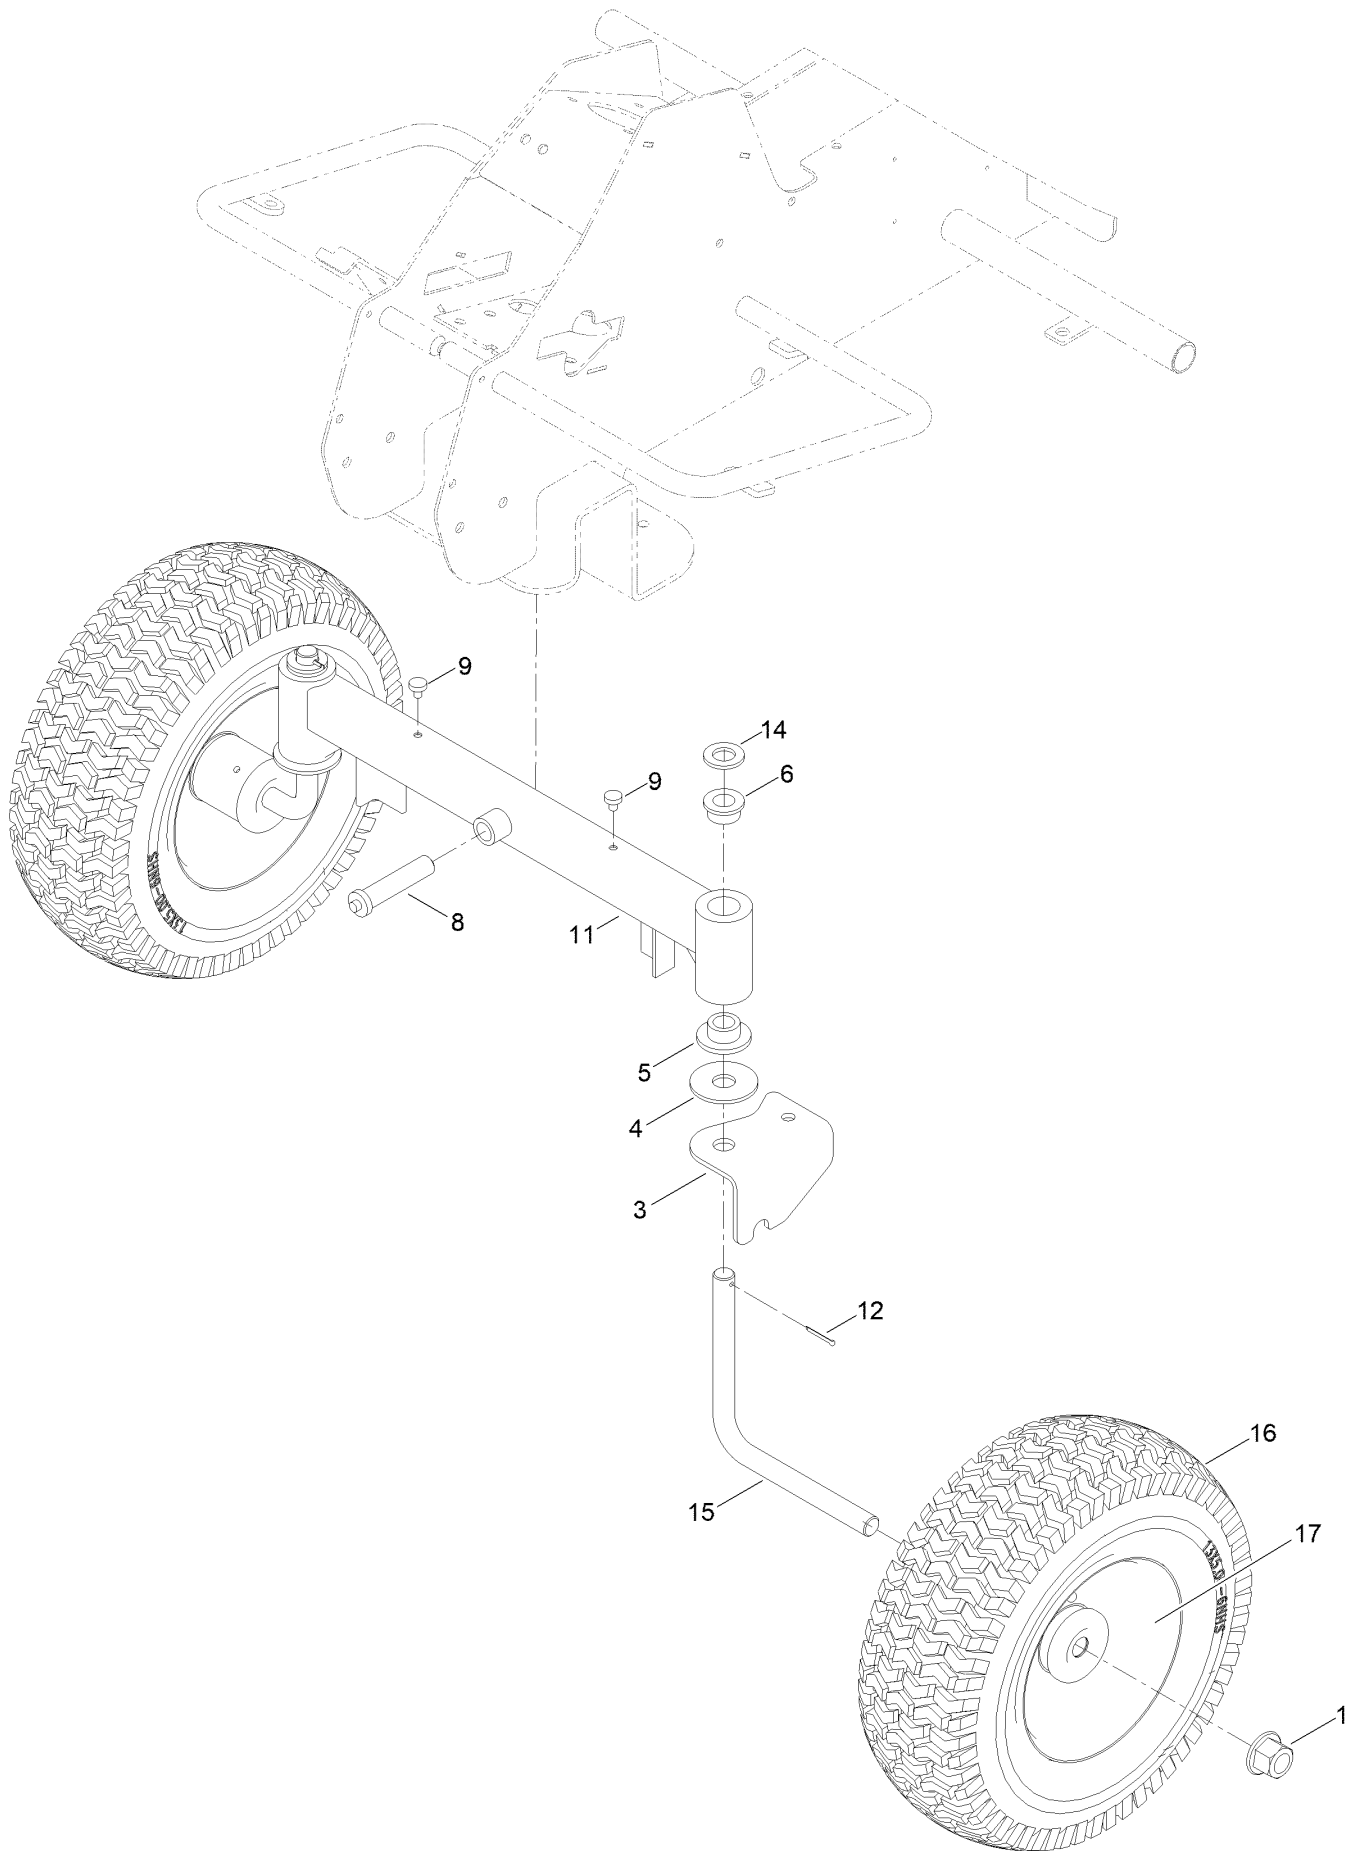

Front Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-3765	2	Nut-Flange, NI	11	134-6183	1	Front Axle ASM
3	134-6598	1	Mount Front Wheel	12	134-5742	2	Pin, Split
4	134-5802	2	Washer	14	134-6450	2	Washer
5	134-5803	2	Bottom Bush, Axle	15	134-6597	1	Mount Front Wheel
6	134-5804	2	Top Small Bush, Axle	16	134-6164	2	Tyre, Wheel
8	134-5807	1	Pin, Front Axle Tilt	17	134-7218	2	Hub, Wheel (Front)
9	134-5808	2	Stopper, Front Axle Tilt				


Steering Assembly

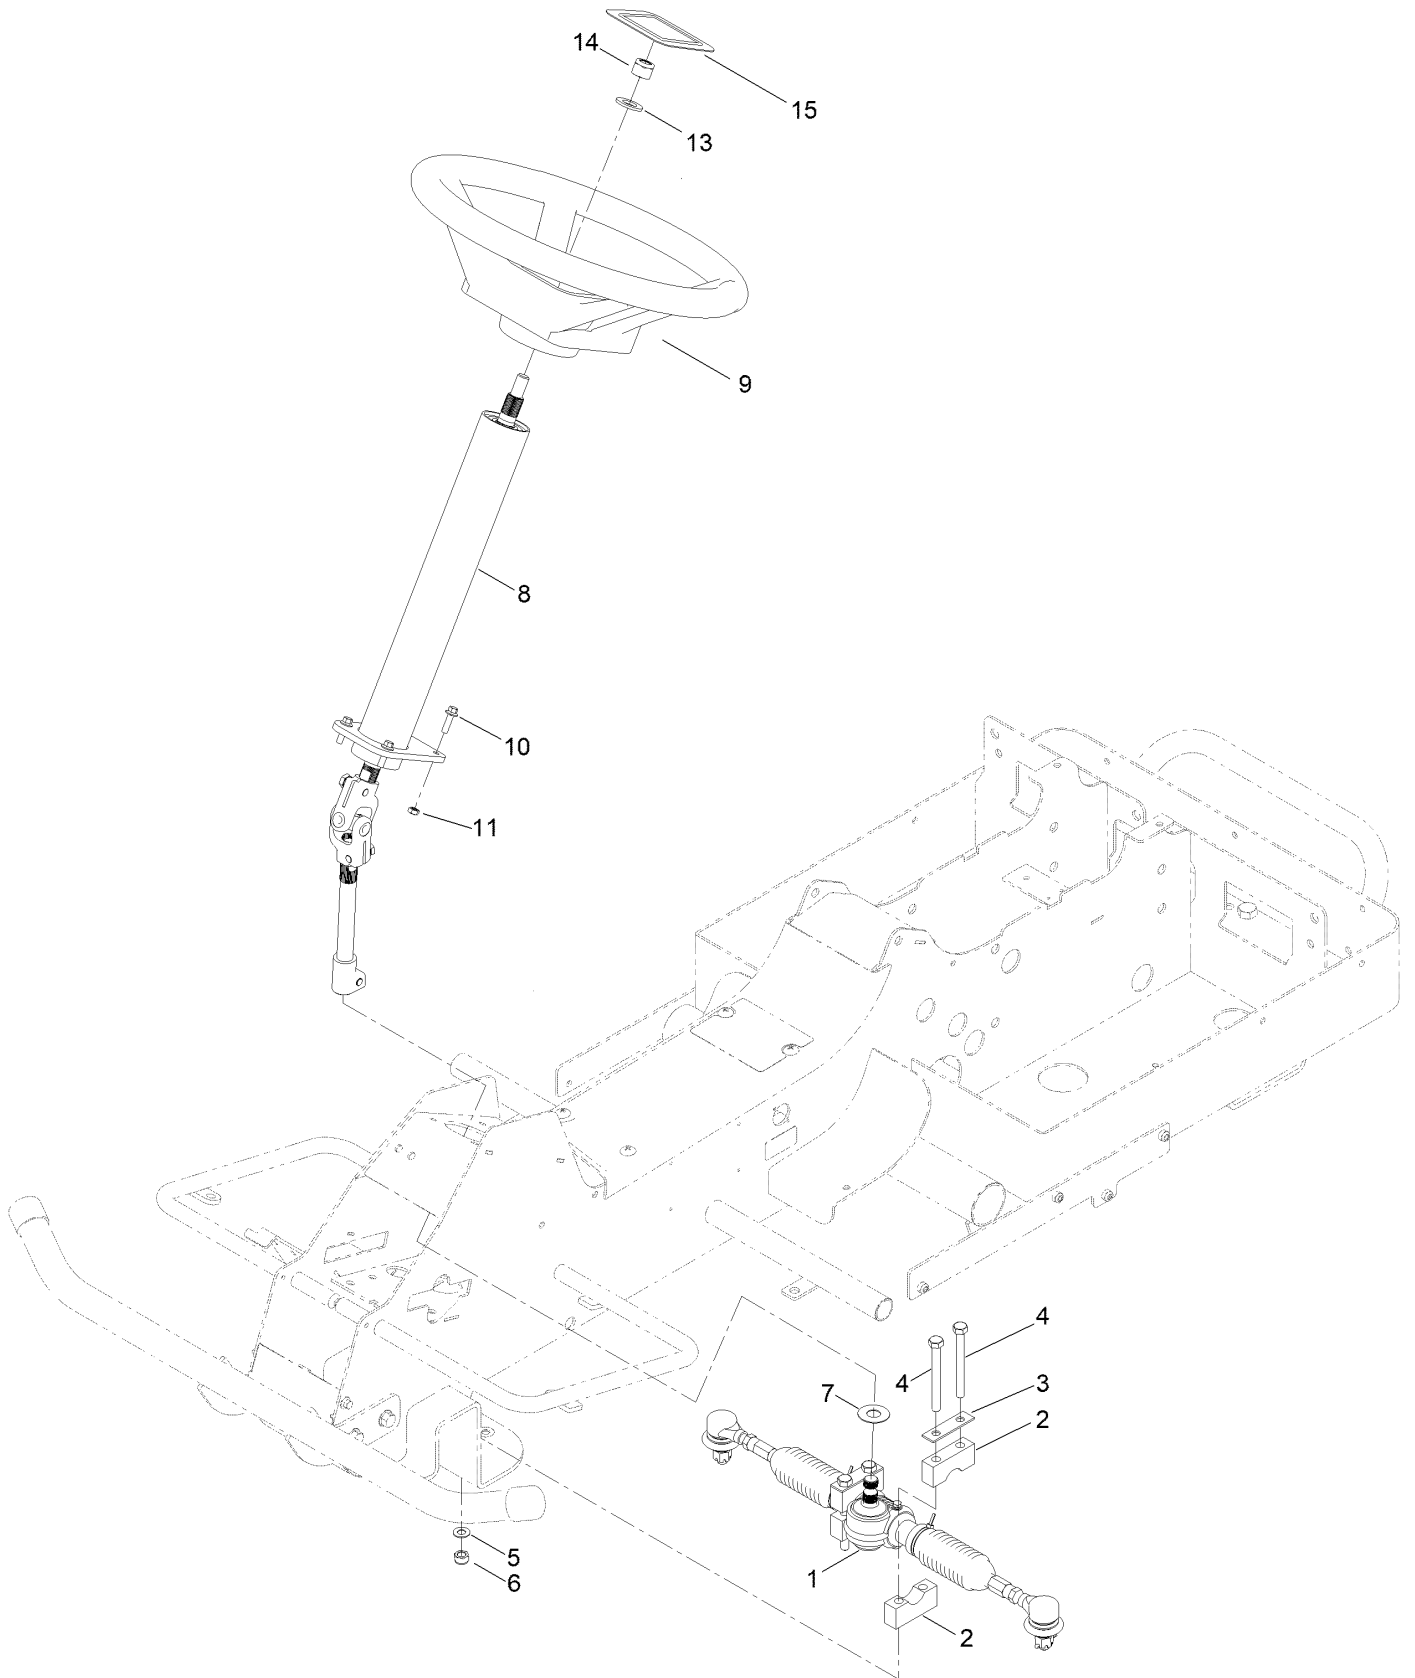

Steering Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-6201	1	Steering Rack ASM	8	134-6202	1	Steering Rod ASM
2	134-5849	4	Mounting Block, Steering Rack	9	134-7189	1	Steering Wheel
3	134-5850	2	Plate, Mounting Block	10	134-5864	4	Bolt
4	ZBH1H080U	4	Bolt	11	134-5865	4	Nut
5	ZWP1H000U	4	Washer-Plain	13	09488	1	Washer
6	09441	4	Nut-Hex, NI	14	ZNN1L000U	1	Nut-Nyloc
7	134-5855	1	Washer	15	134-7188	1	Cover, Steering Wheel


Steering Rack Assembly No. 134-6201

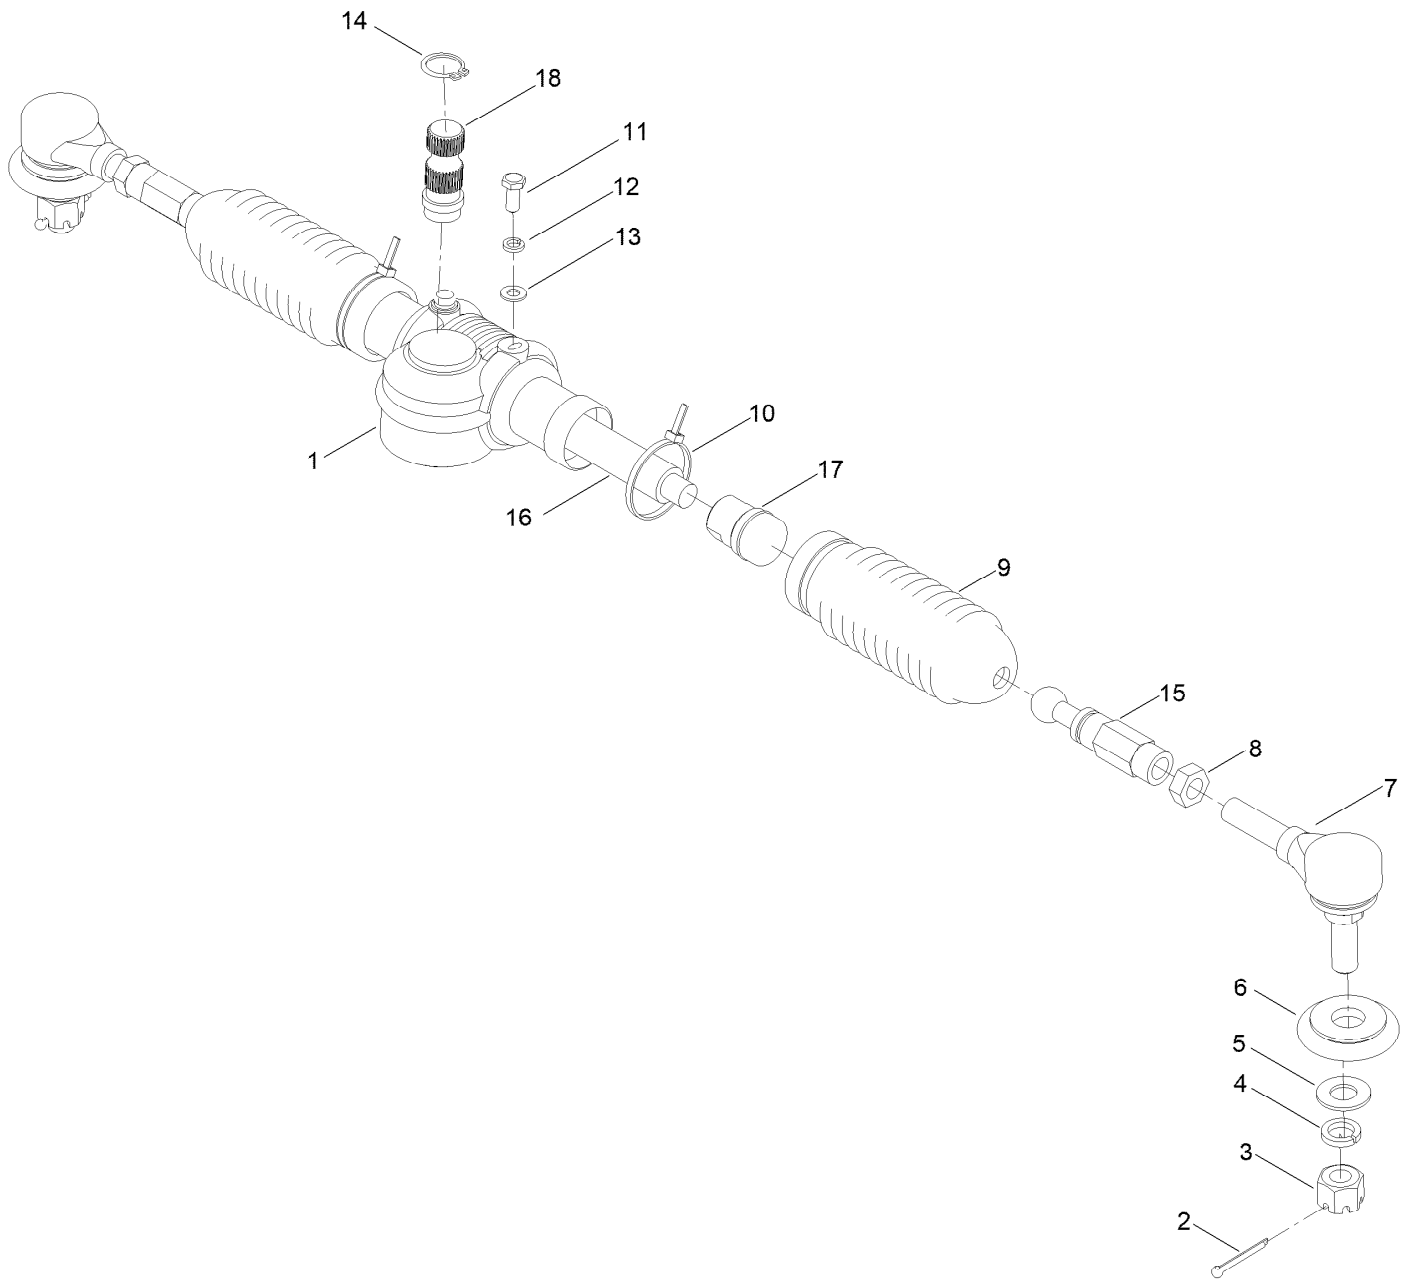

Steering Rack Assembly No. 134-6201 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-5846	1	Steering Rack	10	134-5848	2	Ziptie
2	134-5742	2	Pin, Split	11	ZDH1E012U	2	Screw-HH
3	134-5842	2	Nut	12	09644	2	Washer-Spring
4	09480	2	Washer-Lock	13	09470	2	Washer
5	09479	2	Washer-Plain	14	134-5856	1	Clip, Steering Rack
6	134-5843	2	Cover, Pivot	15	134-6341	2	Adjuster, Tie Rod
7	134-5844	2	Rod End	16	134-6411	1	Tie Rod, Main
8	134-5845	2	Nut, Adjustment	17	134-6412	2	End, Tie Rod
9	134-5847	2	Bellows, Steering Rack	18	134-6413	1	Shaft, Steering Rack


Steering Rod Assembly No. 134-6202

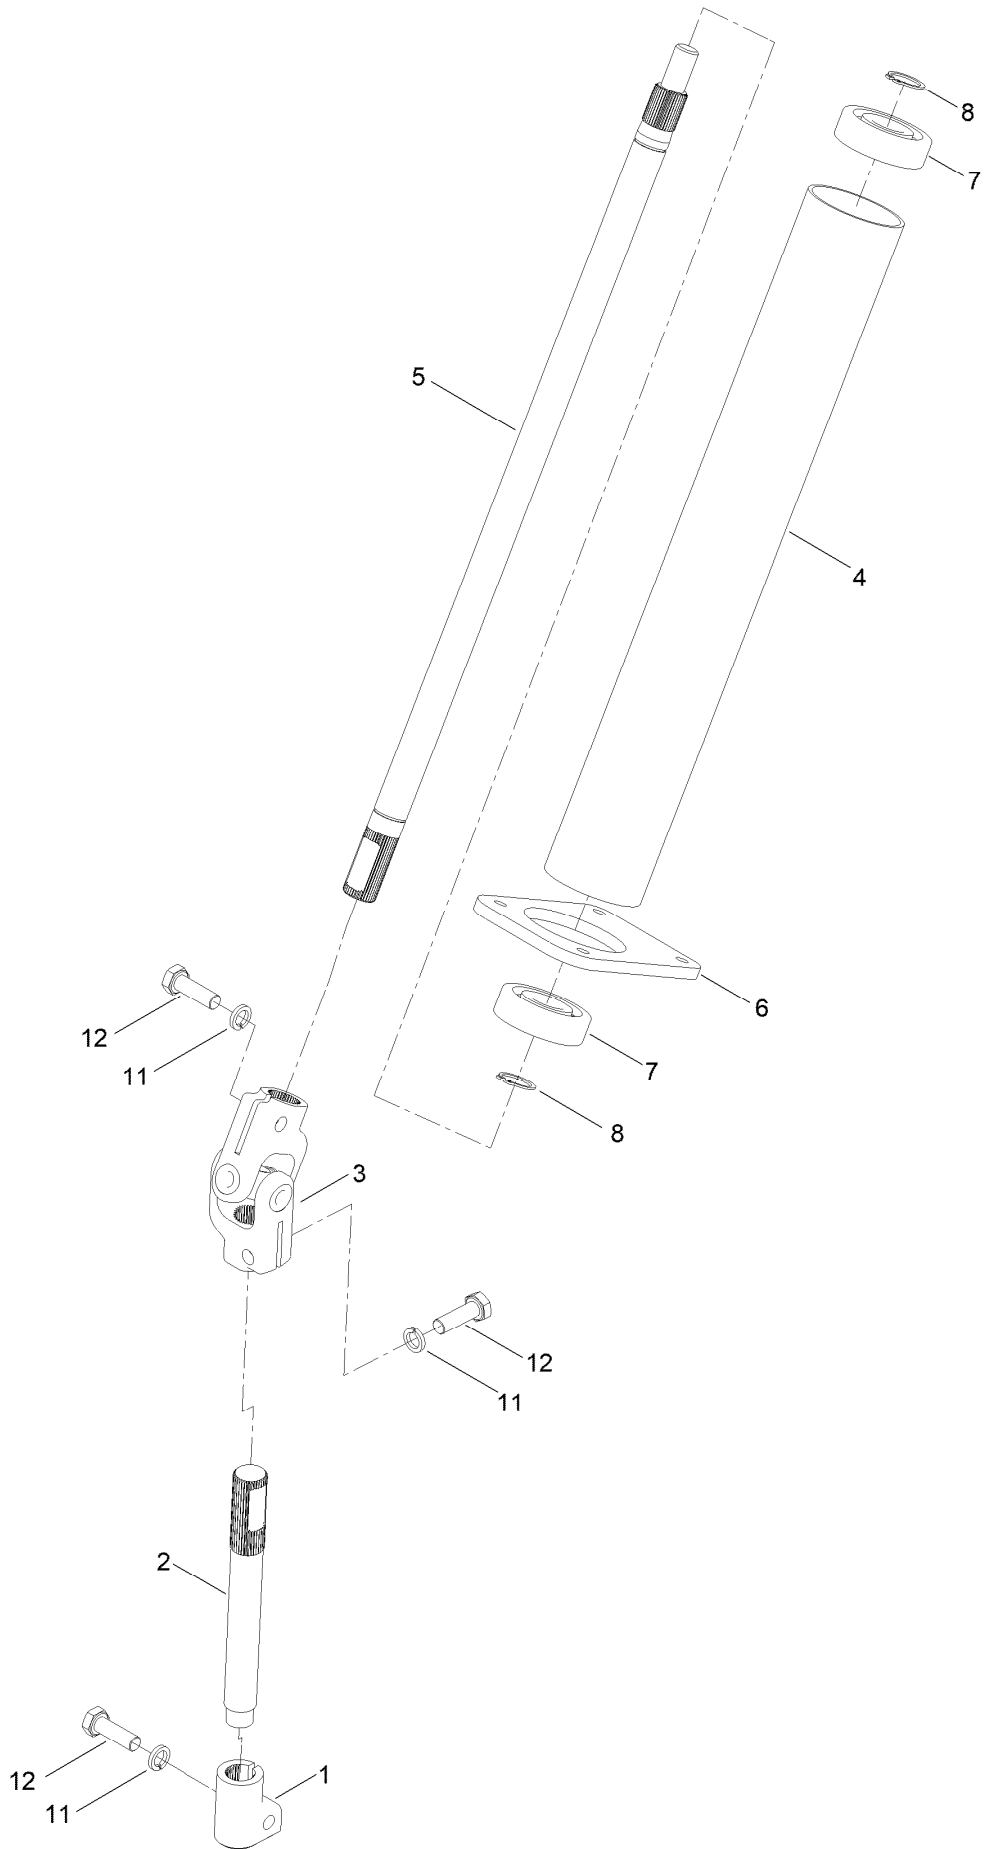

Steering Rod Assembly No. 134-6202 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-5857	1	Connection, Steering Rack	7	134-5866	2	Bearing, Steering
2	134-5858	1	Lower Rod, Steering Rack	8	134-5867	2	Clip, Steering Bearing
3	134-6599	1	Universal Joint	11	134-6338	3	Washer, Lock
4	134-5861	1	Cover, Upper Steering Rod	12	134-6339	3	Bolt, Steering
5	134-5862	1	Upper Rod, Steering				
6	134-5863	1	Plate, Mounting Steering Rod				


Body Styling Assembly

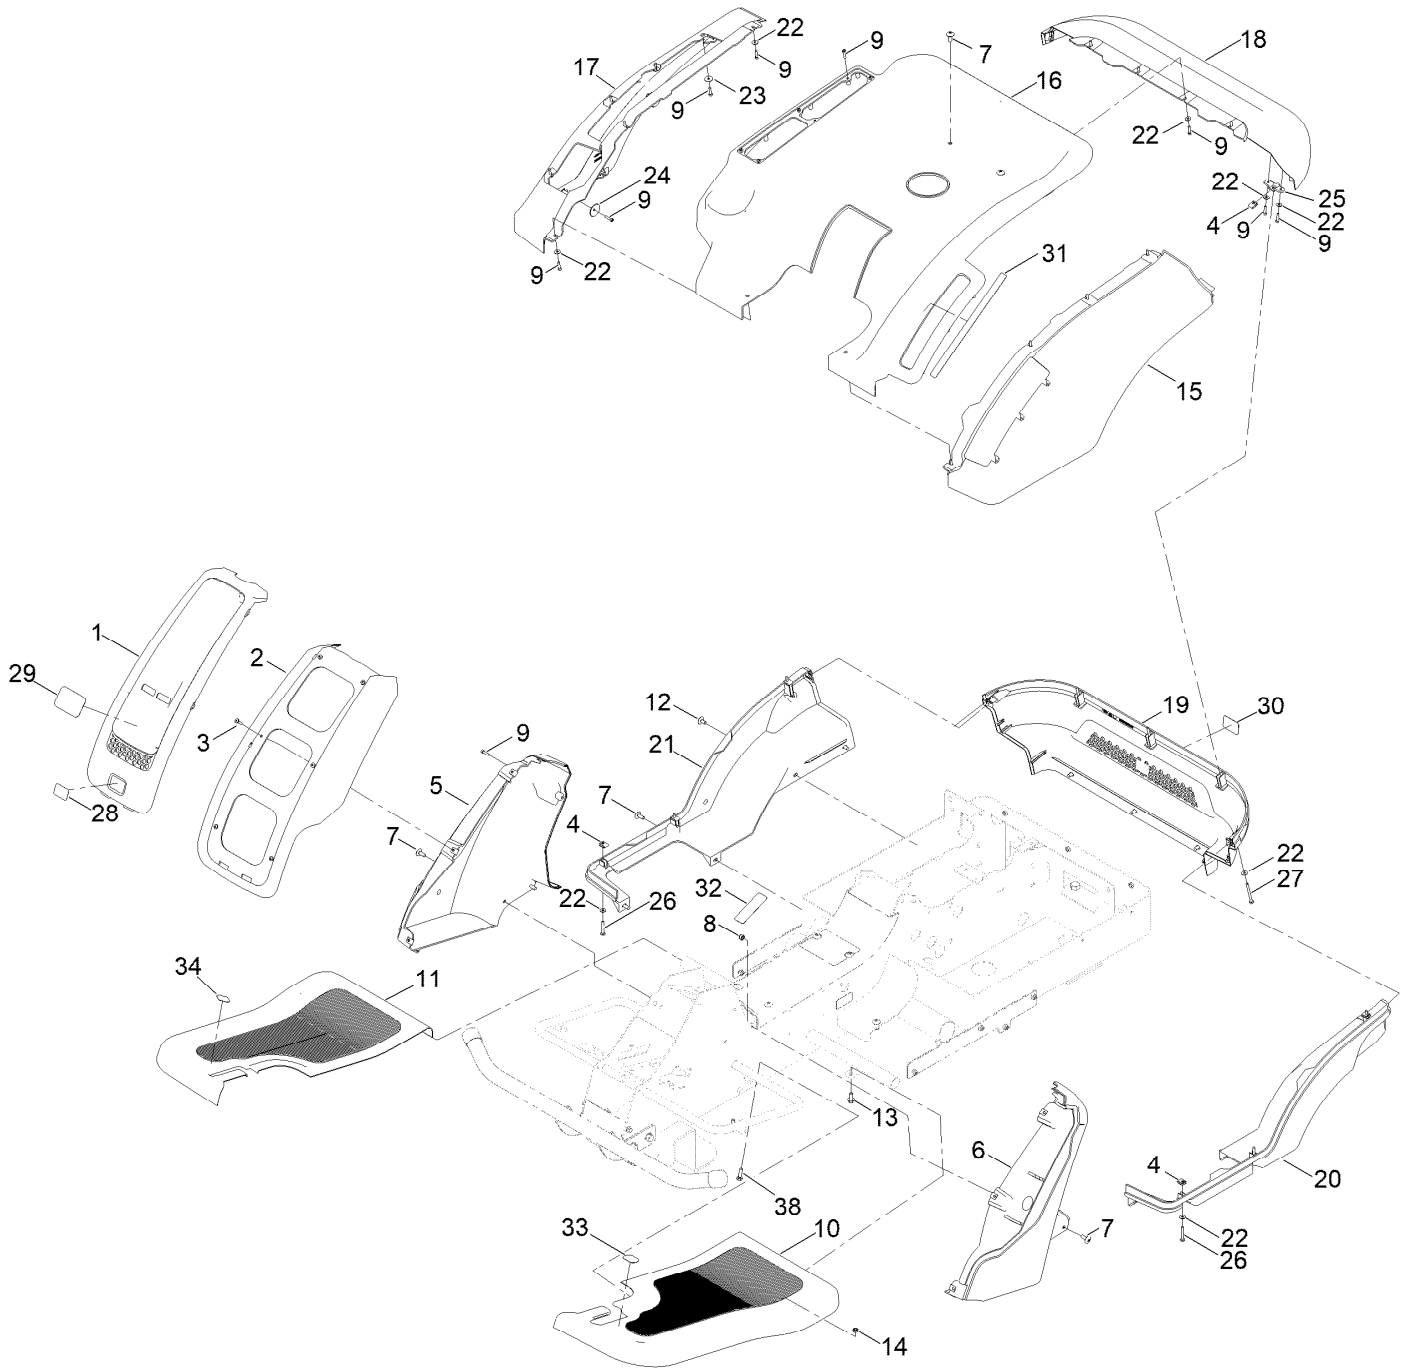

Body Styling Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-5380	1	Front Panel, Steering Column	18	134-5373	1	Cover, Top/Rear
2	134-5379	1	Front Panel Moutning, Steering Column	19	134-5376	1	Cover, Middle/Rear
3	134-7690	6	Bolt	20	134-5374	1	Cover, RH/Bottom
4	134-5872	15	Clip, Bolt	21	134-5375	1	Cover, LH/Bottom
5	134-5381	1	RH Panel, Steering Column	22	134-5880	34	Washer
6	134-5382	1	LH Panel, Steering Column	23	134-5881	5	Washer
7	134-7193	12	Bolt	24	134-5882	4	Washer, Bent
8	09438	12	Nut-Nyloc	25	134-5883	3	Mountng Bracket, Rear Panel
9	134-5719	30	Bolt	26	134-5884	6	Bolt PH
10	134-6501	1	Panel Floor, LH	27	134-5885	5	Bolt PH
11	134-6502	1	Panel Floor, RH	28	134-6070	1	Decal - Erider Battery
12	134-6515	7	Cap Bolt	29	134-6071	1	Decal - Toro Logo
13	134-3739	4	Screw-HHF	30	134-6072	1	Decal - Toro Logo
14	134-5879	4	Nut	31	134-6030	1	Decal - HOC
15	134-5372	1	Cover, LH/Middle	32	134-6029	1	Decal - Parking Brake
16	134-5370	1	Cover, Top	33	134-6032	1	Decal - Brake
17	134-5371	1	Cover, RH/Middle	34	134-6033	1	Decal - Traction
				38	134-6505	4	Bolt


Battery Controller Assembly

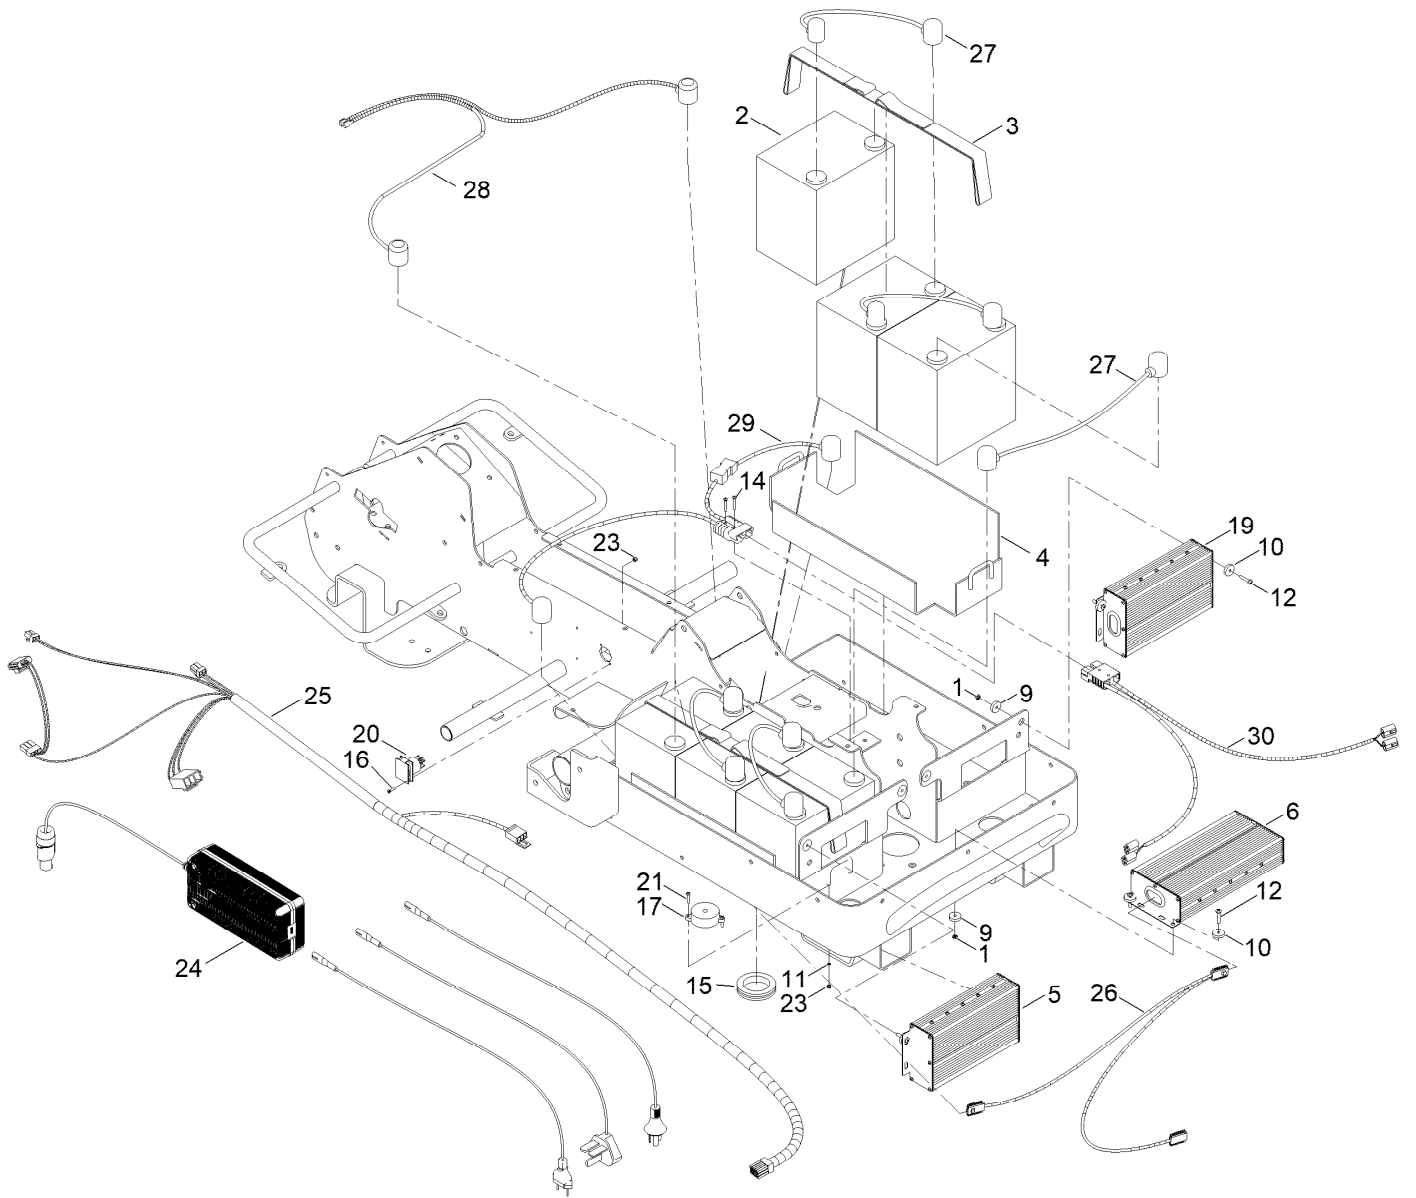

Battery Controller Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-5834	8	Nut	20	134-6206	1	Power Connector ASM
2	134-5886	6	Battery	21	134-6237	2	Bolt
3	134-5887	2	Stap, Battery	23	HY09698	4	Nut-Nyloc
4	134-6512	2	Holder, Battery	24	134-6712	1	Charger
5	134-5902	1	Cutting Controller	25	134-8677	1	Wiring Harness, Sensors
6	134-5903	1	Driving Controller	26	134-8675	1	Wiring Harness, Controler Connector
9	134-5906	8	Flat Bush, Rubber	27	134-8676	1	Wiring Harness, Battery Connector
10	134-5907	8	Bush, Rubber	28	134-8796	1	Wiring Harness, Battery/Charging Wire
11	134-5908	2	Spring Washer	29	134-8797	1	Wiring Harness, Fuse Wire
12	134-5911	8	Bolt	30	134-9530	1	Wiring Harness, Power Connector
14	134-5915	2	Bolt				
15	134-5918	1	Insert, Rubber Cable Large				
16	134-5920	2	Bolt				
17	134-5928	1	Buzzer				
19	134-6205	1	Cutting Controller				


Light Assembly

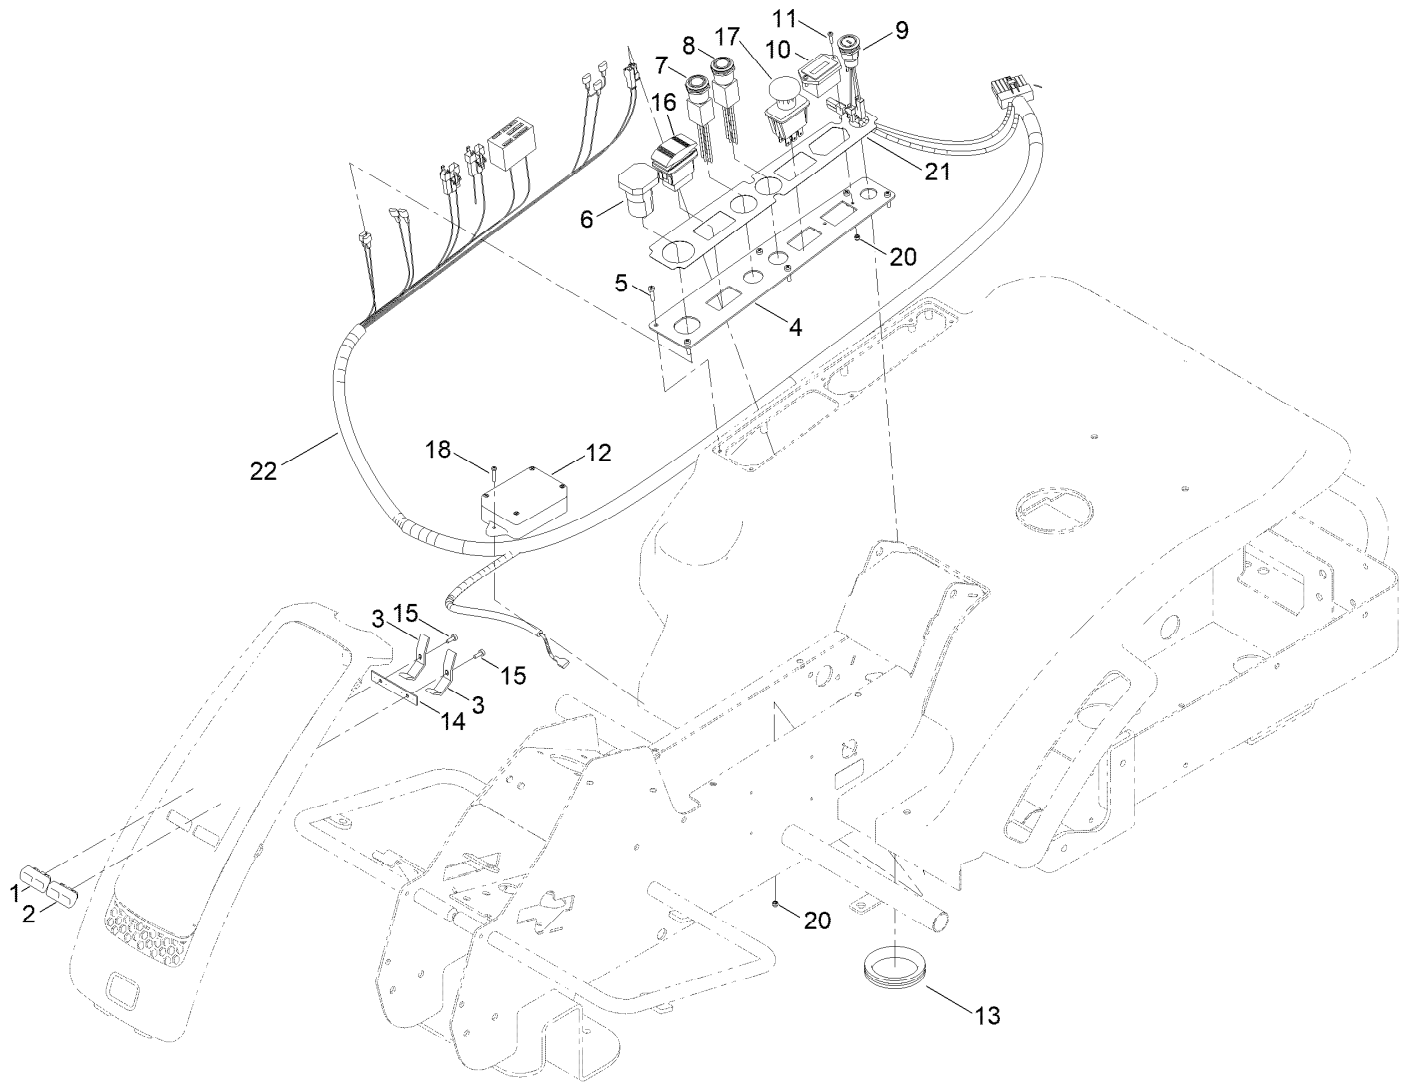

Light Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-5383	1	Casing, Light (Right, Front)	11	134-5900	2	Bolt
2	134-5384	1	Casing, Light (Left, Front)	12	134-6595	1	Control Box, ASM
3	134-5385	2	Bracket, LED Lights	13	134-5919	1	Insert, Rubber Cable Small
4	134-5889	1	Plate, Switches	14	134-5925	1	Plate, Lights
5	134-5890	6	Bolt	15	134-5927	4	Bolt
6	134-5891	1	USB Switch	16	134-6203	2	Direction Switch ASM
7	134-5892	1	Button, Reverse Mow And Nut	17	134-6204	1	Cutter Button ASM
8	134-5893	1	Button, Cruise Control And Nut	18	134-6237	2	Bolt
9	134-8100	1	Switch, Ignition	20	HY09698	4	Nut-Nyloc
10	134-5899	1	Indicator, Battery Level	21	134-6028	1	Decal - Control Panel
				22	134-8673	1	Wiring Harness, Control Panel


Seat Assembly

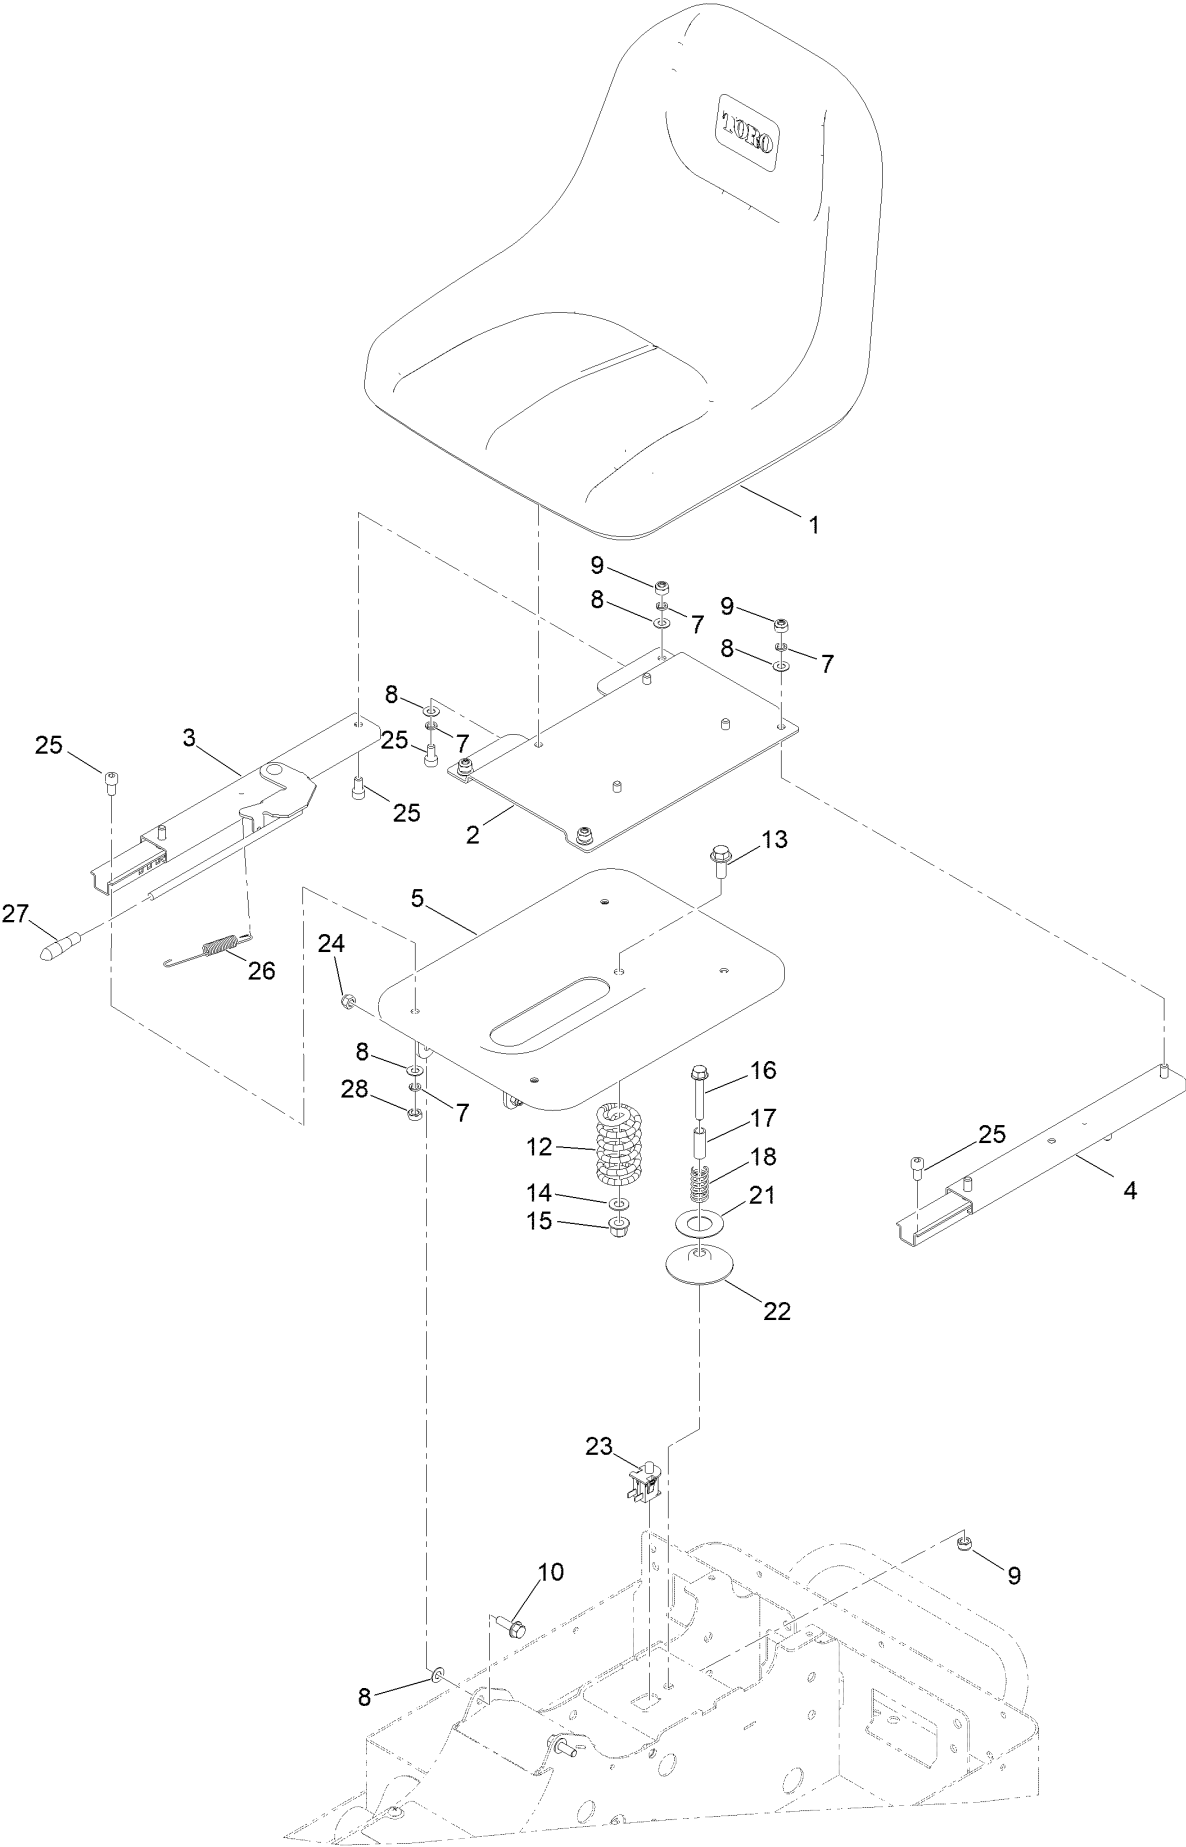

Seat Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-6509	1	Seat	15	134-3763	1	Nut-Flange, NI
2	134-5930	1	Mounting Plate, Seat	16	134-3749	1	Screw-HHF
3	134-6511	1	Seat Slide ASM, RH	17	134-5945	1	Shaft, Spring
4	134-6510	1	Seat Slide ASM, LH	18	134-5946	1	Small Spring, Seat
5	134-6332	1	Seat Base, ASM	21	134-5949	1	Washer
7	03469	12	Washer-Spring	22	134-5950	1	Plate, Spring Seat
8	ZWP1H000U	14	Washer-Plain	23	134-5951	1	Seat Sensor
9	09441	5	Nut-Hex, NI	24	134-6335	2	Nut, Seat
10	134-3747	2	Screw-HHF	25	134-6334	12	Bolt Seat, Slide Mount
12	134-5940	1	Spring, Seat	26	134-5936	1	Adjustment Spring, Seat
13	134-3751	1	Screw-HHF	27	134-5937	1	Adjustment Lever Cap, Seat
14	09479	1	Washer-Plain	28	ZNH1H000U	4	Nut-Hex

Deck Lift Assembly

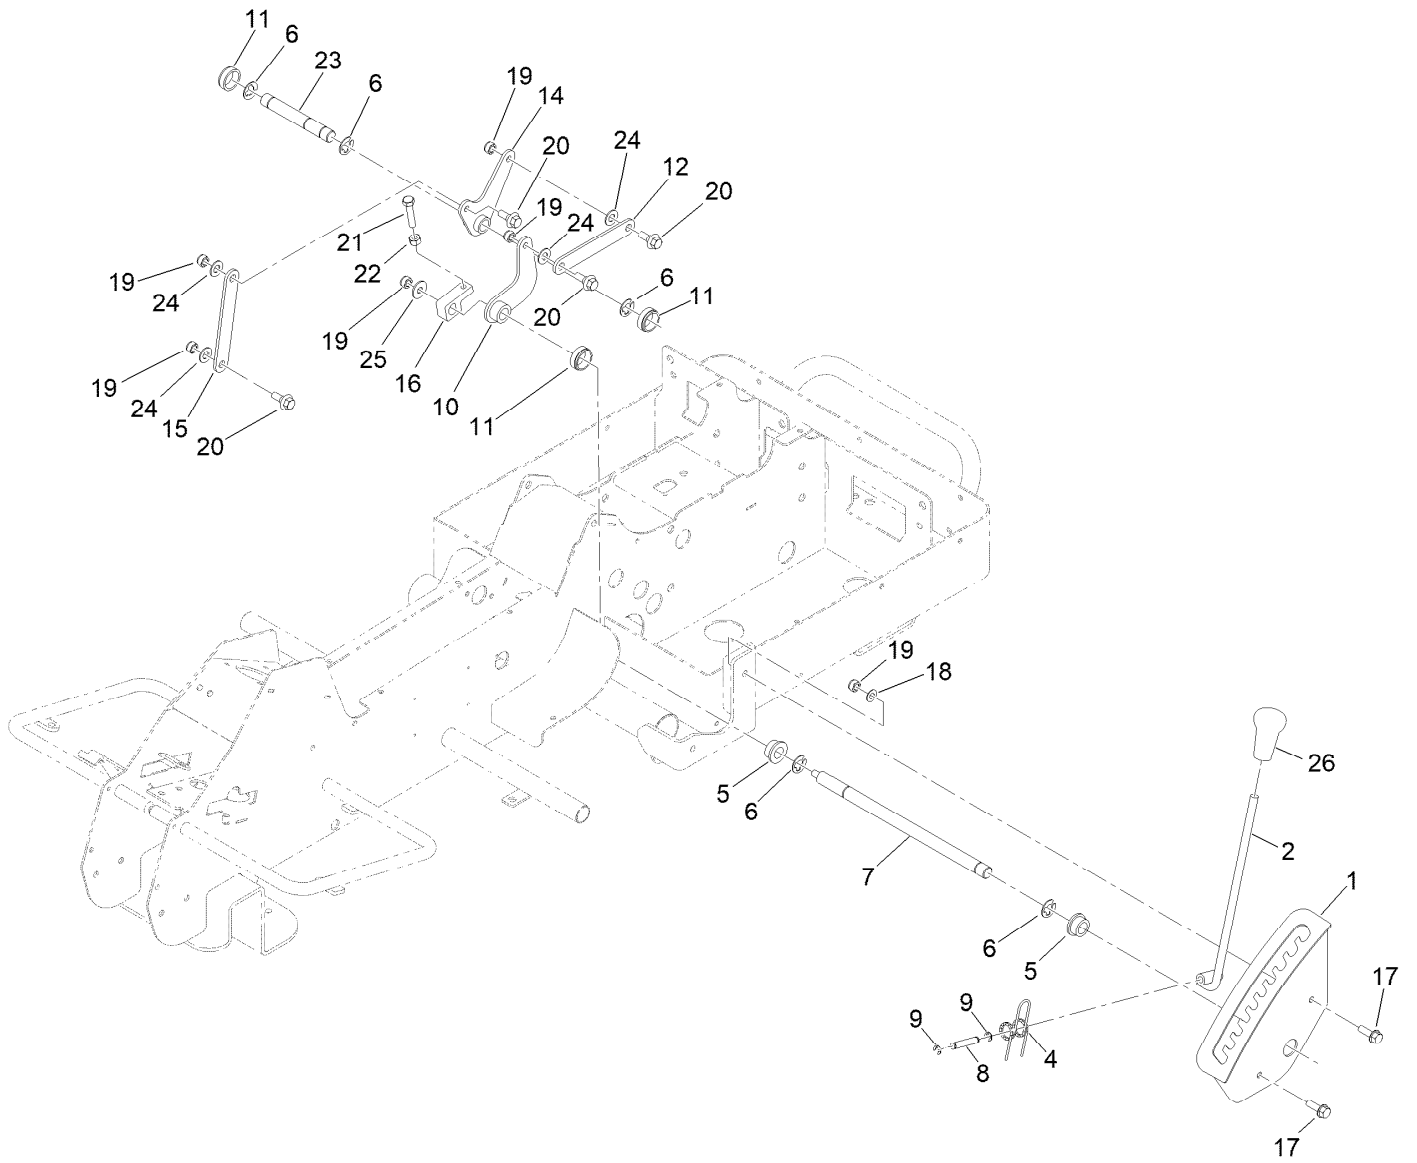

Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-6251	1	HOC Plate ASM	15	134-5968	1	Long Plate, HOC
2	134-6252	1	HOC Lever ASM	16	134-5969	1	Adjustment, HOC
4	134-5956	1	Spring, HOC Lever	17	134-3747	2	Screw-HHF
5	134-5957	4	Bush, HOC Shaft	18	ZWP1H000U	2	Washer-Plain
6	134-5958	5	Clip, HOC Shaft	19	09441	7	Nut-Hex, NI
7	134-5959	1	HOC Shaft	20	134-7178	4	Bolt, Flange
8	134-5960	1	Shaft, HOC Lever	21	09681	1	Bolt
9	134-5962	2	Clip, HOC Lever Shaft	22	134-5973	1	Plain Nut
10	134-6254	1	HOC Rotation Plate ASM (Small)	23	134-5974	1	Short Shaft, HOC Lever
11	134-5963	3	Bush, HOC Shaft	24	09479	4	Washer-Plain
12	134-5966	1	Short Plate, HOC	25	134-6414	1	Washer
14	134-5967	1	Plate, Rotation Large (HOC)	26	134-5953	1	HOC, Grip

Notes:

Notes:



Count on it.