



Count on it.

Parts Catalog

Workman® UTX
4 Passenger Utility Vehicle

Model No. 08101—Serial No. 415260000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

 
Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Frame and ROPS Assembly	4
Front Suspension Assembly	6
Front Control Arm Assembly No. 145-7771	7
Rear Suspension and Subframe Assembly	8
Pedals and Controls Assembly	10
Steering Assembly	11
Brake Assembly	12
Master Cylinder Assembly No. 104-6782	13
Brake Caliper Assembly No. 127-7424	14
Hood and Front Fender Assembly	15
Dash Assembly	16
Seat Base Assembly	17
Cargo Bed Assembly	18
Cargo Bed Kit Assembly	19
Electrical Assembly	20
Battery Assembly	22
Engine Drivetrain and Exhaust Assembly	23
Engine, Transaxle and Clutch Assembly	24
Transaxle Assembly No. 140-2611	25
Secondary Clutch Assembly No. 139-4591	26
Primary Clutch Assembly No. 139-4590	27
Front Differential and Driveshaft Assembly	28
Front Differentail Assembly No. 140-4752	29
Intermediate Driveshaft Assembly No. 140-4771	30
Driveshaft Assembly No. 140-4763	31
Cooling System Assembly	32
Radiator Assembly No. 147-7970	33
Fuel System Assembly	34
Air Cleaner Assembly	35
Air Cleaner Assembly No. 106-5277	36
Hose Intake Assembly No. 145-2118	37
Cylinder Block Assembly	38
Crankshaft and Piston Assembly	39
Camshaft and Rocker Arm Assembly	40
Cylinder Head Assembly	41
Timing Cover Assembly	42
Intake Manifold Assembly	43
Exhaust Manifold Assembly	44
Oil Pan Assembly	45
Oil Pump Assembly	46
Water Pump Assembly	47
Starter Assembly	48
Alternator Assembly	49
Rear Plate Assembly	50
Ignition Assembly	51
Throttle Body Assembly	52
Coolant Plug Assembly	53
Coolant Inlet Assembly	54
Electrical Assembly	55
Attachments and Accessories	56

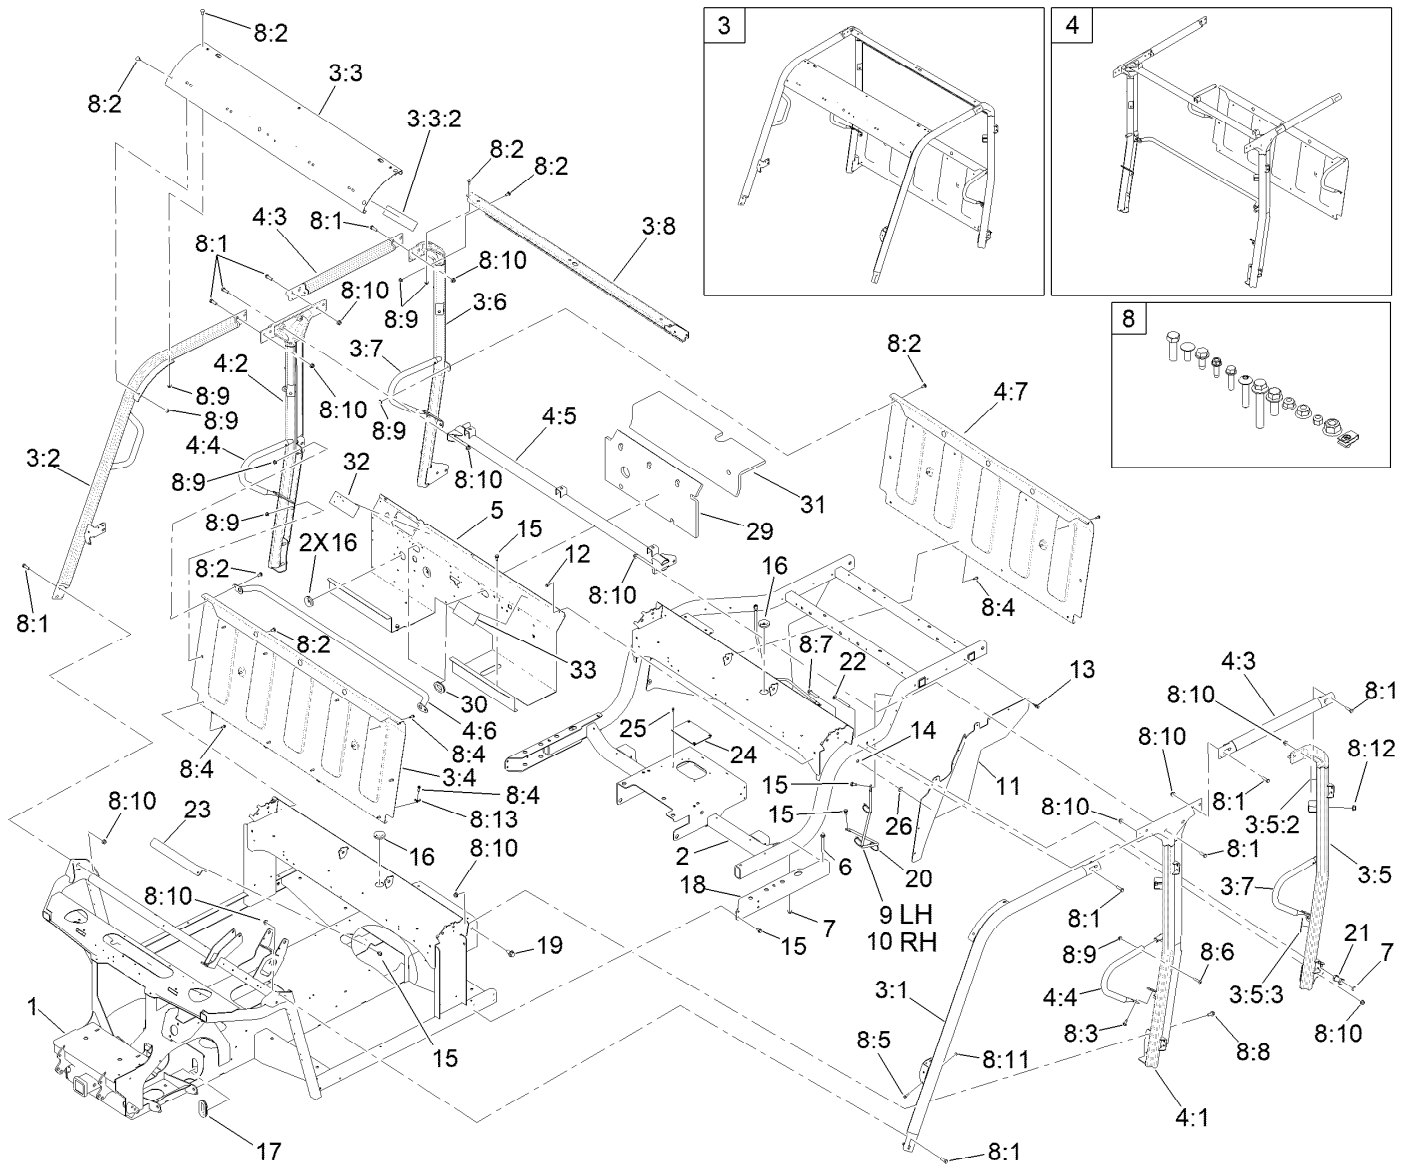

Frame and ROPS Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	147-8108	1	Front Frame ASM (4 Passenger)	4:2	137-2846-05	1	ROPS Middle Tube ASM-RH [blk-Tx
2	147-8106	1	Rear Frame ASM	4:3	137-2848-05	2	ROPS Connector Tube ASM [blk-Tx
3		1	Standard ROPS Kit ●	4:4	138-5787-05	2	Tube-Restraint, Shoulder
3:1	137-2737-05	1	Front ROPS ASM-LH	4:5	137-2835-05	1	ROPS Support Tube ASM [blk-Txt]
3:2	137-2738-05	1	Front ROPS ASM-RH	4:6	137-2916-05	1	Rear Seat Handle ASM [blk-Txt]
3:3	140-2583	1	ROPS Front Crosslink ASM	4:7	138-9438-05	1	Panel-Back, Seat
3:3:2	144-1143	1	Decal-Utx, Safety	5	145-7960-03	1	Panel-Underseat
3:4	138-9438-05	1	Panel-Back, Seat	6	116-4701	4	Screw-HHF
3:5	140-2597	1	LH ROPS Rear Tube ASM	7	104-8301	6	Nut-HF, NI
3:5:2	145-2215	1	Decal-ROPS Safety, Utx	8	144-2296	1	Crew ROPS Hardware Kit
3:5:3	144-2267	1	Decal-Compliance, ROPS	8:1	144-2258	20	Screw-HH
3:6	137-2726-05	1	ROPS Rear Tube ASM-RH	8:2	144-2265	16	Bolt-CARR
3:7	138-5787-05	2	Tube-Restraint, Shoulder	8:3	32144-70	8	Screw-HWHTF
3:8	137-6892-05	1	Crosslink-Rear, ROPS	8:4	49-2040	24	Screw-HWHTF
4		1	Mid ROPS Kit (Crew) ●				
4:1	137-2845-05	1	ROPS Middle Tube ASM-LH [blk-Tx				

 
● Not serviced separately

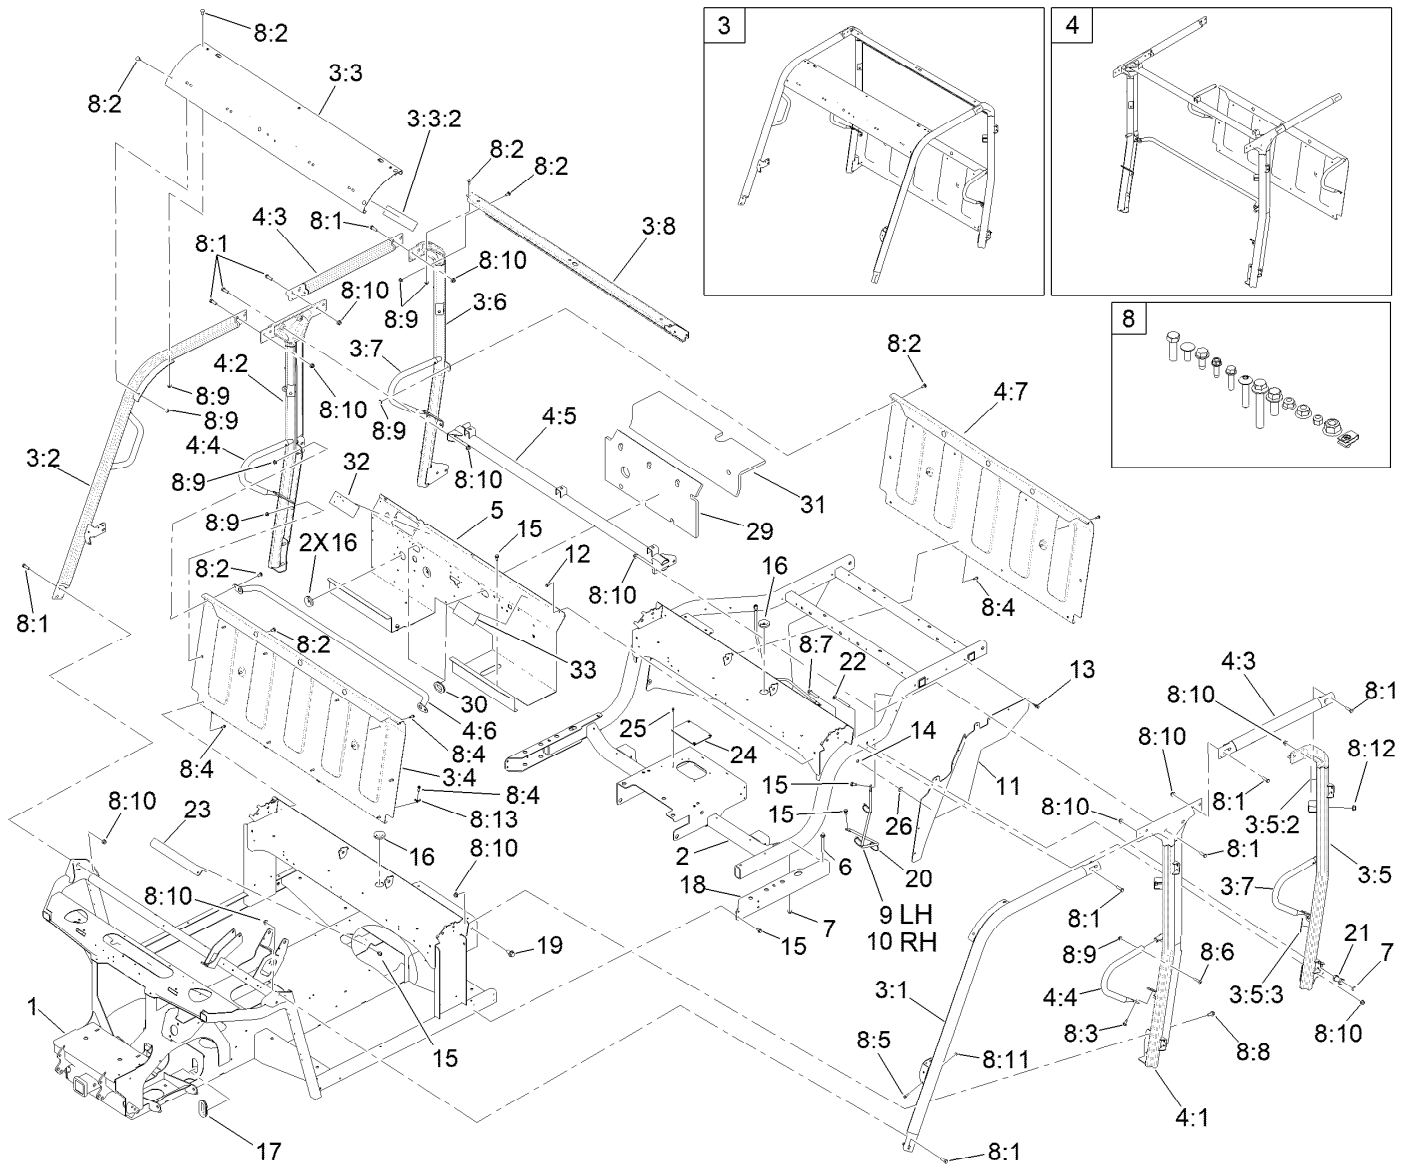

Frame and ROPS Assembly (continued)


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
8:5	32144-86	2	Screw-HWHTF	16	139-3436	4	Grommet
8:6	126-7439	4	Screw-Torx	17	240-12	1	Grommet-Rubber
8:7	144-2409	2	Screw-HHF	18	139-4433-03	2	Rail-Frame
8:8	3234-42	4	Screw-HHF	19	3234-6	7	Screw-HHF
8:9	104-8300	20	Nut-HF, NI	20	3290-378	6	Tie-Cable
8:10	104-8301	26	Nut-HF, NI	21	140-4775	2	Pin-Latch
8:11	3296-73	2	Nut-Lock, NI	22	3231-37	2	Screw-CARR
8:12	144-2269	4	Nut-HF, NI	23	144-2225-0P	1	Brace-Cross
8:13	107069	4	Clip	24	144-2245	1	Cover-Access
9	139-3432	1	Support-Skirt, LH Side	25	117-1092	4	Screw-PTH
10	139-3433	1	Support-Skirt, RH Side	26	3256-67	6	Washer
11	147-2825	2	Skirt-Side	29	145-7990	1	Foam-Barrier, Heat
12	32144-4	3	Screw-HWH	30	110-5090	1	Grommet
13	125-9622	16	Rivet-Blind	31	145-7998	1	Foam-Barrier, Heat
14	138-5775	6	Screw-Delta Point	32	147-8164	1	Decal-Fuse, Utx Gas
15	32144-70	20	Screw-HWHTF	33	147-8165	1	Decal-Service, Gas

 ● Not serviced separately

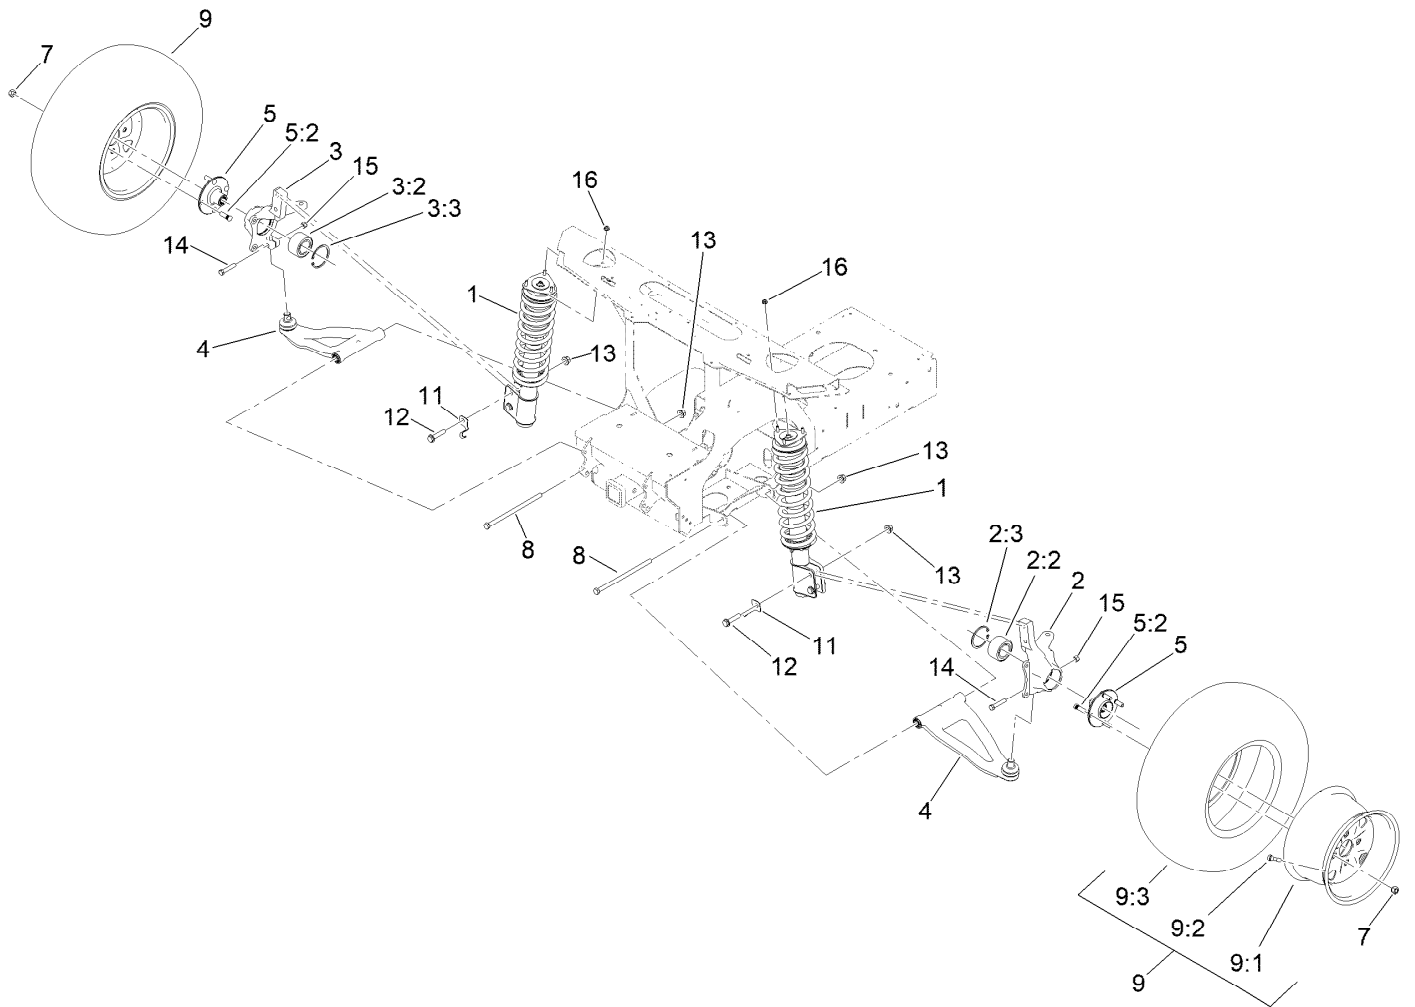


Front Suspension Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	147-2706	2	Strut ASM	8	325-39	2	Screw-HH
2	138-9319	1	Knuckle ASM-Front, LH	9	136-9419	2	Tire/Wheel ASM
2:2	133-7272	1	Bearing-Ball	9:1	136-9418	1	Wheel-12X7-12
2:3	144-2207	1	Ring-Retaining	9:2	232-27	1	Stem-Valve
3	138-9320	1	Knuckle ASM-Front, RH	9:3	137-2689	1	Tire
3:2	133-7272	1	Bearing-Ball	11	137-6766	2	Bracket-Hose, Brake
3:3	144-2207	1	Ring-Retaining	12	3234-46	4	Screw-HHF
4	145-7771	2	Control Arm ASM-Front	13	99-5107	6	Nut-Lock
5	137-6754	2	Hub ASM	14	115-2398	2	Bolt-HH
5:2	137-6760	4	Stud-Wheel	15	3296-48	2	Nut-Hex
7	242-50	8	Nut-Lug	16	112-2844	6	Nut-HF

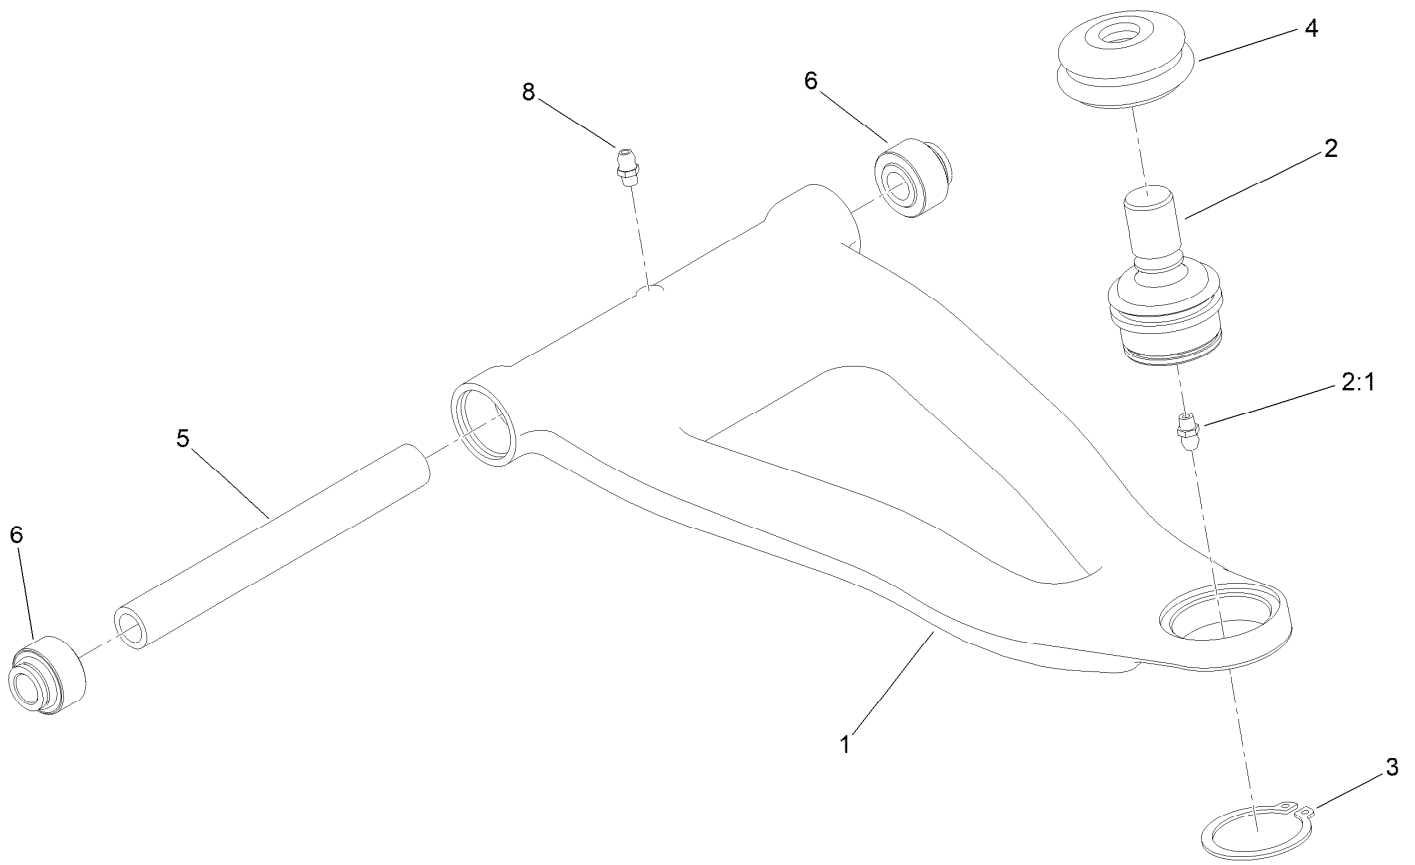 


Front Control Arm Assembly No. 145-7771

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-7762	1	Control Arm-Front
2	115-2165	1	Ball Joint
2:1	302-5	1	Fitting-Grease
3	32151-104	1	Ring-Retaining, External
4	87-2420	1	Seal-Joint, Ball
5	145-7757	1	Spacer
6	145-7756	2	Bushing-Ball
8	302-60	1	Fitting-Grease

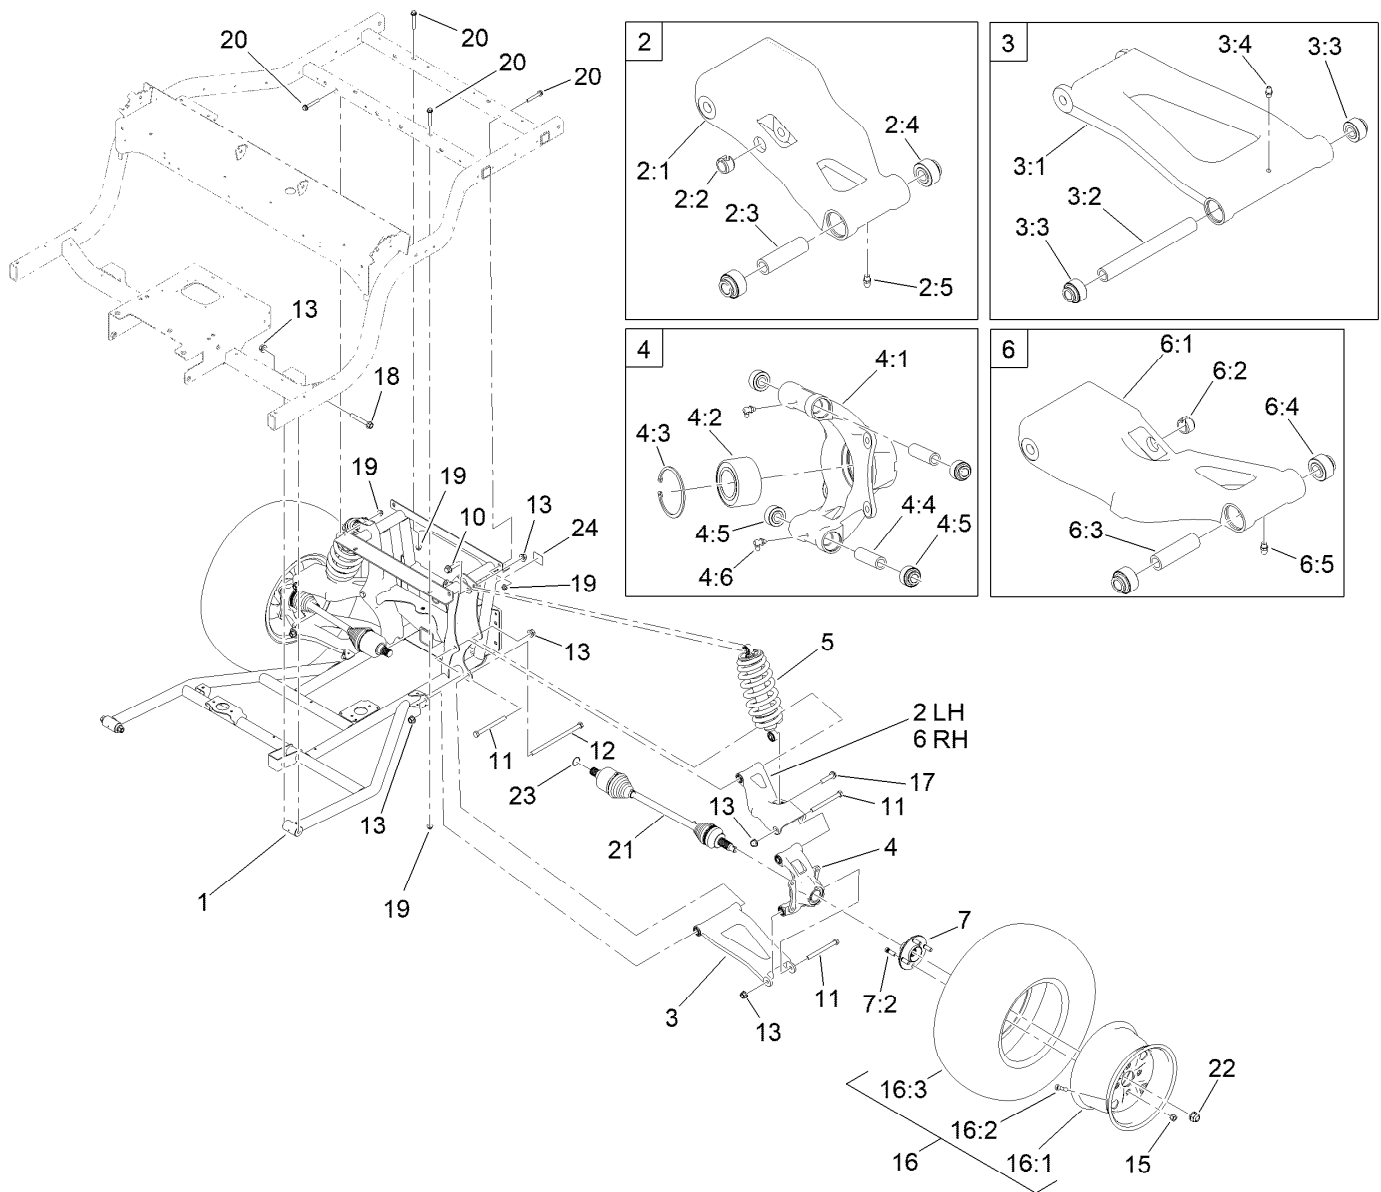 

Rear Suspension and Subframe Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	147-8109	1	Engine Cradle ASM	6	145-7774	1	Control Arm ASM-Rear, RH Upper
2	145-7775	1	Control Arm ASM-Rear, LH Upper	6:1	145-7766	1	Control Arm-Rear Up, RH
2:1	145-7765	1	Control Arm-Rear Up, LH	6:2	137-2659	1	Bushing-Tension
2:2	137-2659	1	Bushing-Tension	6:3	145-7770	1	Spacer
2:3	145-7770	1	Spacer	6:4	145-7756	2	Bushing-Ball
2:4	145-7756	2	Bushing-Ball	6:5	302-5	1	Fitting-Grease
2:5	302-5	1	Fitting-Grease	7	137-6754	2	Hub ASM
3	145-7772	2	Control Arm ASM-Rear	7:2	137-6760	4	Stud-Wheel
3:1	145-7763	1	Control Arm-Rear, Lower	10	3234-27	2	Screw-HHF
3:2	145-7757	1	Spacer	11	325-22	6	Screw-HH
3:3	145-7756	2	Bushing-Ball	12	325-39	2	Screw-HH
3:4	302-5	1	Fitting-Grease	13	99-5107	12	Nut-Lock
4	145-7773	2	Knuckle ASM-Rear	15	242-50	8	Nut-Lug
4:1	145-7764	1	Knuckle-Rear	16	136-9420	2	Tire/Wheel ASM
4:2	133-7272	1	Bearing-Ball	16:1	136-9418	1	Wheel-12X7-12
4:3	144-2207	1	Ring-Retaining	16:2	232-27	1	Stem-Valve
4:4	145-7770	2	Spacer	16:3	137-2690	1	Tire
4:5	145-7756	4	Bushing-Ball	17	3234-46	2	Screw-HHF
4:6	302-60	2	Fitting-Grease	18	114-8419	2	Screw-HHF
5	145-7758	2	Shock/Spring ASM	19	104-8301	8	Nut-HF, NI

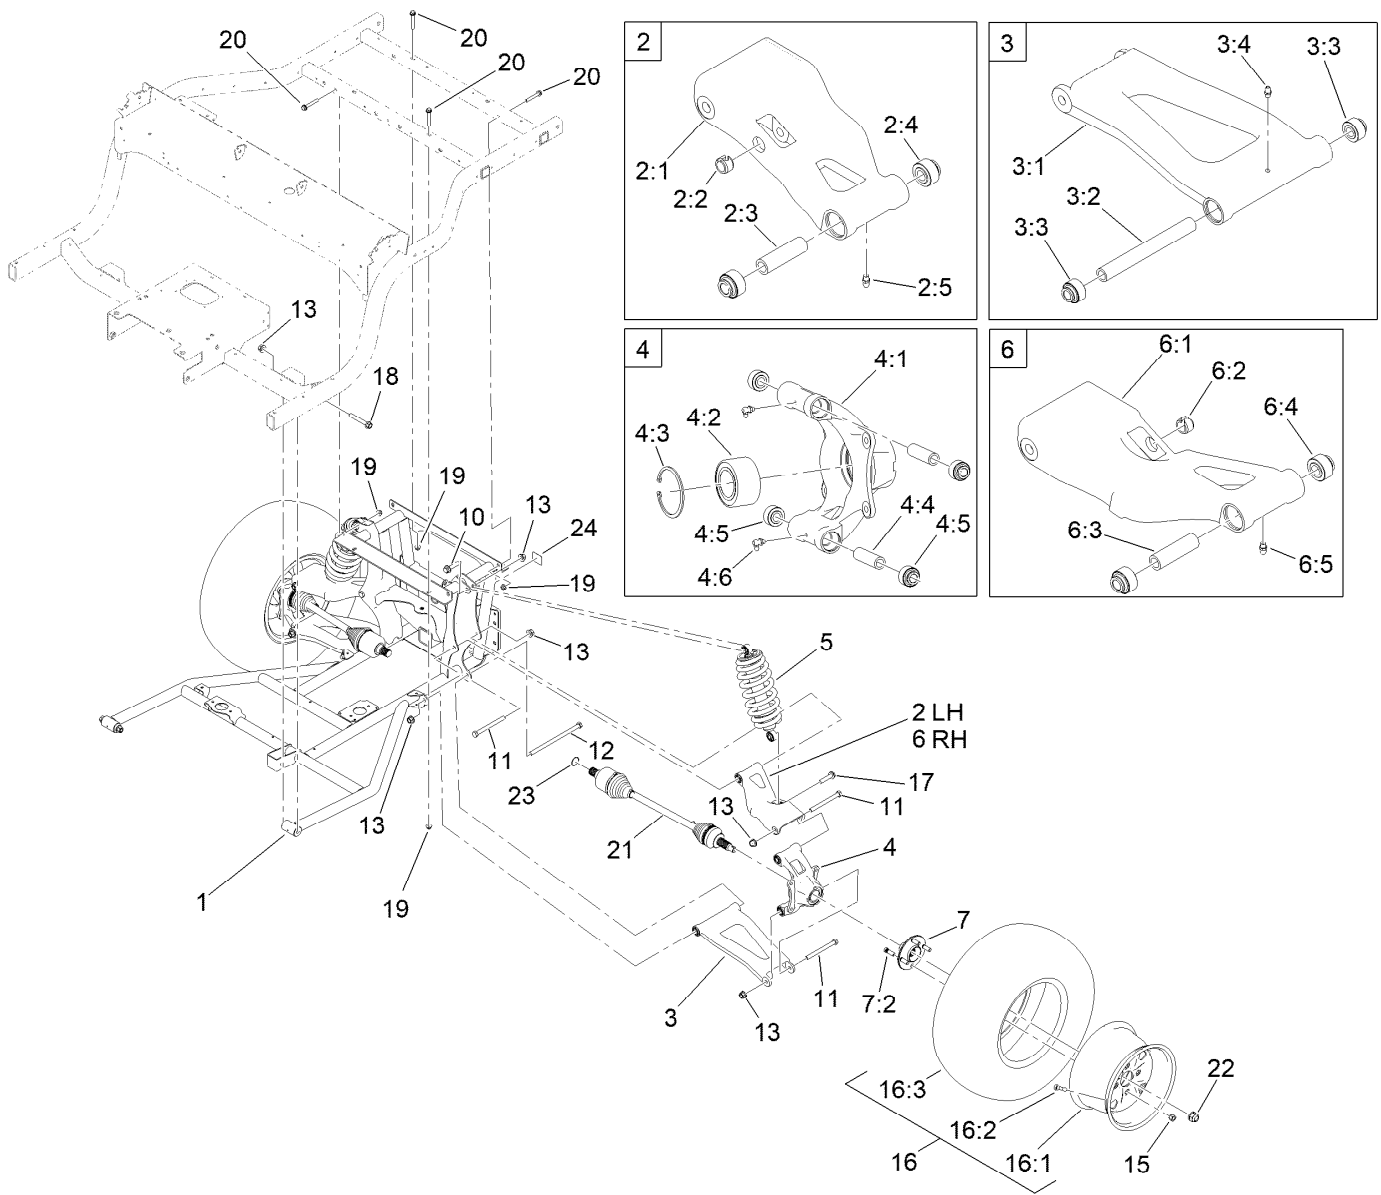 

Rear Suspension and Subframe Assembly (continued)

Ref.	Part Number	Qty.	Description
20	3234-39	8	Screw-HHF
21	140-2608	2	Cv Axle ASM
22	115-2164	2	Nut-Spindle


Ref.	Part Number	Qty.	Description
23	119-1156	2	O-Ring
24	145-2205	1	Decal-Load, Towing

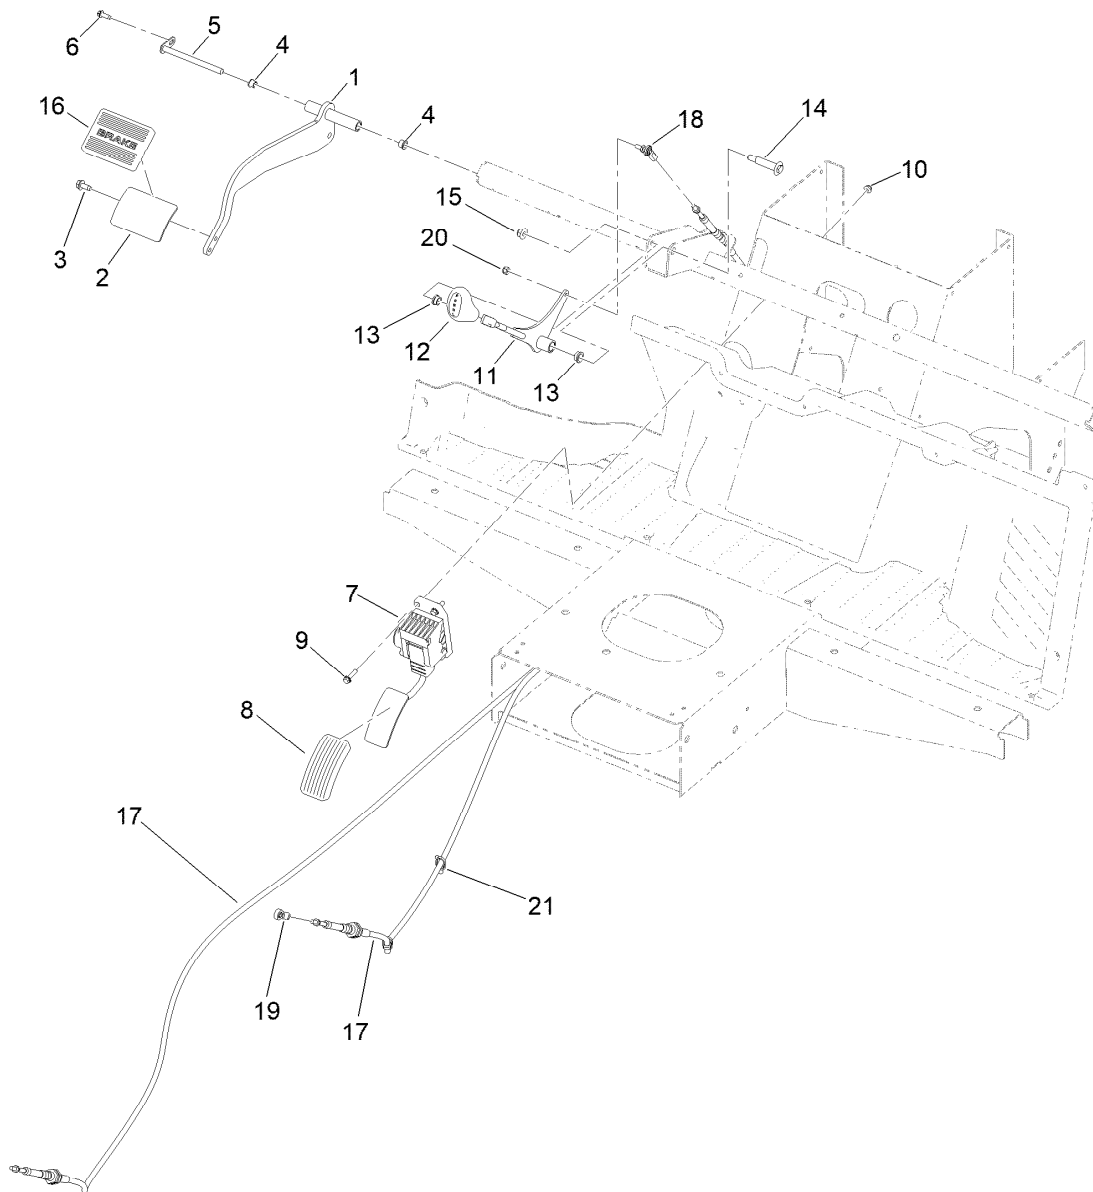 

Pedals and Controls Assembly


Ref.	Part Number	Qty.	Description
1	138-5761-03	1	Brake Pedal ASM
2	138-5763-03	1	Brake Pedal ASM
3	32144-70	2	Screw-HWHTF
4	256-116	2	Bushing-Flange
5	136-9306	1	Pivot Shaft ASM
6	49-2040	1	Screw-HWHTF
7	144-2740	1	Pedal ASM-Accelerator
8	140-4572	1	Pedal Pad-Throttle
9	120-4654	3	Screw-HHF
10	104-7201	3	Nut-HF, NI
11	145-2108	1	Shifter ASM

Ref.	Part Number	Qty.	Description
12	139-4655	1	Knob-Shifter
13	256-156	2	Bushing-Flange
14	92-1057	1	Bolt-Shoulder
15	104-8301	1	Nut-HF, NI
16	7-3900	1	Pad-Brake
17	140-4652	1	Cable-Shift (Crew)
18	110-2554	1	Rod End-Spherical
19	147-2705	1	Rod End-Spherical
20	3296-3	1	Nut-Lock
21	32180-030	2	Clip-Tie

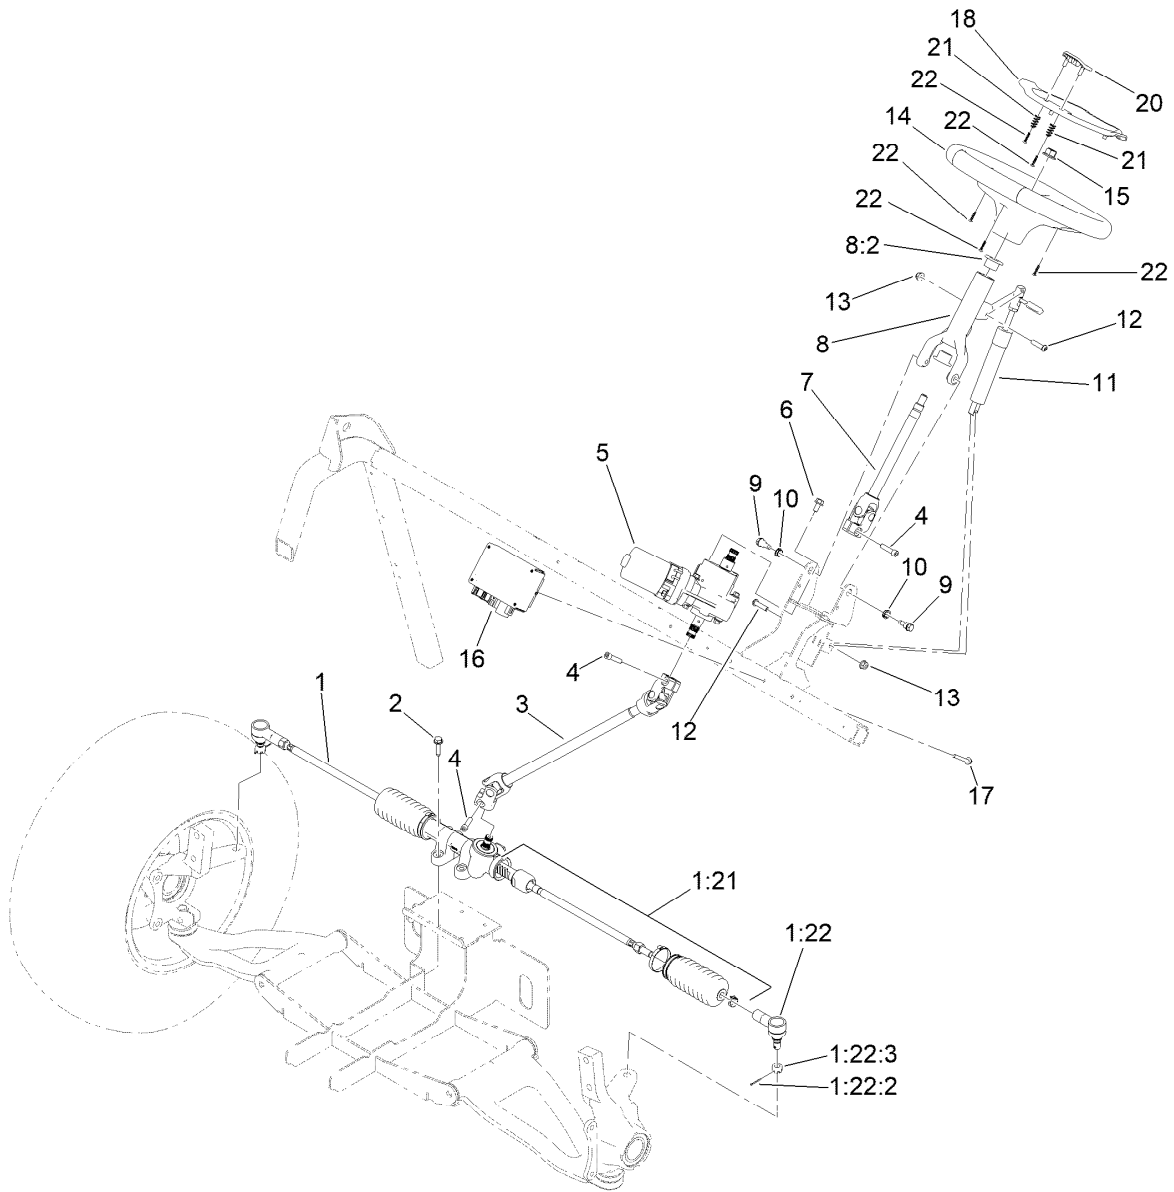 


Steering Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-9322	1	Steering Rack ASM	9	115-1958	2	Bolt-Shoulder
1:21	140-4823	1	Kit-Tie Rod ASM, Utx	10	256-156	2	Bushing-Flange
1:22	140-4592	1	Kit-Rod End ASM	11	137-2827	1	Spring-Gas, Adjustable Stop
1:22:2	3272-42	1	Pin-Cotter	12	3290-511	2	Screw-HSBH
1:22:3	140-2493	1	Nut-Hex, Slotted	13	130-6655	2	Nut-Flange, NI
2	32144-49	4	Screw-HWHTF	14	144-5570	1	Steering Wheel ASM
3	138-3347	1	Steering Shaft ASM	15	99-5107	1	Nut-Lock
4	145-7145	3	Screw-HSH,Lock	16	138-3349	1	Controller-Power Steering
5	138-3348	1	Motor-Power Steering	17	33103-050	2	Screw-HHF
6	33104-016	3	Screw-HHF	18	144-5567	1	Cover-Wheel, Steering
7	138-3344	1	Upper Steering Shaft ASM	20	144-5566	1	Clip-Wheel, Steering
8	139-4439	1	Tilt Steering Column ASM	21	144-5537	2	Spring-Compression
8:2	133-0594	2	Bushing-Flange	22	94-4496	5	Screw-PPH

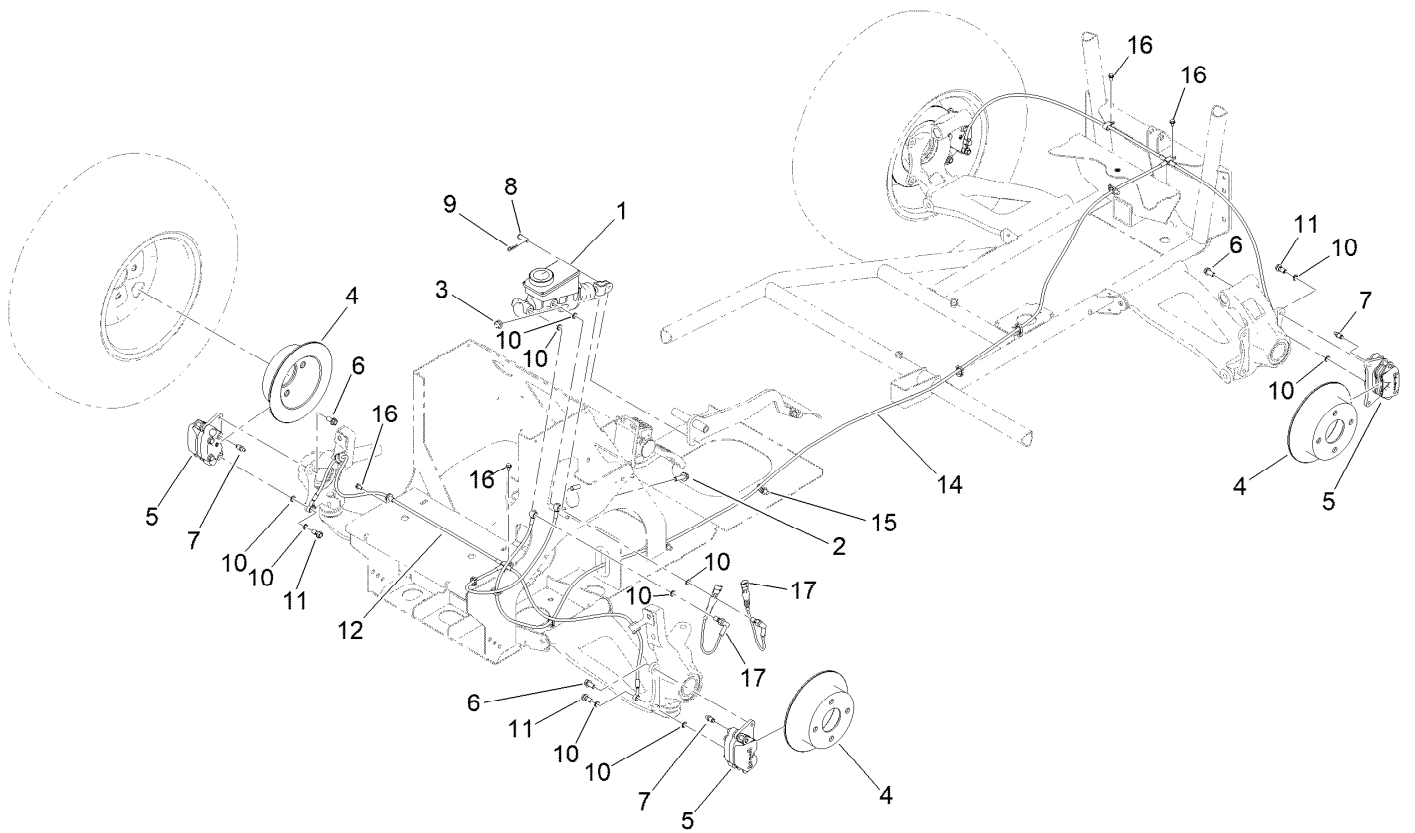 


Brake Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-6782	1	Master Cylinder ASM	10	115-2341	12	Washer-Banjo
2	119-4061	2	Screw-HHF	11	120-4875	4	Bolt-Flange, Banjo
3	104-8301	2	Nut-HF, NI	12	137-6768	1	Hose ASM-Brake, Front
4	133-7273	4	Rotor-Brake	14	139-4403	1	Hose ASM-Brake, Rear (Extended)
5	127-7424	4	Brake Caliper ASM	15	32180-030	9	Clip-Tie
6	144-5550	8	Screw-Spl	16	32144-4	4	Screw-HWH
7	119-9509	4	Screw-Bleed	17	144-2227	2	Switch-Brake, Pressure
8	283-2	1	Pin-Clevis				
9	1-806003	1	Pin-Cotter				

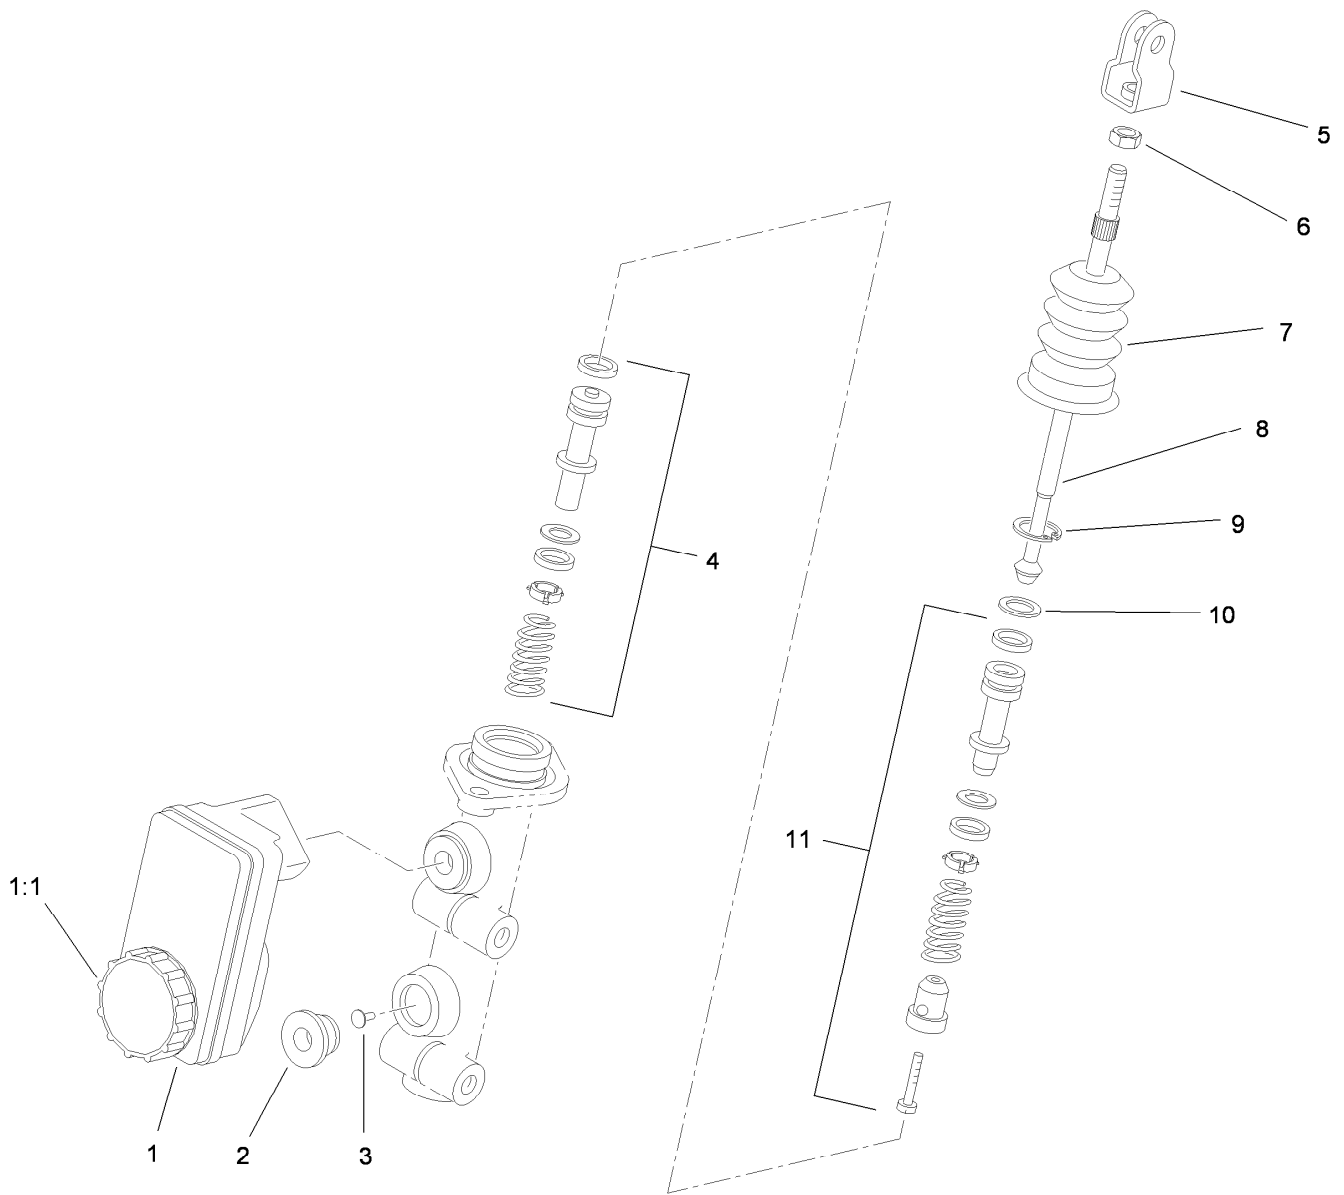 


Master Cylinder Assembly No. 104-6782

Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

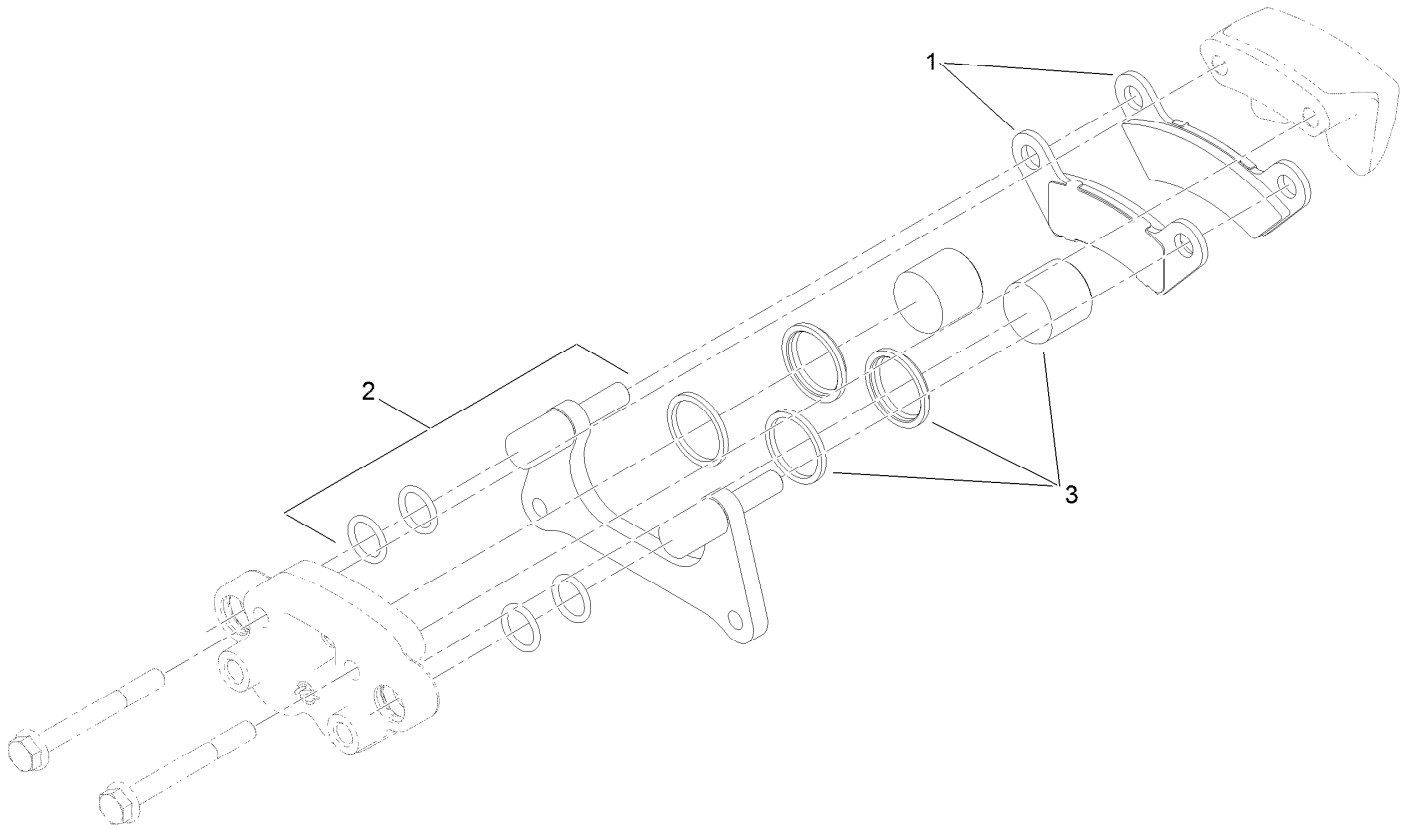 


Brake Caliper Assembly No. 127-7424

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-0628	1	Brake Pad Kit
2	119-9511	1	Bracket Kit
3	133-0614	1	Piston Kit

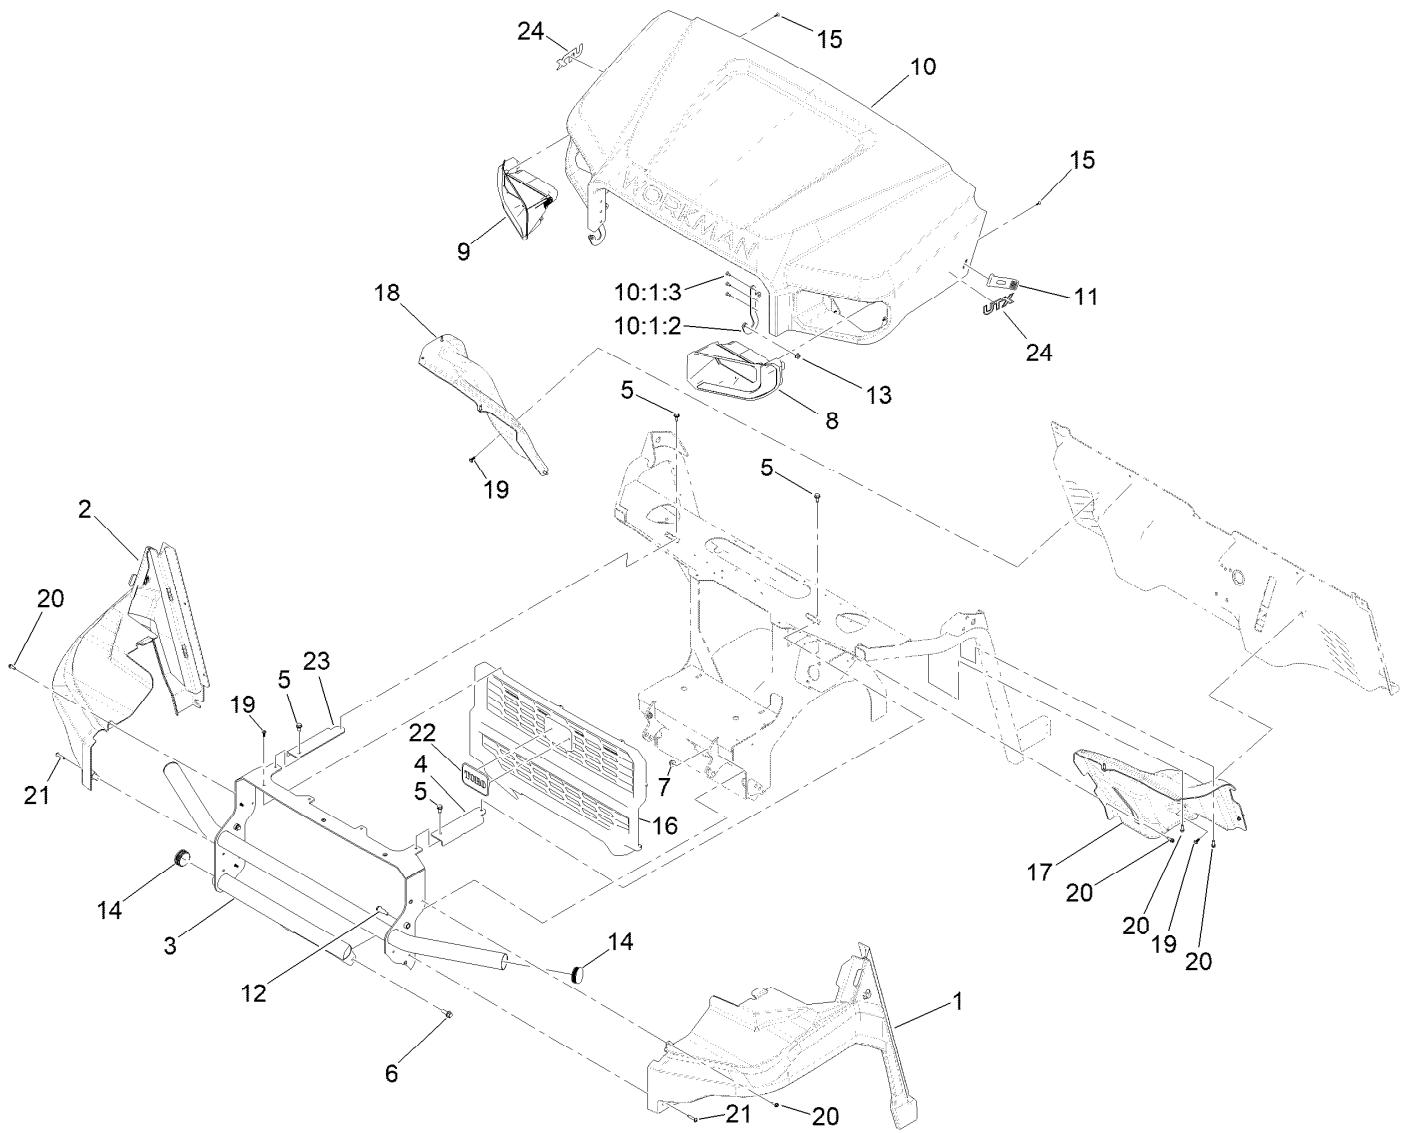 


Hood and Front Fender Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-2816SP	1	Fender-Front, LH	12	136-7192	2	Bolt-Shoulder, HHF
2	137-2817SP	1	Fender-Front, RH	13	104-8300	2	Nut-HF, NI
3	136-9540	1	UTV Bumper ASM	14	137-6827	4	Plug-Plastic
4	144-2421-05	1	Bracket-Mount, Utx Bumper [blk-Txt]	15	139-3430	8	Screw-Bhf
5	32144-70	4	Screw-HWHTF	16	140-4646	1	Grill-Utx
6	3234-42	2	Screw-HHF	17	138-5765	1	Fender-Inner, LH
7	104-8301	2	Nut-HF, NI	18	138-5766	1	Fender-Inner, RH
8	138-5778	1	Headlight ASM, LH	19	138-5775	9	Screw-Delta Point
9	138-5779	1	Headlight ASM, RH	20	49-2040	12	Screw-HWHTF
10	137-6820SP	1	UTV Hood ASM	21	132-6777	2	Screw-Twh Thd Roll
10:1:2	137-6817	2	Bracket-Pivot, Hood	22	144-2294	1	Emblem-Toro
10:1:3	114439	6	Rivet-Blind	23	144-2423-05	1	Bracket-Mount, Utx Bumper [blk-Txt]
11	137-6856	2	Strap-Hood	24	144-1145	2	Decal-Utx, Emblem

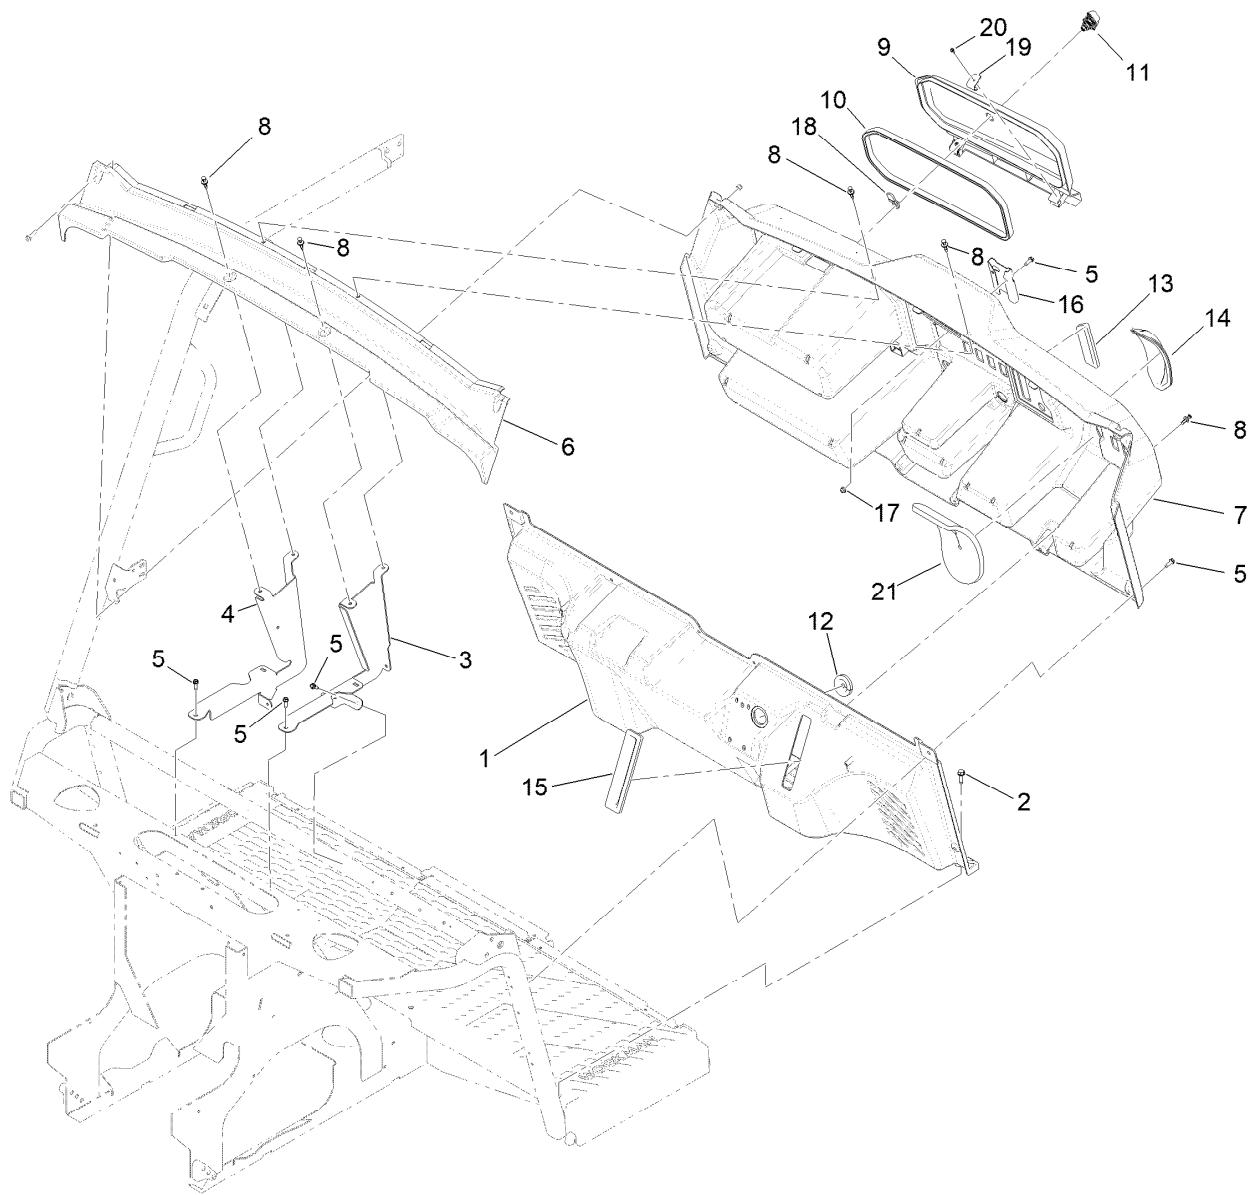 


Dash Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-2749SP	1	Footboard	12	139-3436	1	Grommet
2	701243	4	Screw-Thd Roll, HWH	13	139-3487	1	Grommet-Shifter
3	145-2174-03	1	Bracket-Dash, LH	14	139-3488	1	Grommet-Steering Column
4	145-2178-03	1	Bracket-Dash, RH	15	139-3489	1	Grommet-Brake Pedal
5	49-2040	10	Screw-HWHTF	16	139-3449-05	1	Bracket-Mount, Radio
6	138-0041SP	1	Panel-Windshield, Dash	17	104-7201	2	Nut-HF, NI
7	138-0040SP	1	Dash	18	140-4680	1	Cam-Latch, Quarter Turn
8	125-9622	8	Rivet-Blind	19	145-0840	2	Bracket-Glove Box
9	138-0039SP	1	Door-Glove Box	20	32144-42	2	Screw-Thd Form, HWH
10	139-3462	1	Seal-Door, Glove Box	21	147-2822	1	Seal-Foam, Steering Column
11	140-4679	1	Latch-Quarter Turn				

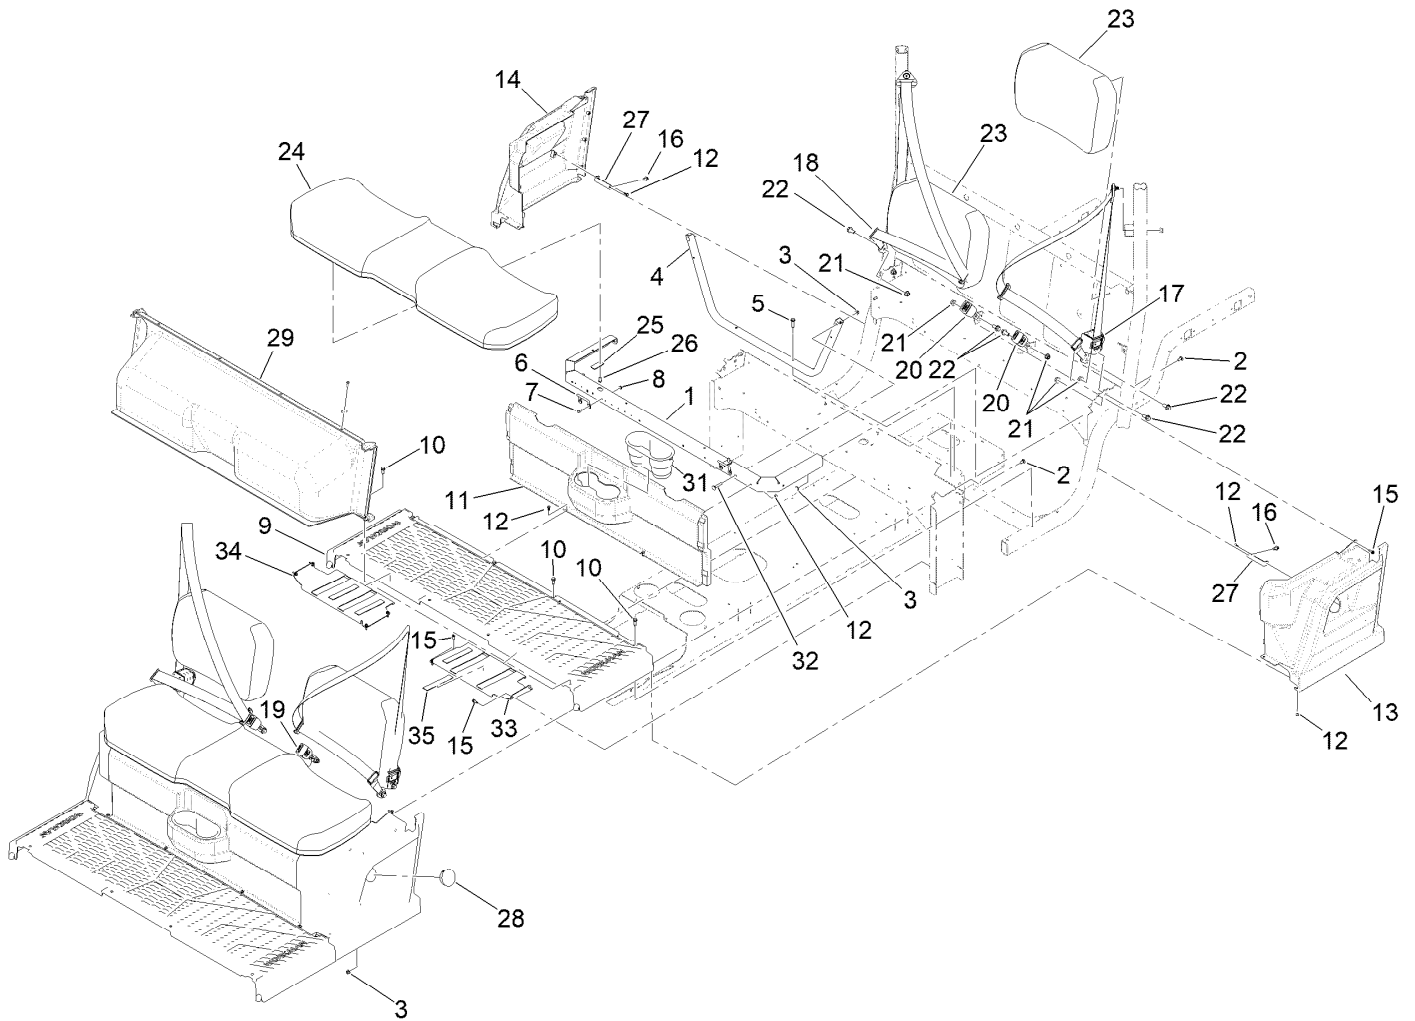 

Seat Base Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-6896-03	2	Frame-Seat, Bottom	18	140-2677	2	Retractor-Seat Belt, RH
2	3230-23	4	Bolt-CARR	19	140-2678	1	Buckle-Seat Belt, W/Switch
3	104-8300	8	Nut-HF, NI	20	140-2679	3	Buckle-Seat Belt
4	137-2746-03	2	Tube-Support, Seat	21	144-2269	12	Nut-HF, NI
5	32144-57	4	Screw	22	144-2289	12	Screw-HHF
6	137-6888	4	Wire-Hinge	23	145-2211	4	Seat Backrest ASM
7	321-3	8	Screw-HH	24	145-2207	2	Bench Seat Bottom ASM
8	104-7201	8	Nut-HF, NI	25	145-7954	4	Bracket-Hinge, Seat
9	137-6874SP	2	Plate-Floor	26	3274-55	4	Screw-HSBH
10	701243	12	Screw-Thd Roll, HWH	27	138-9411	2	Support-Panel-Side
11	137-6875SP	2	Panel-Seat Base	28	136-9791	1	Plug-Panel
12	138-5775	28	Screw-Delta Point	29	137-2949	1	Panel-Rear, Seat
13	137-2813SP	2	Panel-Seat Base, LH	31	139-3454	2	Cup Holder
14	137-2814SP	2	Panel-Seat Base, RH	32	3230-5	4	Bolt-CARR
15	49-2040	12	Screw-HWHTF	33	145-2183-03	1	Bracket-Stiffener, Footboard
16	32144-70	2	Screw-HWHTF	34	145-2184-03	1	Bracket-Stiffener, Footboard
17	140-2676	2	Retractor-Seat Belt, LH	35	145-2182	4	Adhesive-Strip

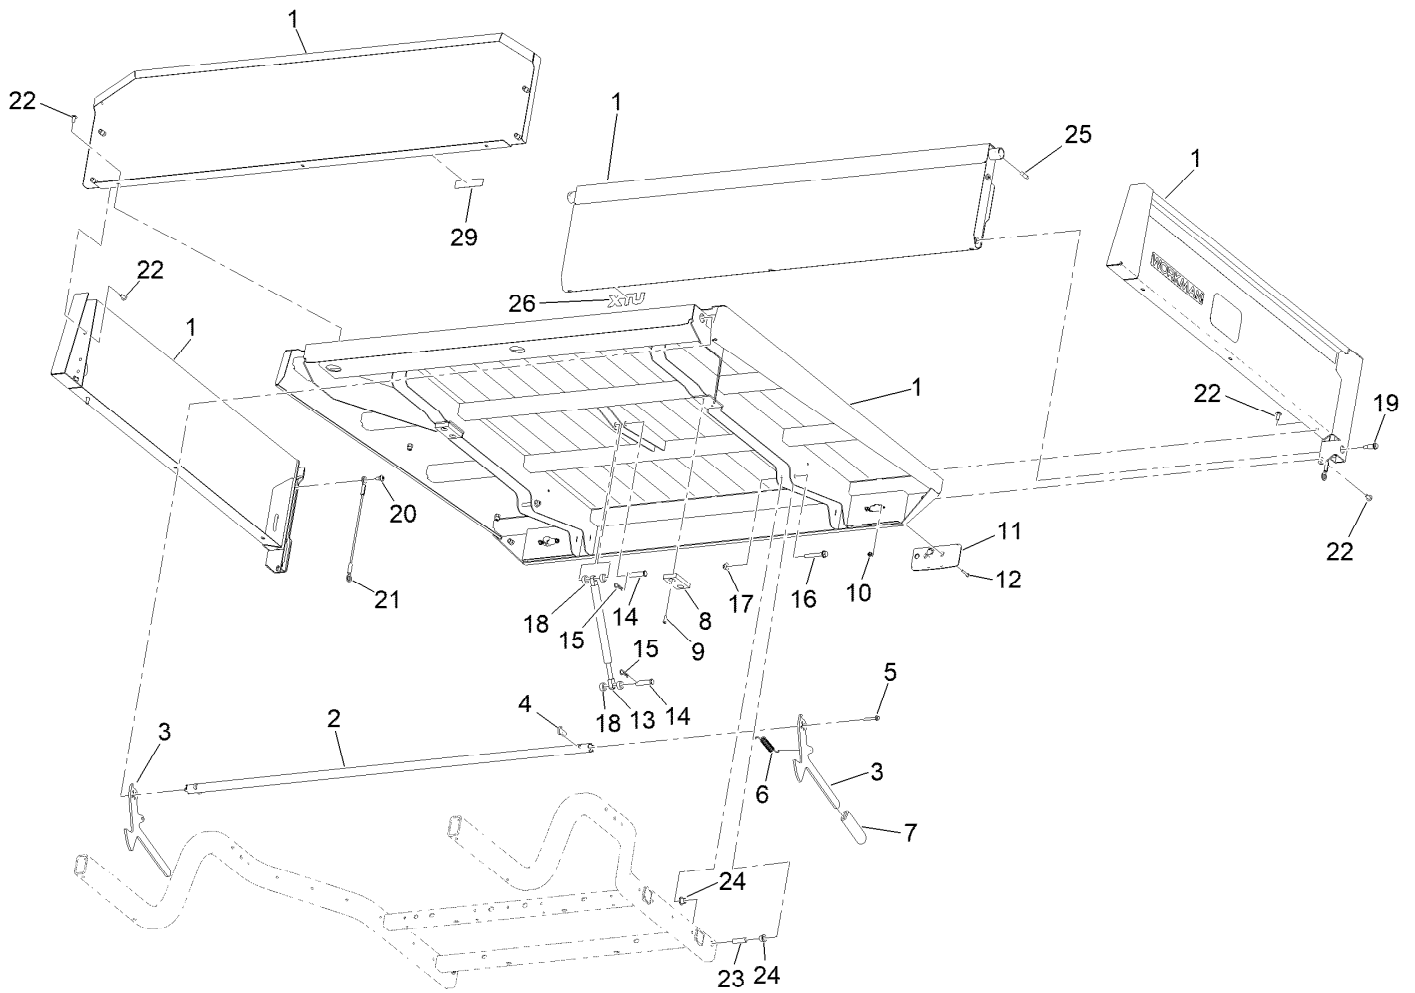 

Cargo Bed Assembly




Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Cargo Bed Kit ●	15	3290-467	2	Pin-Hair
2	139-4421-03	1	Tube-Latch	16	3234-39	2	Screw-HHF
3	147-2709	2	Latch-Bed	17	104-8301	2	Nut-HF, NI
4	139-4422	2	Plate-Threaded	18	66-6500	4	Spacer-Wheel
5	147-2746	2	Screw-HHF,Lock	19	147-2747	2	Screw-Shoulder,HHF,Lock
6	140-2663	2	Spring-Extension	20	120-9471	4	Bolt-Shoulder
7	1-633268	2	Grip-Lever	21	130-5726	2	Lanyard
8	93-9719	2	Block-Wear	22	126-6268	15	Screw-TTH
9	3274-69	4	Screw-HSBH	23	144-2211	2	Sleeve-Pivot, Bed
10	120-4578	4	Nut-HF	24	125-5239	4	Bushing-Flange
11	139-2071	2	Light-Rear Tail/Stop/Turn	25	133-7146	2	Plug-Tailgate, Anti-Rattle
12	3250-52	4	Screw-PPH	26	144-1145	1	Decal-Utx, Emblem
13	139-4417	1	Spring-Gas	29	144-2293	1	Decal-Cargo Bed Safety, Crew
14	283-5	2	Pin-Clevis				

 ● Not serviced separately

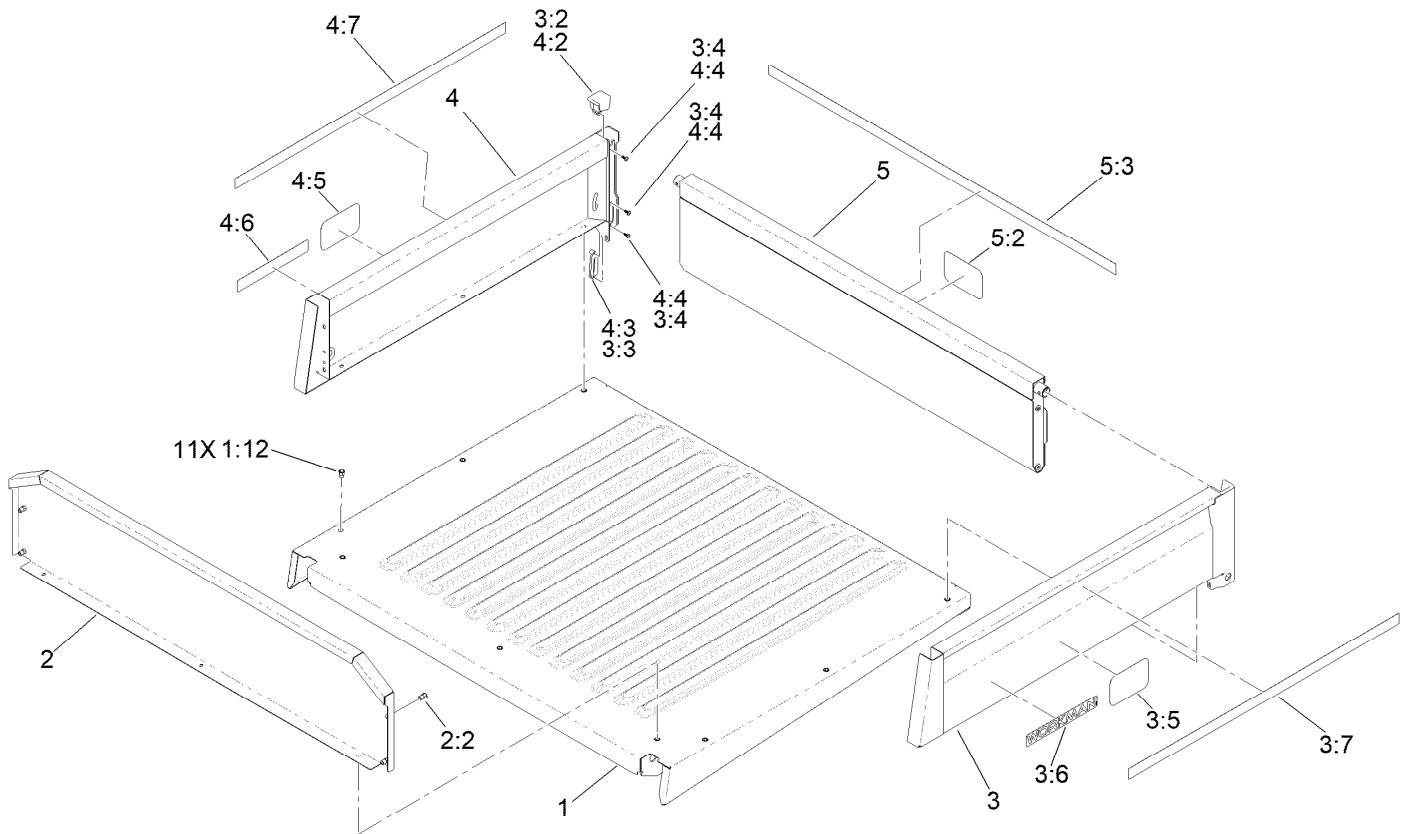




Cargo Bed Kit Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2750	1	Flat Bed ASM	4	147-8104	1	Bed Side ASM, RH
1:12	138-2899	15	Nut-Clinch	4:2	140-2690	1	Retainer-Tailgate
2	140-4675	1	Panel ASM-Front, Bed	4:3	139-4690	1	Bushing-Tailgate
2:2	138-2899	4	Nut-Clinch	4:4	138-5775	3	Screw-Delta Point
3	147-8103	1	Bed Side ASM, LH	4:5	105-1217	1	Decal
3:2	140-2690	1	Retainer-Tailgate	4:6	140-4835	1	Decal-Workman, Gray
3:3	139-4690	1	Bushing-Tailgate	4:7	144-2277	1	Decal-Red Stripe, 43"
3:4	138-5775	3	Screw-Delta Point	5	147-8102	1	Tailgate ASM
3:5	105-1217	1	Decal	5:2	105-1217	1	Decal
3:6	140-4835	1	Decal-Workman, Gray	5:3	144-2281	1	Decal-Red Stripe, 55.25"
3:7	144-2277	1	Decal-Red Stripe, 43"				

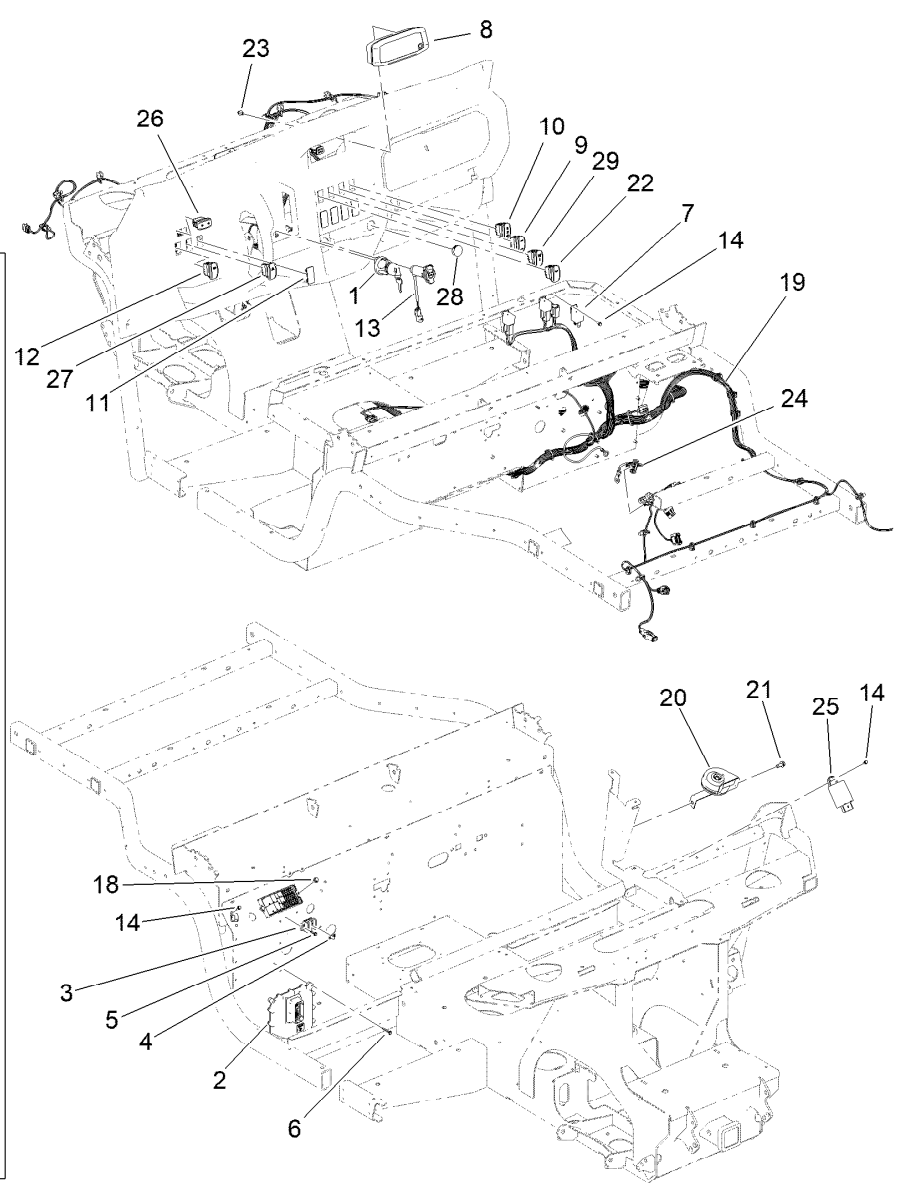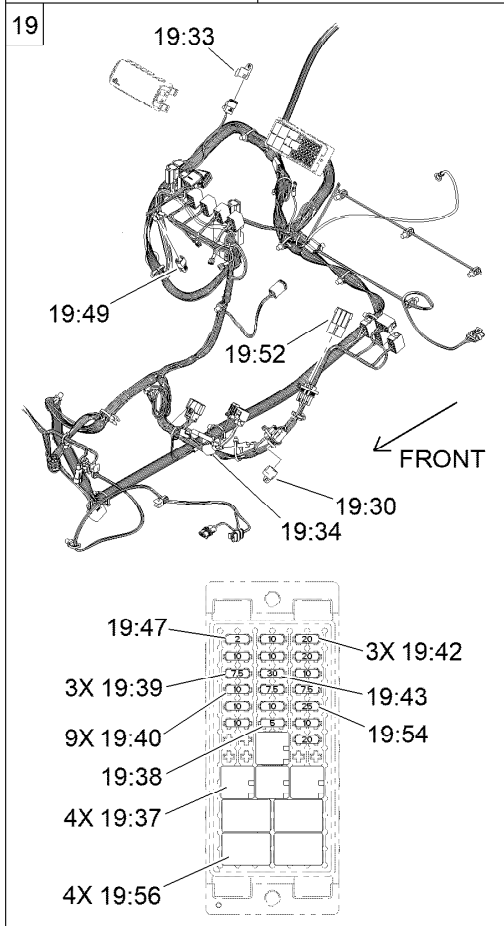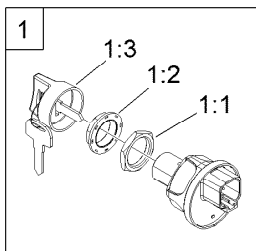   


Electrical Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	122-3614	1	Switch-Ignition	19	122-2316	1	Harness-Wire, Utx Gas 4 Passenger
1:1	121-5160	1	Nut-Hex	19:30	32180-156	1	Cap-Plug, 6 Way
1:2	122-2704	1	Nut-Face, M22 (Plastic)	19:33	32180-089	1	Cap-Plug, 3 Way
1:3	121-5162	1	Set-Key, Ignition	19:34	100-4918	1	Diode
2	127-2770	1	Controller	19:37	126-3991	4	Relay-Micro
3	42862	1	Block-Terminal, Ground	19:38	121-8864	1	Fuse-Mini Blade, 5 Amp
4	42863	1	Strip-Jumper	19:39	121-8865	3	Fuse-Mini Blade, 7.5 Amp
5	100-4351	2	Screw-HWH	19:40	121-8866	9	Fuse-Mini Blade, 10 Amp
6	32144-110	4	Screw-HWH	19:42	121-8868	3	Fuse-Mini Blade, 20 Amp
7	99-7435	3	Relay	19:43	121-8870	1	Fuse-Mini Blade, 30 Amp
8	136-9450	1	Cluster-Instrument	19:47	121-8861	1	Fuse-Mini Blade, 2 Amp
9	144-2440	1	Switch-Rocker, On-None-On	19:49	32180-282	1	Resistor-120 Ohm
10	144-2445	1	Switch-Rocker, On-On-On	19:52	32160-128	1	Connector-Mp280, 3M (Sealed)
11	99-7420	5	Plug-Hole	19:54	121-8869	1	Fuse-Mini Blade, 25 Amp
12	144-2405	1	Switch-Rocker, On-None-On	19:56	126-6157	4	Relay-Micro 280, Spdt
13	139-3420	1	Port-USB	20	139-4557	1	Horn-ASM
14	32144-112	5	Screw-HWH	21	32144-70	1	Screw-HWHTF
18	33103-012	2	Screw-HHF	22	144-2415	1	Switch-Rocker, (On)-None-Off

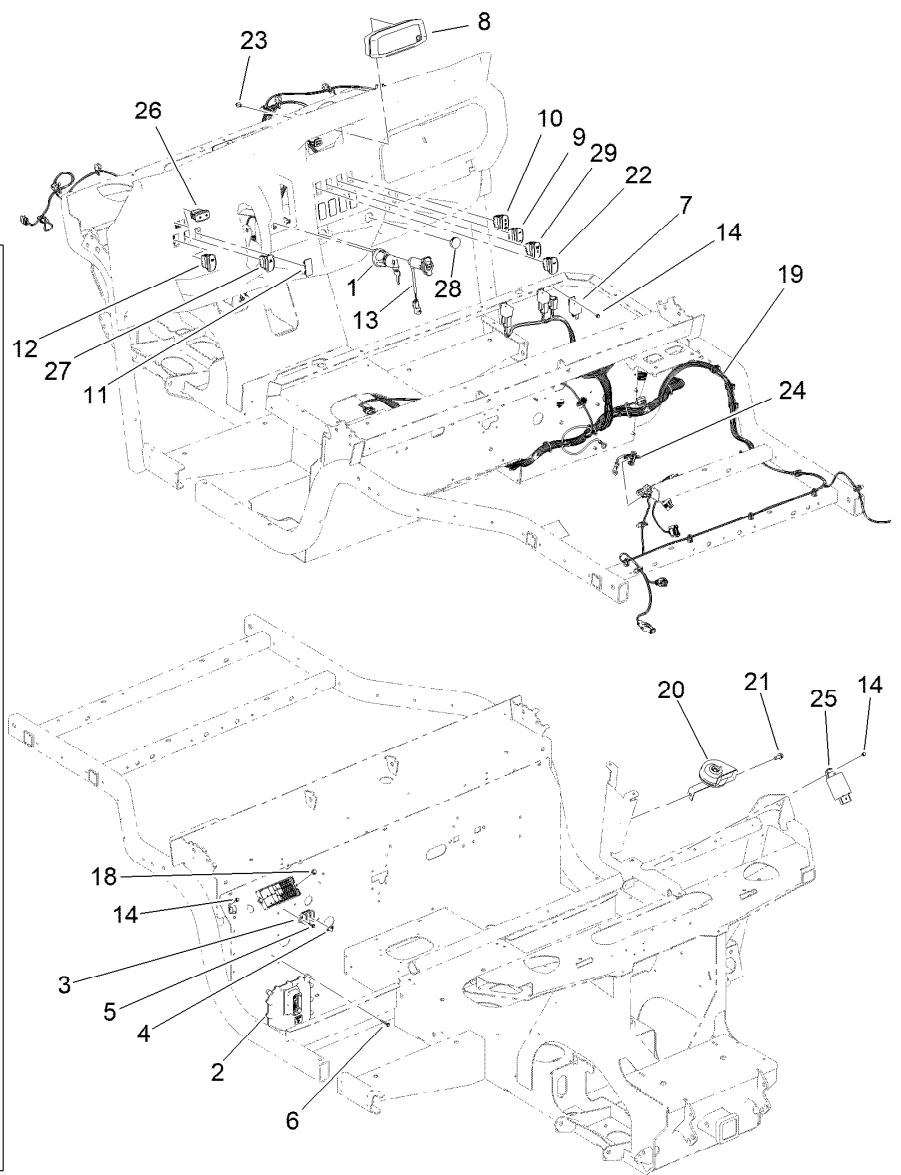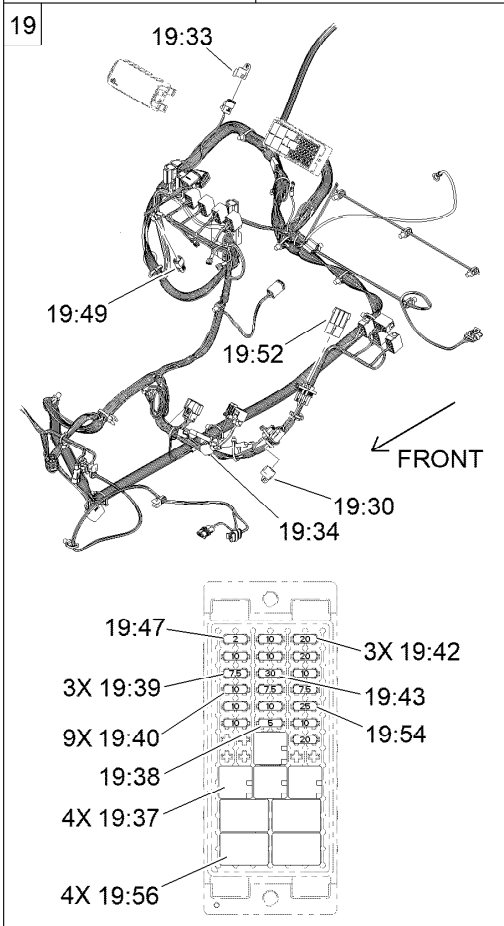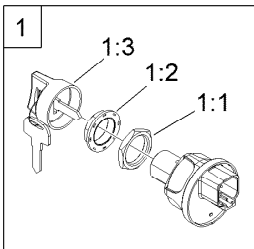   


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
23	3234-13	2	Screw-HHF	27	144-2400	1	Switch-Rocker, On-None-On
24	99-3441	1	Harness-Wire, Fusible Link	28	145-2160	1	Plug-Panel
25	139-2080	1	Flasher-Dual Rate	29	145-2200	1	Switch-Rocker, (On)-On-Off
26	144-2425	1	Switch-Rocker, On-Off-On				

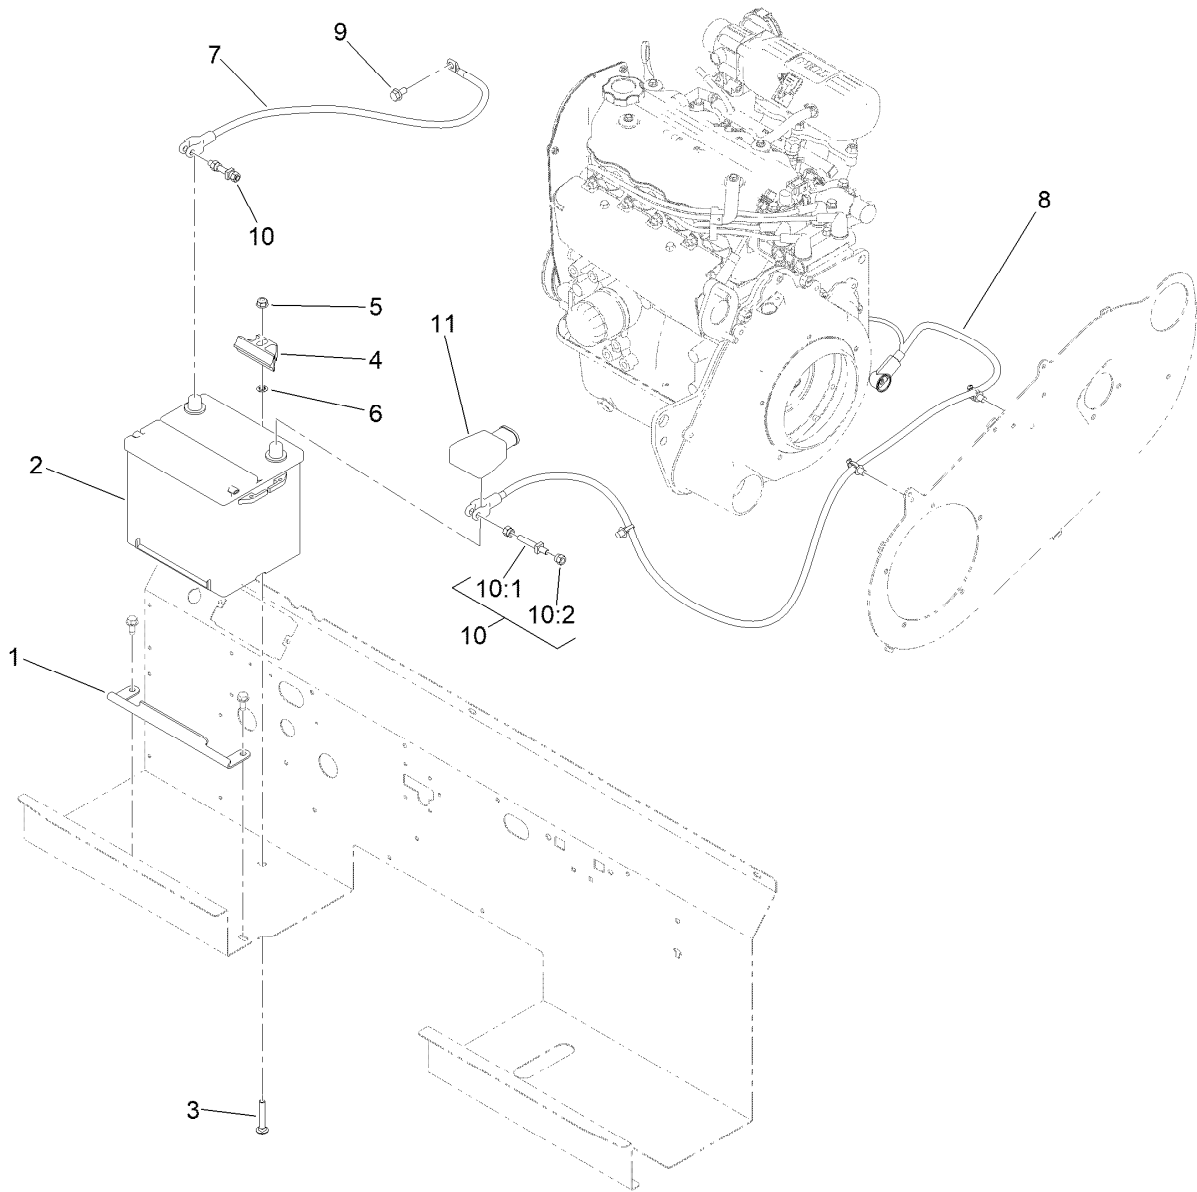 

Battery Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-8051	1	Hold Down-Battery
2	106-5187	1	Battery- Dry, 12V, 525 CCA
3	3230-6	1	Bolt-CARR
4	138-6335	1	Retainer-Battery
5	104-8300	1	Nut-HF, NI
6	109-5667	1	Nut-Push
7	122-1781	1	Cable-Battery, Bk ASM
8	122-1780	1	Cable-Battery, Rd ASM
9	33104-016	1	Screw-HHF
10	112-9921	2	Bolt ASM
10:1	32180-107	1	Bolt-Clamp, Battery
10:2	32180-108	2	Nut-Hex Shoulder
11	32180-110	1	Insulator-Lead Cast

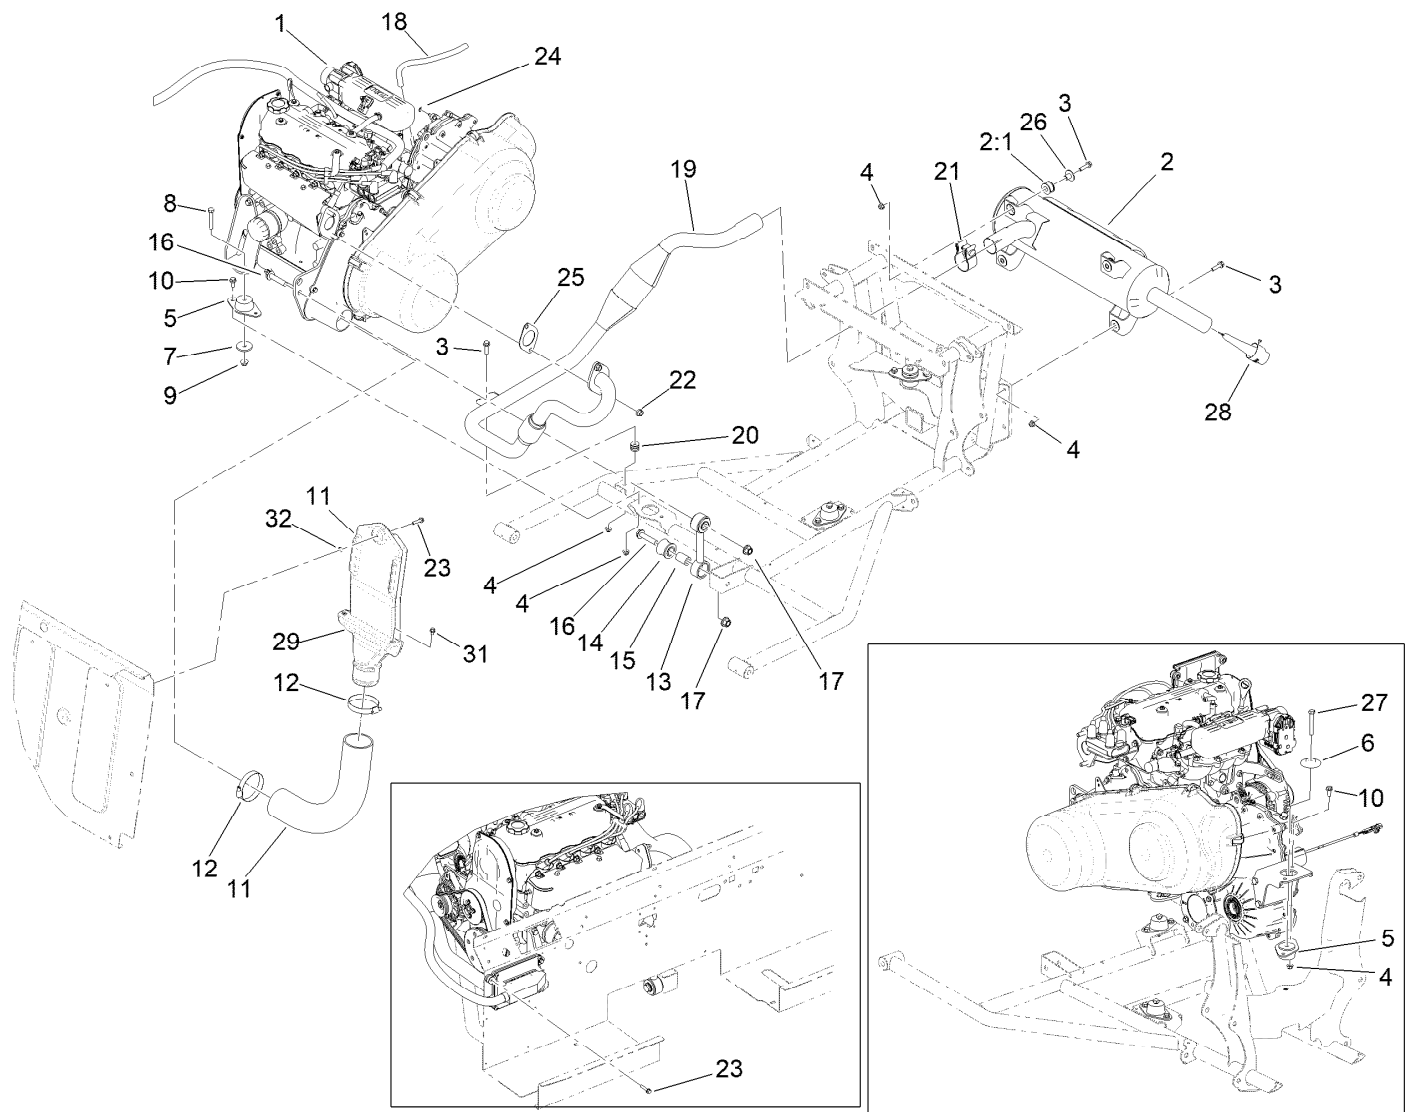 

Engine Drivetrain and Exhaust Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Engine/Drivetrain ASM ●	16	3234-46	2	Screw-HHF
2	138-9335	1	Muffler ASM (With Mounts)	17	99-5107	2	Nut-Lock
2:1	138-9300	4	Isolator-Mount, Muffler	18	110-4110	1	Hose-Fuel
3	3234-36	5	Screw-HHF	19	140-2617	1	Pipe-Exhaust
4	104-8300	11	Nut-HF, NI	20	131-5945	1	Isolator-Engine
5	139-0856	3	Mount-Engine	21	144-2413	1	Clamp-Manifold (1.87" DIA)
6	138-6462	1	Support-Isolator	22	136-8683	2	Nut-Lock
7	80-8560	2	Washer-Hardened	23	32144-110	5	Screw-HWH
8	323-11	2	Screw-HH	24	32151-86	1	E-Ring
9	104-8301	2	Nut-HF, NI	25	145-2119	1	Gasket-Exhaust
10	3234-47	6	Screw-HHF	26	138-9301	4	Mount-Top Hat, Muffler
11	147-2704	1	Duct-Inlet, Cvt	27	323-12	1	Screw-HH
12	2412-125	2	Clamp-Hose	28	144-2433	1	Arrester- Spark, 1.75"
13	140-4685	1	Link Rod ASM	29	147-2700	1	Hood-Cvt Intake
14	140-4697	2	Bushing, Rubber	31	3234-26	2	Screw-HHF
15	109-5010	2	Spacer	32	1-803037	1	Nut-Retaining

 ● Not serviced separately

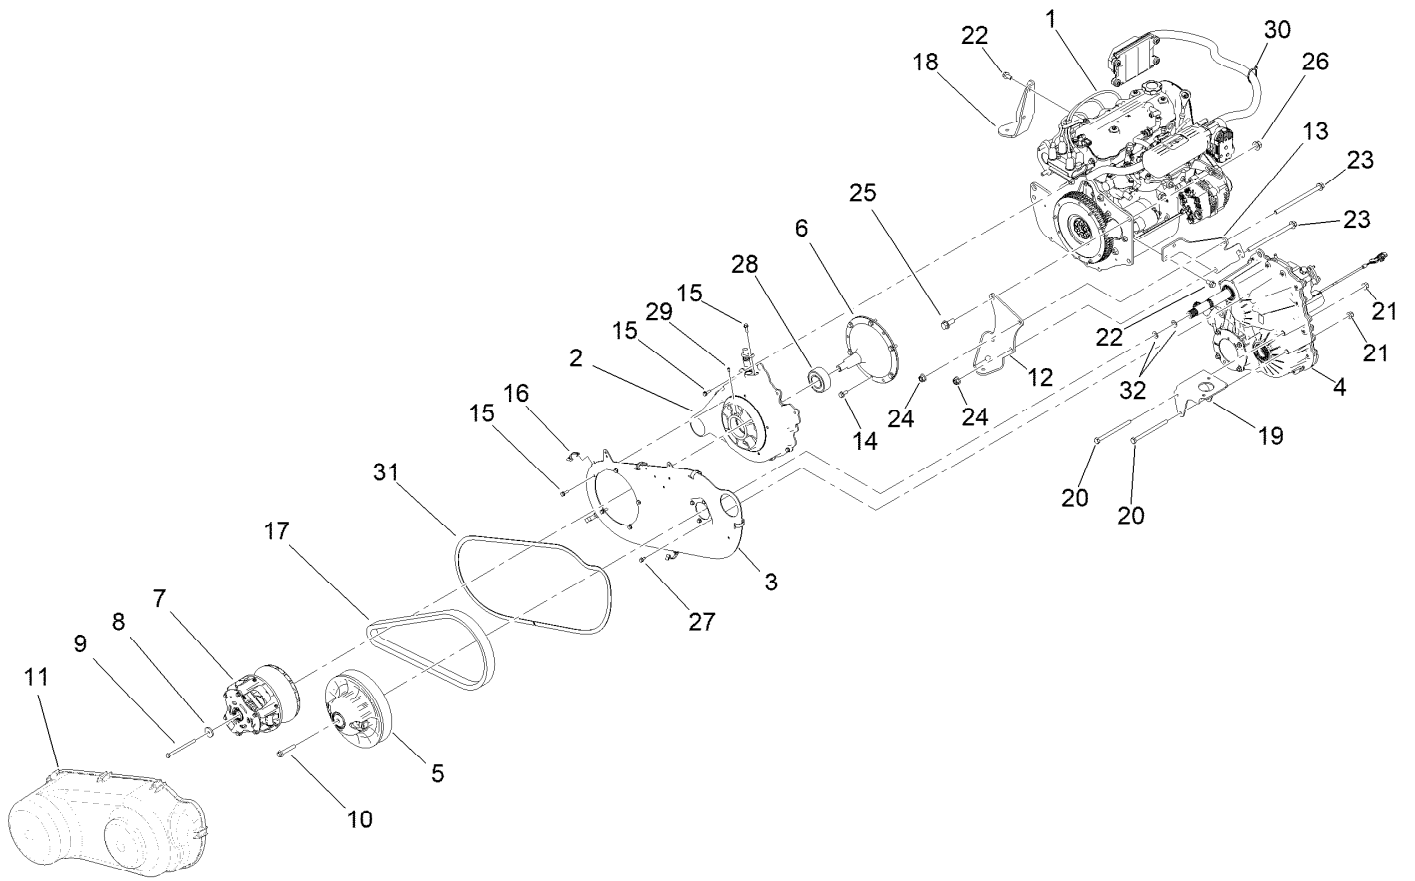


Engine, Transaxle and Clutch Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-2216	1	Engine (Gas, 40 HP)	18	145-2235-0P	1	PSI Front Engine Mount ASM [pri
2	145-2143	1	Housing-Flywheel, Gas	19	140-2624-0P	1	Bracket-Drivetrain, Rear
3	139-4598-0P	1	Plate-Spanner	20	33115-140	2	Screw-HH
4	140-2611	1	Transaxle ASM	21	103-9511	2	Nut-Lock, NI
5	139-4591	1	Clutch-Secondary	22	120-4839	4	Screw-HHF
6	145-2145	1	Adapter-Clutch	23	140-2689	2	Screw-HH
7	139-4590	1	Clutch-Primary	24	114-8417	2	Nut-HF, NI
8	104-6550	1	Washer-Clutch	25	3234-38	2	Screw-HHF
9	99-7201	1	Screw-HH	26	99-5107	2	Nut-Lock
10	140-4777	1	Screw-HHF	27	104-2628	4	Screw
11	140-2603	1	Enclosure-Cvt	28	145-2146	1	Bearing-Ball
12	140-2604-0P	1	Bracket-Transmission, LH	29	133-1717	1	Screw-Set
13	145-7785-0P	1	Bracket-Trans, RH (Gas)	30	3290-378	1	Tie-Cable
14	33104-020	6	Screw-HHF	31	145-7799	1	Gasket-Cover, Cvt
15	110-3986	14	Screw	32	36-4780	2	Washer-Plain
16	140-4669	6	Clip-Spring				
17	145-7789	1	Belt-Variable				

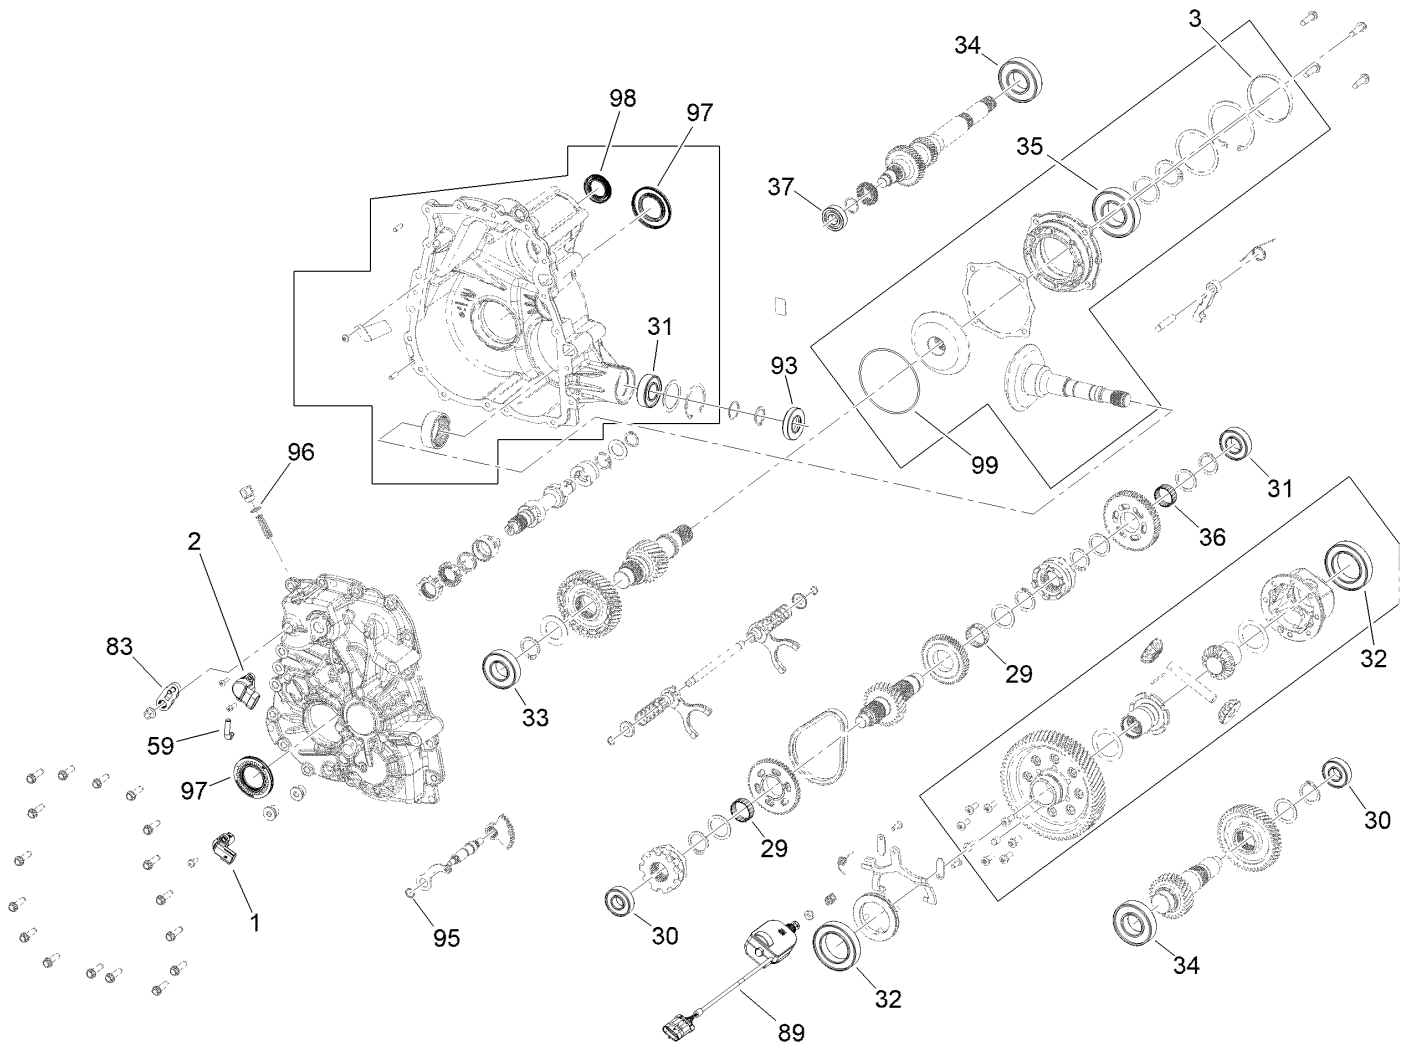 


Transaxle Assembly No. 140-2611

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2039	1	Sensor,Speed, Transaxle	59	145-2037	1	Tube,Vent, 90-1/4" Hose
2	145-2040	1	Sensor, Assembly, Rotary Position	83	145-2038	1	Subassembly, Bellcrank
3	145-2030	1	Plug-Expansion 80MM X 10MM	89	145-2041	1	Shift Actuator, 2 Position
29	130-4616	2	Bearing-Needle	93	145-2042	1	Seal, Triple Lip, 0.984 X 2.047 X 0.394
30	145-2031	2	Bearing, Ball 6204 C3	95	145-2043	1	O-Ring
31	145-2032	2	Bearing, Ball 6205 C3	96	145-2044	1	O-Ring, 0.530 ID X .082 Wide
32	130-4666	2	Bearing-Ball	97	145-2045	2	Seal, Triple Lip, Viton, 40 X 70 X 7
33	145-2033	1	Bearing, Ball 6206 C3	98	145-2046	1	Seal, Triple Lip, 1.180 X 1.8520 X 0.315
34	145-2034	2	Bearing, Ball 6207 C3	99	145-2047	1	O-Ring, Nitrile
35	145-2035	1	Bearing, Ball 6208 C3				
36	130-4618	1	Bearing-Needle				
37	145-2036	1	Bearing, Ball 6203 C3				

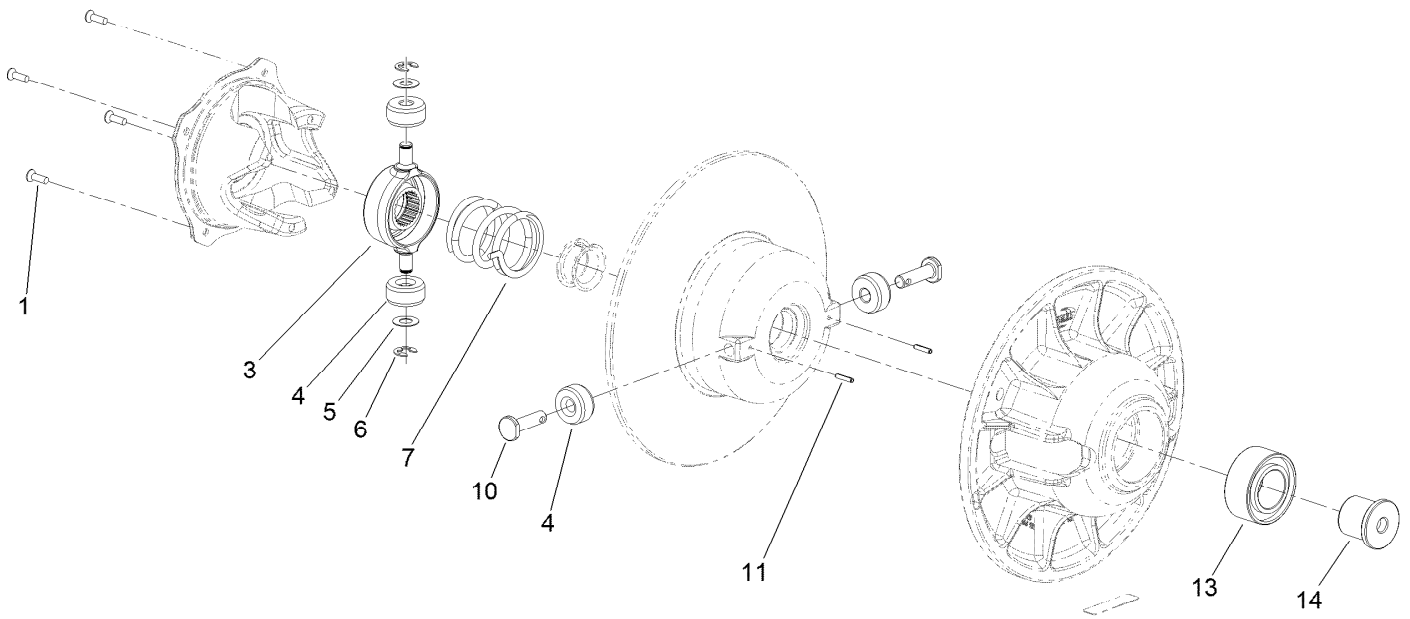 


Secondary Clutch Assembly No. 139-4591

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2104	4	Screw, Machine Torx Sfch 10-32 X .625
3	145-2025	1	Spider 9.5 25T Mach
4	145-2026	4	Roller-Clutch 1.135 X .550
5	130-4059	2	Washer-Thrust
6	130-4058	2	E-Ring
7	145-2027	1	Spring-Comp 2.00 OD Secondary 175-320
10	130-4063	2	Pin-Roller
11	130-4065	2	Pin-Spring, Slotted
13	145-2028	1	Bearing-Ball
14	145-2029	1	Sleeve-Shoulder

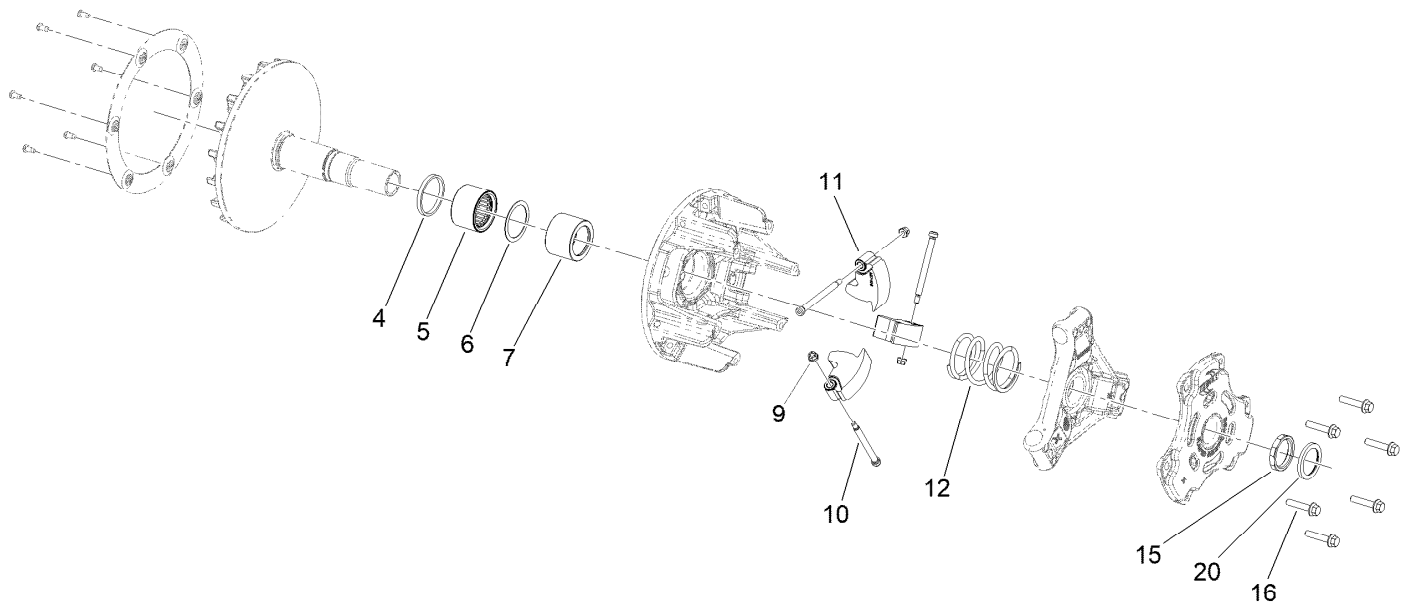 

Primary Clutch Assembly No. 139-4590


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	145-2018	1	Washer-Thrust
5	145-2019	1	Subassembly, Idler Primary
6	130-4069	1	Washer-Thrust
7	145-2020	1	Cap-Idler Sleeve
9	145-2103	3	Nut, Lock Hex 10-24 Flexloc
10	119-6016	3	Screw-Shoulder
11	145-2021	3	Weight-Clutch M17-198
12	145-2022	1	Spring-Compression 2.00 OD Primary 70-13
15	145-2023	1	Nut-Jam
16	145-2024	6	Screw-Hex Flange 1/4-20 X 1.25
20	145-7784	1	Collar Primary Shift Stop

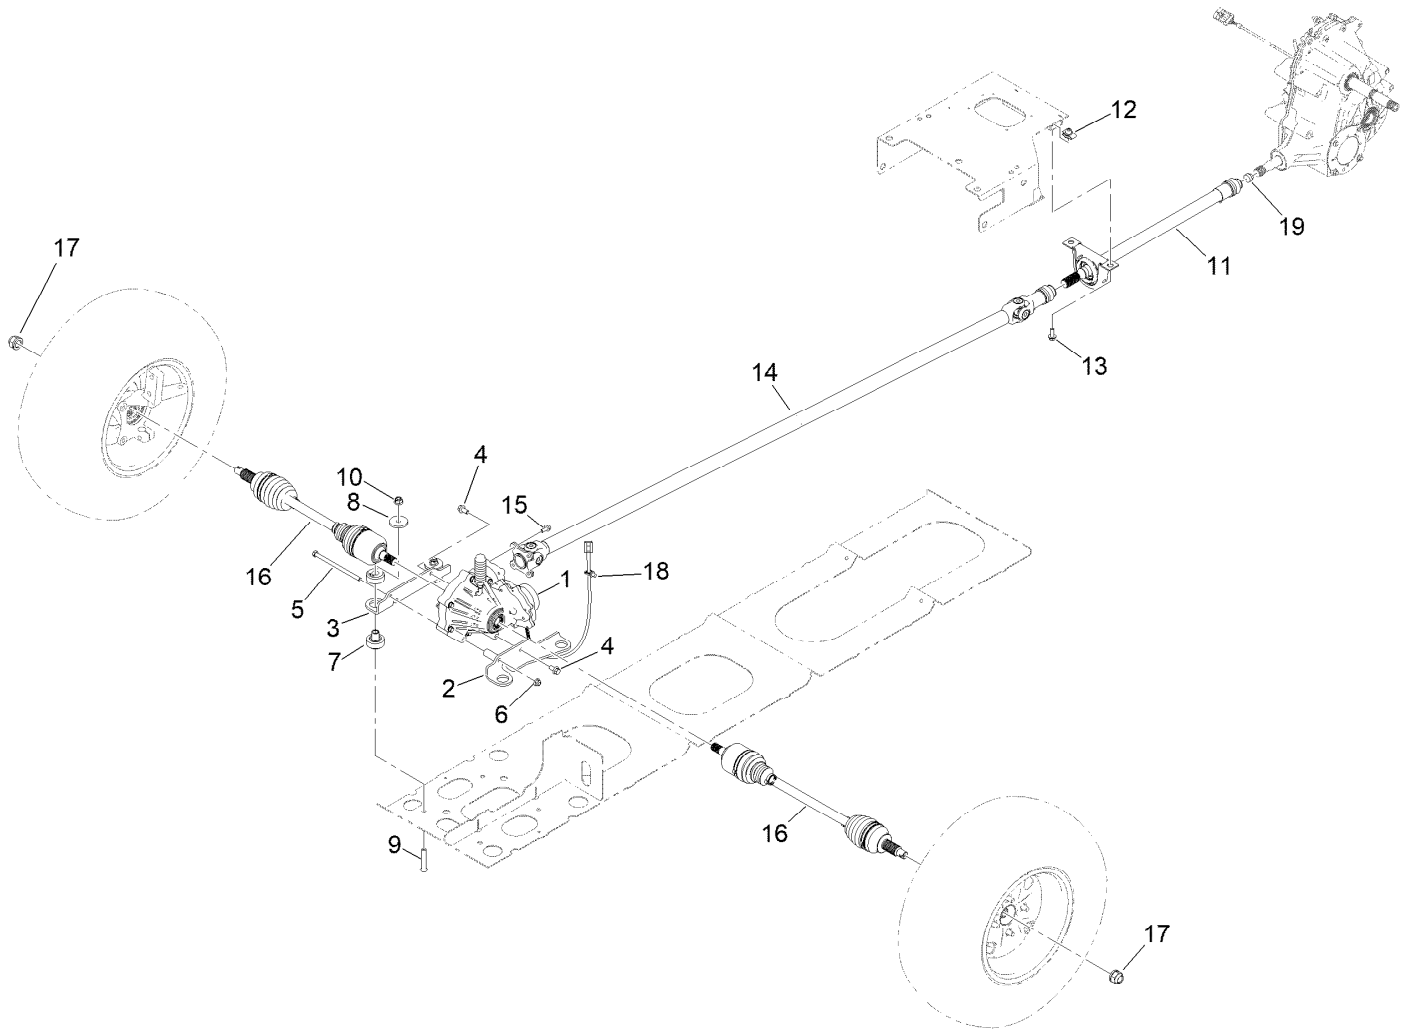 

Front Differential and Driveshaft Assembly


Ref.	Part Number	Qty.	Description
1	140-4752	1	Differential-Front
2	144-2213-0P	1	Mount ASM-Differential, LH
3	140-4692-0P	1	Mount-Differential, RH
4	145-7778	2	Screw-HHF
5	323-26	1	Screw-HH
6	104-8301	1	Nut-HF, NI
7	147-2708	4	Mount-Isolator
8	109-6919	4	Washer-Plain
9	144-2215	4	Screw-Bht
10	114-8417	4	Nut-HF, NI

Ref.	Part Number	Qty.	Description
11	140-4771	1	Driveshaft ASM-Intermediate
12	105-4886	2	Nut-Tinnerman
13	3234-42	2	Screw-HHF
14	140-4763	1	Driveshaft ASM (Crew)
15	139-3392	4	Screw-Lock
16	140-2644	2	Cv Axle ASM, Front
17	115-2164	2	Nut-Spindle
18	32180-030	1	Clip-Tie
19	145-7787	1	Bumper-Drive Shaft

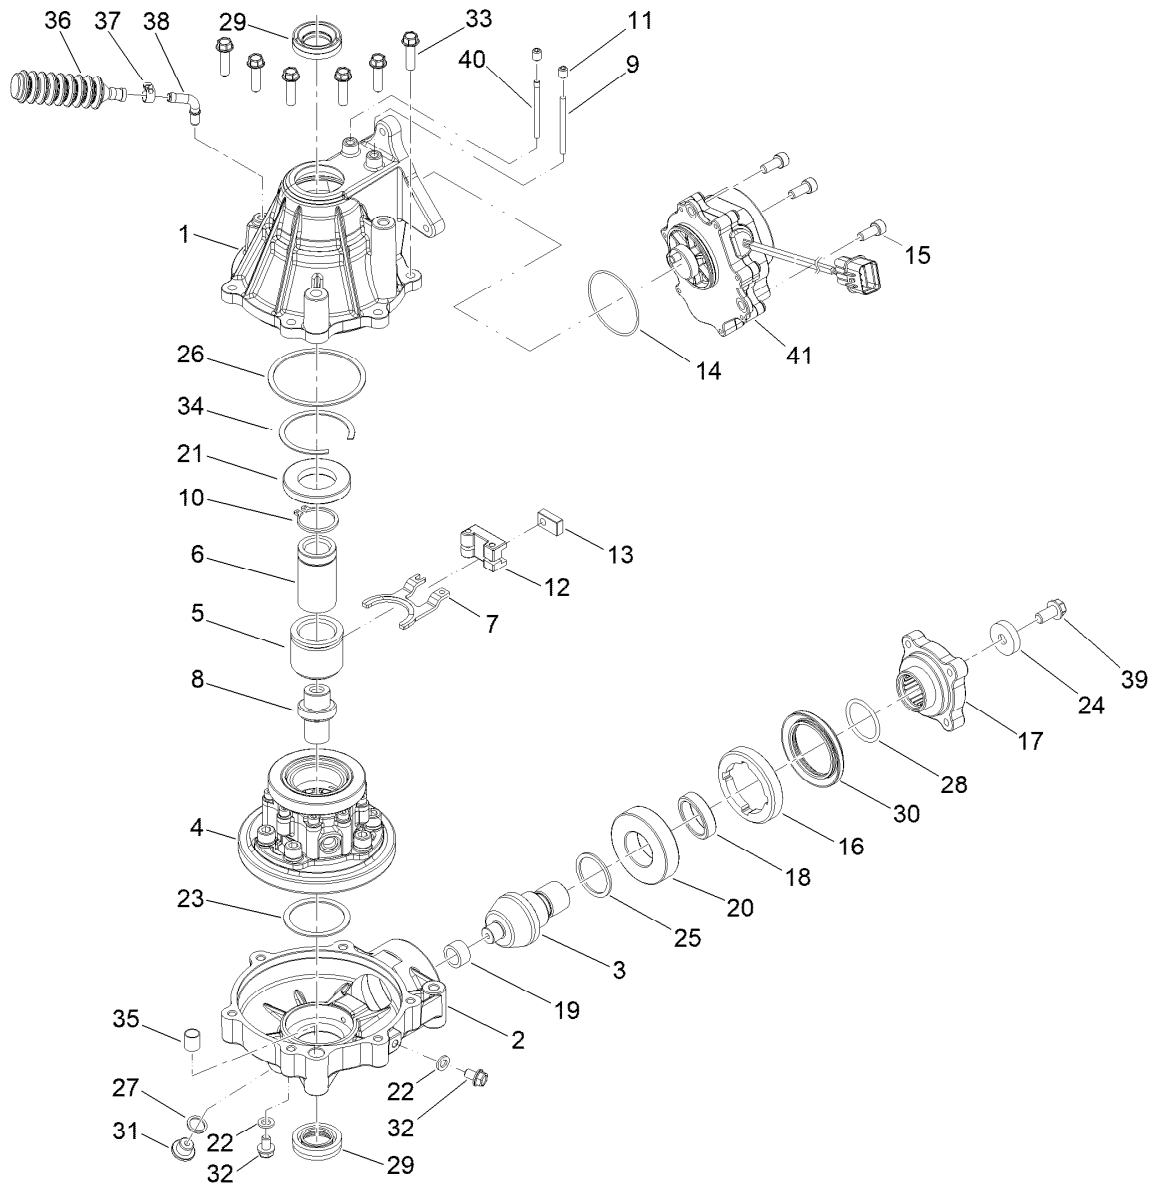 


Front Differential Assembly No. 140-4752

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	145-7895	1	Cover	22	145-7916	2	Washer, 8.2 X 16 X 2T
2	145-7896	1	Housing	23	145-7917	1	Shim, 50.5 X 61
3	145-7897	1	Pinion	24	145-7918	1	Lock Washer
4	145-7898	1	Planet Carrier Sub-ASM	25	145-7919	1	Shim, 36 X 44
5	145-7899	1	Clutch	26	145-7920	1	Shim, 79 X 89
6	145-7900	1	Support Ring	27	145-7921	1	Washer, 14.5 X 22 X 1T
7	145-7901	1	Fork	28	145-7922	1	O-Ring, P26
8	145-7902	1	Gear A	29	145-7923	2	Seal, 25 X 45 X 7T X 11T
9	145-7903	1	Pin, 5 X 62L	30	145-7924	1	Seal, 40 X 75 X 8T X 12T
10	145-7904	1	Retaining Ring, External 34	31	145-7925	1	Plug, M14 X 9.5L
11	145-7905	2	Bolt, M10 X 10L	32	145-7926	2	Screw, HH, M8Xp1.25X12L
12	145-7906	1	Slider A	33	145-7927	6	Screw, HH, M8Xp1.25X30L
13	145-7907	1	Slider B	34	145-7928	1	Retaining Ring, Internal 62
14	145-7908	1	O-Ring, 62 I.D. X 2 Wide	35	145-7929	1	Location Pin
15	145-7909	3	Screw, Sh, M8X20L	36	145-7930	1	Breaching Tube
16	145-7910	1	Nut, M74	37	145-7931	1	Ring
17	145-7911	1	Flange	38	145-7932	1	Tube, Vent, 90 DEG
18	145-7912	1	Bushing	39	145-7933	1	Screw, HH, M10Xp1.25X20L
19	145-7913	1	Needle Bearing, Hk1612	40	145-7934	1	Pin, 5 X 4.63 X 62L
20	145-7914	1	Ball Bearing, 6207	41	145-7935	1	Actuator
21	145-7915	1	Ball Bearing, 16007				

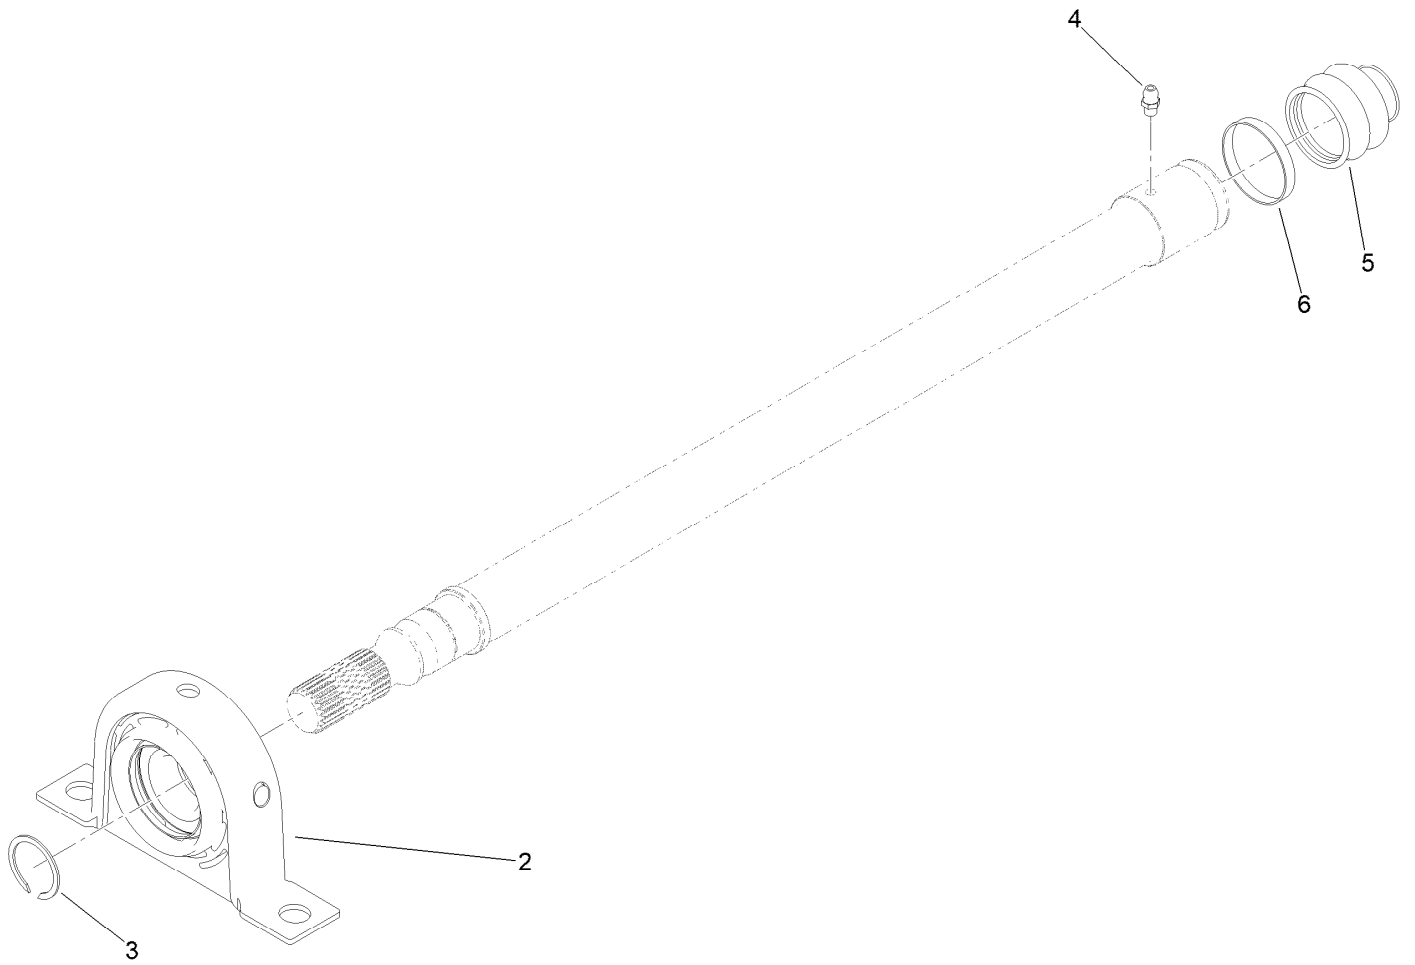 


Intermediate Driveshaft Assembly No. 140-4771

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	139-4442	1	Bearing-Hanger
3	144-2208	1	Retainer-Bearing
4	302-5	1	Fitting-Grease
5	140-4772	1	Boot-Joint, Slip
6	140-4760	1	Band

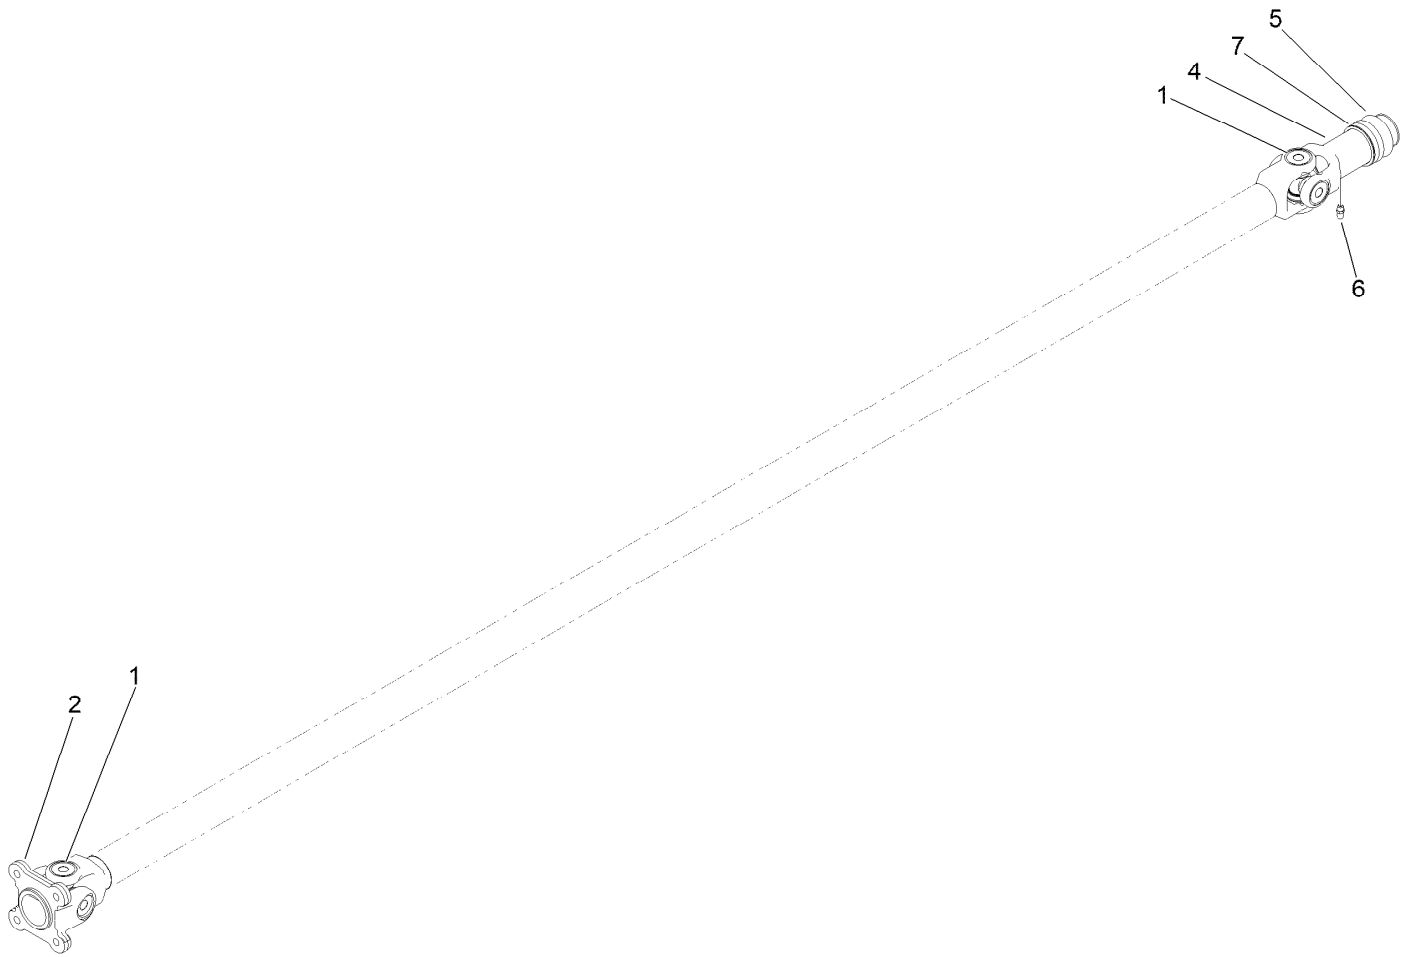 


Driveshaft Assembly No. 140-4763

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-9162	2	U-Joint Kit
2	138-9178	1	Yoke-Flange
4	140-4753	1	Yoke-Slip, Female
5	140-4754	1	Boot-Joint, Slip
6	110-4755	1	Fitting-Grease
7	140-4760	1	Band

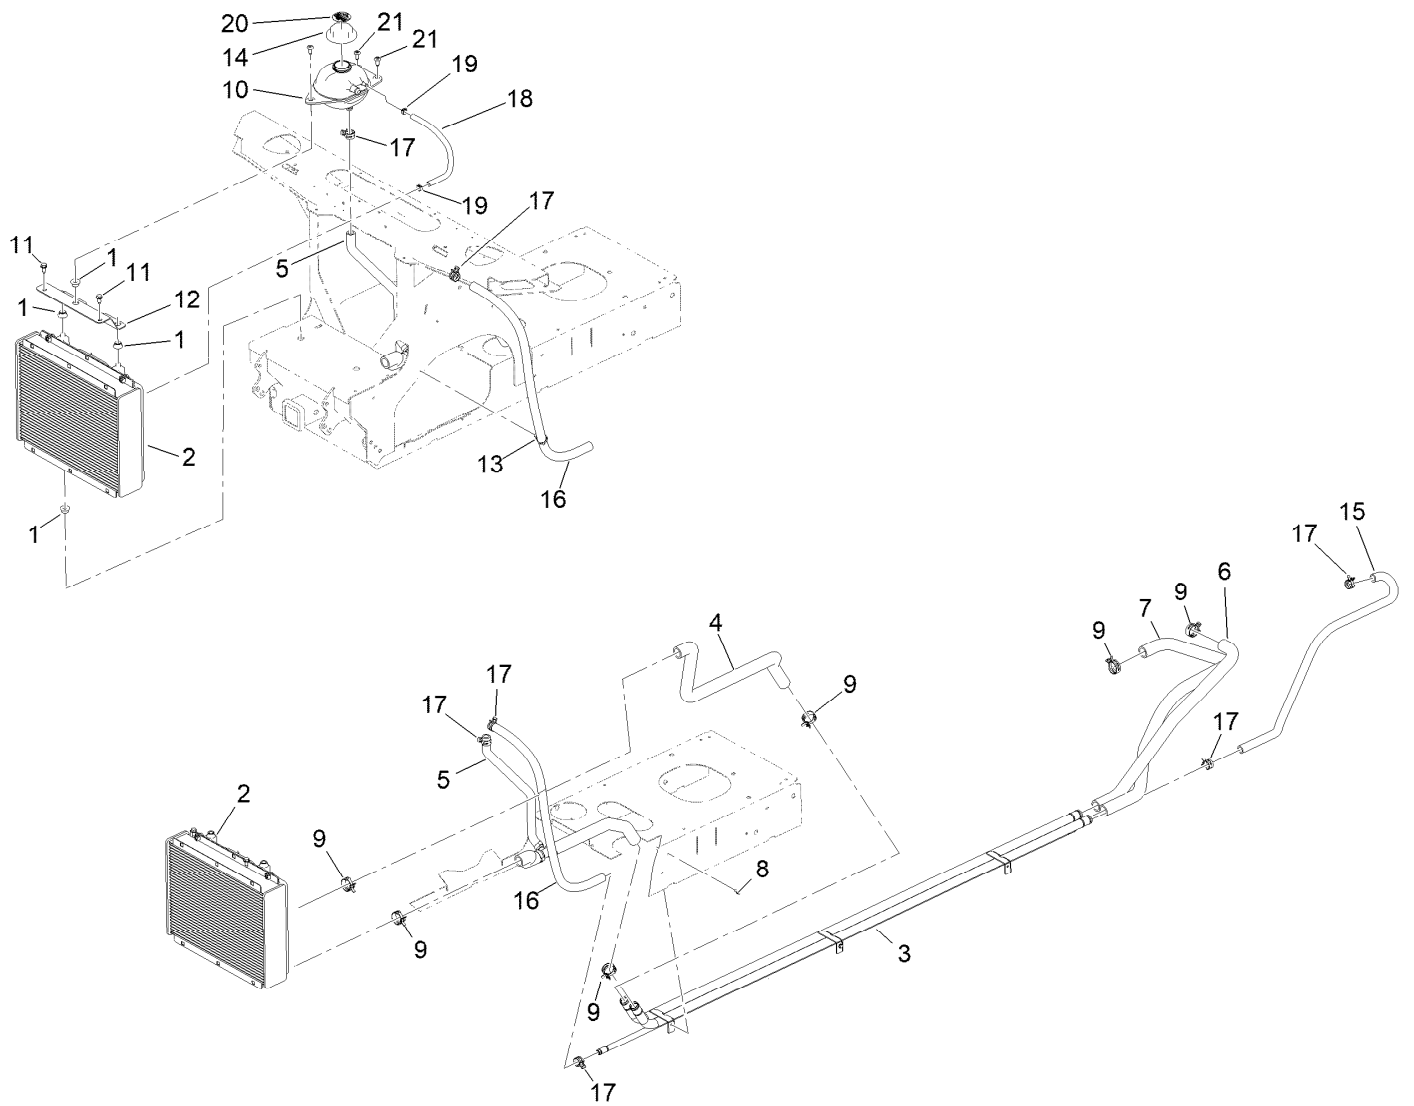 


Cooling System Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-6828	4	Bushing-Flange	12	147-8056-05	1	Bracket-Mount, Radiator
2	147-7970	1	Radiator ASM	13	32180-030	2	Clip-Tie
3	138-9349	1	Tube ASM-Coolant, Extended	14	161-5218	1	Ratcheting Coolant Cap ASM
4	140-2628	1	Hose-Radiator, Upper	15	144-2220	1	Hose-Coolant, Minor
5	140-4751	1	Hose ASM-Coolant	16	140-4757	1	Hose-Coolant
6	140-2634	1	Hose-Coolant, Upper	17	144-2248	5	Clamp-Sc Band
7	144-2242	1	Hose-Coolant, Lower	18	120-5019	1	Hose-Coolant
8	32144-4	3	Screw-HWH	19	92-2379	2	Clamp-Hose
9	144-2246	8	Clamp-Sc Band	20	106-6755	1	Decal-Cap, Radiator
10	147-8086	1	Coolant Tank ASM	21	138-9753	3	Screw
11	32144-70	2	Screw-HWHTF				

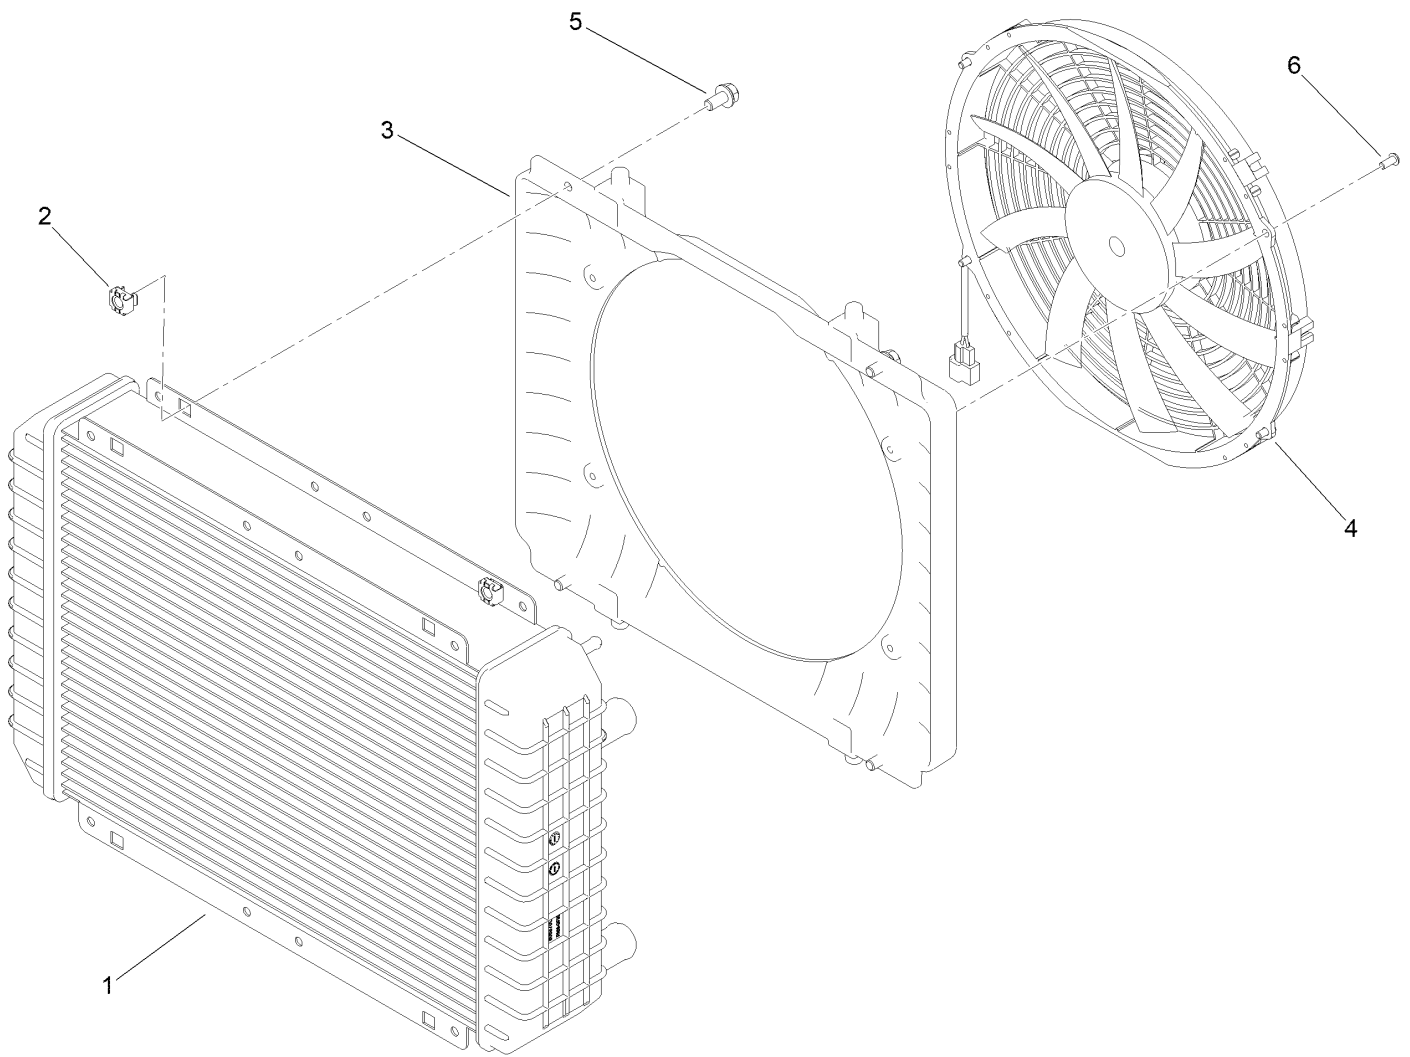 

Radiator Assembly No. 147-7970


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-7971	1	Radiator
2	703856	4	Nut-Sq, Caged
3	139-4587	1	Shroud-Fan, Radiator
4	140-4694	1	Fan
5	139-2593	4	Screw-HHF
6	147-7972	4	Screw-BHCS

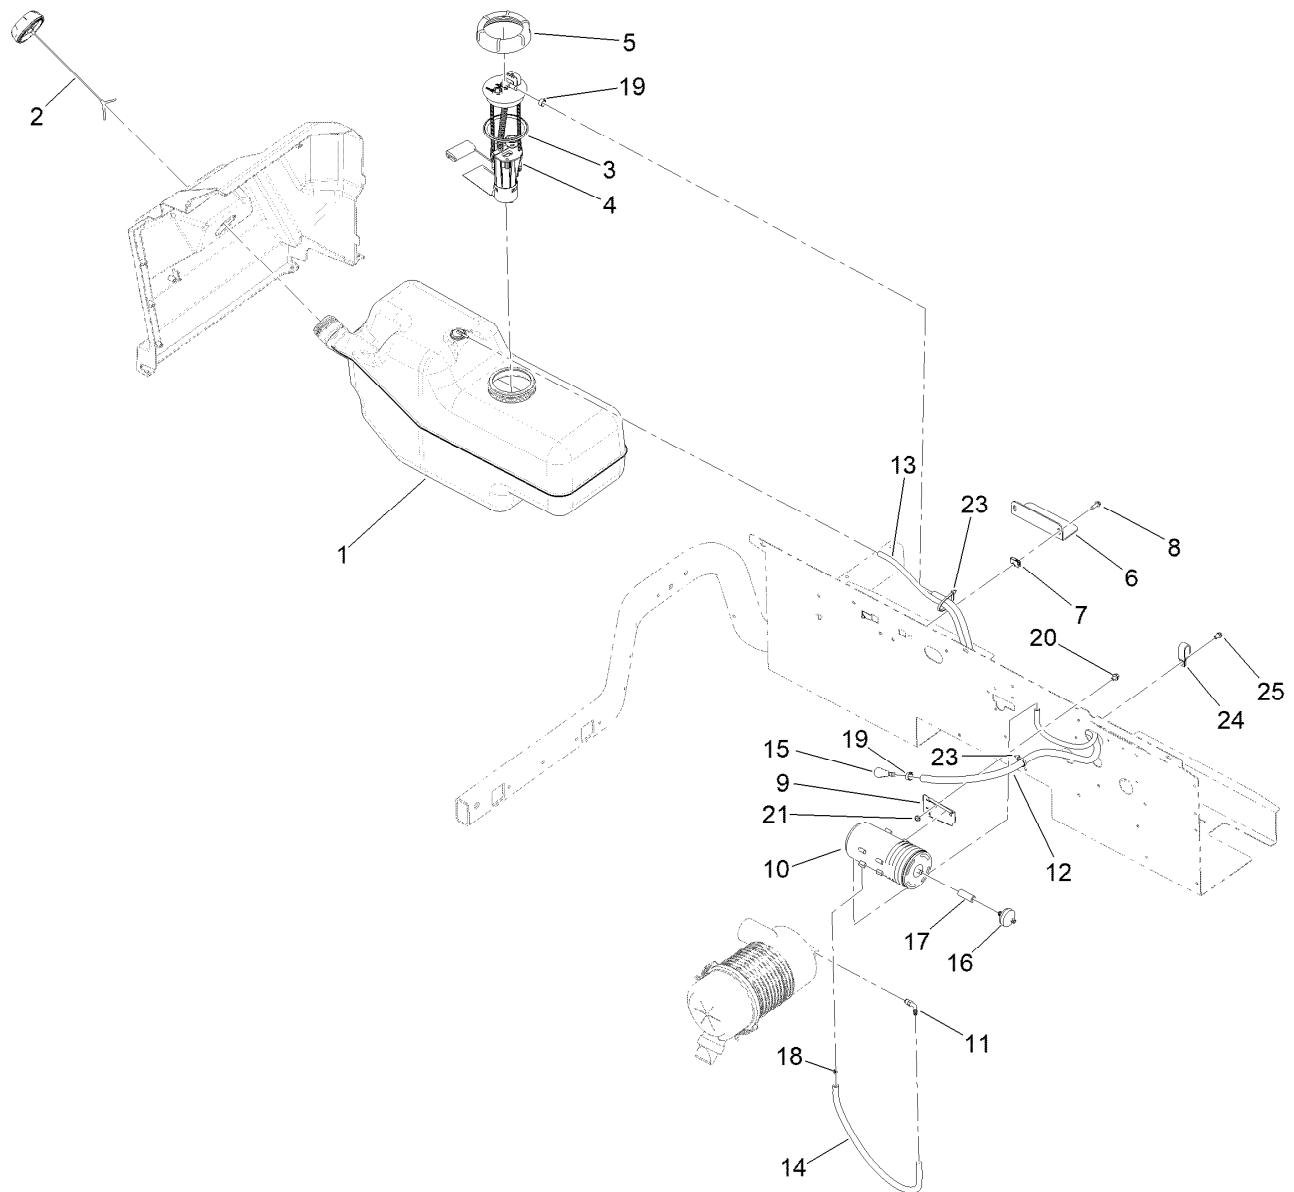 

Fuel System Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	137-2711	1	Fuel Tank ASM (8 Gallon Gas)	13	119-3517	1	Hose-Fuel
2	126-1789	1	Cap-Fuel, Ratcheting	14	109-0298	1	Line-Fuel
3	138-9333	1	Gasket-Fuel Sender	15	125-2921	1	Fitting-Fuel
4	138-9330	1	Fuel Pump ASM	16	115-7854	1	Filter-Fuel, Inline
5	138-9332	1	Cap-Fuel Sender	17	106-5317	1	Hose-Fuel
6	138-9445	1	Bracket-Mount, Fuel Tank	18	120-2038	1	Cartridge-Valve, Check
7	107069	2	Clip	19	92-2379	2	Clamp-Hose
8	49-2040	2	Screw-HWHTF	20	3234-26	2	Screw-HHF
9	114-0292	1	Bracket-Canister, Carbon	21	3296-56	2	Nut-Lock, NI
10	117-1221	1	Canister-Carbon, 800Cc	23	3290-378	3	Tie-Cable ●
11	94-7222	1	Barb-Hose	24	92-5753	2	Clamp-Hose
12	144-2247	1	Hose-Fuel	25	32144-4	2	Screw-HWH

 ● Not illustrated

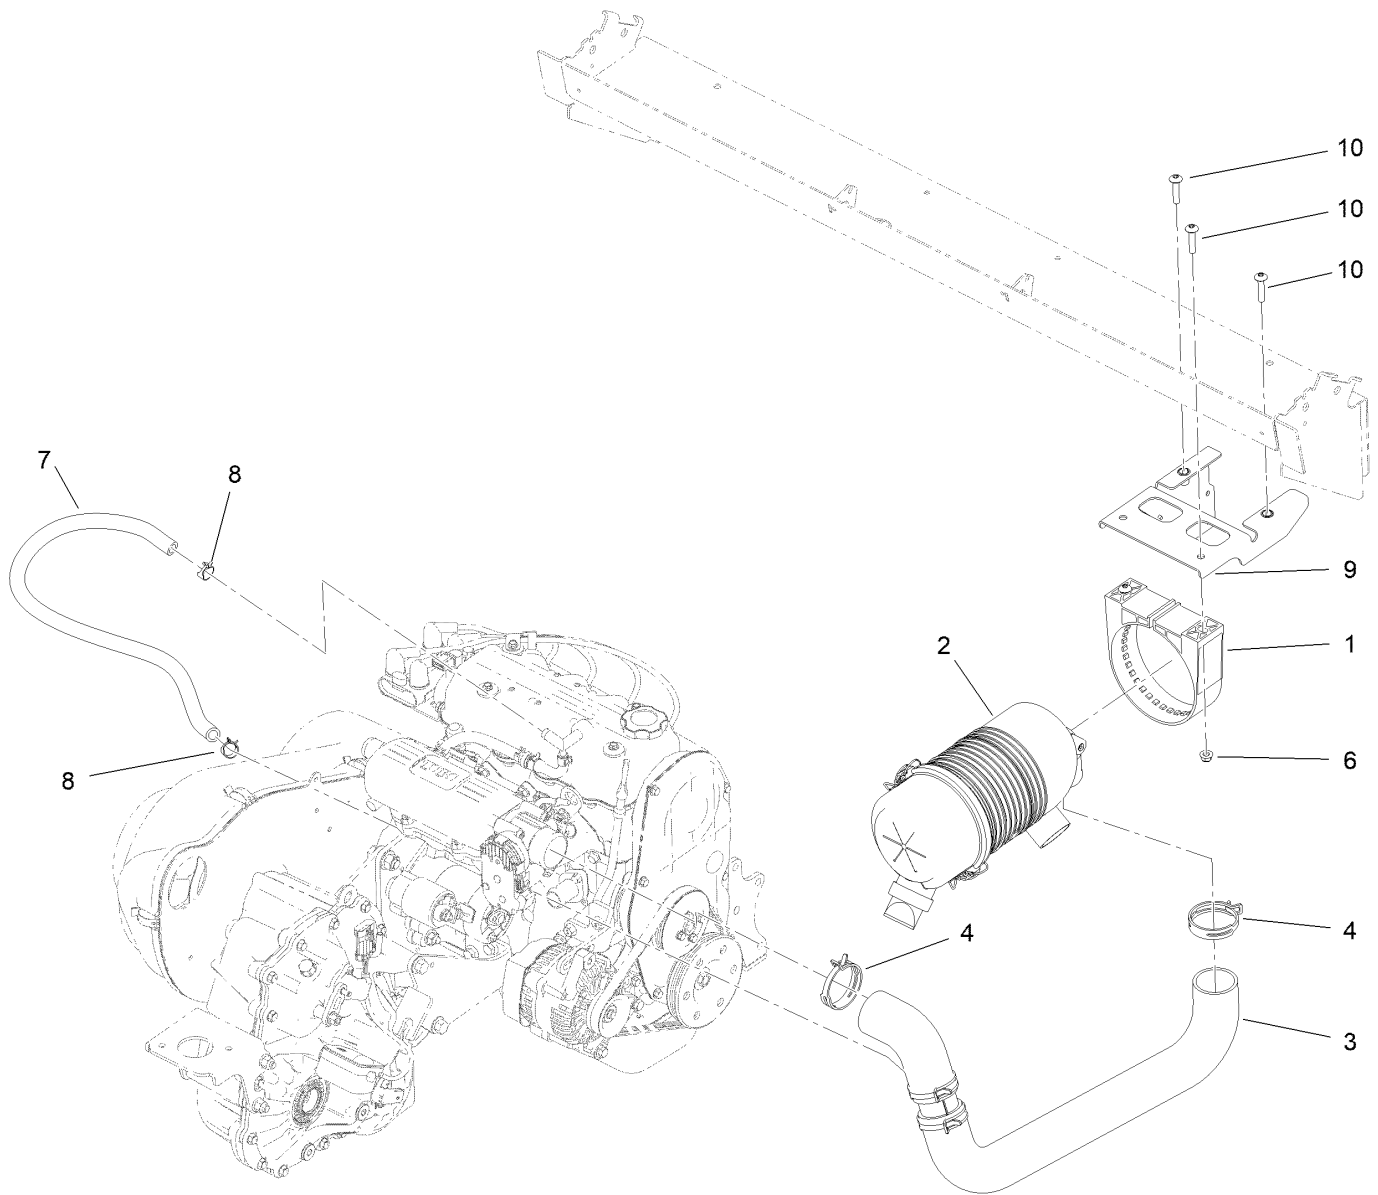


Air Cleaner Assembly

Ref.	Part Number	Qty.	Description
1	98-4525	1	Bracket-Cleaner, Air
2	106-5277	1	Air Cleaner ASM
3	145-2118	1	Hose ASM-Intake
4	144-2200	2	Clamp-Sc Band
6	104-8300	2	Nut-HF, NI
7	127-1777	1	Hose-Fuel
8	2412-143	2	Clamp-Hose
9	147-8105	1	Air Cleaner Bracket ASM
10	126-7439	4	Screw-Torx

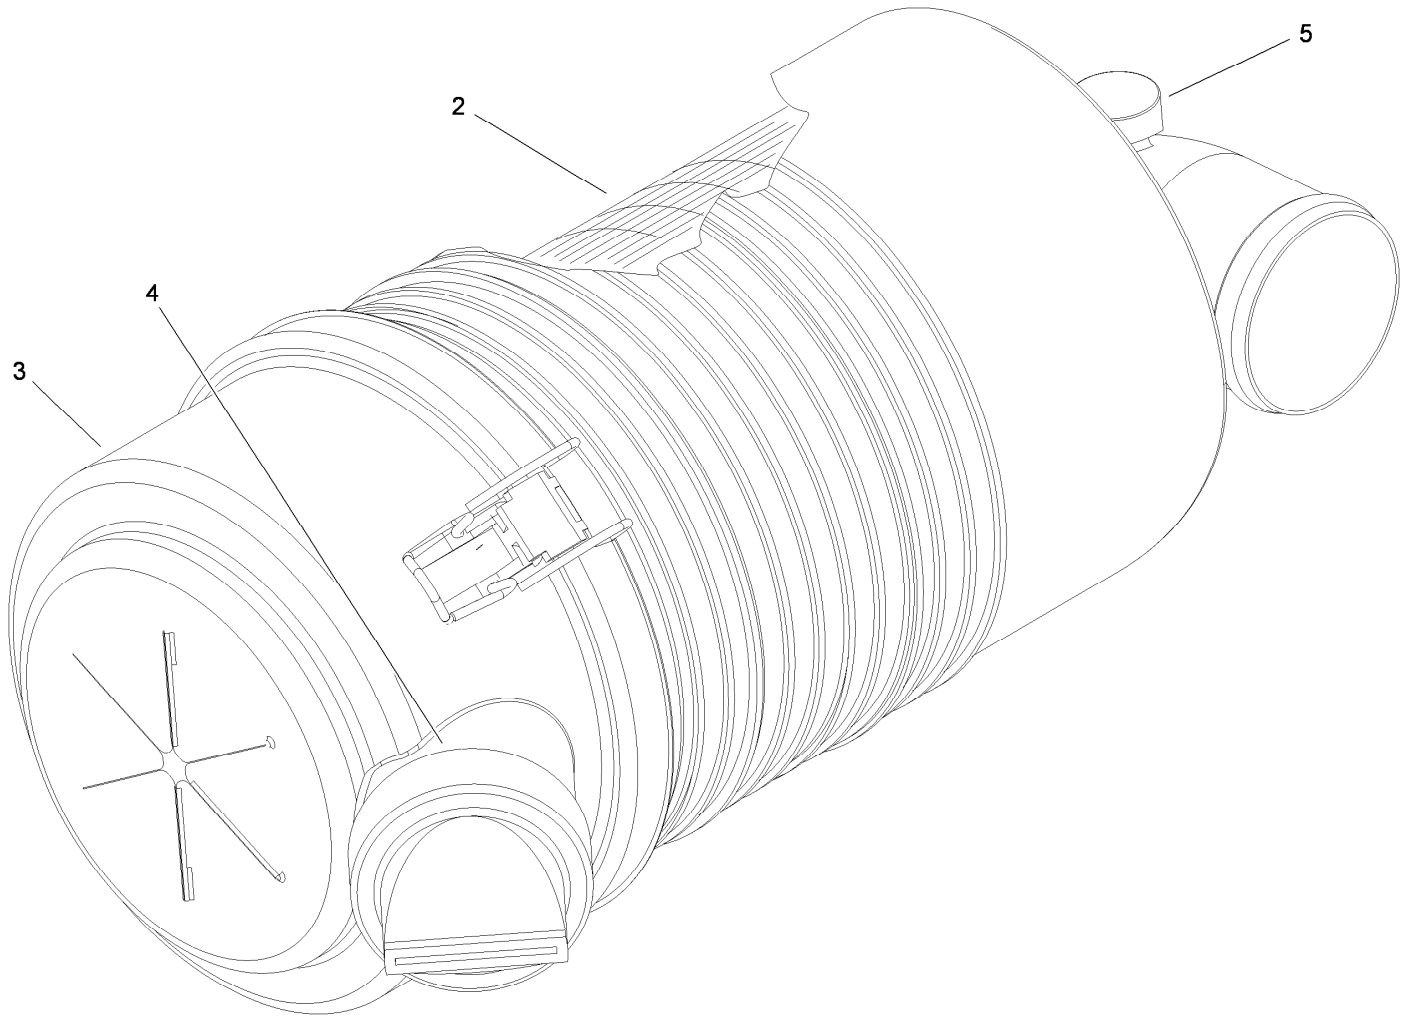 


Air Cleaner Assembly No. 106-5277

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	108-3810	1	Filter-Air
3	98-9771	1	Cover ASM
4	87-9400	1	Valve-Vacuator
5	285-17	1	Plug-Pipe

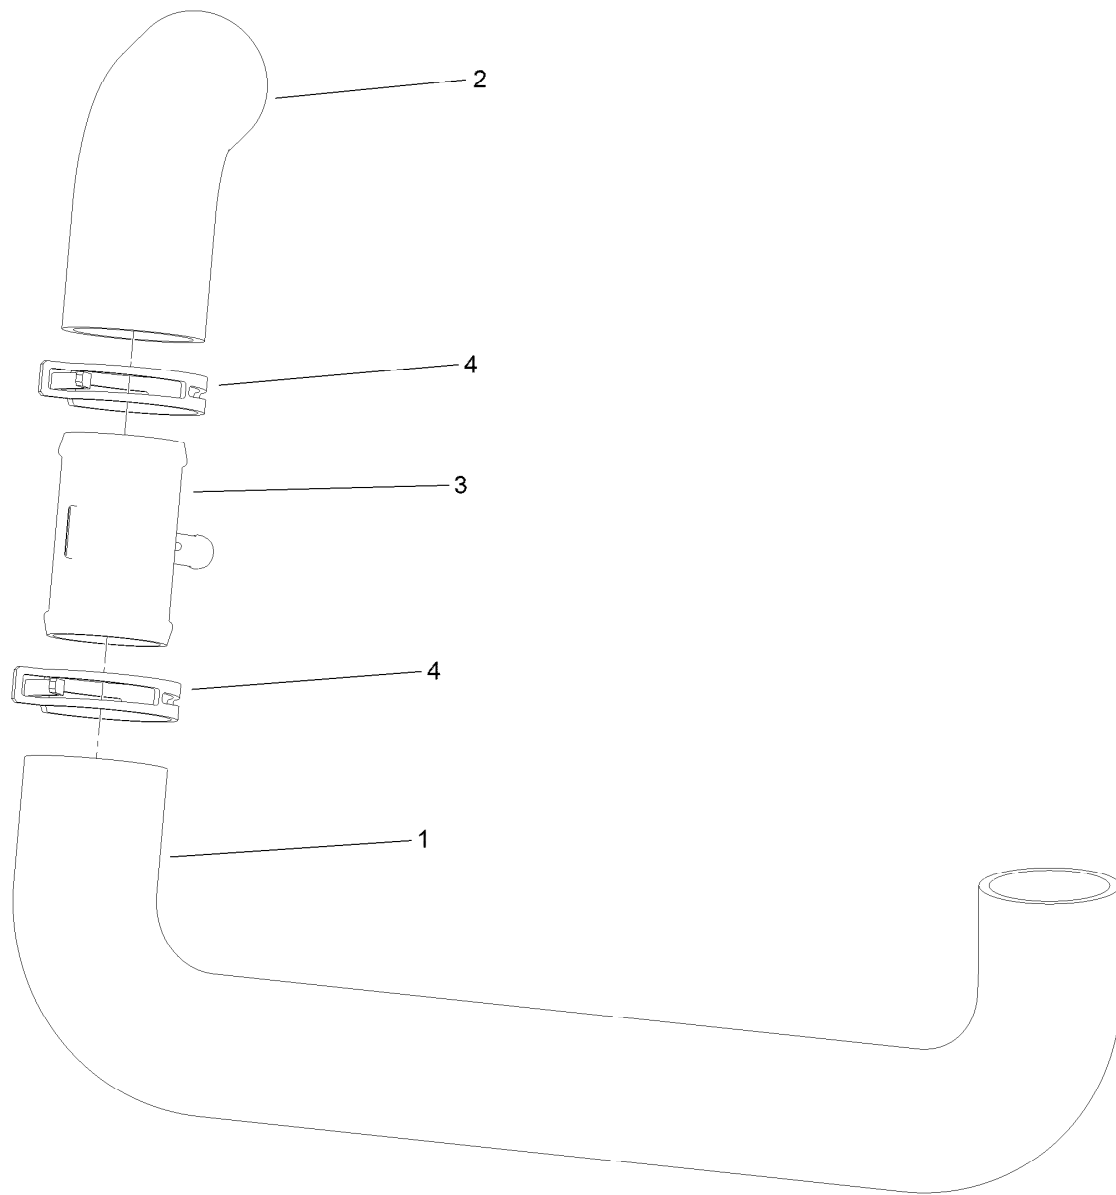 


Hose Intake Assembly No. 145-2118

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2116	1	Hose-Air Intake, A
2	145-2117	1	Hose-Air Intake, B
3	145-2112	1	Fitting-Tee
4	144-2200	2	Clamp-Sc Band

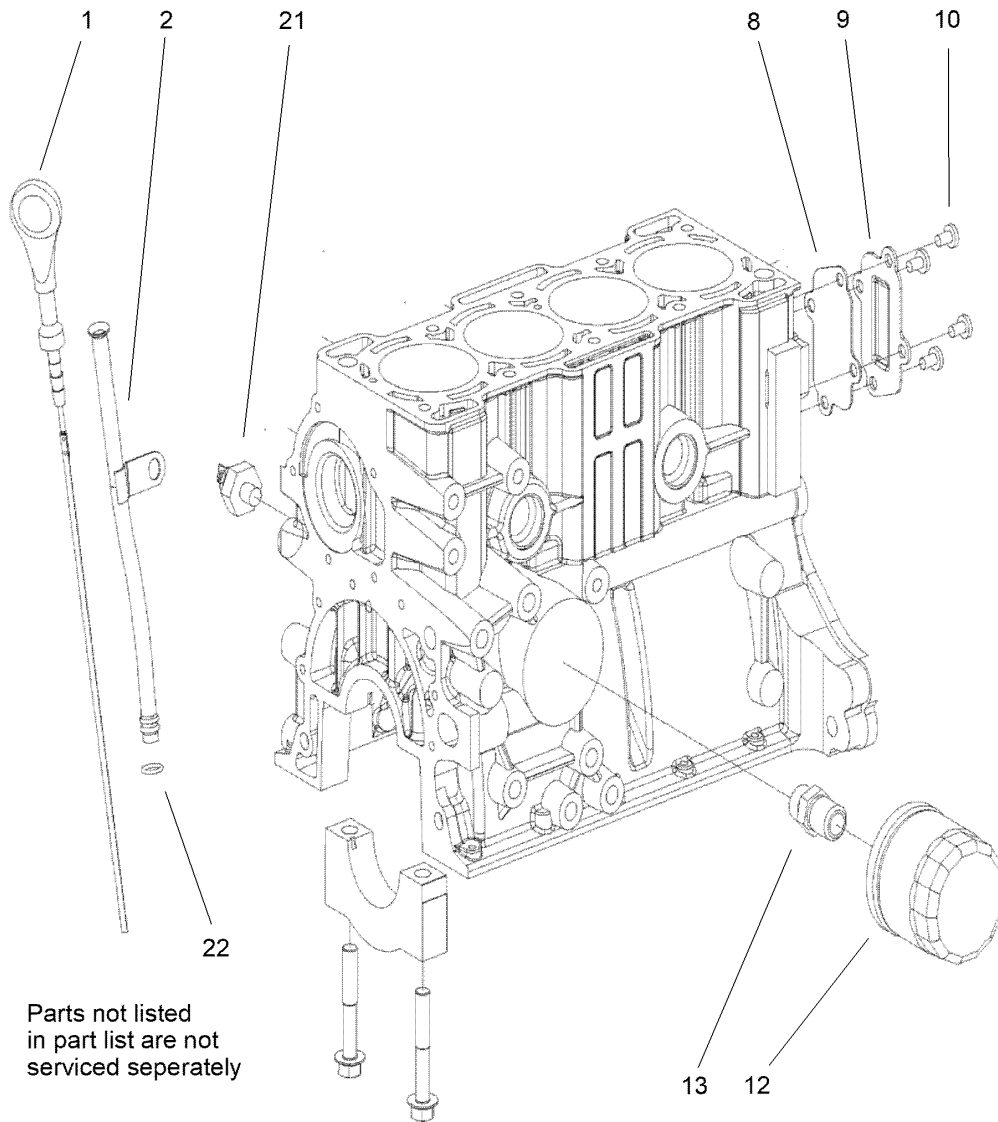 

Cylinder Block Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-7937	1	Dip Stick, Oil
2	145-7938	1	Tube, Dipstick
8	145-7939	1	Gasket, Water Sealing Cover
9	145-7940	1	Cover, Water Sealing
10	145-7941	4	Bolt
12	145-7942	1	Filter, Oil
13	145-7943	1	Fitting, Oil Filter
21	145-7944	1	Switch, Oil Pressure
22	145-7945	1	Seal, Dipstick Tube

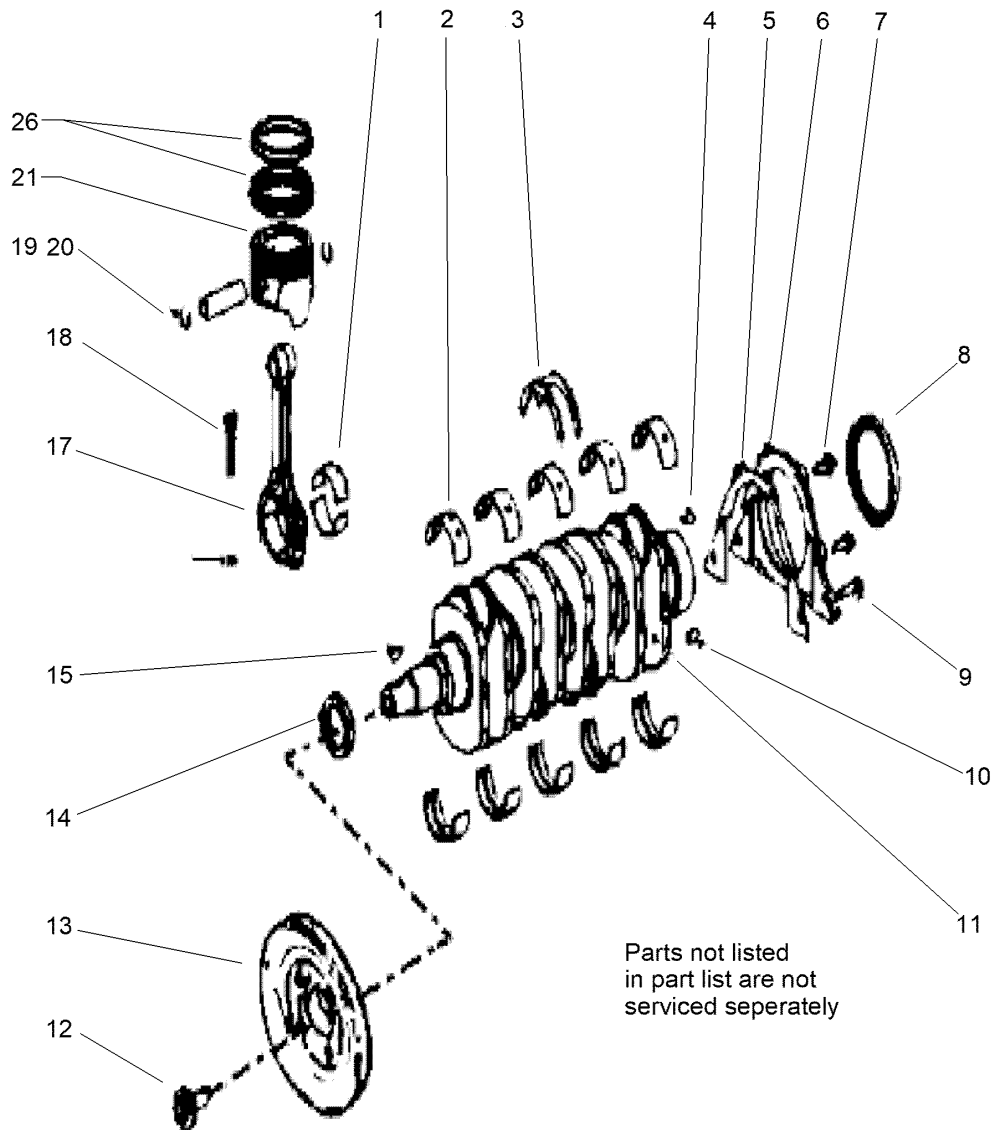 

Crankshaft and Piston Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-7946	1	Bearing, Main (Set Of 10)
2	145-7947	1	Bearing, Connecting Rod
3	145-7948	1	Bearing, Thrust
4	145-7949	1	Pin, Locating
5	147-2550	1	Gasket, Oil Seal Housing
6	147-2551	1	Housing, Oil Seal
7	147-2552	4	Bolt, Oil Seal Housing
8	147-2553	1	Seal, Oil (Rear)
9	147-2554	2	Bolt, Oil Seal Housing
10	147-2555	3	Bushing
11	147-2556	1	Crankshaft

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
12	147-2557	1	Bolt, Crankshaft Pulley
13	147-2558	1	Pulley, Crankshaft
14	147-2559	2	Seal, Crankshaft Front
15	147-2560	2	Key, Woodruff
17	147-2561	4	Connecting Rod
18	147-2562	8	Rod, Connecting
19	147-2563	8	Clip, Piston Pin
20	147-2564	4	Pin, Piston
21	147-2565	4	Piston
26	147-2566	4	Piston Ring Set - Complete

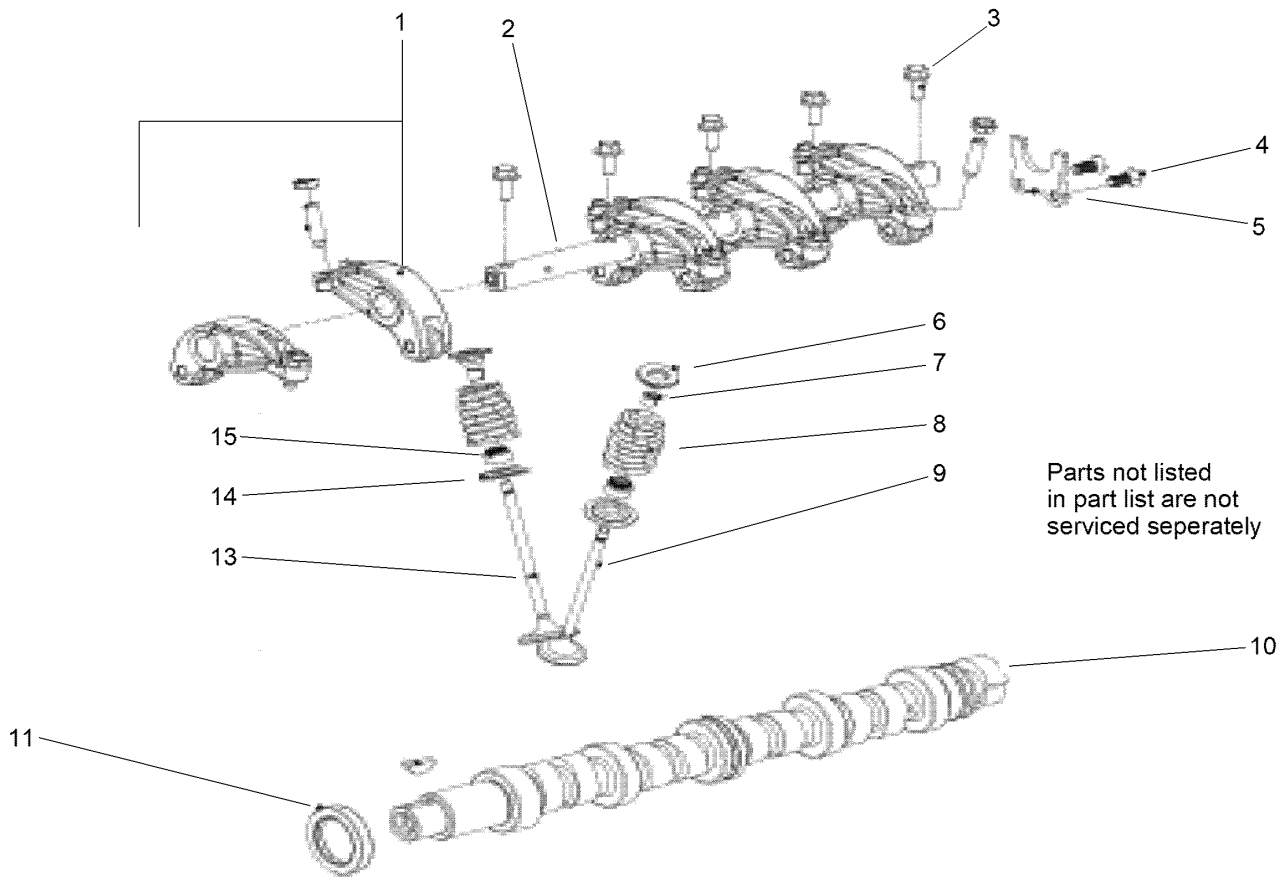 


Camshaft and Rocker Arm Assembly

Ref.	Part Number	Qty.	Description
1	147-2567	8	Arm, Rocker
2	147-2568	1	Shaft, Rocker Arm
3	147-2569	1	Bolt
4	147-2570	2	Bolt
5	147-2571	1	Plate, Camshaft Thrust
6	147-2572	8	Seat, Valve Spring
7	147-2573	16	Rotaton, Valve
8	147-2574	8	Valve, Spring
9	147-2575	4	Valve, Exhaust
10	147-2576	1	Camshaft
11	147-2577	1	Seal, Camshaft
13	147-2578	4	Valve, Intake
14	147-2579	8	Seal, Valve Stem
15	147-2580	8	Seat, Valve Spring

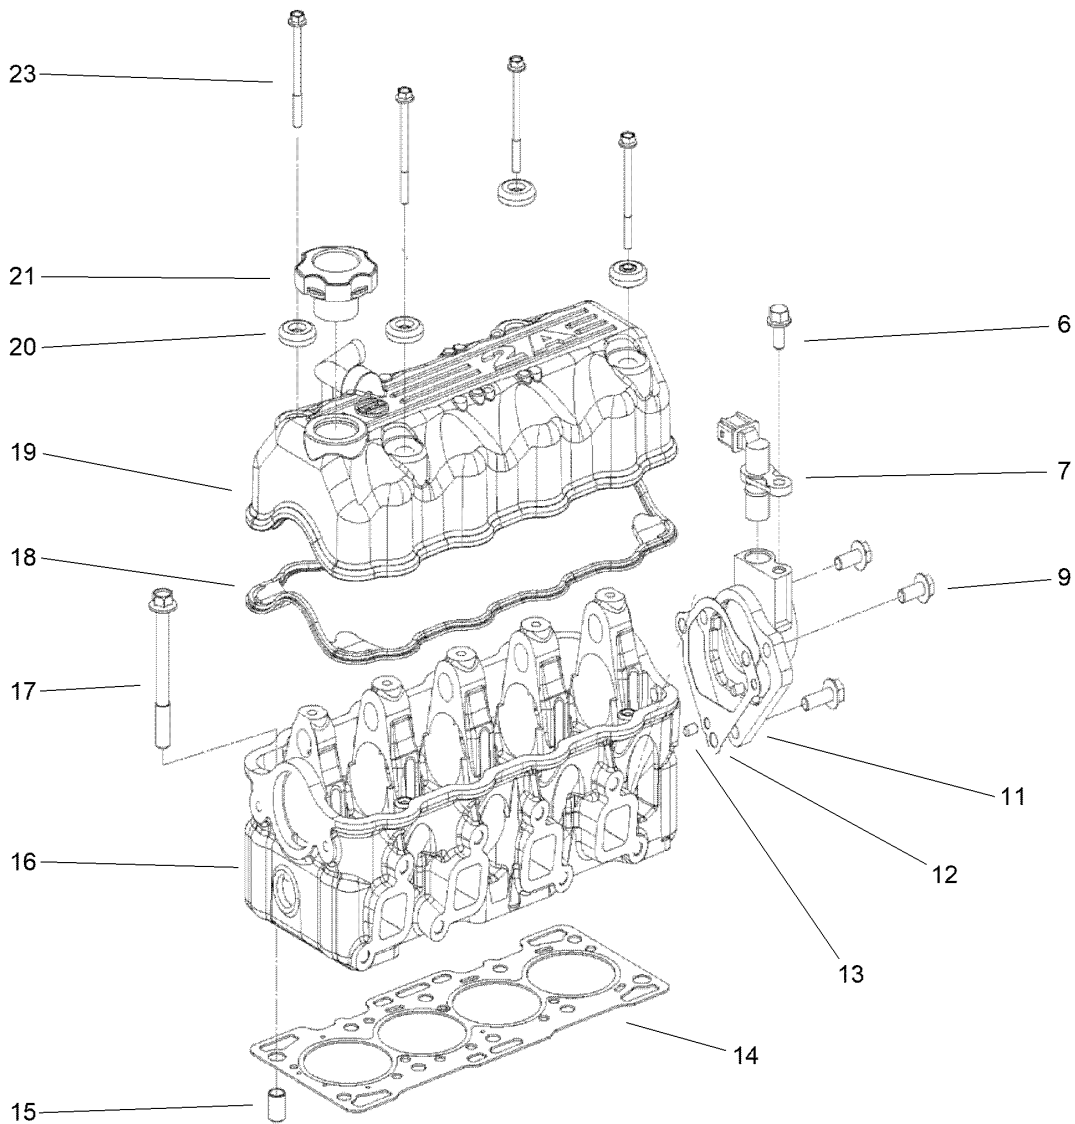 


Cylinder Head Assembly

Ref.	Part Number	Qty.	Description
6	147-2581	1	Bolt
7	147-2582	1	Sensor, Camshaft
9	147-2583	4	Bolt, Intake Manifold
11	147-2584	1	Housing, Camshaft Sensor
12	147-2585	1	Gasket, Camshaft Sensor Housing
13	147-2586	2	Pin, Locating
14	147-2587	1	Gasket, Cylinder Head
15	147-2588	4	Pin, Locating
16	147-2589	1	Head, Cylinder
17	147-2590	10	Bolt, Cylinder Head
18	147-2591	1	Gasket, Rocker Cover
19	147-2592	1	Cover, Rocker
20	147-2593	4	Spacer
21	147-2594	1	Cap, Oil
23	147-2595	4	Bolt, Rocker Cover

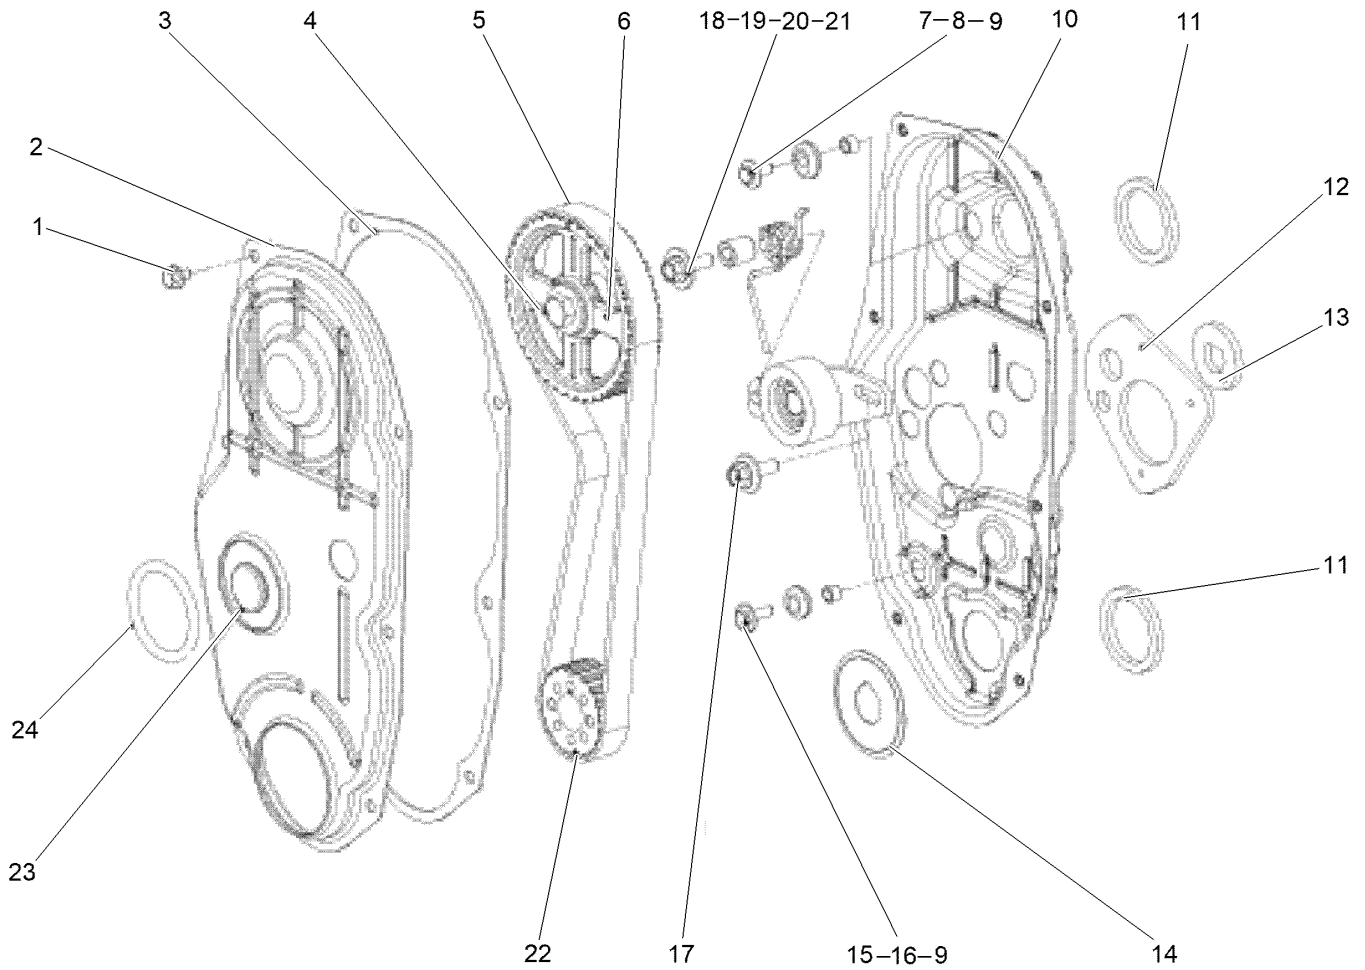 


Timing Cover Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2596	1	Bolt	14	147-2609	1	Cover
2	147-2597	1	Front Cover	15	147-2610	2	Bolt, Front Cover
3	147-2598	1	Gasket, Front Cover	16	147-2611	2	Gasket, Rear Cover
4	147-2599	1	Bolt	17	147-2612	1	Bolt, Front Cover (Incls Washer)
5	147-2600	1	Belt, Timing (90 Teeth)	18	147-2613	1	Bolt, Tensioner
6	147-2601	1	Sprocket, Camshaft	19	147-2614	1	Bushing, Torsion Spring
7	147-2602	2	Bolt, Front Cover	20	147-2615	1	Spring, Torsion
8	147-2603	2	Washer	21	147-2616	1	Tensioner
9	147-2604	4	Spacer	22	147-2617	1	Sprocket, Crankshaft
10	147-2605	1	Rear Cover	23	147-2618	1	Cover
11	147-2606	2	Seal, Oil Cover	24	147-2619	1	Seal, Front Cover
12	147-2607	1	Plate, Cover				
13	147-2608	1	Washer				

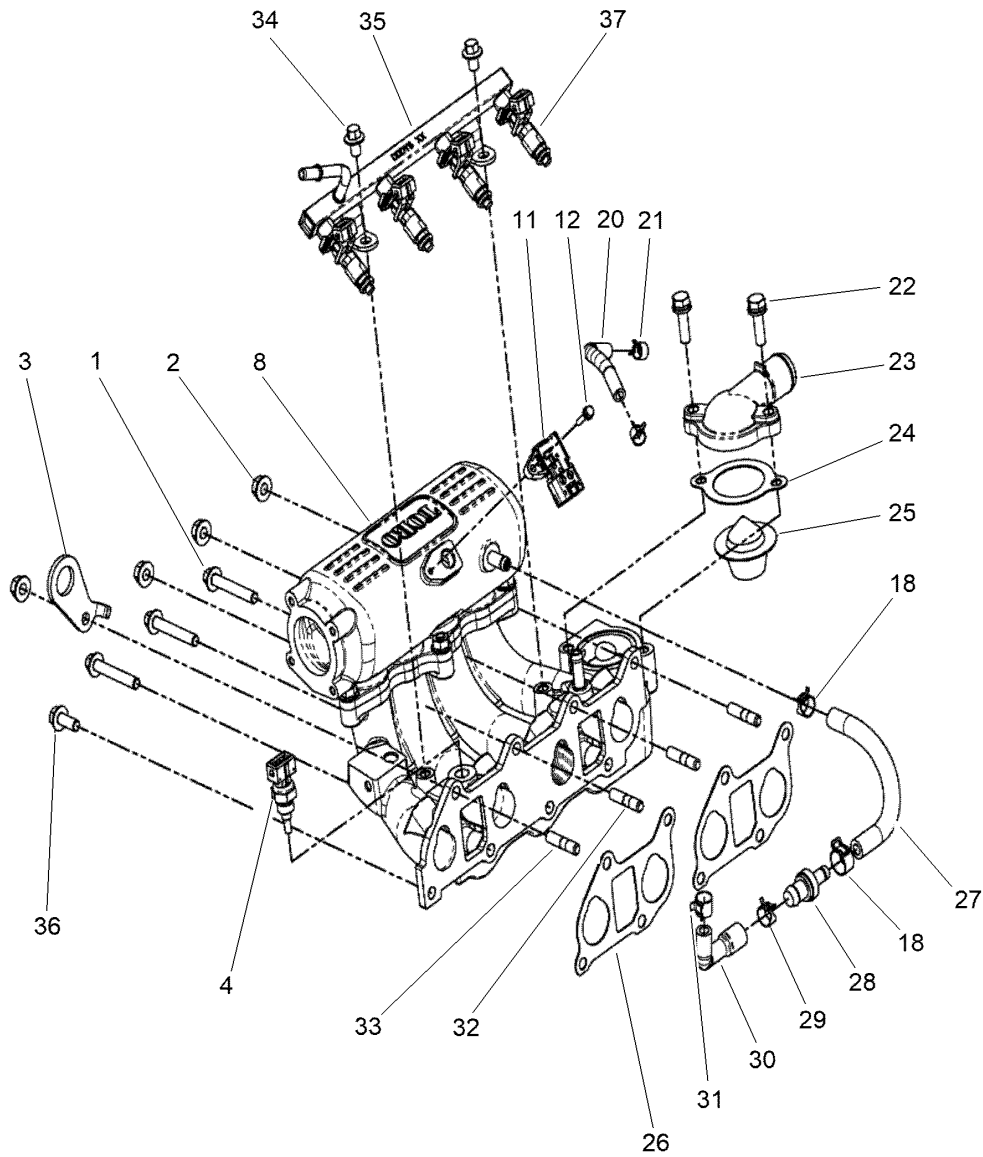 


Intake Manifold Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2620	3	Bolt, Intake Manifold	25	147-2633	1	Thermostat
2	147-2621	4	Nut, Intake Manifold	26	147-2634	2	Gasket, Intake Manifold
3	147-2622	1	Lifting Eye	27	147-2635	1	Hose, Pvc Vent
4	147-2623	1	Sensor, Water Temp	28	147-2636	1	Pcv
8	147-2624	1	Manifold, Intake	29	147-2637	1	Clamp
11	147-2625	1	Sensor, Air	30	147-2638	1	Hose, Pcv
12	147-2626	1	Bolt	31	147-2639	1	Clamp
18	147-2627	2	Clamp	32	147-2640	3	Stud, Intake Manifold
20	147-2628	1	Hose, Coolant	33	147-2641	1	Stud, Exhaust Manifold
21	147-2629	2	Clamp	34	147-2642	2	Bolt, Fuel Rail
22	147-2630	2	Bolt	35	147-2643	1	Rail, Fuel
23	147-2631	1	Outlet, Water	36	147-2583	1	Bolt, Intake Manifold
24	147-2632	1	Gasket, Thermostat Cover	37	145-7936	4	Injector W/Clip

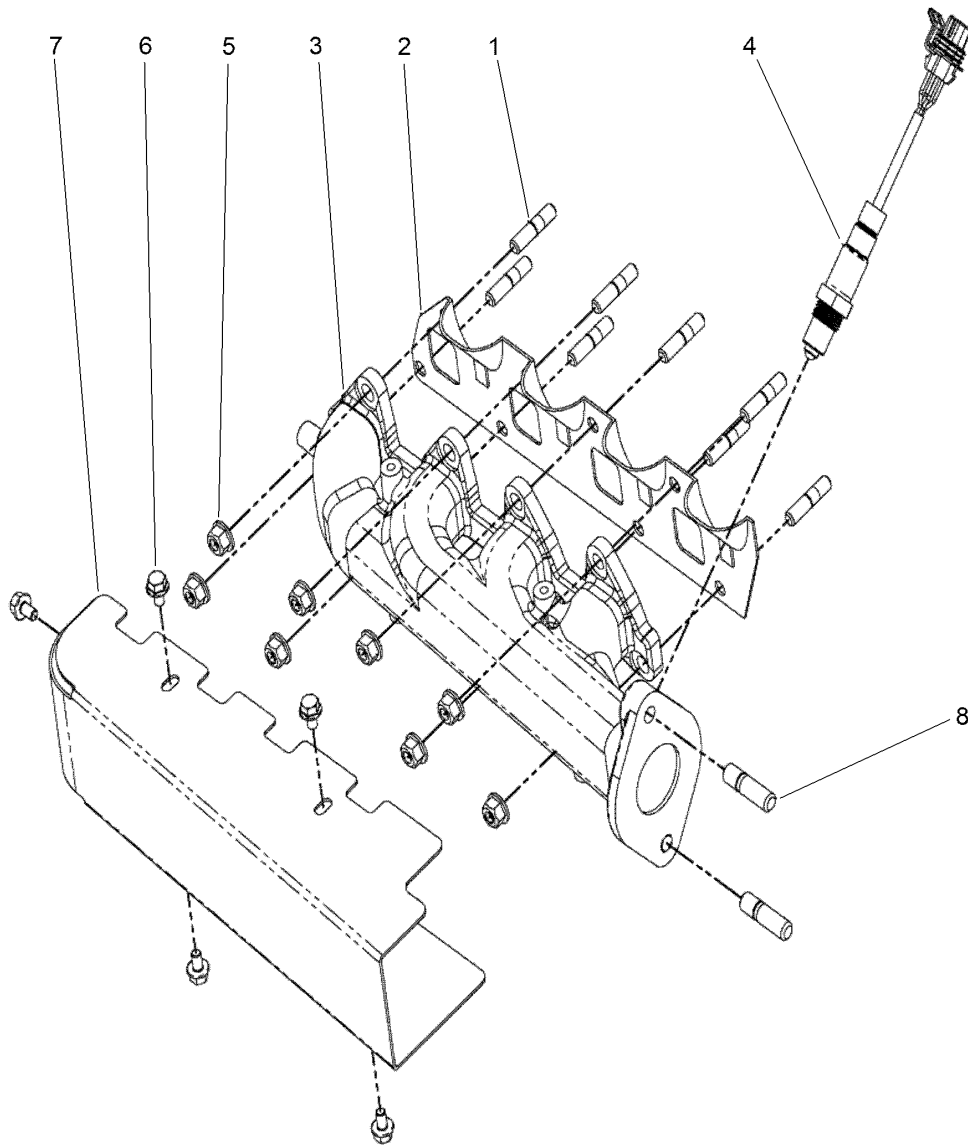 


Exhaust Manifold Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2644	8	Stud
2	147-2645	1	Gasket, Exhaust Manifold
3	147-2646	1	Manifold, Exhaust
4	147-2647	1	Sensor, O2
5	147-2648	8	Nut
6	147-2649	5	Screw
7	147-2650	1	Shield, Exhaust
8	147-2651	2	Stud

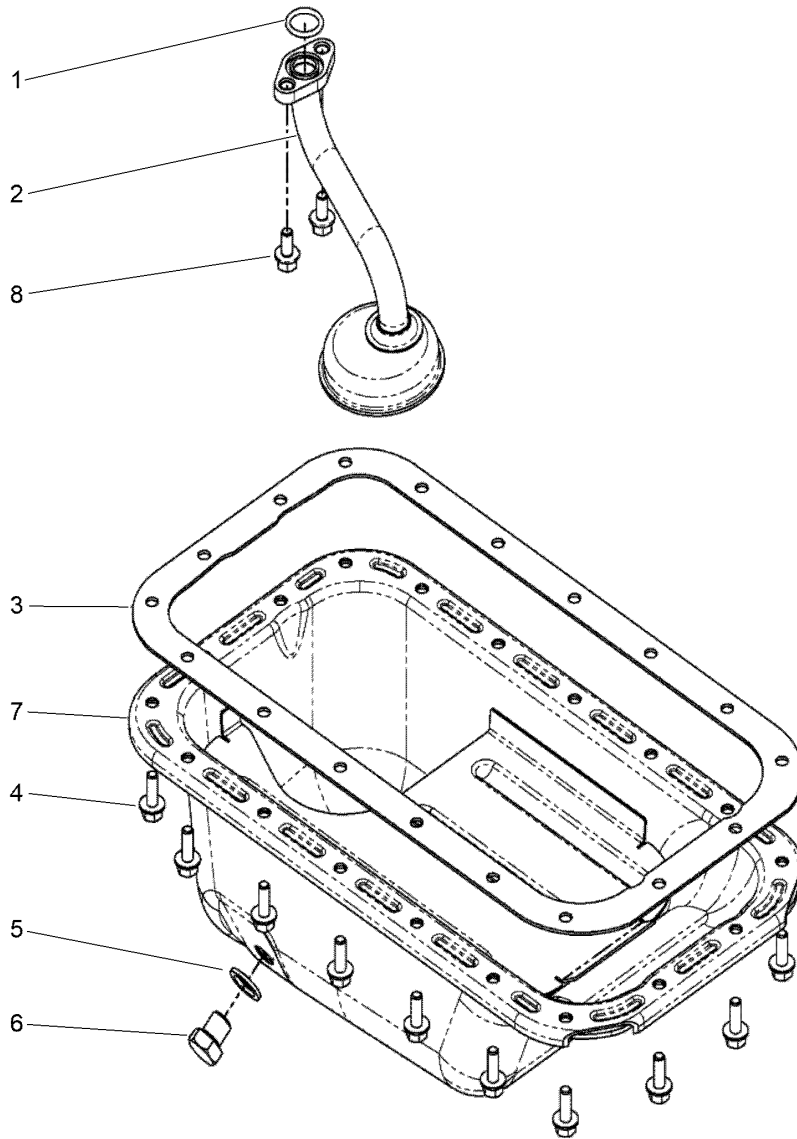 


Oil Pan Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2652	1	Seal, Oil Strainer
2	147-2653	1	Tube, Oil Pick Up
3	147-2654	1	Gasket, Oil Pan
4	147-2569	18	Bolt
5	147-2655	1	Seal, Drain Plug
6	147-2656	1	Plug, Drain
7	147-2657	1	Pan, Oil
8	147-2658	2	Bolt

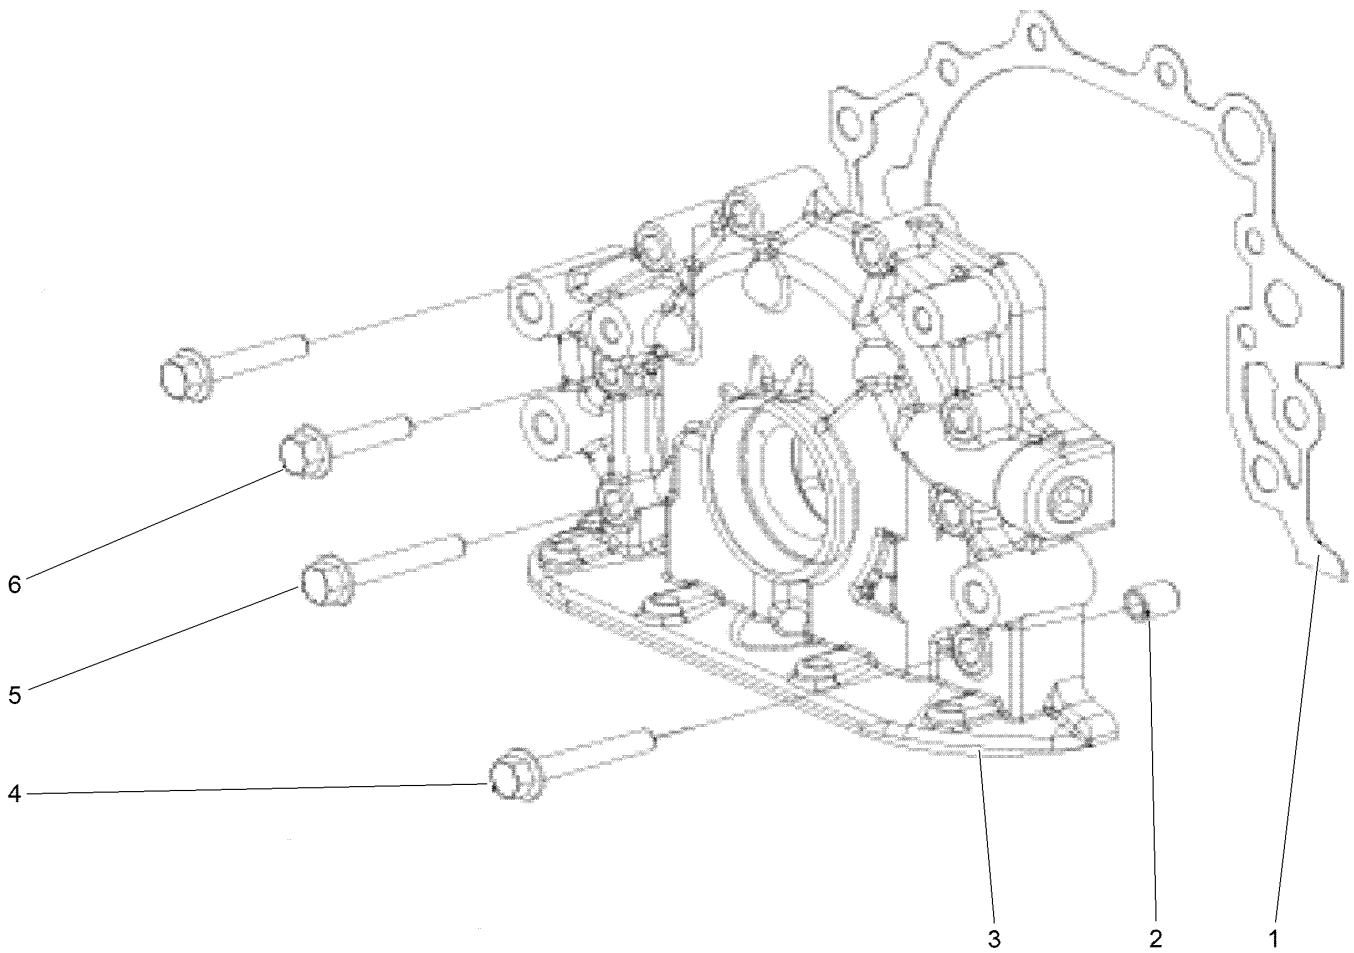 


Oil Pump Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2659	1	Gasket, Oil Pump
2	147-2555	1	Bushing
3	147-2660	1	Pump, Oil
4	147-2661	1	Bolt, Water Pump
5	147-2662	3	Bolt, Water Pump
6	147-2663	5	Bolt, Oil Pump

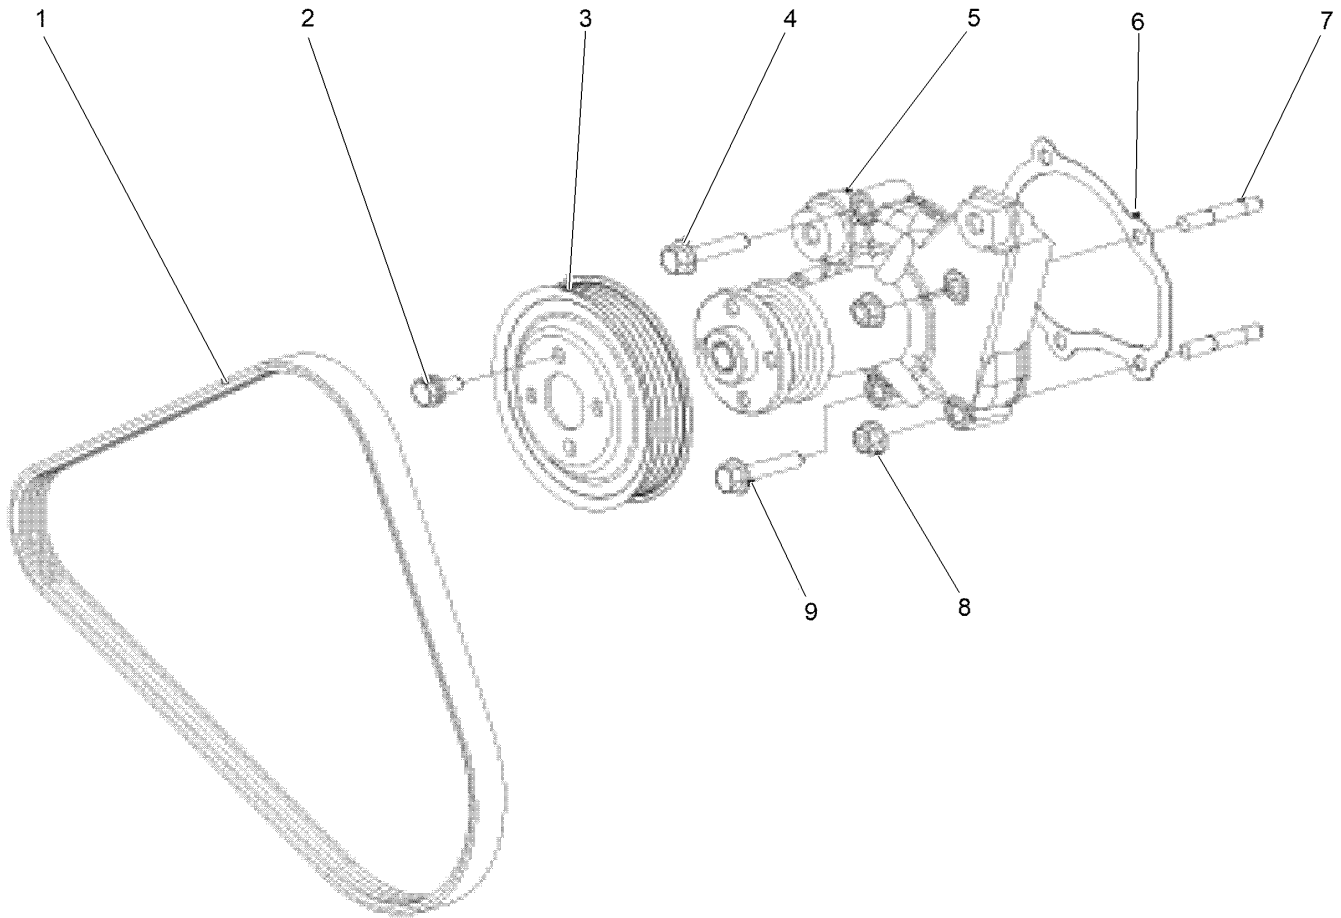 


Water Pump Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2664	1	Belt
2	147-2665	4	Bolt
3	147-2666	1	Pulley, Water Pump
4	147-2661	1	Bolt, Water Pump
5	147-2667	1	Pump, Water
6	147-2668	1	Gasket, Water Pump
7	147-2669	2	Stud, Water Pump
8	147-2670	2	Nut
9	147-2662	1	Bolt, Water Pump

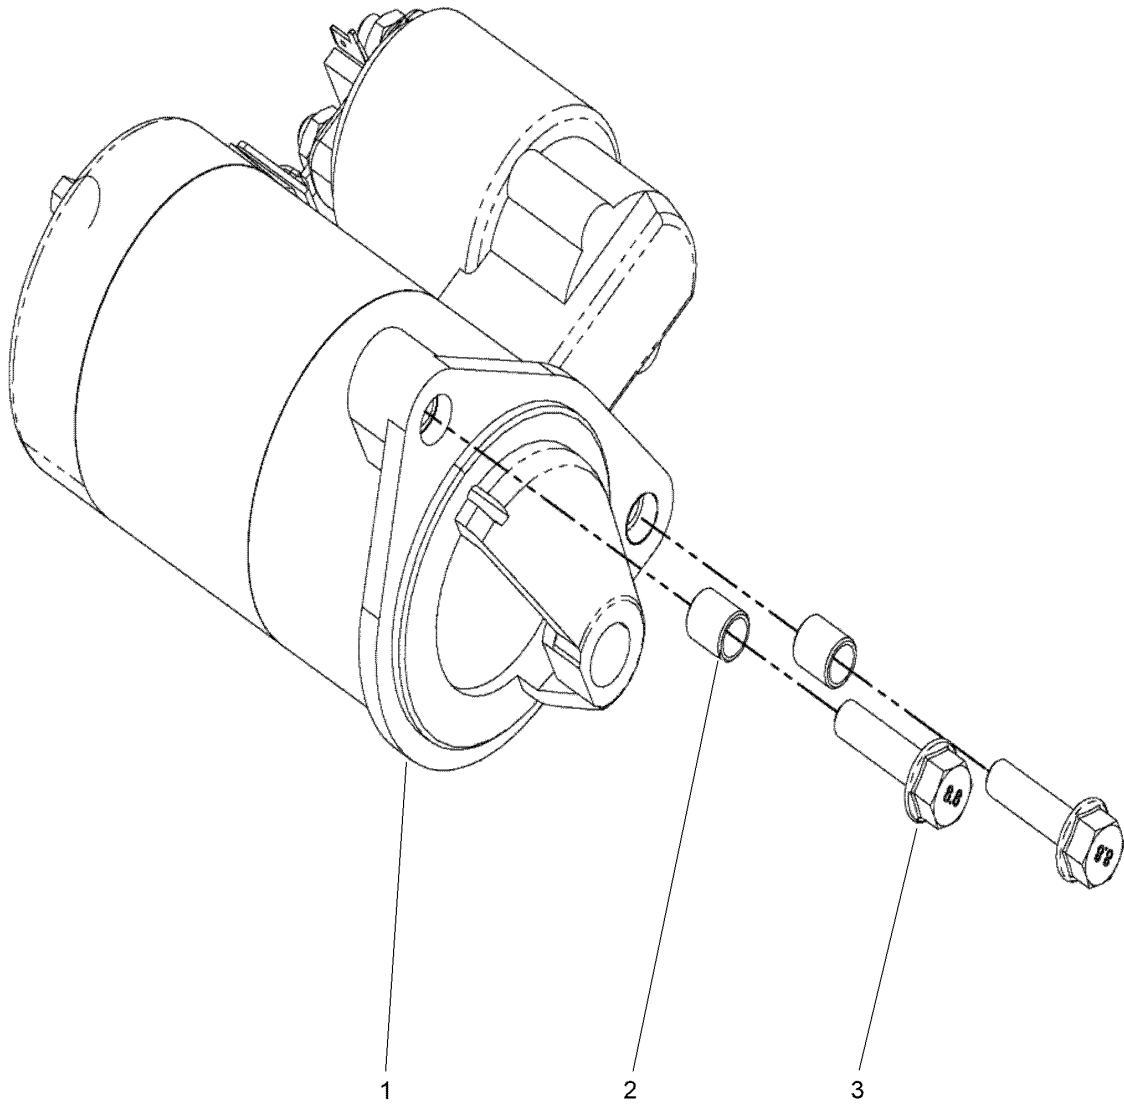 


Starter Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2671	1	Starter
2	147-2672	2	Dowel
3	147-2673	2	Bolt

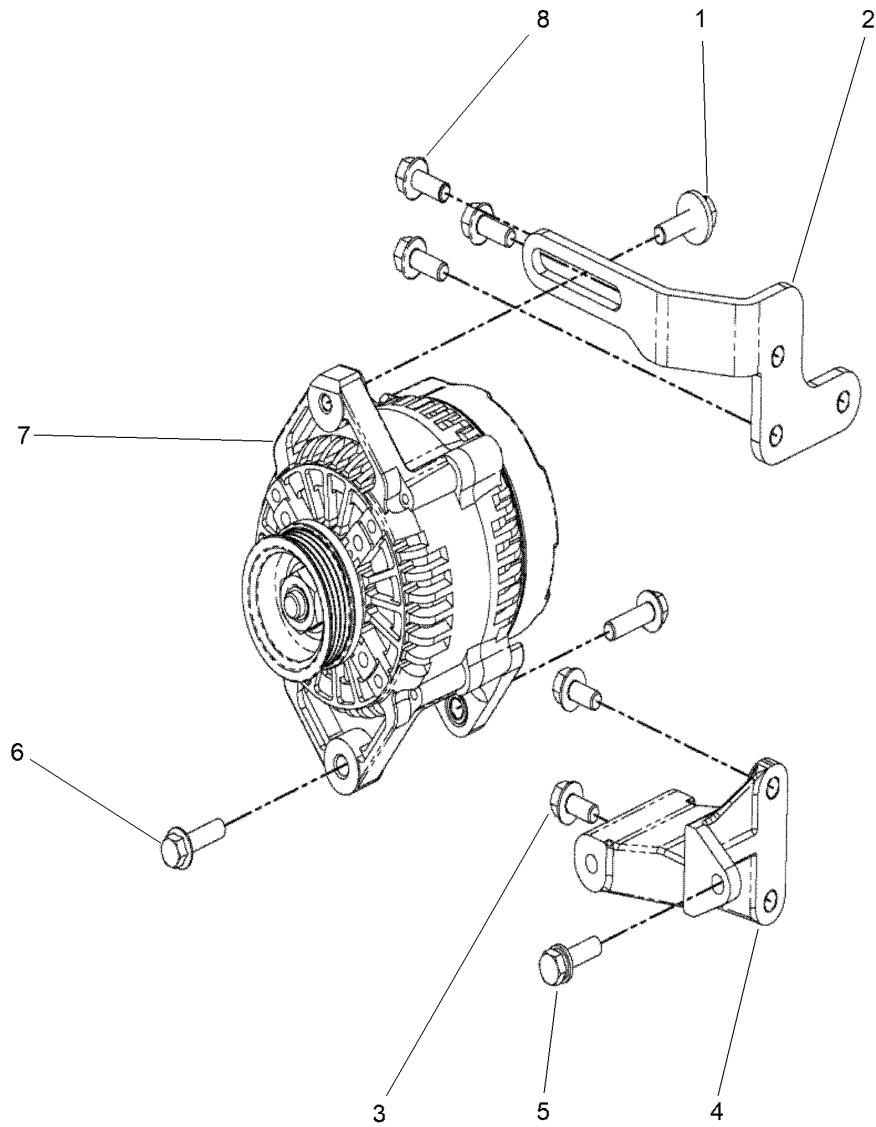 


Alternator Assembly

Ref.	Part Number	Qty.	Description
1	147-2674	1	Bolt, Alternator
2	147-2675	1	Bracket, Alternator
3	147-2676	2	Bolt, Alt Support
4	147-2677	1	Support, Alternator
5	147-2678	1	Bolt, Alt Support
6	147-2679	1	Bolt
7	147-2680	1	Alternator
8	147-2681	3	Bolt

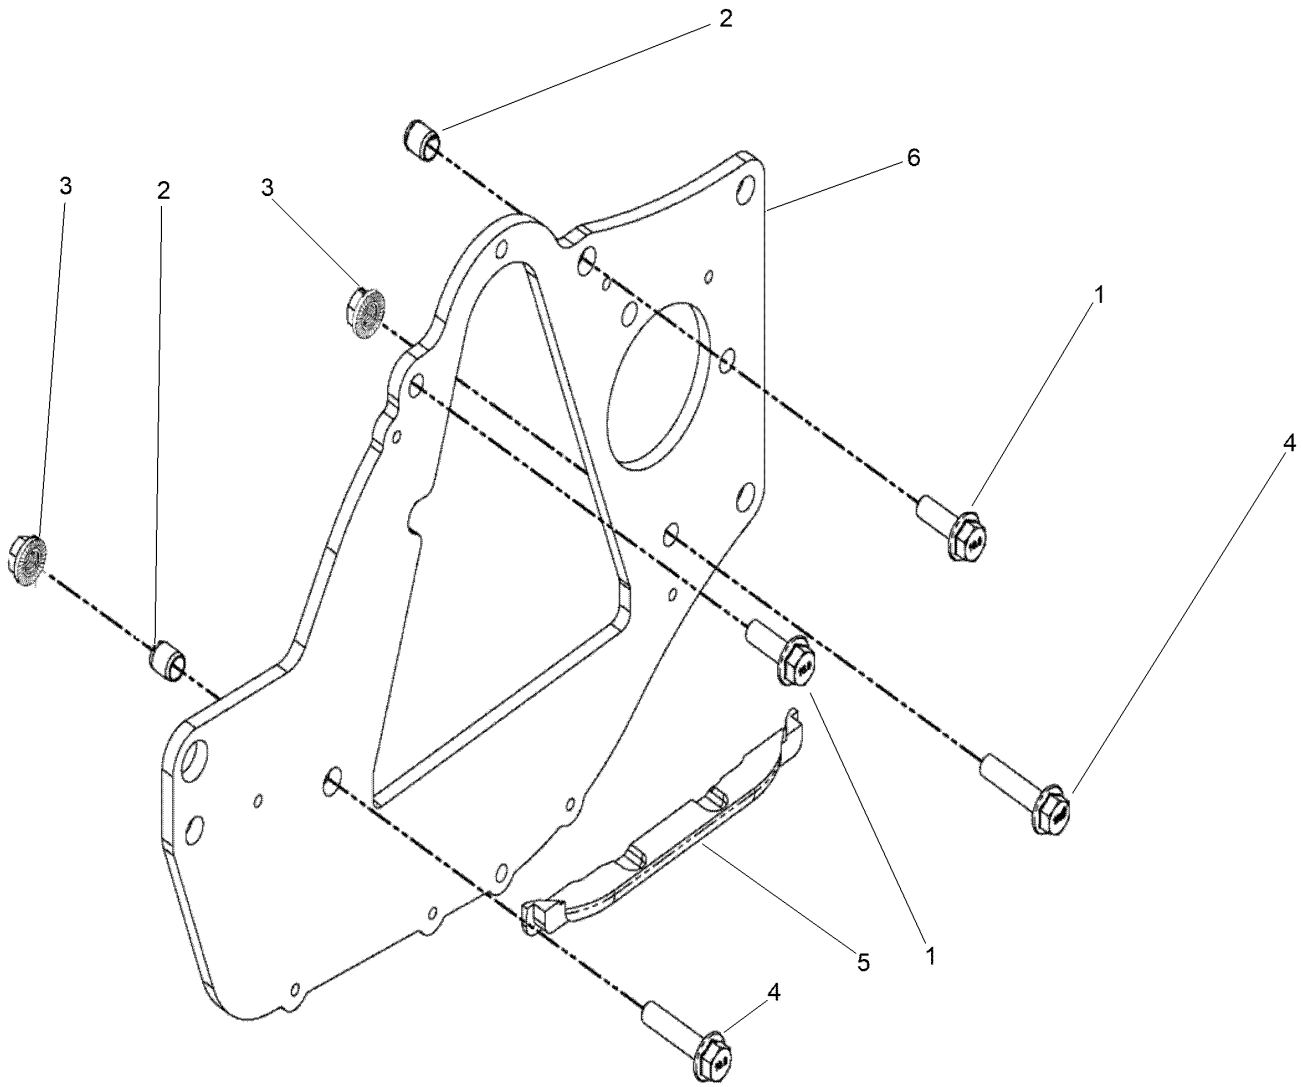 


Rear Plate Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2682	2	Bolt
2	147-2683	2	Spacer
3	147-2684	2	Nut
4	147-2685	2	Bolt
5	145-2003	1	Seal-Plate, Rear
6	144-2201	1	Plate-Engine

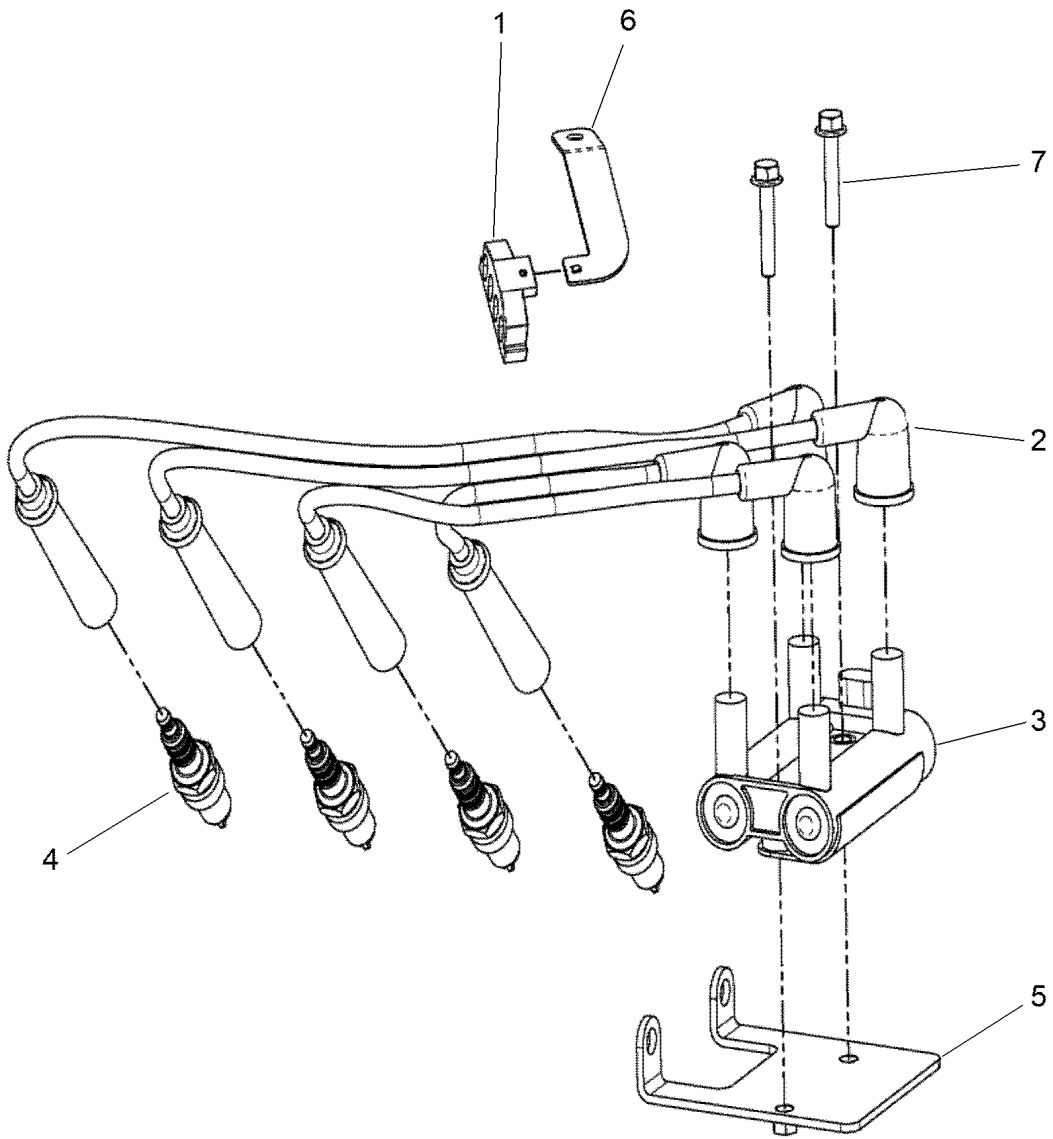 


Ignition Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2688	1	Retainer, Wire#4
2	147-2689	1	Wires, Spark Plug
3	147-2690	1	Coil, Ignition
4	145-2128	4	Kit-Spark Plug
5	147-2691	1	Bracket, Coil Rear
6	147-2692	1	Bracket, Ignition Wires
7	147-2693	2	Bolt

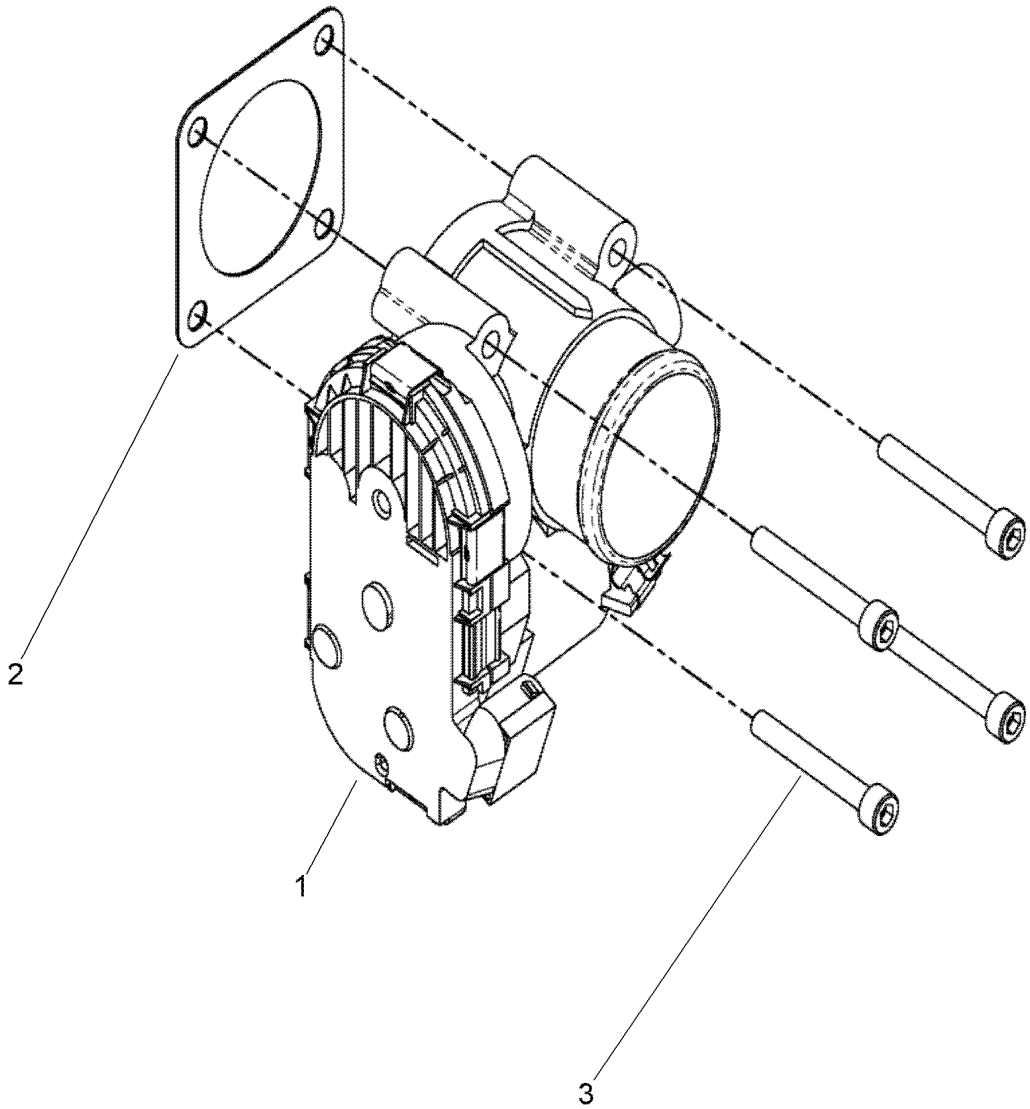 


Throttle Body Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2694	1	Body, Throttle
2	147-2695	1	Gasket
3	147-2696	4	Screw

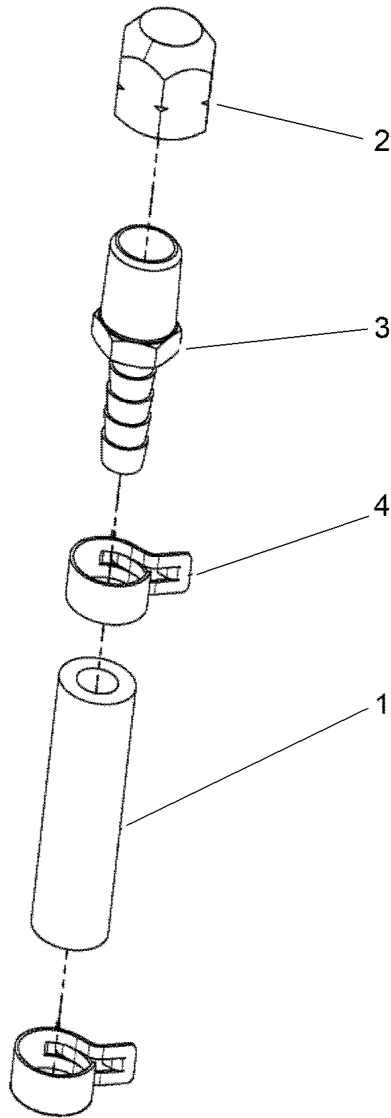 


Coolant Plug Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2697	1	Hose, Heater (2 Inches)
2	147-2698	1	Fitting
3	147-2699	1	Fitting
4	145-2660	2	Clamp, Tension

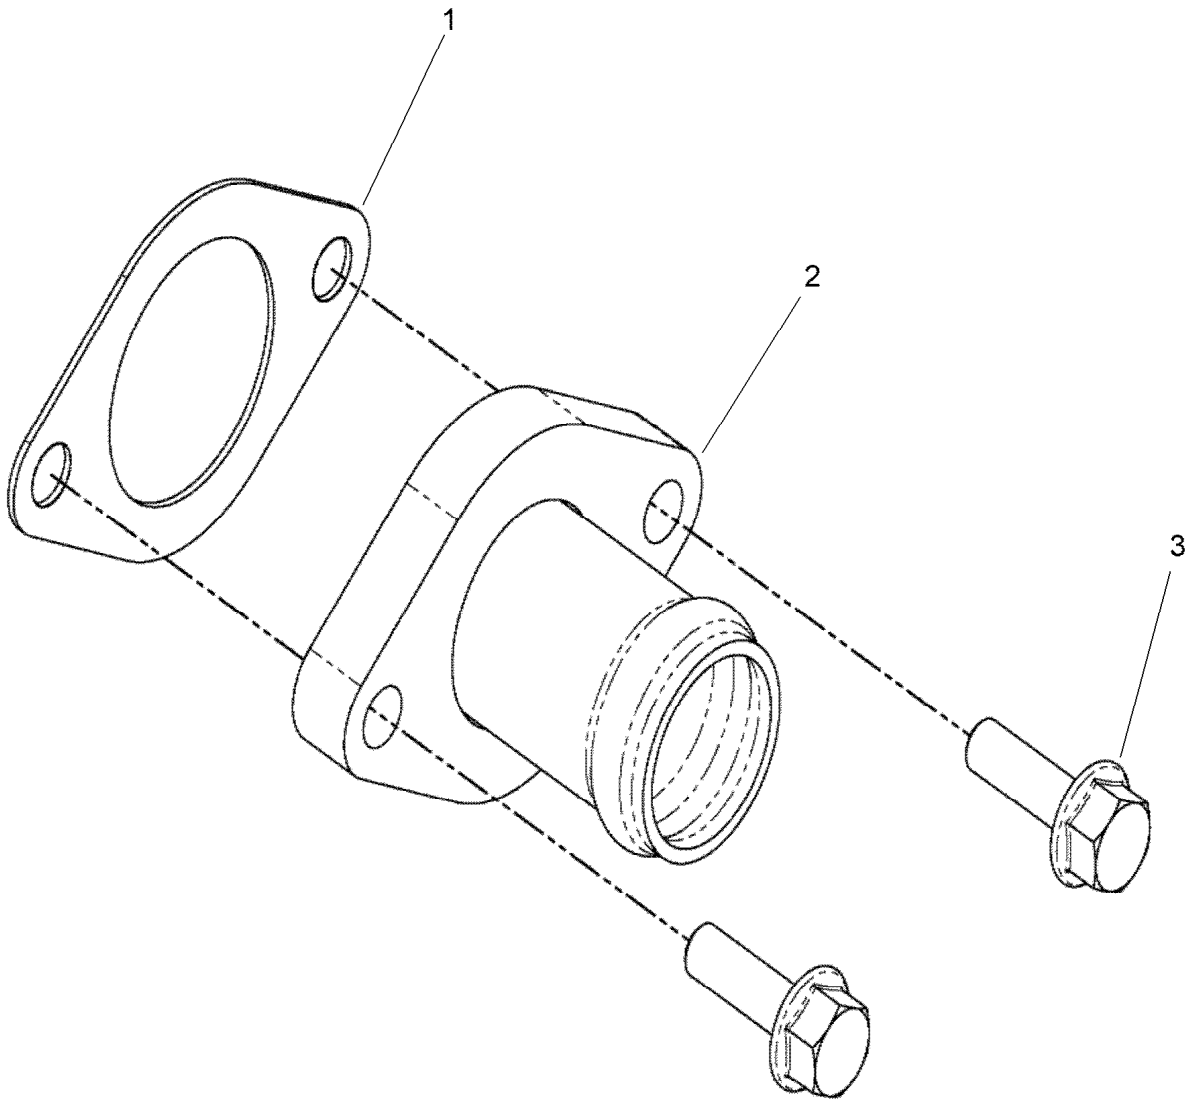 

Coolant Inlet Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2661	1	Gasket, Water Inlet
2	145-2662	1	Inlet, Coolant Straight
3	145-2663	2	Bolt, Flange

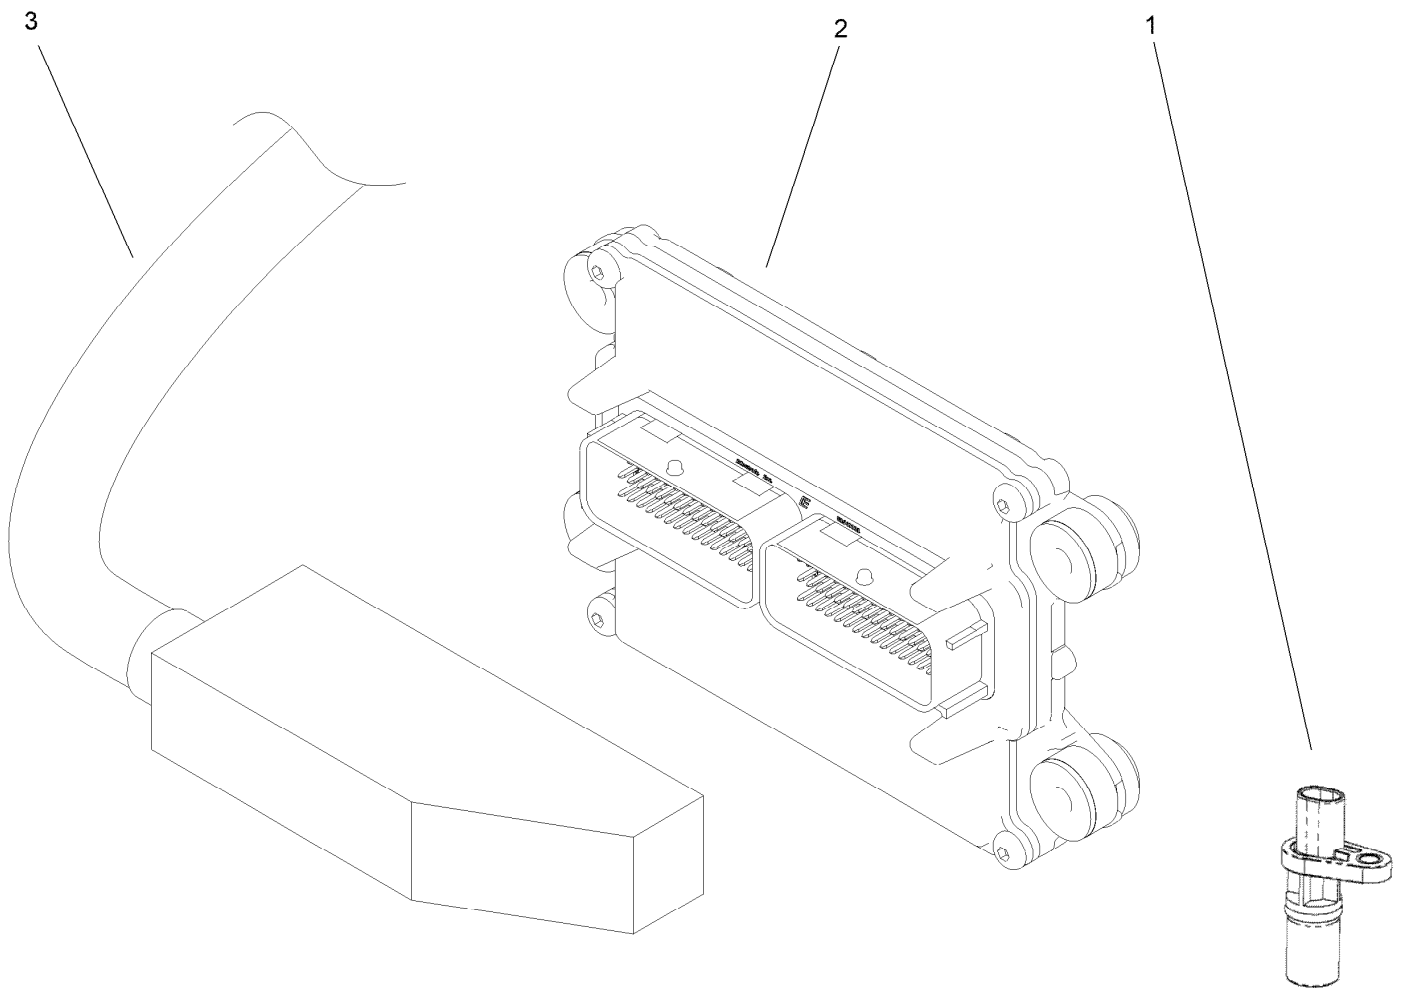 

Electrical Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2010	1	Sensor-Position, Crankshaft
2	144-2232	1	Ecu
3	145-2666	1	Harness

Attachments and Accessories

For 08101 Workman UTX 4 Passenger Utility Vehicle

Product Name	Model/Part
Canopy-Crew.....	08111
Glass Windshield and Wiper.....	08112
Polycarbonate Windshield.....	08113
Polycarbonate Doors - Standard.....	08114
Polycarbonate Doors - Crew.....	08115
Polycarbonate Rear Windshield.....	08116
Overhead Console and Wire Harness.....	08130
Work Lights.....	08131
Beacon.....	08132
Electric Bed Lift.....	08134
Supervisor Key.....	08136
Side View Mirror Kit.....	08140
Rear View Mirror Kit.....	08141
Center Bed Racking, Workman UTX/MDX.....	08142
Under Seat Storage.....	08143
27in Alloy Wheels and Tires.....	08144
Draw Bar.....	08146
Side Bed Racking, Workman UTX/MDX/GTX.....	08148
Reverse Alarm Kit.....	131-8549
Wrench-Adjuster, Spring.....	139-4678
Puller-Clutch, UTX.....	140-4672
Universal Wireless Hourmeter Kit.....	144-2436
Universal 12V Power Point Kit.....	144-2438
Spark Arrester Kit.....	144-2443
Toro Premium Synthetic Transaxle Fluid.....	145-2048

Notes:

Notes:

Notes:



Count on it.