

CE Decal Kit 107cm Rear Discharge and 132cm Side Discharge Mowers for XT Series Garden Tractors Part No. 107–3699

Installation Instructions

Installing the Decals

Install the decals in the positions indicated in the table and graphics below. Place each International decal directly over the corresponding US English decal.

Install each decal as follows:


- 1. Thoroughly clean the area where you will install the decal.
- 2. Dampen the area with water or mildly soapy water.
- 3. Peel the decal from the backing and install it in place.
- **4.** Squeegee across the surface of the decal, starting at the center of the decal and working toward the edges, using overlapping strokes.

Installing the Decals on a 132cm Mower


Installing the Sound Decal on the Mower Deck

Note: Refer to the tables for the specific decal and location to put on the correct mower deck. The 105 dB decal goes on the 132cm mower and the 100 dB decal goes on the 107cm mower.


Install the sound decal to the mower deck as shown in Figures 1 and 2.

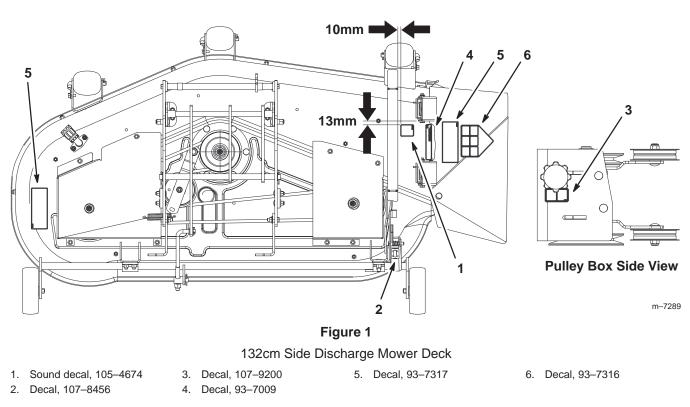

Location	U.S. English	International
(See Figure 1 for the correct location)		
1	No existing U.S. decal	105-4674
2		
	111655	107–8456
3 Qty. 2	WARNING HOT SURFACE 65-2690	107-9200
	65–2690	107–9200
4	DEFLECTOR IS NOT IN PELACE: DO NOT OPERATE.	
	92–7109	93–7009
5 Qty. 2	A DANGER CONTRACTOR OF CONTRACTOR OF CONTRA	
	92–7108	93-7317

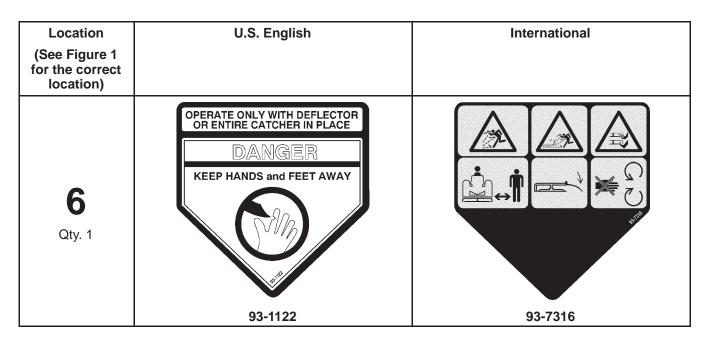

Installing the Decals on a 107cm Mower

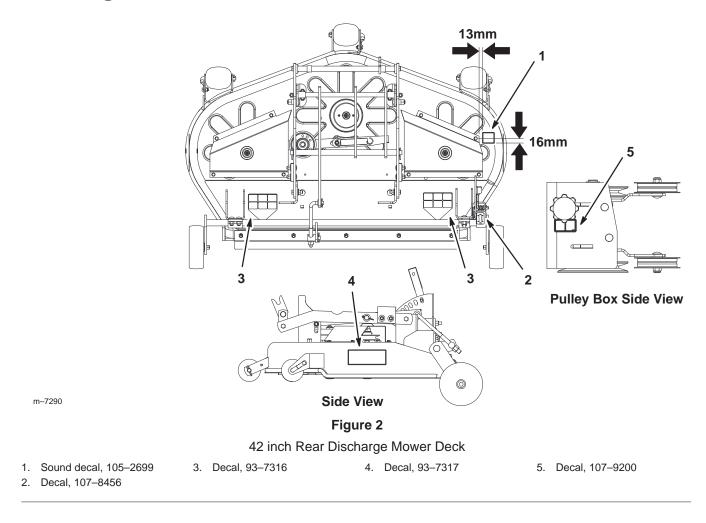

Location	U.S. English	International
(See Figure 1 for the correct location)		
1	No existing U.S. decal	LwA 100 105-2699
2	HEIGHT OF CUT LOWER RAISE 111655	107-8456
3 Qty. 2	OPERATE ONLY WITH DEFLECTOR OR ENTIRE CATCHER IN PLACE DANGER KEEP HANDS and FEET AWAY	93-7316
4 Qty. 2	BOT THEE A DANGER ROTATING BLADES UNDER ENTIRE MOWER DECK. KEEP HANDS and FEET AWAY. THROWN OBJECTS ARE DANGEROUS. KEEP DEFLECTOR IN PLACE. KEEP BYSTANDERS AWAY. 92–7108	93-7317
5 Qty. 2	A WARNING HOT SURFACE 65-2690	107-9200