



Spool Carrier Kit

for TX Compact Utility Loaders

Model No. 104-2685

Installation Instructions


Loose Parts

Note: Use the chart below to identify parts for assembly.

Description	Qty.	Use
Spool carrier	1	
Lynch pin, rectangular retainer	1	
Mounting tube	1	Installing the spool carrier
Bolt, 4 inch	1	
Bolt, 2-1/2 inch	1	
Jam nut	1	
Secondary spool carrier	1	Installing the secondary spool carrier
Lynch pin, rectangular retainer	1	
Spool of wire (not included with the kit)	1 or 2	
Washer	4	Installing spools
Lynch pin, semi-circular retainer	2	
Brake strap	2	Installing the spool brakes
Brake cover	2	

Installing the Spool Carrier

- Remove the bolt and nut from the loader arm that secures the cylinder lock, retaining the nut.

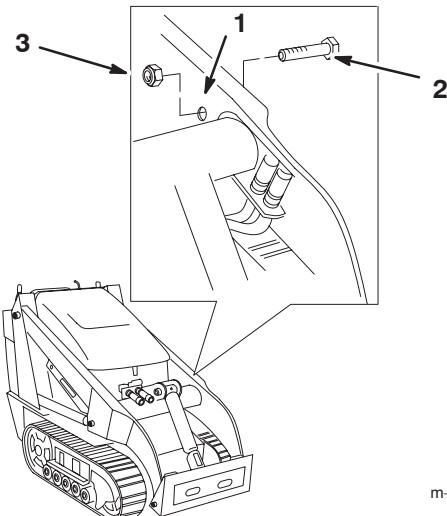

m-7699

Figure 1

- | | |
|---------------|--------|
| 1. Loader arm | 3. Nut |
| 2. Bolt | |

- Place the mounting tube bracket over the loader arm and secure it and the cylinder lock with a new bolt (4 inch) and the nut removed in step 1 (Fig. 2).

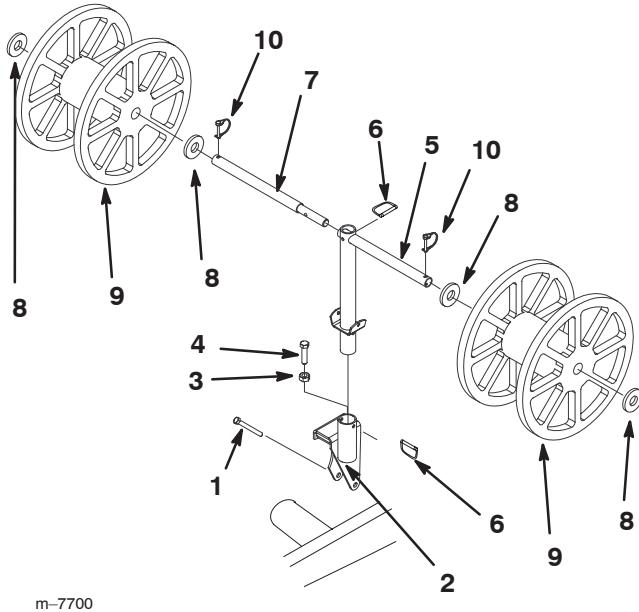


Figure 2

- | | |
|--|---|
| 1. Bolt, 4 inch | 7. Secondary spool carrier |
| 2. Mounting tube | 8. Washer |
| 3. Jam nut | 9. Spool (not supplied) |
| 4. Bolt, 2-1/2 inch | 10. Lynch pin with semi-circular retainer |
| 5. Spool carrier | |
| 6. Lynch pin with rectangular retainer | |

- Thread the jam nut onto the remaining bolt (2-1/2 inch) (Fig. 2).
- Thread the bolt into the hole in the top on the mounting tube bracket, tightening it securely against the loader arm (Fig. 2).
- Tighten the jam nut against the mounting tube bracket.
- Place the spool carrier into the mounting tube, orienting the horizontal tube on the carrier parallel with the crossbar on the traction unit (Fig. 2).
- Secure the spool carrier to the mounting tube with a lynch pin with a rectangular retainer (Fig. 2).

Installing the Secondary Spool Carrier

- Slide the secondary spool carrier into the side hole in the top of the spool carrier (Fig. 2).
- Secure the secondary spool carrier with a lynch pin with a rectangular retainer (Fig. 2).

Installing Spools

- Place a washer over the end of the spool carrier or secondary spool carrier (Fig. 2).
- Slide the spool onto the carrier (Fig. 2).
- Secure the spool with a washer and a lynch pin with a semi-circular retainer (Fig. 2).

Installing a Spool Brake (Optional)

If you have problems with the spools freewheeling and unwinding on the carrier, install the spool brakes.

- Slide a brake cover over a brake strap (Fig. 3).

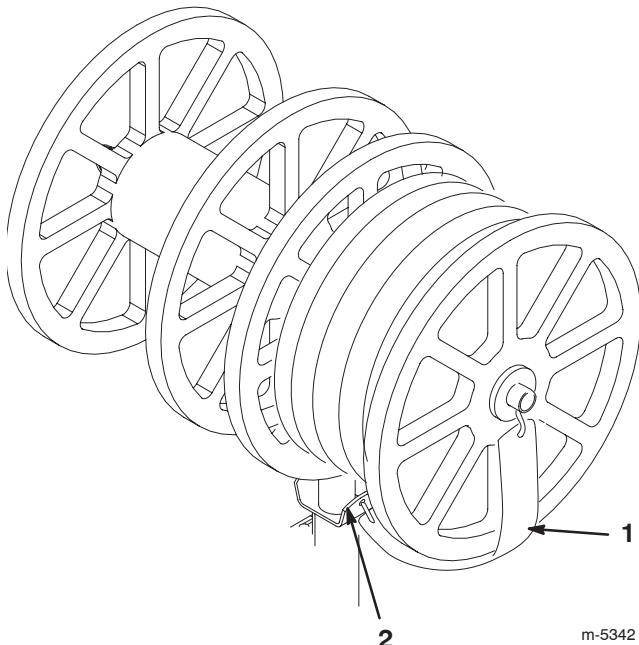


Figure 3

- | | |
|---|---------------------------------|
| 1. Brake strap with brake cover installed | 2. Bracket on the spool carrier |
|---|---------------------------------|

- Remove the lynch pin securing the spool to be braked.
- Install a hook on the brake strap through one of the holes from where you removed the lynch pin (Fig. 3), orienting the brake cover as follows:
 - If your spool is made out of plastic, place the cloth side of the cover against the spool.
 - If your spool is made out of wood, place the plastic side of the cover against the spool.
- Hook the free hook of the brake strap to the bracket on the spool carrier (Fig. 3).