

Overhaul Kit for 5 and 7 Blade Cutting Units Reelmaster® 335-D, 3500-D, 450-D and 4500-D

Model No. 95-4389

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2005 All Rights Reserved

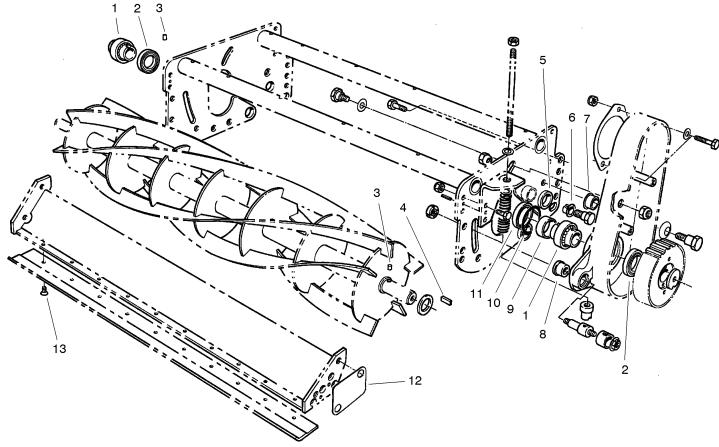

Note: For cutting units with serial number 39999 and down use flange bushing p/n 72-0430 Qty. (2). Not supplied with this kit.

5 and 7 Blade Overhaul Kit Assembly

Ref	Part No.	Qty.	Description
1	59-6140		Bearing
2	93-1414	3	Seal-Grease
3	48-8880	2	Pin-Dowel
4	75-7570	1	Key
5	62-6110	4	Bushing ASM
6	256-292	4	Bushing-Flange, NI
7	256-252	2	Bearing-Flange
8	92-9252	2	Bushing-Flange (Serial No. 40001 And Up)
9	92-9251	1	Sleeve-Wear
10	32151-71	1	Ring-Retaining
11	92-9250	1	Seal-Grease
12	76-3580	2	Spacer-Bedbar And Sideplate
13	57-4910	11	Screw-Special