



Z300 Z Master[®]

With 34in 7-Gauge Side Discharge Mower

Model No. 79408 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck Connection Assembly	 3	Piston and Crankshaft Assembly Kawasaki FH580V-AS40-R	 22
Deck Assembly	 4	Valve and Camshaft Assembly Kawasaki FH580V-AS40-R	 23
Deck Decal Assembly No. 114-0503	 5	Lubrication Equipment Assembly Kawasaki FH580V-AS40-R	 24
Deflector Assembly No. 110-9917	 6	Cooling Equipment Assembly Kawasaki FH580V-AS40-R	 25
Idler Assembly No. 112-3787	 7	Electric Equipment Assembly Kawasaki FH580V-AS40-R	 26
Spindle Assembly No. 110-9962	 8	Control Equipment Assembly Kawasaki FH580V-AS40-R	 27
Brake Linkage Assembly	 9	Carburetor Assembly Kawasaki FH580V-AS40-R	 28
Front Frame Assembly	 10	Air Filter and Muffler Assembly Kawasaki FH580V-AS40-R	 29
Frame Decal Assembly No. 114-0525	 11	Fuel Tank and Valve Assembly Kawasaki FH580V-AS40-R	 30
Caster and Height-of-Cut Assembly	 12	Starter Assembly Kawasaki FH580V-AS40-R	 31
Seat Assembly	 13	Label Assembly Kawasaki FH580V-AS40-R	 32
Steering Control Assembly	 14	Attachments and Accessories List	 33
Fuel Tank Assembly	 15		
Engine Mounting Assembly	 16		
Hydraulic Drive Assembly	 17		
RH Transmission Assembly No. 109-5846	 18		
LH Transmission Assembly No. 109-5847	 19		
Electrical Assembly	 20		
Cylinder and Crankcase Assembly Kawasaki FH580V-AS40-R	 21		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❸ Obtain from your local Kawasaki dealer

- ❷ Not serviced separately

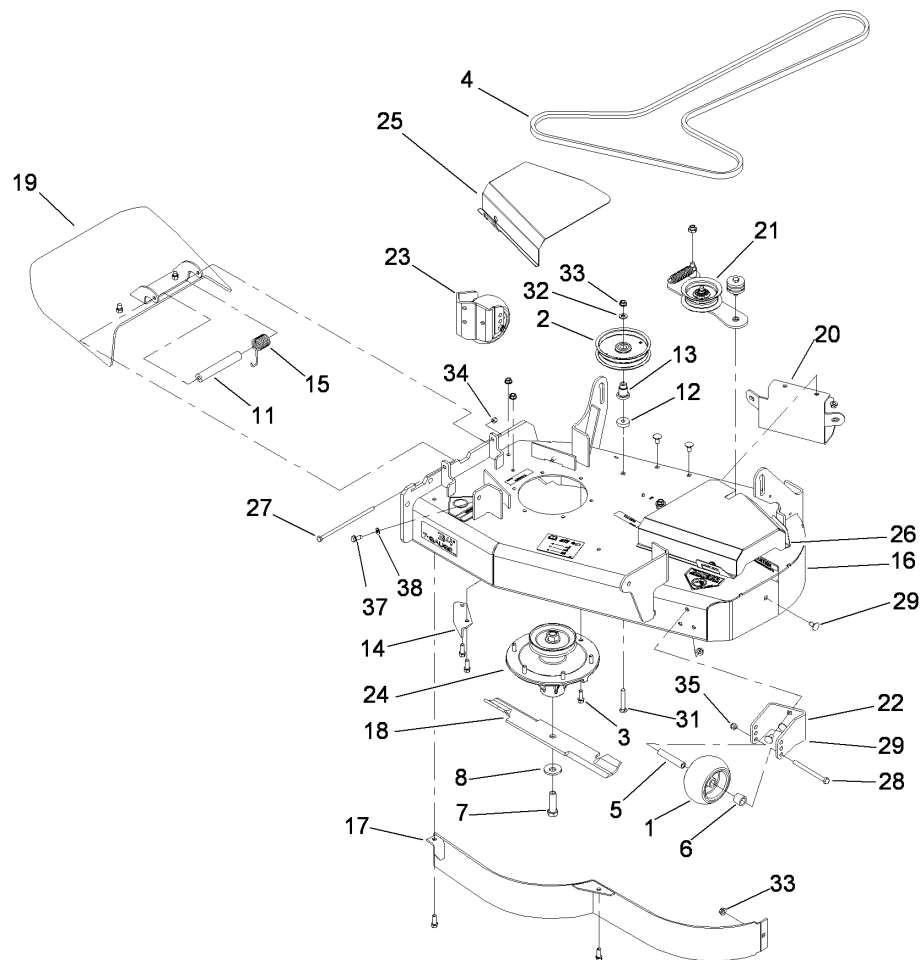


Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-603299	2	Roller-Scalp, Anti	27	322-50	1	Screw-HH
2	1-613098	1	Pulley-Idler	28	323-23	2	Screw-HH
3	92-1624	16	Screw	29	3231-1	11	Screw-CARR
4	114-0451	1	Belt	31	3231-31	1	Screw-CARR
5	98-7912	2	Tube-Spanner	32	3256-24	1	Washer-Flat
6	98-7913	2	Tube-Spacer	33	3290-357	14	Nut-HHF, Whiz
7	51-4060	2	Screw-Blade	34	3296-29	1	Nut-Lock, NI
8	103-0865	2	Washer-Blade Bolt, Heavy	35	3296-39	2	Nut-Lock, NI
11	105-4622	1	Spacer	37	32144-70	4	Screw-HWHTF
12	105-7788	1	Spacer	38	3256-23	4	Washer-Flat
13	106-3214	1	Mount-Pulley				
14	107-8541-01	1	Baffle-Discharge				
15	108-4052	1	Spring-Torsion				
16	114-0503	1	Deck Decal ASM				
17	110-1515-01	1	Baffle				
18	110-9915-03	2	Blade-Rotary, 17.50 High Flow				
19	110-9917	1	Deflector ASM				
20	110-9926-01	1	Plate-Skid				
21	112-3787	1	Idler ASM				
22	110-9946-01	1	Plate-Support, Wheel				
23	110-9949-01	1	Mount-Wheel, RH				
24	110-9962	2	Spindle ASM				
25	110-9959-01	1	Cover-RH				
26	110-9968-01	1	Cover-LH				

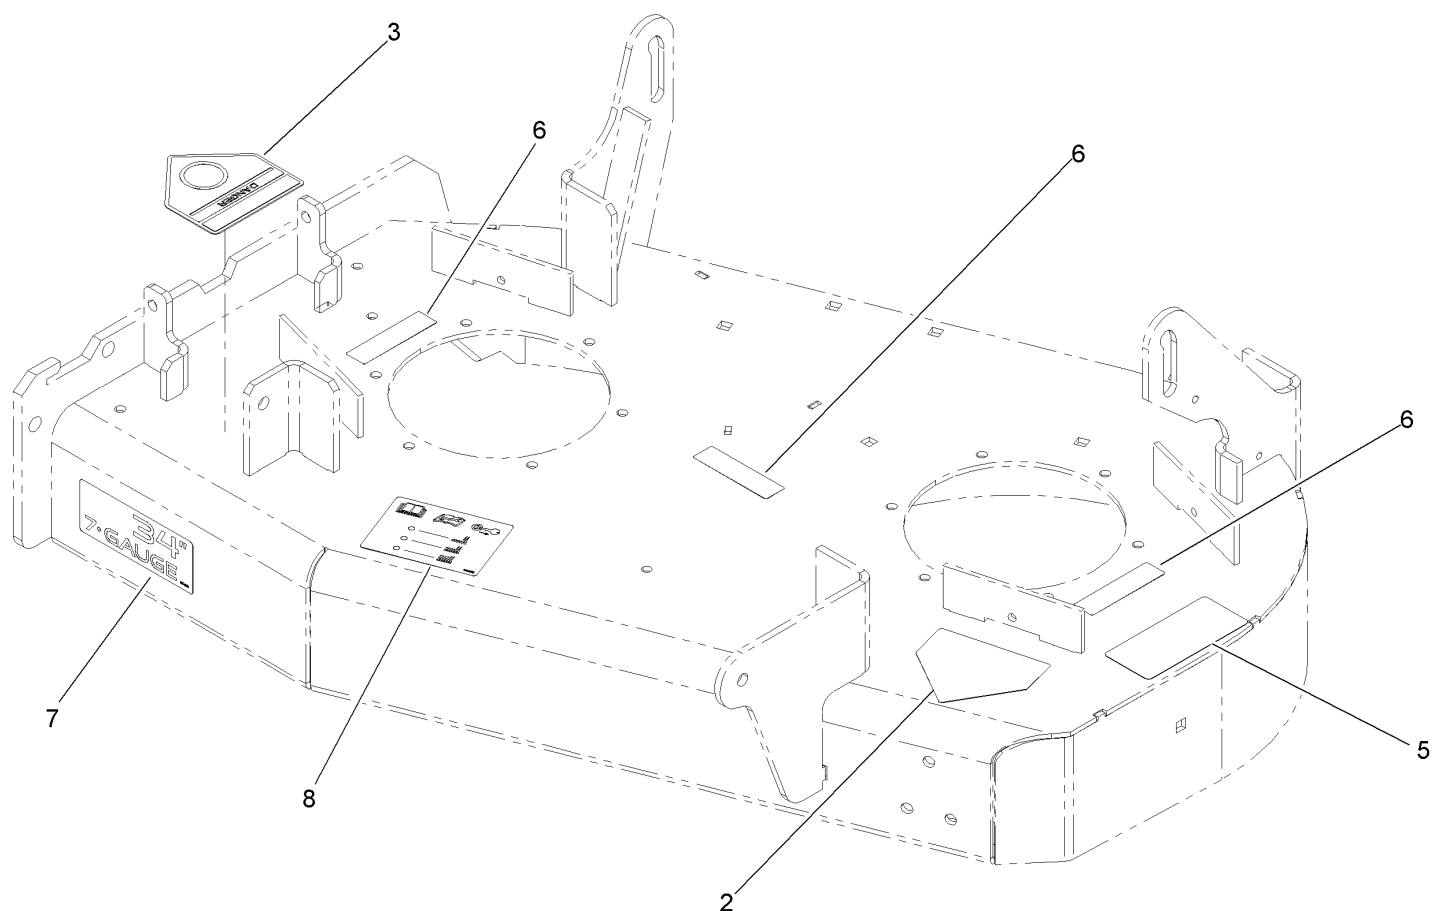


Deck Decal Assembly No. 114-0503

Ref	Part No.	Qty.	Description
2	1-403005	1	Decal-Danger
3	54-9220	1	Decal-Danger
5	68-8340	1	Decal-Torque
6	98-5954	3	Decal-Cover, Missing
7	112-3793	1	Decal
8	112-3858	1	Decal-Anti Scalp

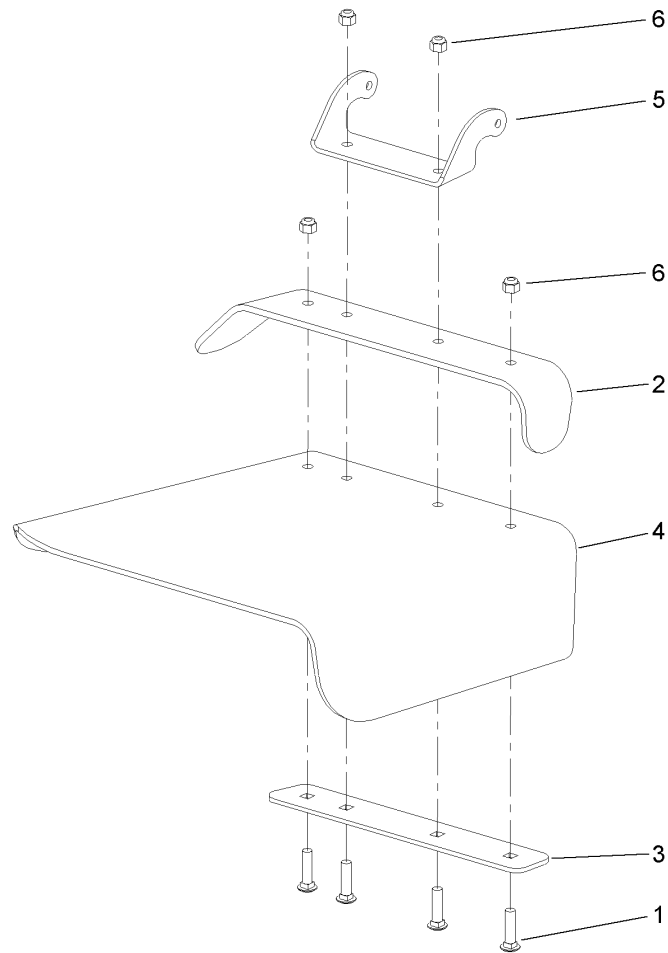


Deflector Assembly No. 110-9917

Ref	Part No.	Qty.	Description				
1	3231-4	4	Screw-CARR				
2	110-0792-01	1	Deflector				
3	110-0793-03	1	Strap-Discharge				
4	110-0791	1	Deflector-Rubber				
5	110-9923-01	1	Bracket-Mounting, Deflector				
6	3296-39	4	Nut-Lock, NI				

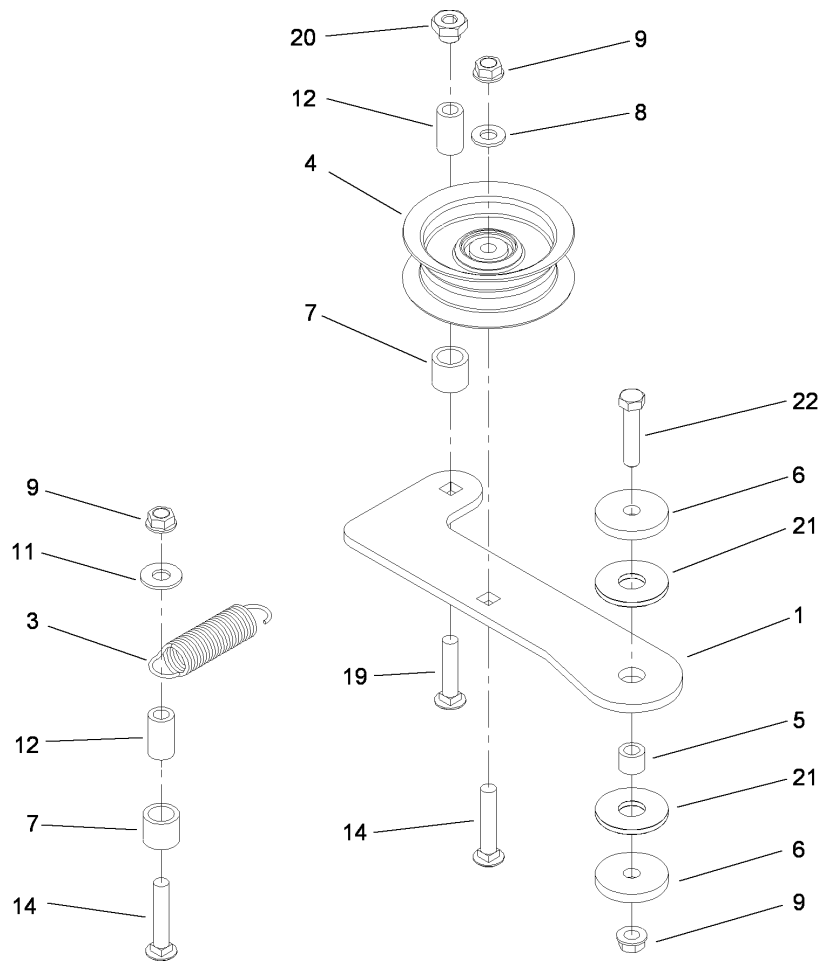


Idler Assembly No. 112-3787

Ref	Part No.	Qty.	Description				
1	110-9996	1	Arm-Idler				
3	108-4056	1	Spring-Extension				
4	106-2175	1	Pulley-Idler, Flat				
5	1-413088	1	Bushing-Lever, Lift				
6	110-9981	2	Washer-Plain				
7	108-4063	2	Spacer-Rubber				
8	3256-24	1	Washer-Flat				
9	3290-357	3	Nut-HHF, Whiz				
11	3256-4	2	Washer-Flat				
12	1-603401	3	Spacer-Fender				
14	3231-6	2	Screw-CARR				
19	3231-5	1	Screw-CARR				
20	103-9933	1	Nut-Shoulder				
21	114-0463	2	Washer-Friction, Composite				
22	323-9	1	Screw-HH				

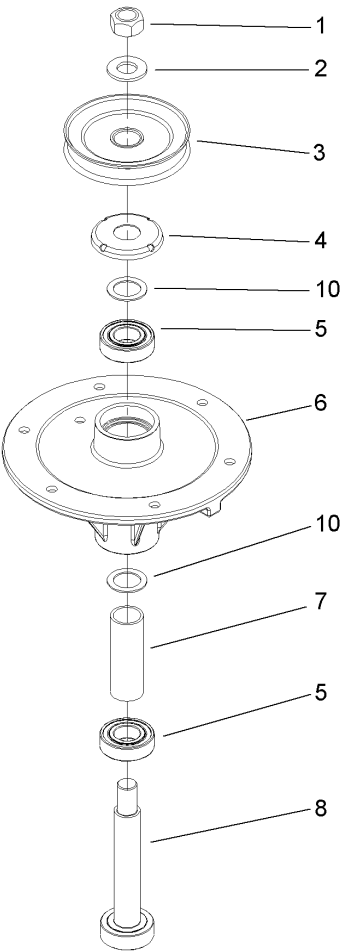


Spindle Assembly No. 110-9962

Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	110-9932	1	Pulley				
4	106-3204	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	108-6696	1	Housing-Spindle				
7	107-8502	1	Spacer-Bearing				
8	110-0726	1	Shaft-Spindle				
10	10-8110	2	Washer-Thrust				

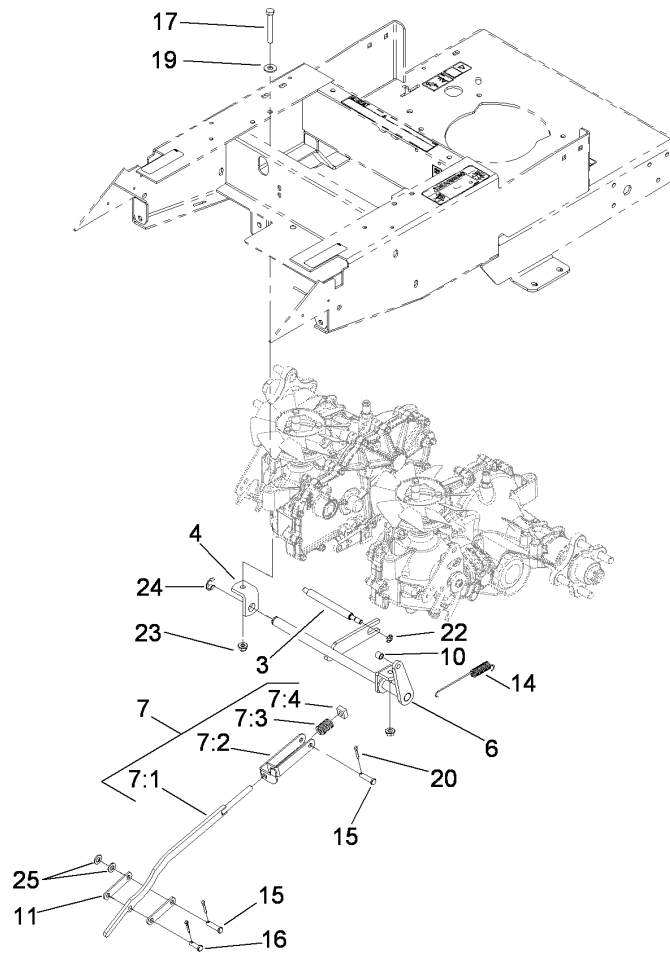


Brake Linkage Assembly

Ref	Part No.	Qty.	Description				
3	103-9408	1	Bar-Equalizer				
4	103-9409	1	Bracket-Pivot, Brake				
6	109-5376	1	Bellcrank-Brake				
7		1	Brake Link ASM				
7:1	109-5370	1	Link-Brake				
7:2	114-0548	1	Clevis-Brake				
7:3	103-9925	1	Spring-Brake				
7:4	103-9926	1	Nut-Square				
10	1-633545	1	Spacer				
11	109-0223	2	Link-Center, Over				
14	109-2861	1	Spring-Return, Brake				
15	283-6	2	Pin-Clevis				
16	283-75	1	Pin-Clevis				
17	322-12	2	Screw-HH				
19	3256-3	2	Washer-Flat				
20	3272-10	3	Pin-Cotter				
22	32120-35	1	Ring-Retaining, EXT				
23	104-8300	2	Nut-Flange, NI				
24	32120-19	1	E-Ring				
25	3256-23	2	Washer-Flat				

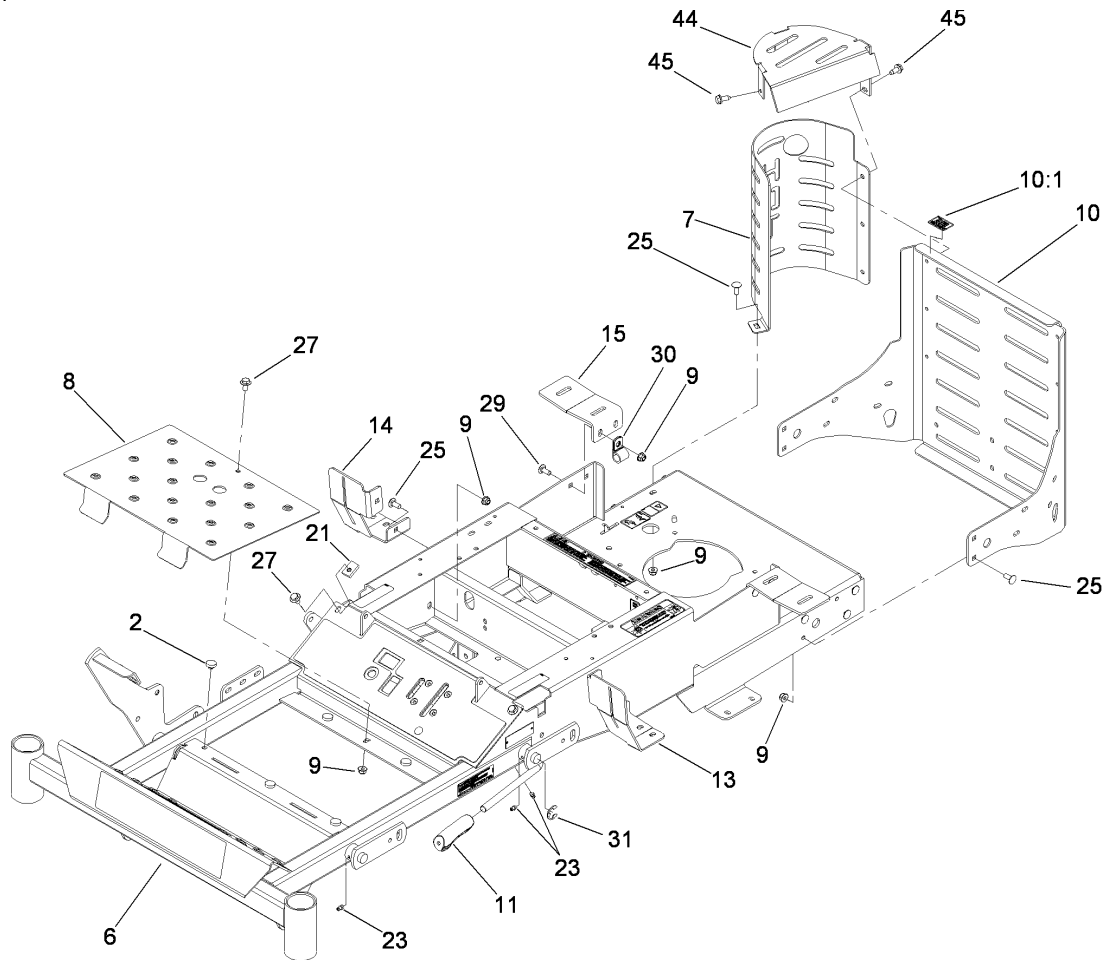


Front Frame Assembly

Ref	Part No.	Qty.	Description				
2	1-513658	5	Bumper				
6	114-0525	1	Frame ASM				
7	103-9343-03	1	Guard-Muffler				
8	103-9381-03	1	Plate, Floor				
9	104-8300	19	Nut-Flange, NI				
10	114-0543	1	Rear Guard ASM				
10:1	93-8069	1	Decal-Surface, Hot				
11	109-0375	1	Grip-Lever, Brake				
13	109-2421-03	1	Mount-Tank, Fuel (LH)				
14	109-2422-03	1	Mount-Tank, Fuel (RH)				
15	109-2429-03	2	Bracket-Fuel Tank, Rear				
21	109-2605	2	Motion Stop				
23	302-19	5	Fitting-Grease				
25	3230-23	13	Screw-CARR				
27	3234-7	3	Screw-HHF				
29	3230-16	4	Screw-CARR				
30	1-603727	2	Clip-Loom				
31	32151-48	1	E-Ring				
44	114-0481-03	1	Shield-Heat				
45	32144-70	5	Screw-HWHTF				

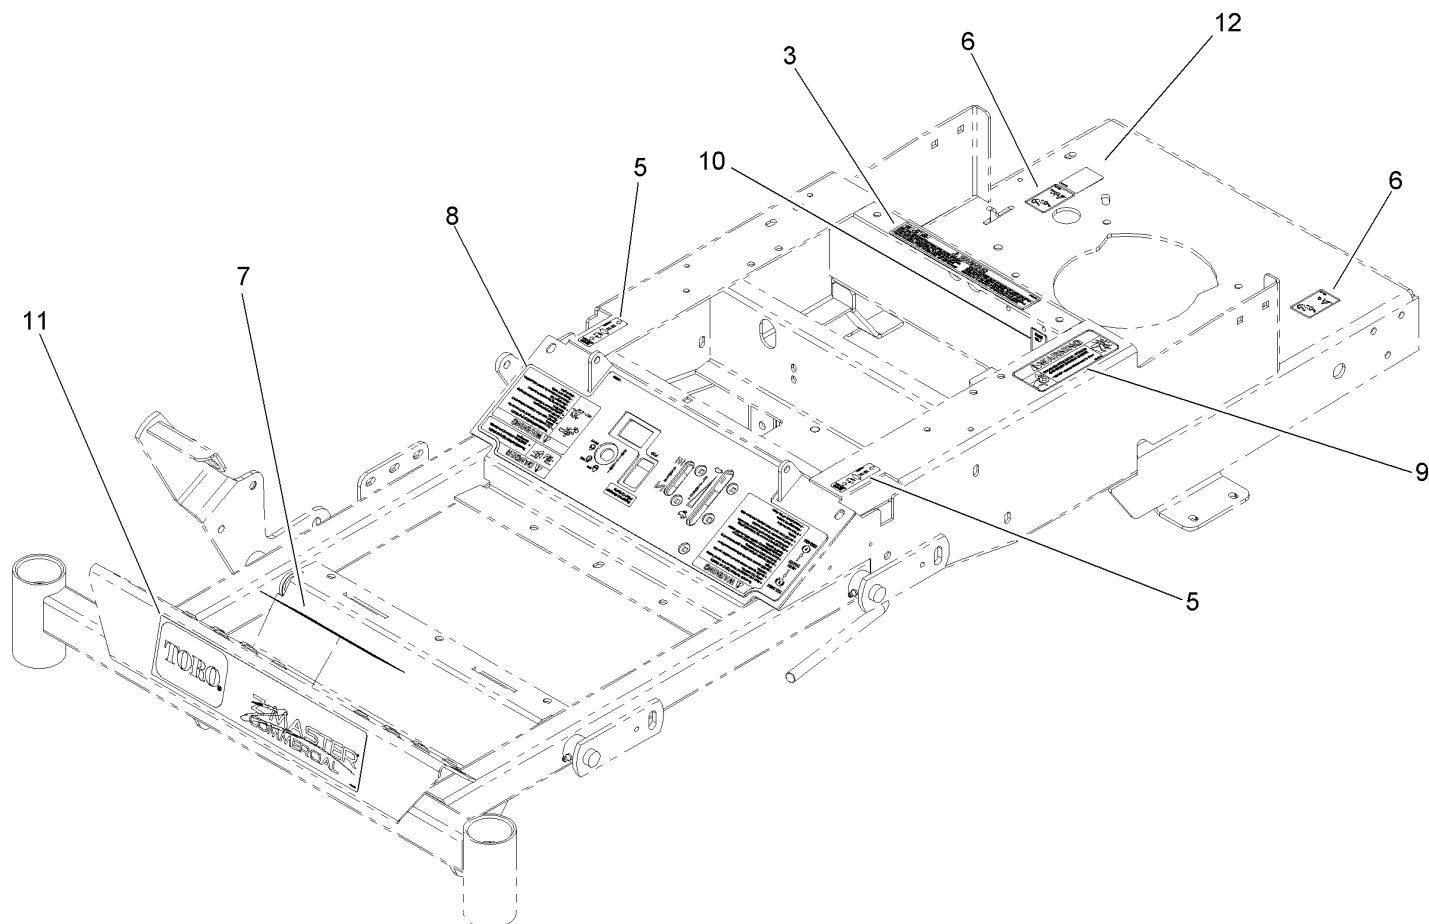


Frame Decal Assembly No. 114-0525

Ref	Part No.	Qty.	Description				
3	1-513747	1	Decal-Battery				
5	99-8936	2	Decal-Control, Motion				
6	112-3854	2	Decal-Transport, Ce				
7	109-2490	1	Decal-Slope, Danger				
8	112-3833	1	Decal-Console				
9	109-2862	1	Decal-Devices, Rotating				
10	109-2539	1	Decal-Relay				
11	112-3837	1	Decal				
12	93-8069	1	Decal-Surface, Hot				

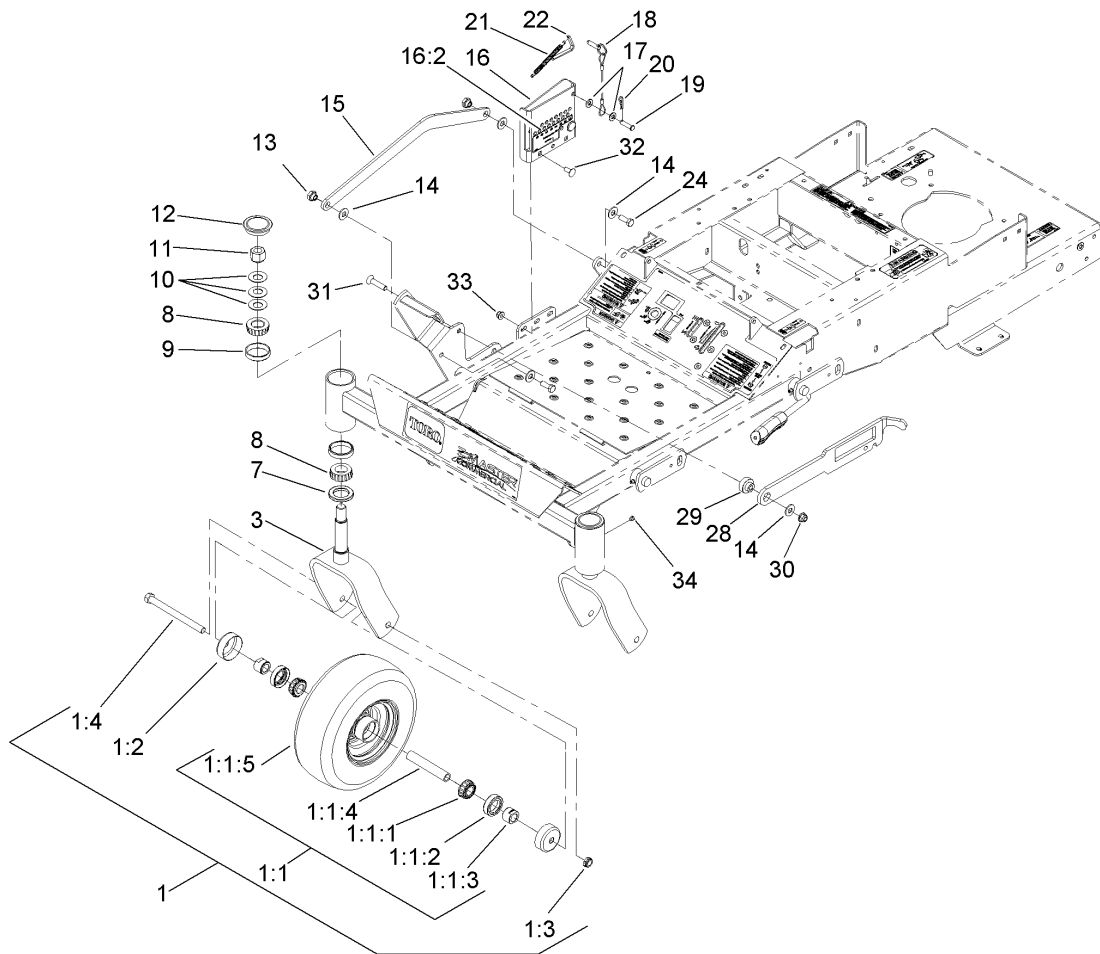

Caster and Height-of-Cut Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-3810	2	Wheel And Bearing ASM	19	283-6	1	Pin-Clevis
2	112-3810	1	Wheel Bearing ASM	20	1-806003	1	Pin-Hair
1:1:1	1-633585	2	Bearing-Cone, Taper	21	109-2416	1	Spring-Adjust, Height
1:1:2	103-0063	2	Seal-Caster	22	109-2620	1	Pawl-Control, Height
1:1:3	103-3051	2	Spacer-Nut	24	323-6	2	Screw-HH
1:1:4	103-3157	1	Axle-Caster	28	109-2410	1	Bar-Adjust, Height
1:1:5	110-9965	1	Wheel And Tire ASM	29	103-9934	1	Bushing
1:2	103-2768	2	Guard-Seal	30	104-8301	1	Nut-Flange, NI
1:3	3296-45	1	Nut-Lock, NI	31	3289-19	1	Screw-FH
1:4	325-20	1	Screw-HH	32	3230-23	2	Screw-CARR
3	103-8618-01	2	Fork-Caster	33	104-8300	2	Nut-Flange, NI
7	1-543511	2	Seal-Grease	34	1-811010	2	Plug
8	1-543509	4	Bearing-Roller, Tapered				
9	1-543508	4	Cup-Bearing				
10	1-633508	6	Washer-Bellville				
11	3296-51	2	Nut-Lock, NI				
12	103-4882	2	Cap-Grease				
13	103-9933	2	Nut-Shoulder				
14	63-8410	5	Washer				
15	103-9932	1	Link-Control, Deck				
16	109-3544	1	Height Adjust ASM				
16:2	109-2463	1	Decal-Height, Deck				
17	1-303334	2	Washer-Spring				
18	109-3323	1	Height Pin W/Lanyard ASM				

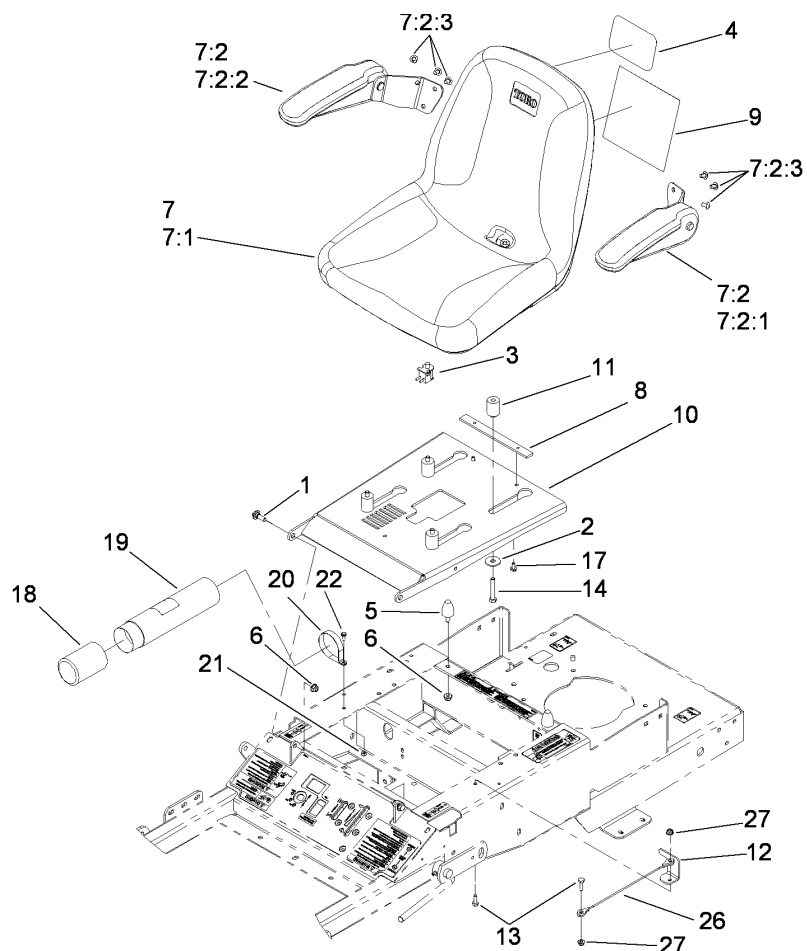

Seat Assembly


Ref	Part No.	Qty.	Description
1	27-0410	2	Screw-Shoulder
2	63-8410	4	Washer
3	82-2190	1	Switch-Bail
4	94-2579	1	Decal
5	103-9376	2	Bumper-Seat
6	104-8300	4	Nut-Flange, NI
7	112-3845	1	Seat (With Arm Rests)
7:1	112-3846	1	Seat
7:2	108-6163	1	Armrest Kit
7:2:1	110-6569	1	LH Armrest Kit
7:2:2	110-6570	1	RH Armrest Kit
7:2:3	108-6179	6	Screw-HSBH
8	109-2427-03	1	Bar-Stop, Seat
9	112-3836	1	Decal-Service
10	109-2607-03	1	Bracket-Seat
11	109-2608	4	Spacer
12	114-0507	1	Bracket-Seat Holddown
13	321-6	2	Screw-HH
14	322-10	4	Screw-HH
17	32144-4	2	Screw-HWH
18	104-7048	1	Cap-Housing
19	104-7050	1	Housing-Manual
20	2412-120	1	R-Clamp
21	3296-2	1	Nut-Lock

Ref	Part No.	Qty.	Description
22	3290-321	1	Screw-HWH
26	109-2628	1	Cable-Stop, Seat
27	104-7201	2	Nut-HF

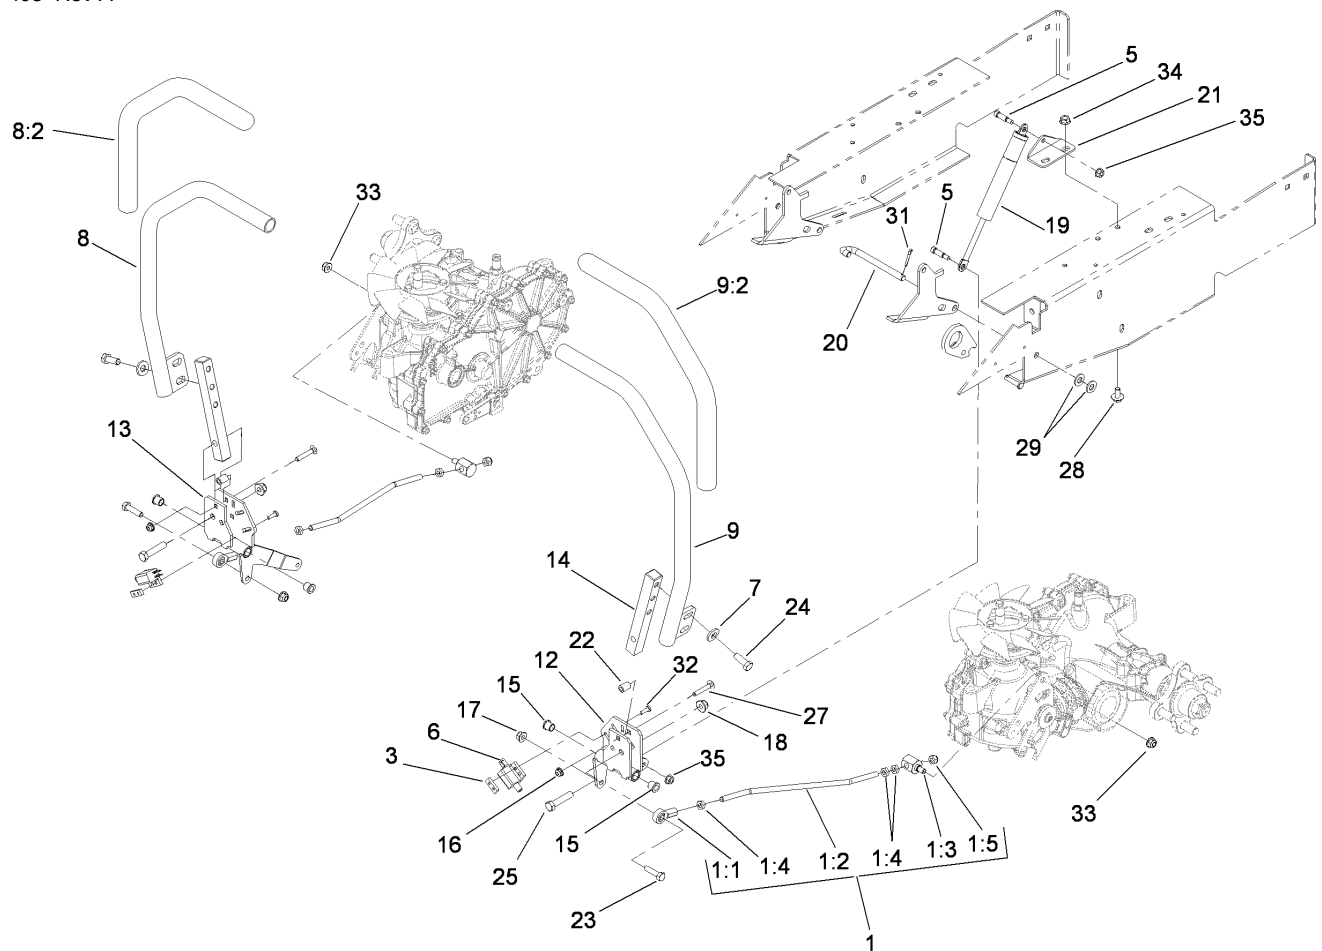

Steering Control Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②1		2	Steering Rod ASM	22	1-633545	4	Spacer
1:1	1-543017	1	Balljoint-RH	23	322-6	2	Screw-HH
1:2	103-9407	1	Rod-Steering, LH	24	323-6	4	Screw-HH
1:3	103-9373	1	Trunnion	25	323-9	2	Screw-HH
1:4	3220-2	3	Nut-Jam	27	3229-4	4	Screw-CARR
1:5	3296-4	1	Nut-Lock	28	3234-7	4	Screw-HHF
3	1-633181	2	Plate-Tapped	29	3256-24	2	Washer-Flat
5	1-809057	4	Screw-HSH	31	3272-10	2	Pin-Cotter
6	65-7410	2	Switch-Pole, Single	32	3290-500	4	Screw-PPH
7	98-5975	4	Washer-Belleville	33	104-8300	2	Nut-Flange, NI
8	112-3814	1	RH Control Lever ASM	34	32128-20	4	Nut-HF
8:2	108-5213	1	Grip-Foam	35	32128-33	4	Nut-HF
9	112-3815	1	LH Control Lever ASM				
9:2	108-5213	1	Grip-Foam				
12	103-9411	1	Control-Steering, RH				
13	103-9413	1	Control-Steering, LH				
14	103-9414	2	Mount-Post, Lever				
15	103-9928	4	Bearing				
16	104-7201	4	Nut-HF				
17	104-8300	2	Nut-Flange, NI				
18	104-8301	2	Nut-Flange, NI				
19	109-2339	2	Damper-Control, Motion				
20	109-2423	2	Shaft-Pivot, Control				
21	109-2428	2	Bracket-Damper				

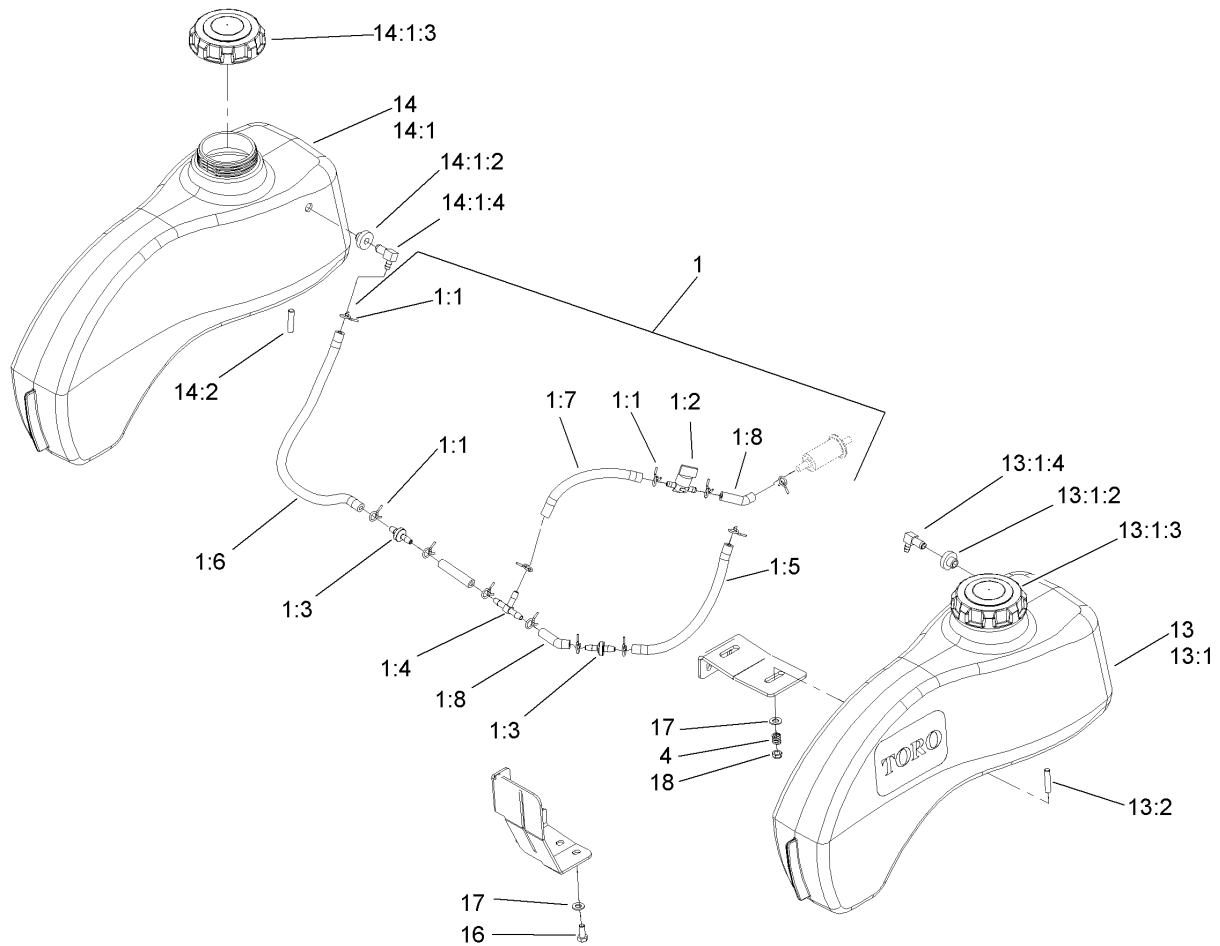

Fuel Tank Assembly


Ref	Part No.	Qty.	Description
②1		1	Fuel Line ASM
1:1	1-303077	12	Clamp
1:2	1-603770	1	Valve-Fuel
1:3	99-5000	2	Valve-Check, Fuel
1:4	99-5005	1	Fitting-Tee, Barbed
1:5	107-7684	1	Hose-Fuel
1:6	108-4582	1	Hose-Fuel
1:7	109-0293	1	Hose-Fuel
1:8	109-0304	3	Hose-Fuel
4	1-633349	4	Spring-Tank, Fuel
13	112-3780	1	LH Tank ASM (W/Studs)
②13:1		1	LH Tank ASM
13:1:2	104-7789	1	Bushing
13:1:3	109-0346	1	Cap-Fuel, Gas
13:1:4	109-2420	1	Fitting-Fuel (W/Line And Screen)
13:2	1-633023	2	Stud
14	112-3783	1	RH Tank ASM (W/Studs)
②14:1		1	RH Tank ASM
14:1:2	104-7789	1	Bushing
14:1:3	109-0346	1	Cap-Fuel, Gas
14:1:4	109-2420	1	Fitting-Fuel (W/Line And Screen)
14:2	1-633023	2	Stud
16	322-3	2	Screw-HH
17	3256-23	6	Washer-Flat

Ref	Part No.	Qty.	Description
18	3296-47	4	Nut-Lock, NI

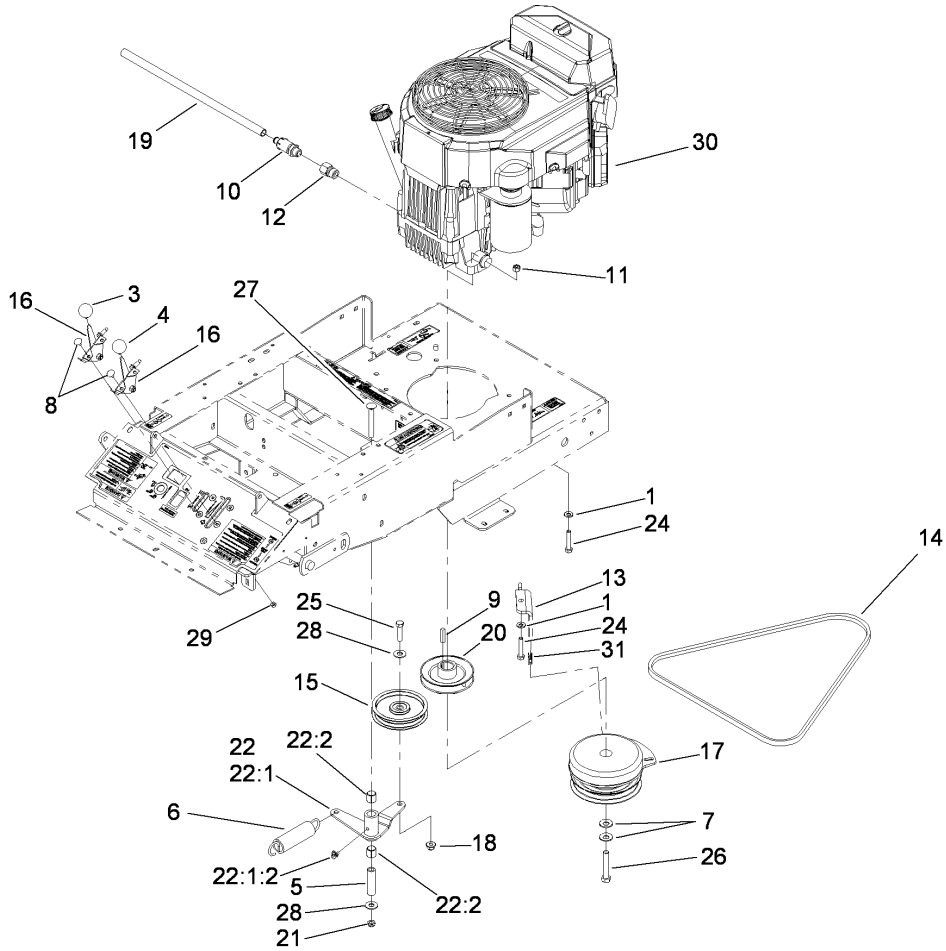


Engine Mounting Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-303334	4	Washer-Spring	24	322-9	4	Screw-HH
3	1-513592	1	Knob-Ball	25	323-8	1	Screw-HH
4	1-513593	1	Knob-Ball, Black	26	3212-10	1	Screw-HH
5	1-603384	1	Bushing-Pivot, Idler	27	3231-10	1	Screw-CARR
6	108-4056	1	Spring-Extension	28	3256-4	2	Washer-Flat
7	1-603610	2	Washer-Spring	29	3296-2	4	Nut-Lock
8	1-807513	4	Bolt-CARR	30		1	Engine-Kawasaki, FH580V-As40-R
9	13-2840	1	Key-Square	31	109-3765	1	Bumper
10	92-6877	1	Valve-Drain, Oil				
11	3296-29	4	Nut-Lock, NI				
12	103-1966	1	Adapter				
13	103-9356-03	1	Rotation-Stop, Clutch				
14	112-3799	1	Belt-V				
15	103-9401	1	Idler				
16	103-9946	2	Throttle Control ASM				
17	103-9950	1	Clutch				
18	104-8301	1	Nut-Flange, NI				
19	106-7022	1	Tube-Drain, Oil				
20	109-0393	1	Pulley-Engine				
21	3296-59	1	Nut-Lock, NI				
22	109-3119	1	Idler Hydro ASM				
22:1		1	Arm-Idler				
22:1:2	302-40	1	Fitting-Grease				
22:2	1-513034	2	Sleeve-Bearing				

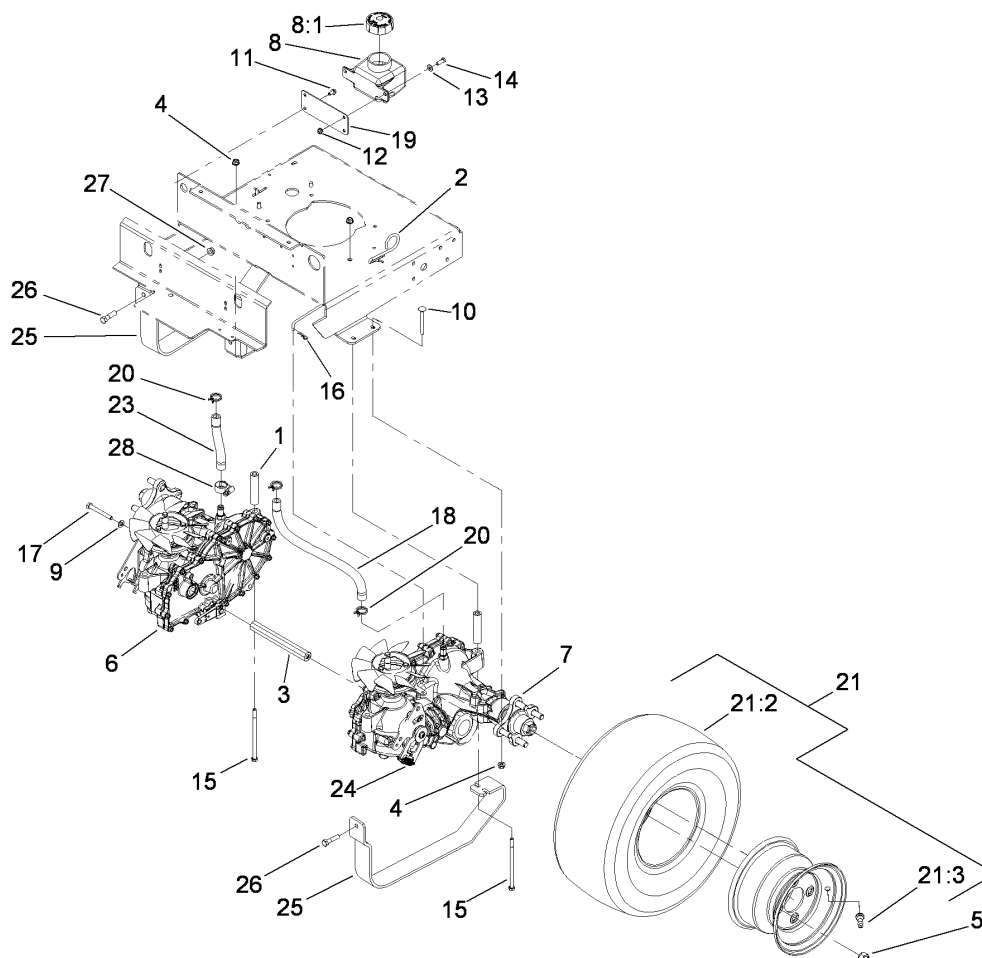


Hydraulic Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	103-9397	2	Spacer-Hydro	21:99	107-2491	1	Tube-Tire
2	103-9380	2	Rod-Bypass, Hydro	23	109-3319	1	Hose-HYD
3	103-9398	1	Spacer-Axle	24	109-2631	2	Spring-Return, Neutral
4	104-8300	6	Nut-Flange, NI	25	114-0469-03	2	Guard-Transmission
5	242-50	8	Nut-Lug	26	323-8	2	Screw-HH
6	109-5846	1	Transmission-RH	27	3290-357	2	Nut-HHF, Whiz
7	109-5847	1	Transmission-LH	28	109-6801	1	Clamp-Hose
8	109-2250	1	Vent-Tank, Hydro				
8:1	109-3320	1	Cap-Reservoir, Hydraulic				
9	98-5975	2	Washer-Belleville				
10	3230-9	4	Screw-CARR				
11	32144-4	2	Screw-HWH				
12	104-7201	2	Nut-HF				
13	3256-22	2	Washer-Flat				
14	321-4	2	Screw-HH				
15	1-800286	2	Screw-HH				
16	1-806003	2	Pin-Hair				
17	323-11	2	Screw-HH				
18	109-3459	1	Hose-HYD				
19	103-9350-03	1	Plate-Mount, Tank				
20	109-3322	4	Clamp-Hose				
21	112-3794	2	Wheel And Tire ASM				
21:2	112-3797	1	Tire				
21:3	232-27	1	Stem-Valve				

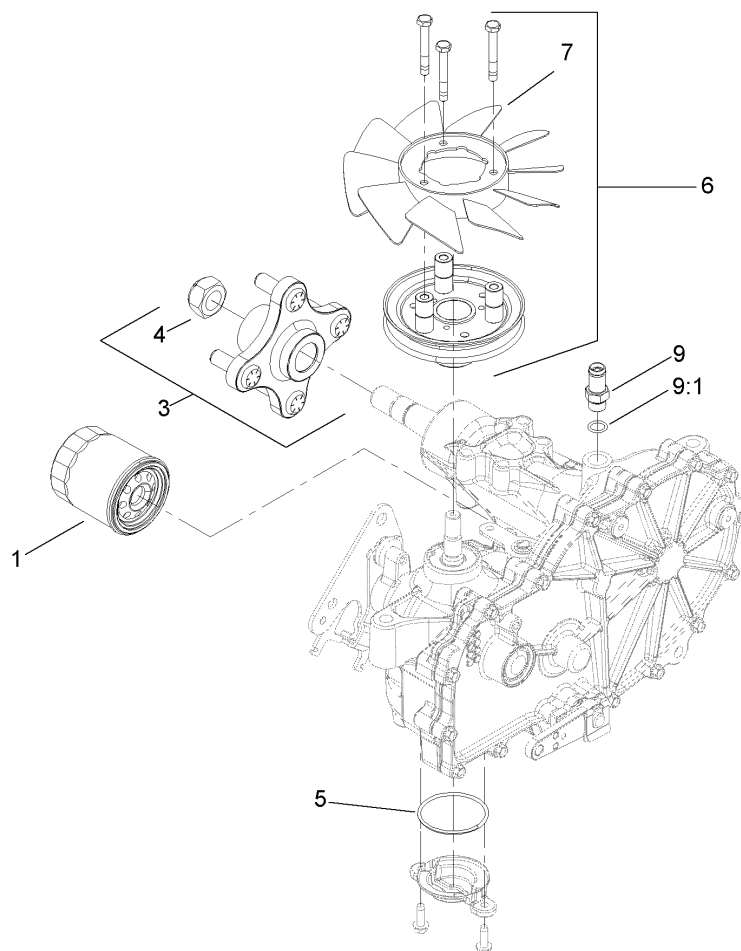


RH Transmission Assembly No. 109-5846

Ref	Part No.	Qty.	Description				
1	109-3321	1	Element-Oil Filter, HYD				
①2	109-3537	1	Complete Seal Kit				
3	109-3538	1	Hub-Kit				
4	109-3536	1	Nut-Hub				
5	109-3540	1	O-Ring-Seal				
6	109-3541	1	Fan And Pulley Kit				
7	109-3542	1	Fan				
9	109-3278	1	Adapter-Straight				
9:1	1-603921	1	O-Ring				

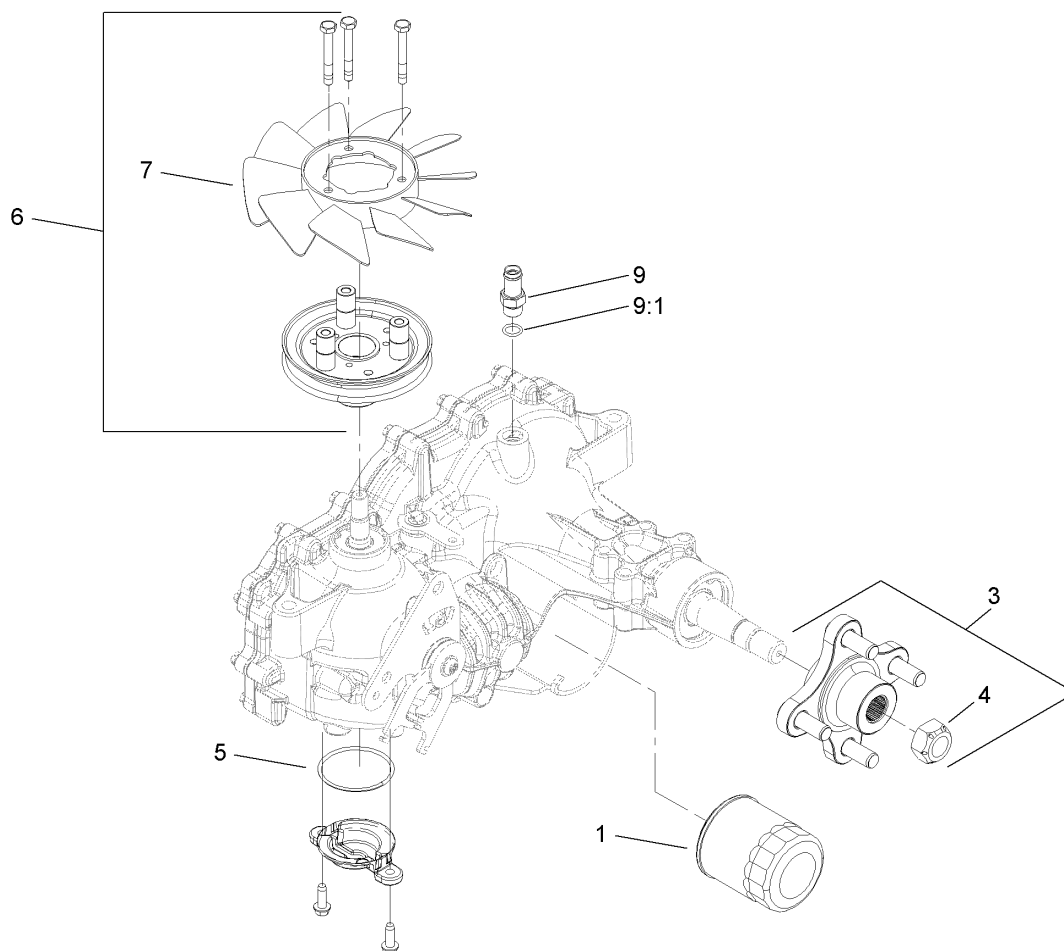

LH Transmission Assembly No. 109-5847


Ref	Part No.	Qty.	Description				
1	109-3321	1	Element-Oil Filter, HYD				
①2	109-3537	1	Complete Seal Kit				
3	109-3538	1	Hub-Kit				
4	109-3536	1	Nut-Hub				
5	109-3540	1	O-Ring-Seal				
6	109-3541	1	Fan And Pulley Kit				
7	109-3542	1	Fan				
9	109-3278	1	Adapter-Straight				
9:1	1-603921	1	O-Ring				

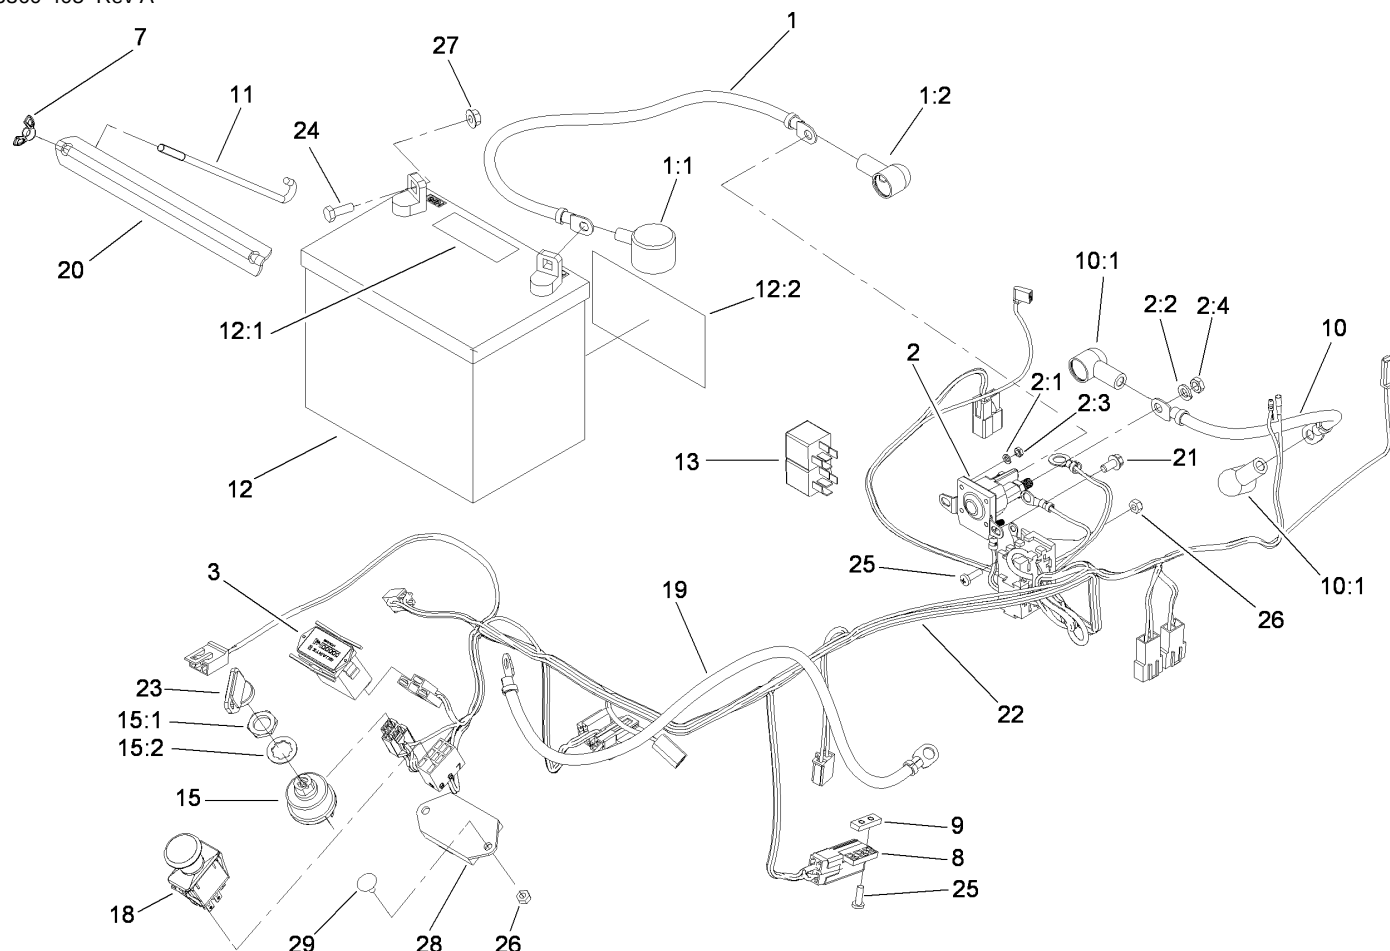

Electrical Assembly


Ref	Part No.	Qty.	Description
1	109-7653	1	Positive Battery Cable ASM
1:1	109-2407	1	Insulator-Battery
1:2	1-543393	1	Insulator-Solenoid
2	1-513075	1	Switch-Solenoid
2:1	3253-17	2	Washer-Lock
2:2	3253-4	2	Washer-Lock
2:3	3219-14	2	Nut-Hex
2:4	3220-2	2	Nut-Jam
3	1-513374	1	Meter-Hour
7	1-543792	2	Wingnut
8	1-633111	1	Switch
9	1-633181	1	Plate-Tapped
10	109-7620	1	Positive Starter Cable ASM
10:1	1-543393	2	Insulator-Solenoid
11	1-633651	2	Bolt-Holddown
12	105-1692	1	Battery
12:1	104-4163	1	Decal-Battery
12:2	104-4164	1	Decal-Battery
13	1-643275	2	Relay
15	104-2541	1	Switch ASM
15:1	218-461	1	Nut-HH
15:2	3254-5	1	Washer-Tooth
18	103-5221	1	Switch-PTO
19	103-8355	1	Cable-Battery, Negative

Ref	Part No.	Qty.	Description
20	103-9944-03	1	Angle-Battery
21	32144-4	2	Screw-HWH
22	109-4112	1	Harness-Wire
23	63-8360	1	Key-Ignition
24	321-4	2	Screw-HH
25	3290-500	6	Screw-PPH
26	3296-2	5	Nut-Lock
27	32128-33	2	Nut-HF
28	100-6186	1	Module-Delay, Seat
29	1-807513	1	Bolt-CARR

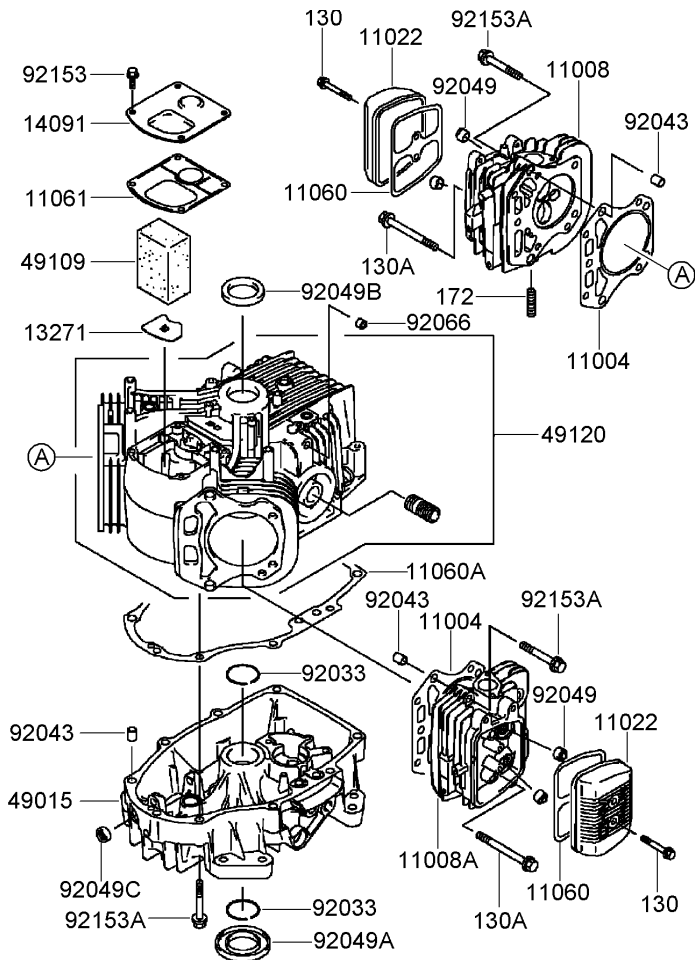


Cylinder and Crankcase Assembly
Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
❶11004	11004-7016	2	Gasket-Head				
❶11008	11008-6043	1	Head-Cylinder, No. 1				
❶11008A	11008-7020	1	Head-Cylinder, No. 2				
❶11022	11022-7003	2	Case-Rocker				
❶11060	11060-7001	2	Gasket-Case, Rocker				
❶11060A	11060-7008	1	Gasket-Cover, Crankcase				
❶11061	11061-7001	1	Gasket-Breather				
❶13271	13271-7016	1	Plate				
❶14091	14091-7006	1	Cover				
❶49015	49015-6253	1	Cover-Crankcase				
❶49109	49109-7002	1	Element-Breather				
❶49120	49120-7023	1	Crankcase				
❶92033	92033-7003	2	Ring-Snap				
❶92043	92043-7001	6	Pin				
❶92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)				
❶92049A	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)				
❶92049B	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)				
❶92049C	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)				
❶92066	92066-7002	1	Plug				
❶92153	92153-7043	4	Bolt (6X12)				
❶92153A	92153-7054	17	Bolt (8X50)				
❶130	130B0640	4	Bolt-Flanged (6X40)				
❶130A	130CA0875	2	Bolt-Flanged (8X75)				
❶172	172G0818	4	Bolt-Stud (8X18)				

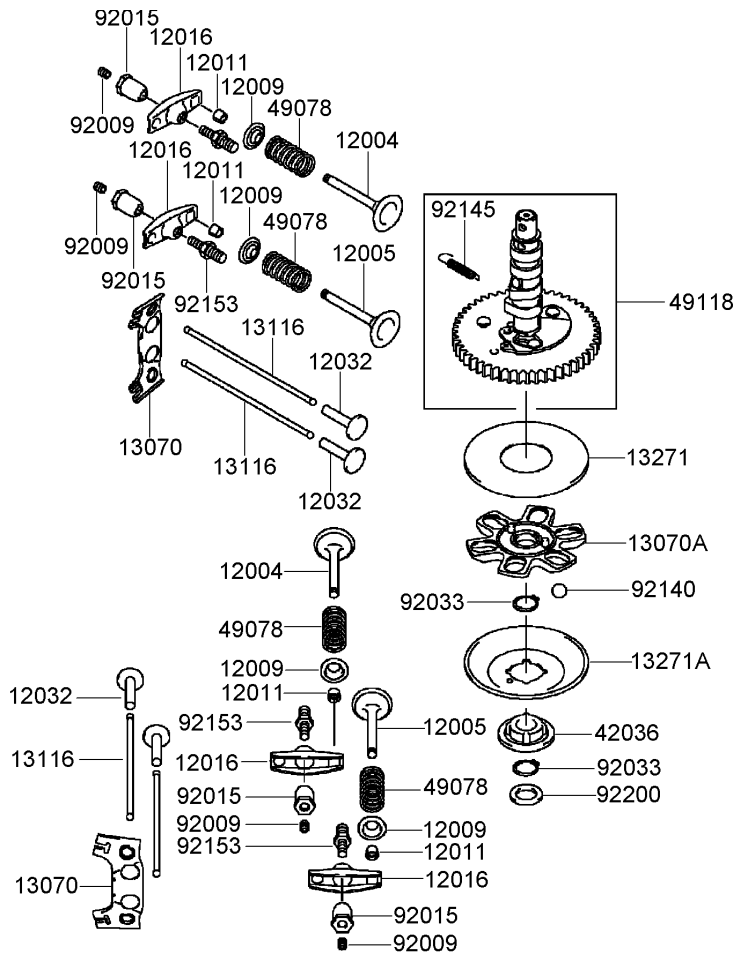


Valve and Camshaft Assembly
Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
❶12004	12004-7003	2	Valve-Intake				
❶12005	12005-7003	2	Valve-Exhaust				
❶12009	12009-7001	4	Retainer-Spring, Valve				
❶12011	12011-2056	8	Collet				
❶12016	12016-7008	4	Arm-Rocker				
❶12032	12032-7001	4	Tappet				
❶13070	13070-7001	2	Guide				
❶13070A	13070-7004	1	Guide				
❶13116	13116-2057	4	Rod-Push				
❶13271	13271-7007	1	Plate				
❶13271A	13271-7021	1	Plate-Governor				
❶42036	42036-7010	1	Sleeve				
❶49078	49078-7001	4	Spring-Valve, Engine				
❶49118	49118-7004	1	Camshaft				
❶92009	92009-2341	4	Screw				
❶92015	92015-2253	4	Nut				
❶92033	92033-7001	2	Ring-Snap				
❶92140	92140-7002	6	Ball				
❶92145	92145-7001	1	Spring				
❶92153	92153-7019	4	Bolt				
❶92200	92200-7001	1	Washer				

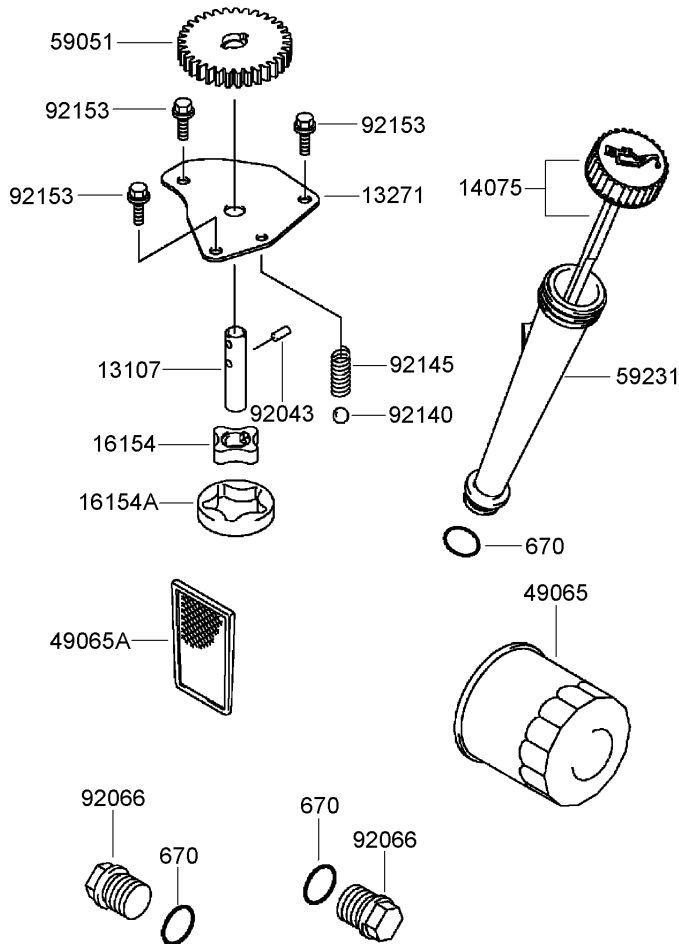


Lubrication Equipment Assembly
Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
❶13107	13107-7009	1	Shaft				
❶13271	13271-7017	1	Plate				
❶14075	14075-7009	1	Cap ASM				
❶16154	16154-2053	1	Rotor-Pump (In)				
❶16154A	16154-2054	1	Rotor-Pump (Out)				
❶49065	49065-2078	1	Filter-Oil				
❶49065A	49065-7004	1	Filter-Oil				
❶59051	59051-7011	1	Gear-Spur				
❶59231	59231-7005	1	Filler				
❶92043	92043-7003	2	Pin				
❶92066	92066-7003	2	Plug				
❶92140	92140-7003	1	Ball				
❶92145	92145-7002	1	Spring				
❶92153	92153-7043	3	Bolt (6X12)				
❶670	670D2016	3	O-Ring (16Mm)				

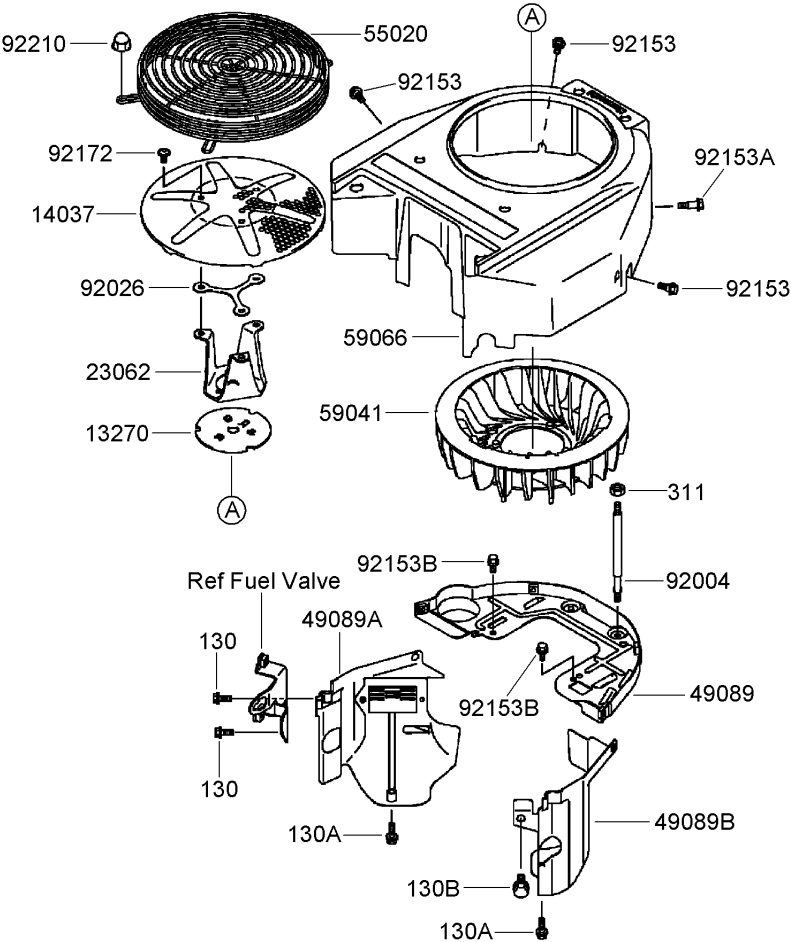


Cooling Equipment Assembly
Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
❸13270	13270-7007	1	Plate				
❸14037	14037-7020-9H	1	Screen				
❸23062	23062-7010	1	Bracket				
❸49089	49089-7032	1	Shroud-Engine				
❸49089A	49089-7042	1	Shroud-Engine				
❸49089B	49089-7043	1	Shroud-Engine				
❸55020	55020-7004	1	Guard				
❸59041	59041-7012	1	Fan				
❸59066	59066-7037	1	Housing-Fan				
❸92004	92004-7006	2	Stud				
❸92026	92026-7007	1	Spacer				
❸92153	92153-7007	3	Bolt				
❸92153A	92153-7008	1	Bolt				
❸92153B	92153-7043	2	Bolt (6X12)				
❸92172	92172-7029	3	Screw-Socket (6X12)				
❸92210	92210-0003	4	Nut				
❸130	130B0616	2	Bolt-Flanged (6X16)				
❸130A	130B0625	2	Bolt-Flanged (6X25)				
❸130B	130B0816	1	Bolt-Flanged (8X16)				
❸311	311B0600	2	Nut-Hex (6Mm)				

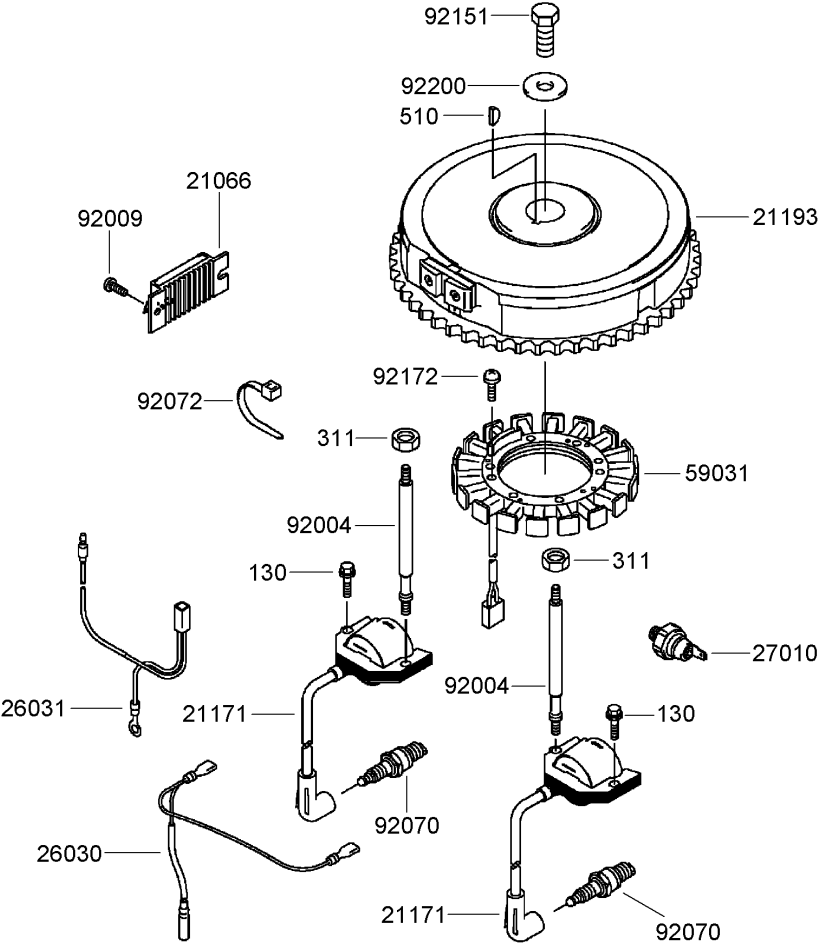

Electric Equipment Assembly
Kawasaki FH580V-AS40-R


Ref	Part No.	Qty.	Description				
❶21066	21066-7011	1	Regulator-Voltage				
❷21171	21171-7013	2	Ignition Coil ASM				
❸21193	21193-7007	1	Flywheel ASM				
❹26030	26030-7001	1	Harness				
❺26031	26031-7012	1	Harness				
❻27010	27010-7001	1	Switch				
❼59031	59031-7009	1	Coil-Charging				
❸92004	92004-7009	2	Stud				
❸92009	92009-2308	1	Screw				
❸92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)				
❸92072	92072-7003	3	Band				
❸92151	92151-2097	1	Bolt (12X30)				
❸92172	92172-7018	4	Screw (5X20)				
❸92200	92200-7002	1	Washer				
❸130	130B0620	2	Bolt-Flanged (6X20)				
❸311	311B0600	2	Nut-Hex (6Mm)				
❸510	510A5100	1	Key-Woodruff				

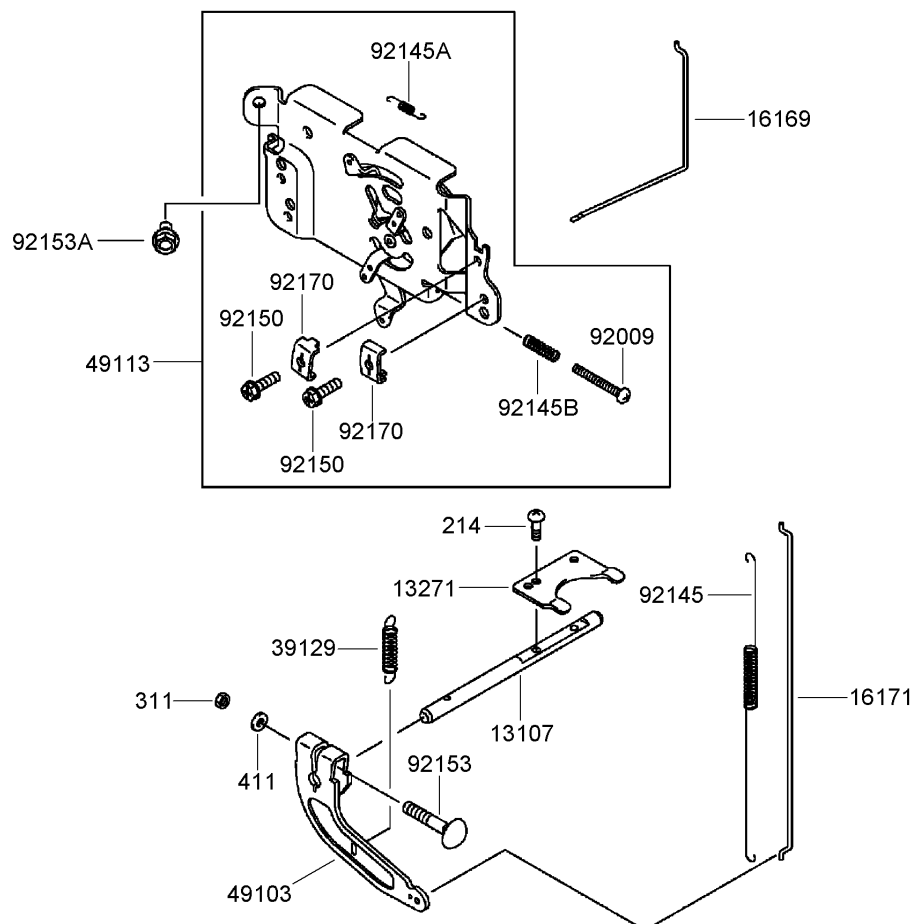

Control Equipment Assembly

Kawasaki FH580V-AS40-R


Ref	Part No.	Qty.	Description				
③13107	13107-7010	1	Shaft				
③13271	13271-7032	1	Plate				
③16169	16169-7010	1	Link-Choke				
③16171	16171-7001	1	Link				
③39129	39129-7003	1	Spring-Governor				
③49103	49103-7004	1	Arm-Governor				
③49113	49113-7011	1	Panel-Control				
③92009	92009-7007	1	Screw (4X35)				
③92145	92145-7003	1	Spring				
③92145A	92145-7004	1	Spring				
③92145B	92145-7005	1	Spring				
③92150	92150-2182	2	Bolt (5X18)				
③92153	92153-7033	1	Bolt (6X35)				
③92153A	92153-7043	2	Bolt (6X12)				
③92170	92170-7001	2	Clamp				
③214	214B0408	2	Screw-Pan (4X8)				
③311	311B0600	1	Nut-Hex (6Mm)				
③411	411B0600	1	Washer-Plain (6Mm)				

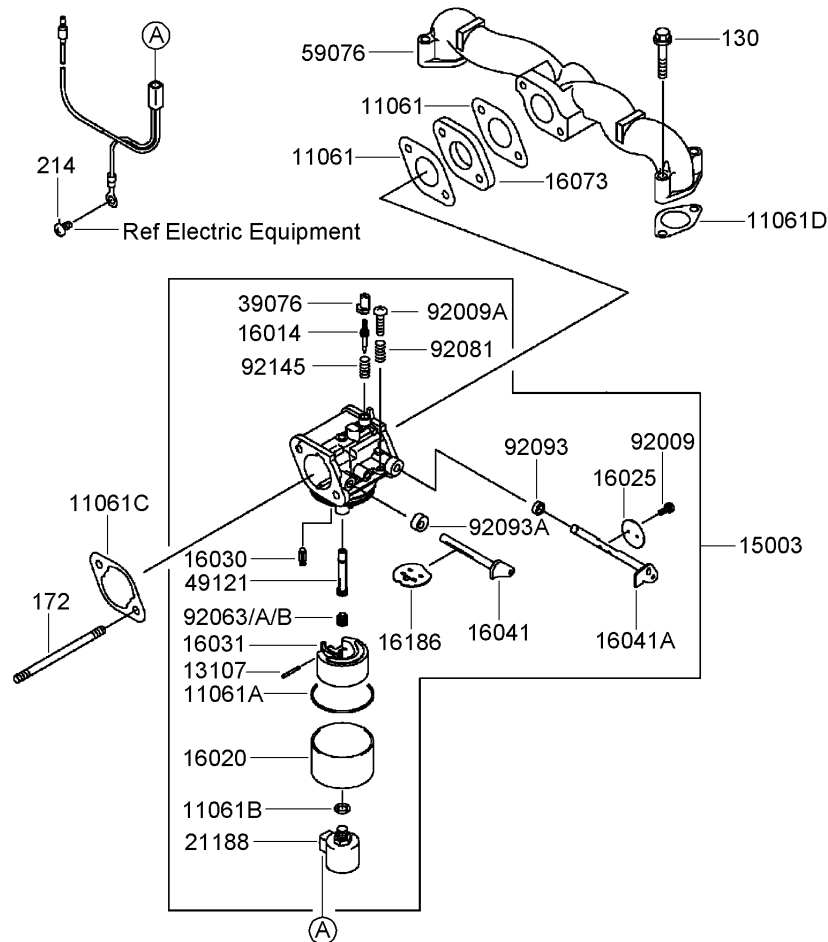

Carburetor Assembly Kawasaki FH580V-AS40-R


Ref	Part No.	Qty.	Description
③11061	11061-7004	2	Gasket-Insulator
③11061A	11061-7009	1	Gasket-Chamber
③11061B	11061-7010	1	Gasket-Screw
③11061C	11061-7018	1	Gasket-Cleaner, Air
③11061D	11061-7019	2	Gasket
③13107	13107-7018	1	Shaft
③15003	15003-7100	1	Carburetor ASM
③16014	16014-7007	1	Screw-Air, Pilot
③16020	16020-7003	1	Chamber-Float
③16025	16025-7006	1	Valve-Throttle
③16030	16030-7003	1	Valve-Float
③16031	16031-7002	1	Float
③16041	16041-7016	1	Shaft-Choke, Carburetor
③16041A	16041-7018	1	Shaft-Throttle, Carburetor
③16073	16073-7007	1	Insulator
③16186	16186-7004	1	Choke Valve ASM
③21188	21188-7002	1	Solenoid
③39076	39076-7001	1	Limiter
③49121	49121-7004	1	Nozzle-Main
③59076	59076-7001	1	Manifold-Intake
③92009	92009-2083	2	Screw
③92009A	92009-2349	1	Screw
③92063	92063-7037	1	Jet-Main (No. 105)
③92063A	92063-7046	1	Jet-Main (No. 100)

Ref	Part No.	Qty.	Description
③92063B	92063-7062	1	Jet-Main No. 110
③92081	92081-2234	1	Spring
③92093	92093-2100	1	Seal
③92093A	92093-7003	1	Seal
③92145	92145-7015	1	Spring
③130	130B0635	4	Bolt-Flanged (6X35)
③172	172G0690	2	Bolt-Stud (6X90)
③214	214B0510	1	Screw-Pan (5X10)

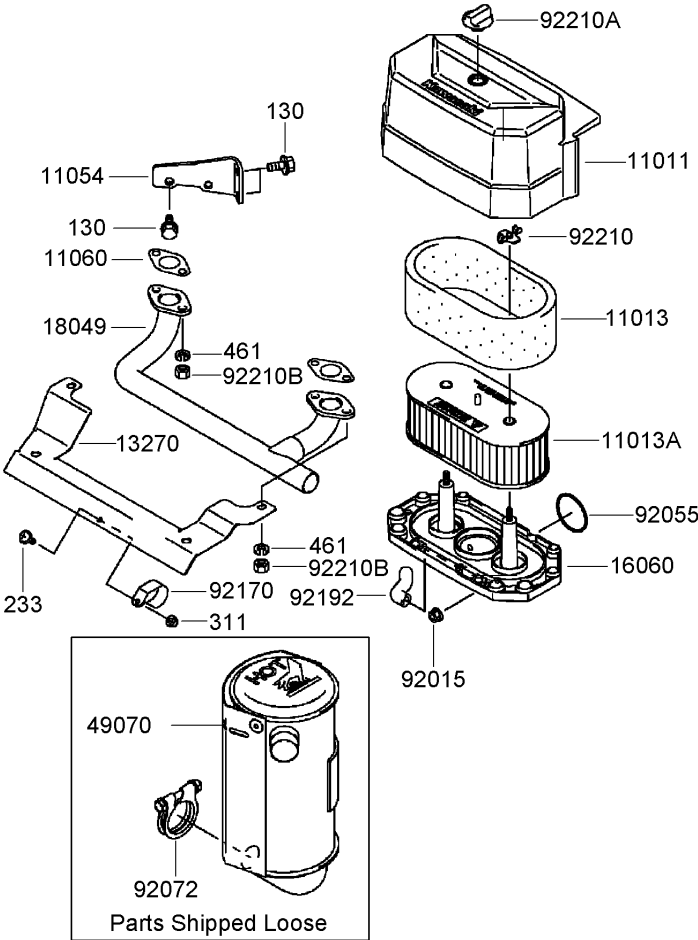


Air Filter and Muffler Assembly
Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
❸11011	11011-7046	1	Case-Air Filter				
❸11013	11013-7025	1	Element-Filter, Air				
❸11013A	11013-7031	1	Element-Filter, Air				
❸11054	11054-7002-9H	1	Bracket				
❸11060	11060-7021	2	Gasket-Muffler				
❸13270	13270-7008	1	Plate				
❸16060	16060-7016	1	Pipe-Intake				
❸18049	18049-7001	1	Pipe-Exhaust				
❸49070	49070-7021	1	Muffler				
❸92015	92015-1193	2	Nut				
❸92055	92055-7015	1	O-Ring				
❸92072	92072-7012	1	Band				
❸92170	92170-7002	1	Clamp				
❸92192	92192-7010	1	Tube				
❸92210	92210-7004	2	Nut				
❸92210A	92210-7019	1	Nut				
❸92210B	92210-7027	4	Nut (M8)				
❸130	130B0816	3	Bolt-Flanged (8X16)				
❸233	233B0416	1	Screw (4X16)				
❸311	311B0400	1	Nut-Hex (4Mm)				
❸461	461F0800	4	Washer-Spring (8Mm)				

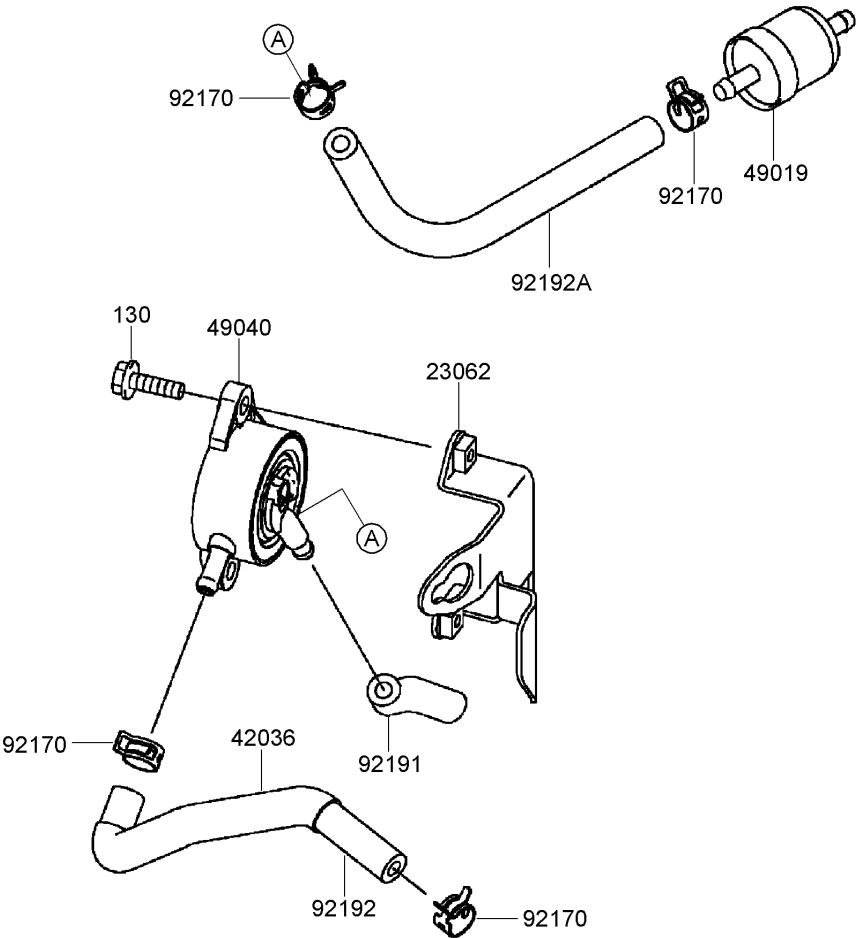

Fuel Tank and Valve Assembly
Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
❸23062	23062-7004-9H	1	Bracket				
❸42036	42036-7012	1	Sleeve				
❸49019	49019-7001	1	Filter-Fuel				
❸49040	49040-7001	1	Pump-Fuel				
❸92170	92170-2088	4	Clamp				
❸92191	92191-7002	1	Tube				
❸92192	92192-7035	1	Tube (6.35X12.7X170)				
❸92192A	92192-7037	1	Tube (6.35X12.7X160)				
❸130	130B0620	2	Bolt-Flanged (6X20)				

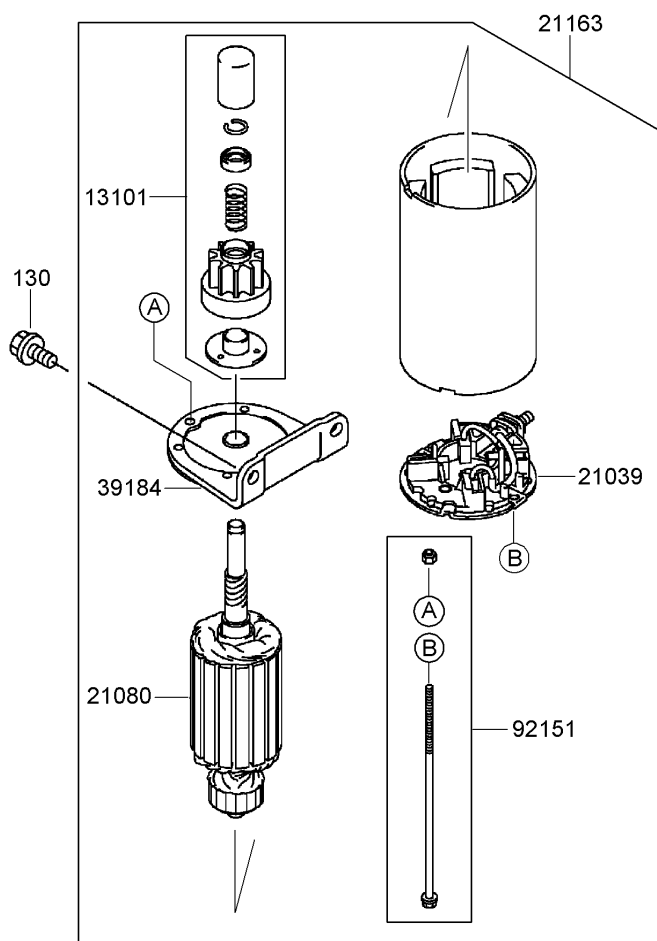

Starter Assembly

Kawasaki FH580V-AS40-R

Ref	Part No.	Qty.	Description				
③13101	13101-7003	1	Gear ASM				
③21039	21039-7004	1	Brush				
③21080	21080-7001	1	Armature				
③21163	21163-7010	1	Starter-Electric				
③39184	39184-7004	1	Bracket ASM				
③92151	92151-7013	1	Bolt				
③130	130B0816	2	Bolt-Flanged (8X16)				

Attachments and Accessories

For 79408 - Z300 Z Master, With 34in 7-Gauge Side Discharge Mower

Product Name	Model/Part
Recycler Kit	110-9960
17.5 Inch Recycling Blade (6-Pack)	114-4956
17.5 Low Flow Blade (6-Pack)	114-4957
17.5 Med Flow Blade (6-Pack)	114-4958
17.5 High Flow Blade (6-Pack)	114-4959
17.5 Atomic Blade (6-Pack)	114-4960
Chute Gate Kit	78520

NOTES

NOTES

