 


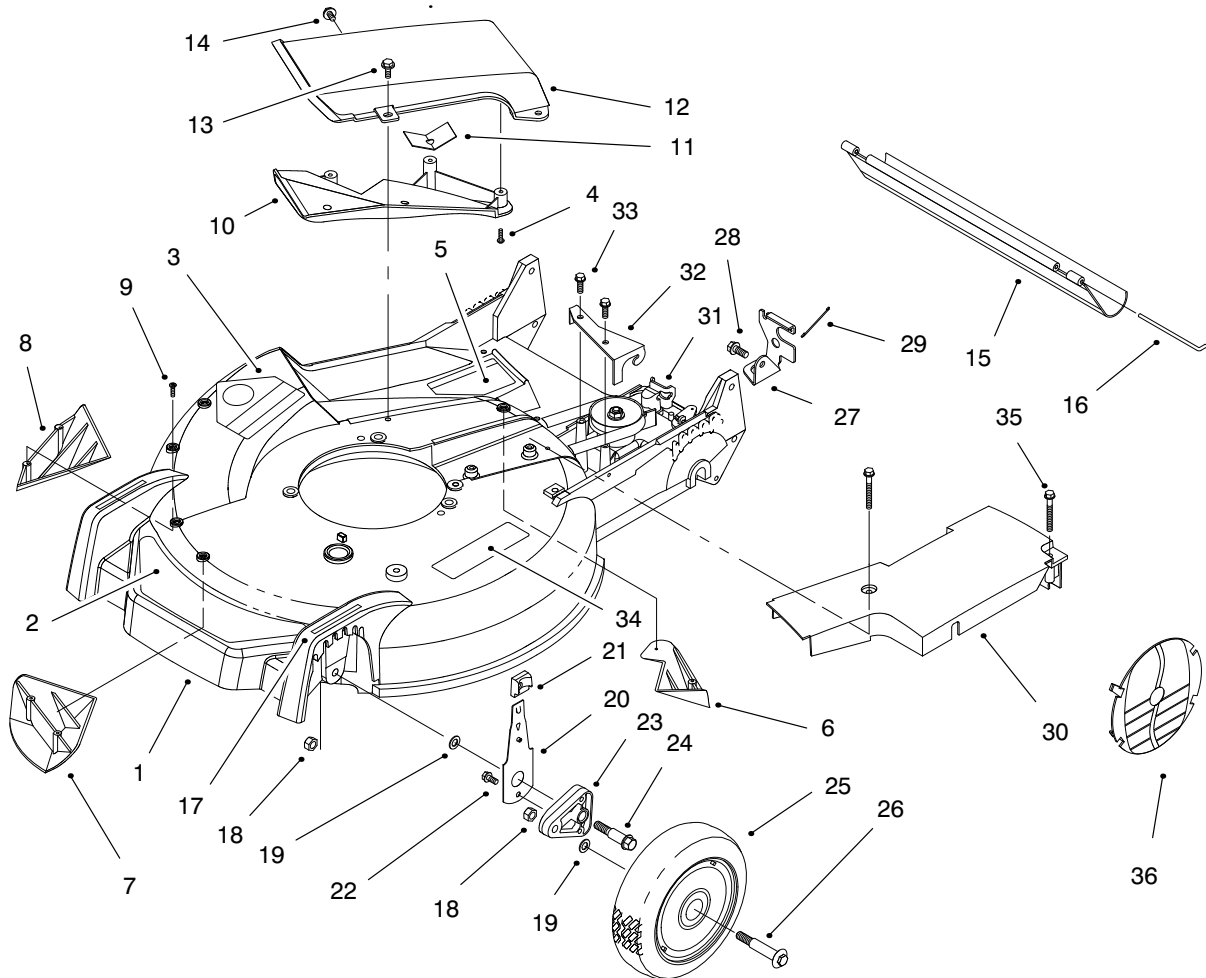


MODEL NO. 20464-690001 & UP

PARTS
CATALOG21" RECYCLER[®]
Mower

C-2264

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	16-9489	Housing - 21" (Incl. Ref. #3, 5-9 pg. 1, 34 pg. 2)	1	15	44-0580	Shield - Trailing	1
2	93-3696	Decal - Deck	1	16	33-3208	Rod - Shield	1
3	39-5770	Decal - Danger	1	17	92-2279	Decal - HOC	4
4		Screw - PPH	5	18	3296-6	Nut - Lock	6
5	82-8450	Decal - Danger Deck	1	19	40-1940	Washer	4
6	92-1750	Plate - Kicker Rear	1	20	66-0541	Spring Arm Ass'y - Front	2
7	92-1720	Kicker - RH Front	1	21	25-7740	Knob - Arm	4
8	92-1730	Kicker - LH Front	1	22	32144-85	Screw - Hex Hd.	4
9	32144-111	Screw - PPH	6	23	66-0580	Arm - Pivot	2
10		Deflector - Recycler	1	24	66-0560	Screw - Shoulder	2
11		Guard - Cover	1	25	14-9989	Wheel & Tire Assembly	2
12	14-4069	Cover - Recycler (Incl. Ref. #4, 10, & 11)	1	26	27-6232	Bolt - Wheel	4
13	46-6811	Screw - Hex Washer Hd.	3	27	82-5680	Bracket - Adjustment Trac.	1
14	46-6810	Screw - Hex Washer Hd.	1	28	32144-70	Screw - Tapping	4
				29	46-7030	Retainer - Cable	1
				30	82-9910	Cover - Belt	1
				31	62-6673	Gear Case Assembly	1

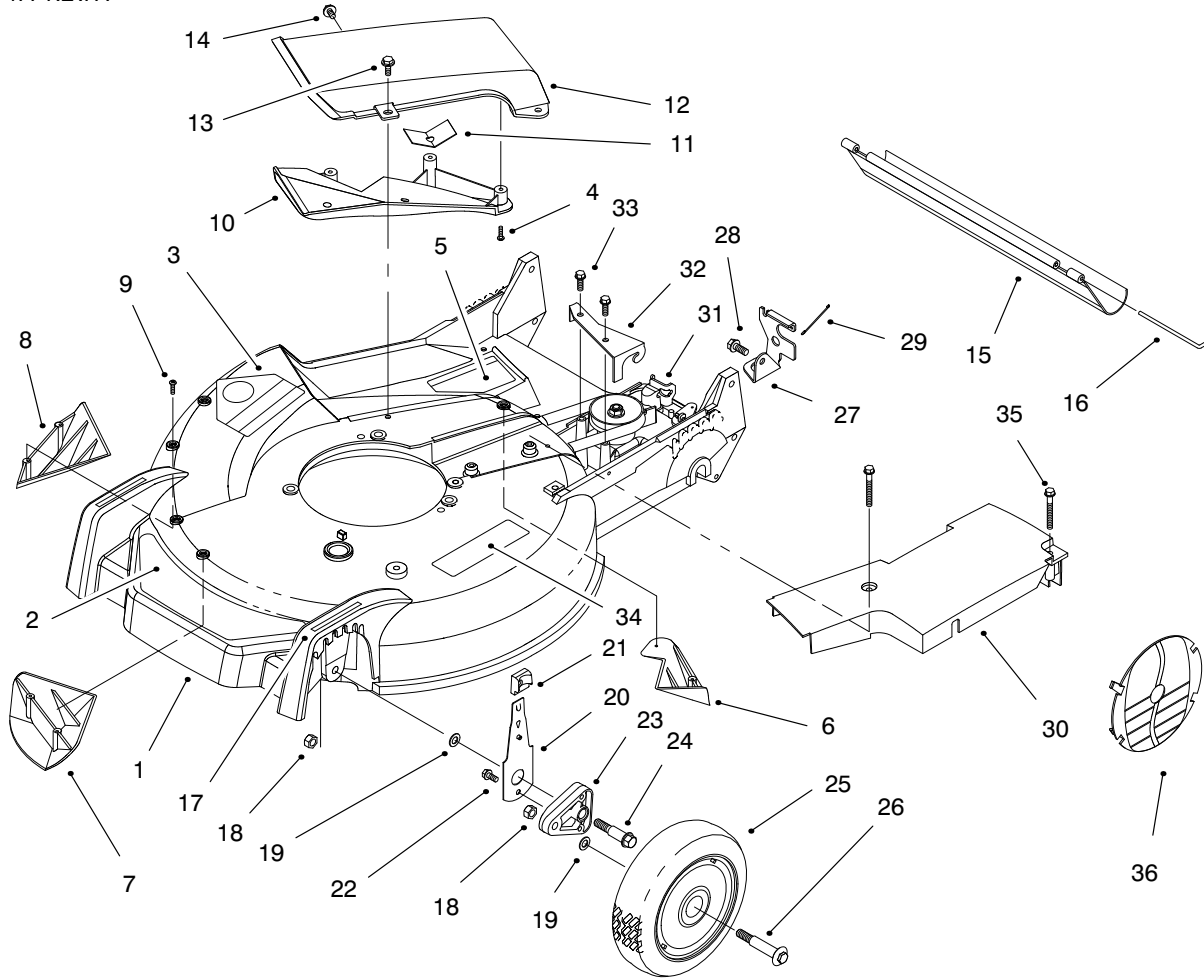 


C-2264

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
32	62-4320	Bracket - Guide Belt	1
33	49-2040	Screw - Hex Hd.	2
34	93-0248	Decal - Warning	1


Ref. No.	Part No.	Description	No. Used
35	37-7260	Screw - Tapping	2
36	91-2253	Cover - Wheel	1

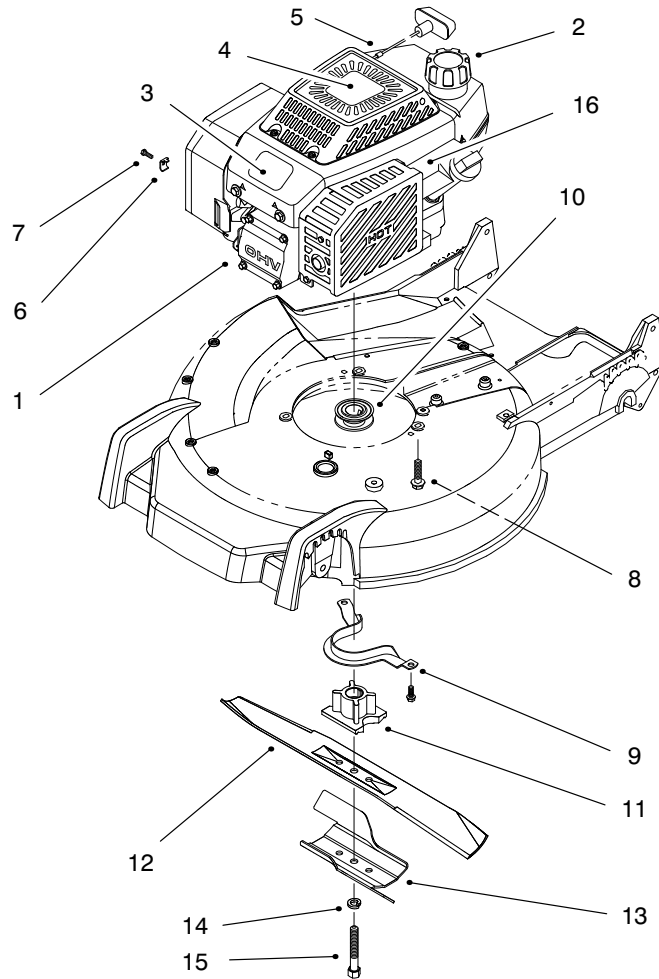 

C-2265

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-1604	Engine GTS-150	1	9	66-0570	Guide - Belt	1
2	55-3570	Gas Cap Assembly	1	10	62-7550	Pulley - Driver	1
3	92-2289	Plate - Logo Toro	1	11	93-4107	Retainer - Blade	1
4	94-6060	Decal - Engine	1	12	93-4106	Blade - 21"	1
5	2210-316	Stop - Rope (P/W Eng.)	1	13	94-1608	Accelerator - Blade	1
6	2210-249	Clamp - Casing (P/W Eng.)	1	14	3253-22	Washer - Lock	1
7	93-8470	Screw - Clamp (P/W Eng.)	1	15	26-0670	Bolt - Blade	1
8	32144-102	Screw	3	16	77-9550	Cover - Brake	1

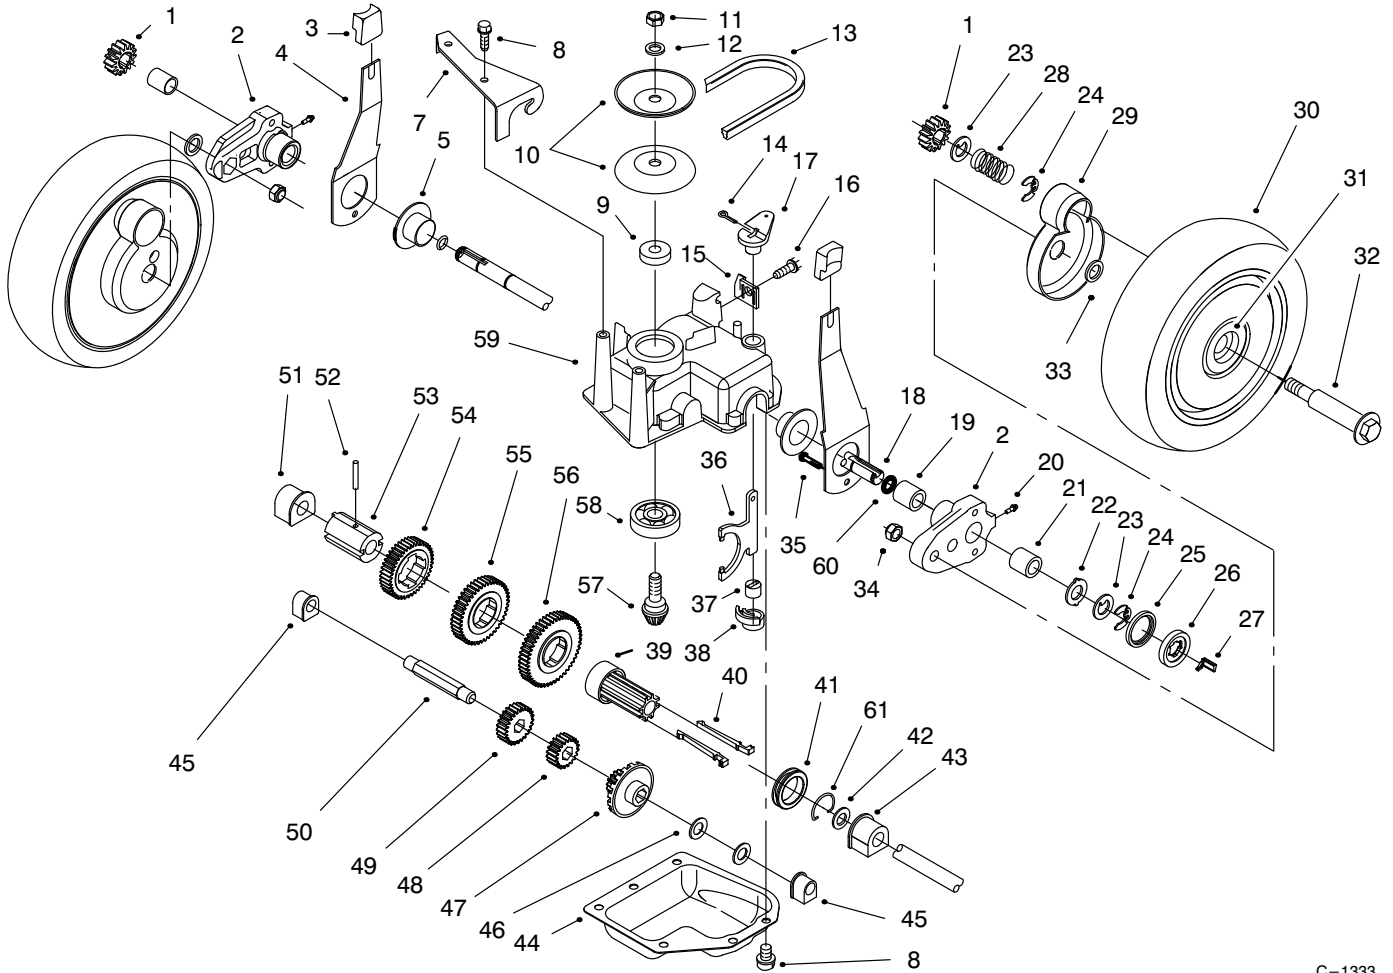 


C-1333

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-4750	Pinion	2
2	63-8701-03	Pivot Arm Assembly (Incl. Ref # 19, 20, & 21)	2
3	25-7740	Knob - Arm	2
4	63-8721	Spring Arm Assembly	2
5	42-3520	End Cap	2
7	62-4320	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Locknut	1
12	3256-24	Washer - Flat	1
13	62-3900	V-Belt	1
14	3272-10	Pin - Cotter	1
15	82-8780	Cable - Retainer	1
16	32144-70	Screw - Thread Forming	1
17	60-8821	Lever - Shift	1
18	65-4770	Shaft - Output	1
19	70-9760	Bushing	2
20	302-56	Fitting - Grease	2
21	48-2060	Needle Bearing	2
22	65-4730	Thrust Washer	2
23	65-4740	Thrust Washer	4
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2

Ref. No.	Part No.	Description	No. Used
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocker L.H.	1
*	66-6040	Key - Rocker R.H.	1
28	65-4720	Spring	2
29	74-1660	Cover - Wheel	2
30	16-0029	Wheel - Tire & Gear Ass'y (Incl. Ref. # 31)	2
31	27-6250	Bushing - Wheel	4
32	27-6232	Wheel Bolt	2
33	74-1670	Spacer - Wheel Cover	2
34	3296-6	Locknut	2
35	32144-85	Screw	2
36	60-8870	Yoke - Shift	1
37	29-9570	Bushing - Yoke	1
38	60-8810	Retainer - Shift Fork	1
39	76-0780	Sleeve - Shift Key	1
40	76-0760	Key - Shift	2
41	76-0770	Collar - Shift	1
42	36-4780	Washer - Thrust	1
43	60-8770	Bushing - Output Shaft	1
44	60-8730	Cover - Gear Case	1
45	60-8750	Bushing - Int. Shaft	2
46	36-4791	Washer - Thrust	2
47	55-3760	Gear - Pinion 15 Tooth	1
48	55-3780	Gear - Pinion 20 Tooth	1

 *Not Illustrated

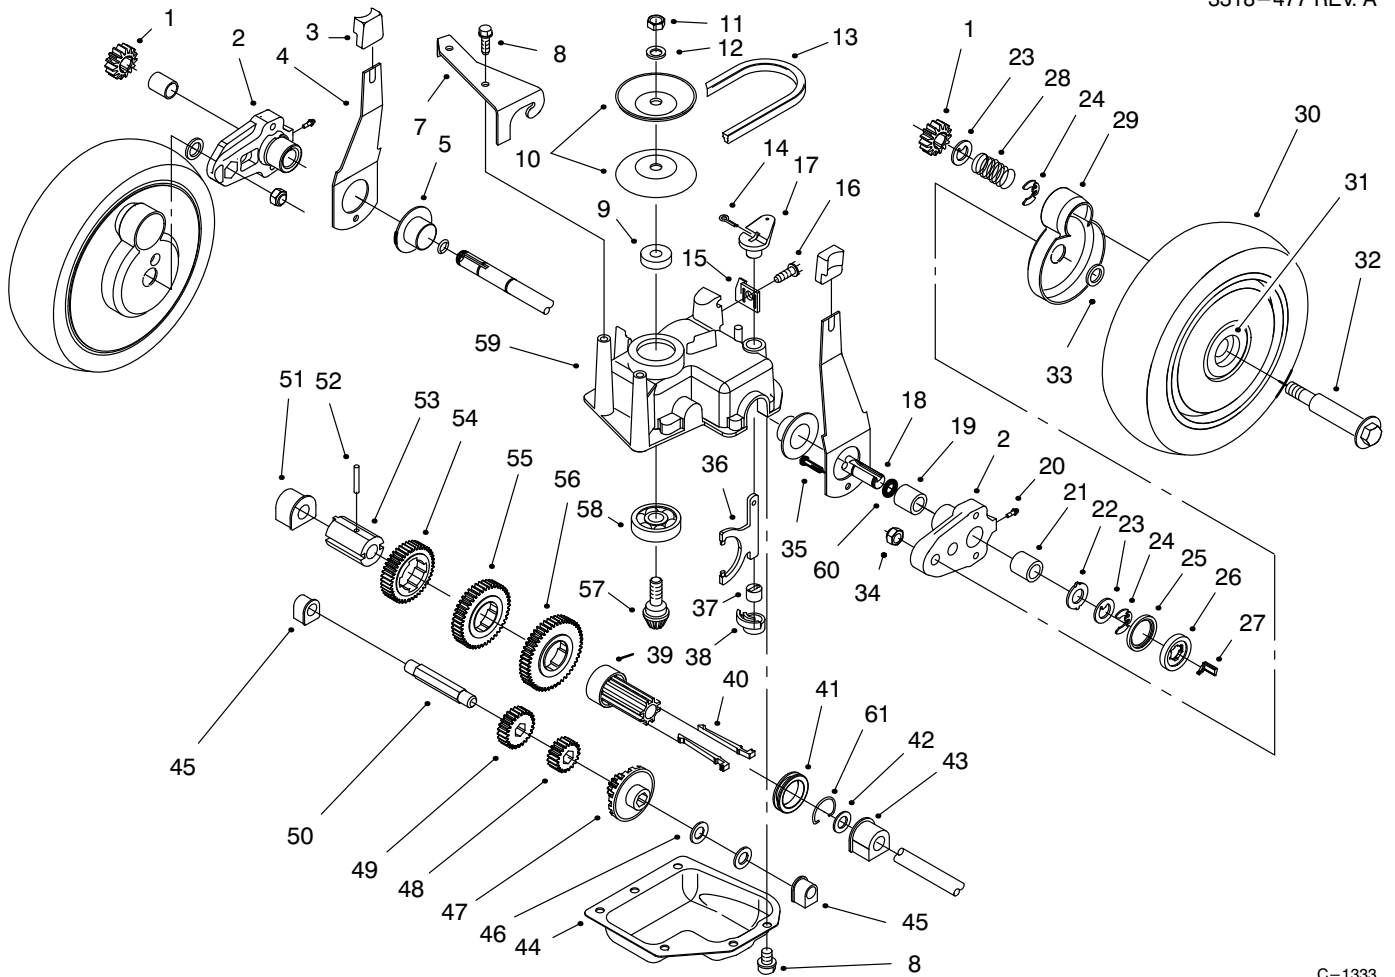


C-1333

GEAR CASE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
49	55-3800	Gear - Pinion	1	56	55-3770	Gear - 49 Tooth 1st Gear	1
50	60-8800	Shaft - Intermediate	1	57	60-8890	Pinion - Bevel	1
51	60-8850	Bushing - Output Shaft	1	58	38-7820	Bearing - Ball	1
52	32121-120	Pin - Coil	1	59	60-8710	Gear Case - Upper	1
53	60-8790	Sleeve - Gear	1	60	237-153	O-Ring	2
54	55-3810	Gear - 39 Tooth 3rd Gear	1	61	65-5250	Clip - Spring	1
55	55-3790	Gear - 44 Tooth 2nd Gear	1	*	62-6673	Gear Case Assembly	1

 *Not Illustrated

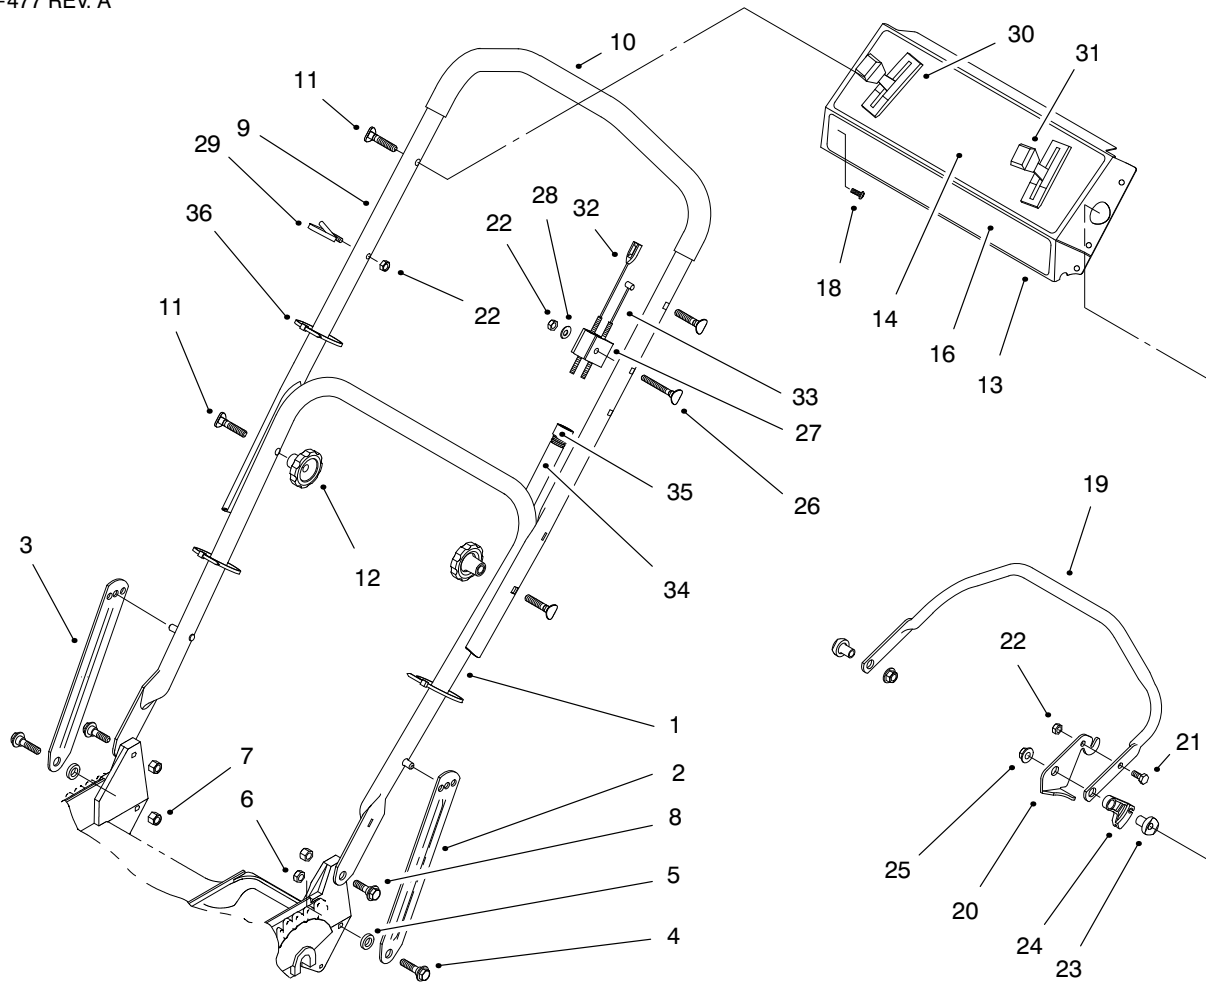


C-2266

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82-5531	Handle - Lower	1
2	84-8361	Latch - Handle LH	1
3	84-8401	Latch - Handle RH	1
4	27-7210	Screw - Shoulder	2
5	3-3287	Spacer	2
6	3296-47	Nut - Lock	1
7	3272-72	Nut - Lock	3
8	27-7211	Screw - Shoulder	2
9	92-2277	Handle - Upper	1
10	92-4086	Grip - Foam	1
11	92-2260	Screw - Handle	4
12	19-4050	Knob	2
13	16-9479	Panel - Control (Incl. Ref. #14)	1
14	93-7166	Decal - Instruction	1
16	93-3697	Decal - Panel Front	1
18	92-9665	Screw - Phillips Hd.	5
19	52-7430	Bar - Control	1

Ref. No.	Part No.	Description	No. Used
20	66-5351	Lever - Control	1
21	321-39	Screw - Hex Hd. Cap	1
22	3296-73	Nut - Lock	3
23	49-1630	Spacer - Support	2
24	46-5520	Lever - Traction	1
25	3296-74	Nut - Flange	2
26	92-2269	Screw - Handle	1
27	46-6980	Support - Cable	1
28	3256-1	Washer - Flat	1
29	86-9671	Guide - Rope	1
30	76-2712	Control - Speed Ground	1
31	71-8391	Control - Throttle	1
32	76-4331	Cable - Brake	1
33	46-5481	Cable - Traction	1
34	46-6440	Cover - Cables Control	1
35	2412-50	Clip - Tubing Convoluted	4
36	3290-378	Tie - Cable	3

 *Not Illustrated

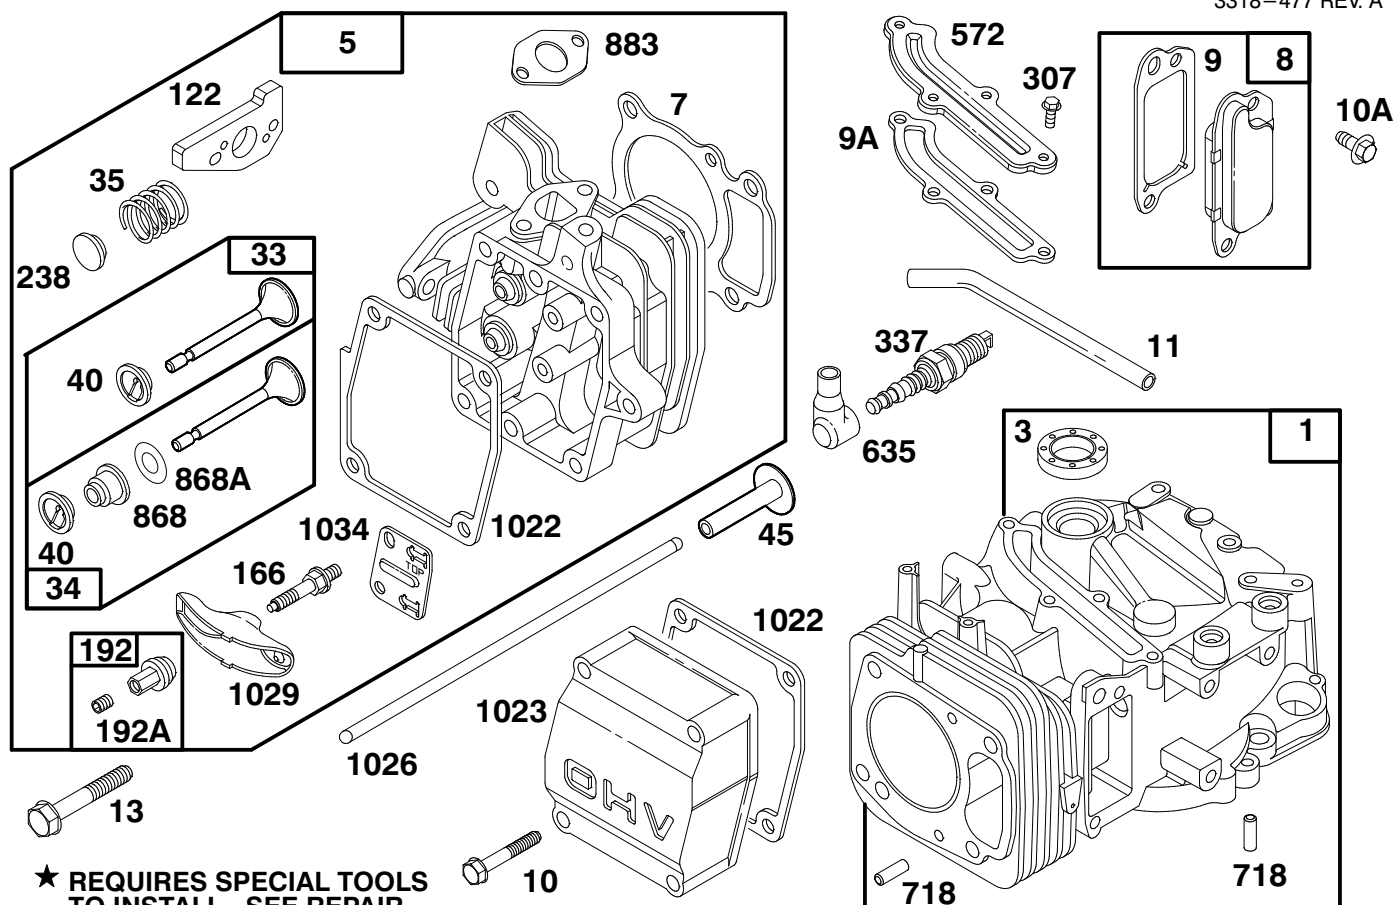

Assemblies include all parts shown in frames.


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
1	77-7590	Cylinder Assy.	1
★3	77-9060	Seal - Oil	1
5	77-7730	Head - Cylinder	1
★7	77-7740	Gasket - Cylinder Head	1
8	77-9300	Breather Assy.	1
★9	77-9250	Gasket - Breather	1
★9A	77-7410	Gasket - Breather	1
10	77-7360	Screw - Hex. Head (Valve Cover)	1
10A	77-9200	Screw - Hex. Head	1
11	77-9410	Tube - Breather	1
13	77-7630	Screw - Cylinder Head	1
33	77-7860	Valve - Exhaust	1
34	77-7880	Valve - Intake	1
35	77-7810	Spring - Valve	1
40	77-7870	Retainer - Spring	1
45	77-7610	Tappet - Valve	1
●122	77-7820	Adapter Assy.	1
166	77-7780	Stud - Rocker Arm	1

Ref. No.	Part No.	Description	No. Used
192	77-7910	Ball & Screw - Rocker Arm	1
192A	77-9310	Screw - Set	1
238	77-7800	Cap - Valve	1
307	77-7420	Screw - Breather Cover Mtg.	1
337	77-7330	Plug - Spark	1
572	77-7400	Cover - Breather	1
635	77-7340	Elbow - Spark Plug	1
718	77-7600	Pin - Cylinder	1
★868	77-7890	Seal Assy. - Valve	1
★868A	77-7900	Gasket - Valve	1
★883	77-7760	Gasket - Exhaust	1
★1022	77-7320	Gasket - Rocker Cover	1
1023	77-9320	Cover - Valve	1
1026	77-7620	Rod - Push	1
1029	77-7790	Arm - Rocker	1
1034	77-7770	Guide - Push Rod	1

★ Included in Gasket Set - Part No. 77-8900

 ● Included in Carburetor Overhaul Kit - Part No. 77-9580

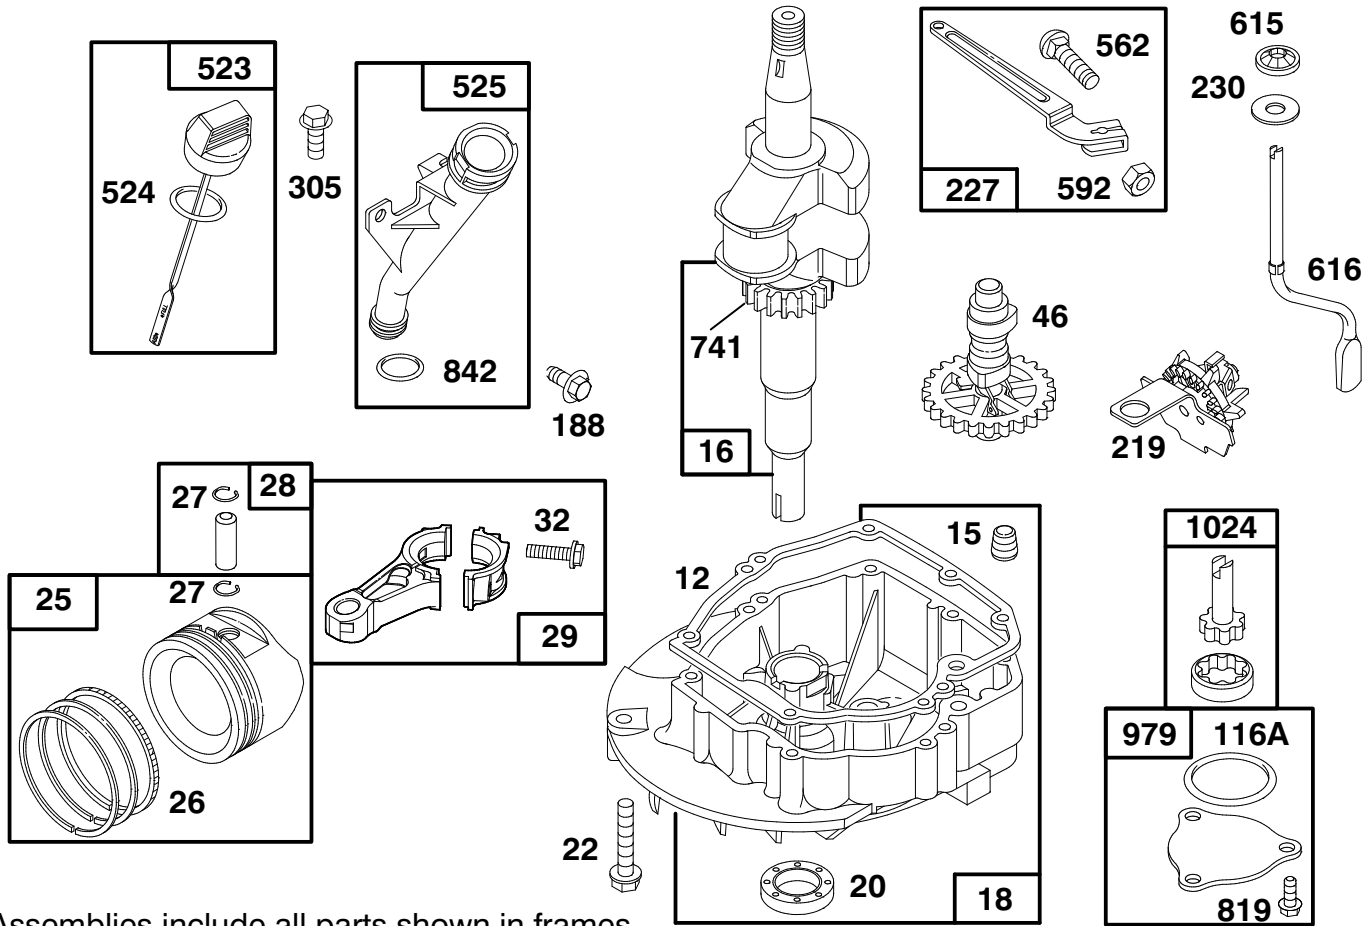


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
★12	77-7550	Gasket – Engine Base	1
15	77-9240	Plug – Pipe	1
16	77-9330	Crankshaft	1
		Note: Order Part No. 77-7540 For Timing Gear Key.	
18	77-7560	Base – Engine	1
★20	77-7570	Seal – Oil	1
22	77-9070	Screw – Engine Base	1
25	77-7690	Piston Assy. (Std.)	1
26	77-7700	Ring Set (Std.)	1
27	77-7710	Lock – Piston Pin	1
28	77-9340	Pin Assy. – Piston	1
29	77-7670	Rod – Connecting	1
32	77-9350	Screw – Connecting Rod	1
46	77-7490	Gear – Cam	1
★116A	77-7660	O-Ring	1
188	77-9360	Screw – Hex. Head	1

Ref. No.	Part No.	Description	No. Used
219	77-7500	Gear – Governor	1
227	77-7370	Lever Assy. – Governor	1
230	77-7470	Washer	1
305	77-8310	Screw – Hex. Head	1
523	77-7260	Dipstick – Oil	1
★524	77-7270	Seal – O-Ring	1
525	77-7280	Tube – Oil Filler	1
562	77-7380	Bolt – Governor Lever	1
592	77-7390	Nut – Hex.	1
615	77-7480	Pushnut	1
616	77-7460	Crank – Governor	1
741	77-7530	Gear – Timing	1
819	77-7450	Screw – Cap	1
★842	77-7300	Seal – O-Ring	1
979	77-7650	Cover – Oil Pump	1
1024	77-7640	Pump – Oil	1

 ★ Included in Gasket Set – Part No. 77-8900

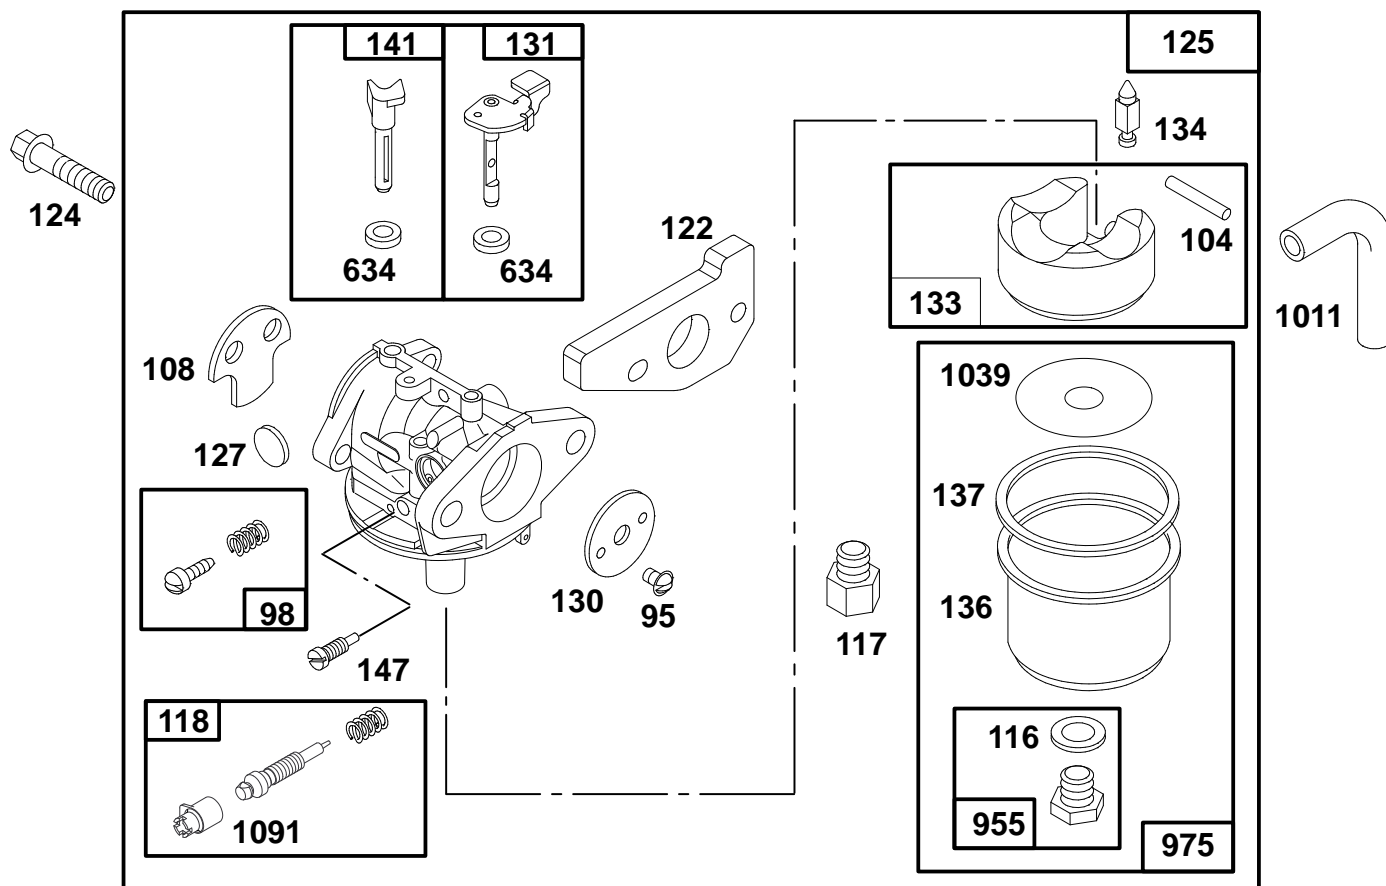


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	77-8090	Screw - Valve Mtg.	1	133	77-8170	Float - Carburetor	1
98	77-8240	Screw - Idle Adj.	1	◆134	77-8110	Valve - Inlet (Includes Seat)	1
●104	77-8180	Pin - Float Hinge	1	136	77-7240	Bowl - Fuel	1
108	77-9600	Valve - Choke	1	◆◆137	77-8200	Gasket - Float Bowl	1
◆◆116	77-8210	Sealing - Gasket	1	141	77-8130	Shaft - Choke	1
●117	77-9610	Jet - Main	1	147	77-9640	Adapter - Jet	1
		Note: For High Altitude Jet Order Part No. 94-1650	1			Note: For High Altitude Jet Order Part No. 77-9000	1
●118	77-9620	Valve & Spring - Needle	1	◆634	77-8150	Washer - Seal	1
●122	77-7820	Adapter Assy.	1	955	77-8220	Screw - Hex. Head	1
124	77-7970	Screw - Hex. Head (carb. mtg.)	1	975	77-8190	Bowl Assy. - Carburetor	1
125	77-9630	Carburetor Assy.	1	1011	77-8040	Tube - Vent	1
●127	77-8100	Plug - Welch	1	●1039	77-7250	Limiter - Float	1
130	77-8080	Valve - Throttle	1	●1091	77-9650	Cap - Limiter	1
131	77-8160	Shaft - Throttle	1				

● Included in Carb. Overhaul Kit Part No.
77-9580

 ◆ Included in Carb. Gasket Set Part No. 77-8930

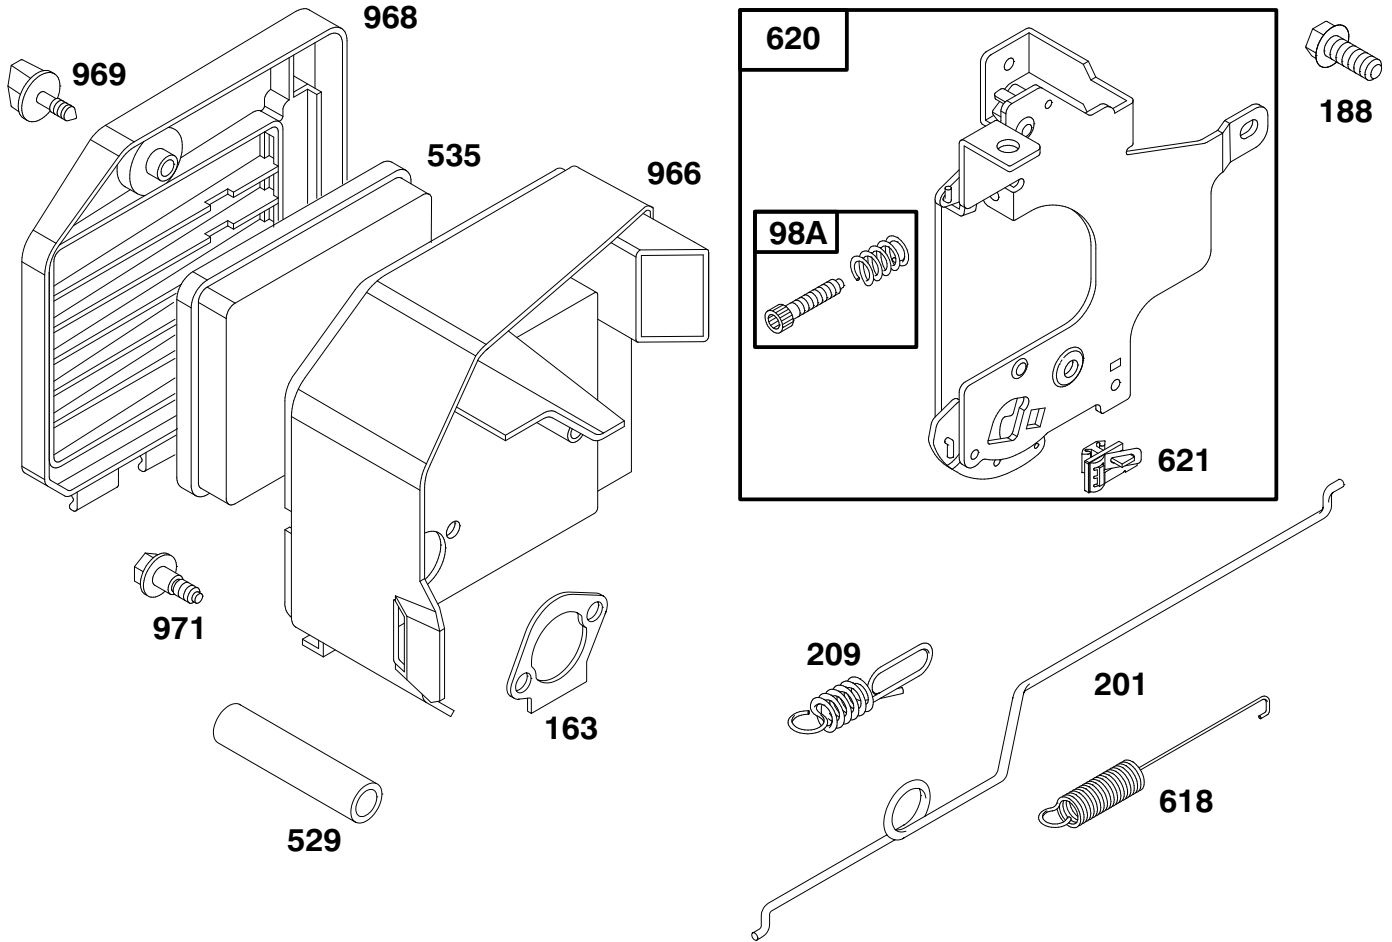


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
98A	77-8020	Screw Assy. – Speed Adj.	1
★163	77-7960	Gasket – Air Cleaner	1
188	77-9360	Screw – Hex. Head	1
201	77-7980	Link – Governor	1
209	77-7990	Spring – Governor	1
529	77-9470	Tube – Breather	1
535	77-7950	Element – Filter	1

Ref. No.	Part No.	Description	No. Used
618	77-8140	Spring – Choke	1
620	77-8000	Bracket – Carburetor	1
621	77-8010	Switch – Stop	1
966	77-7940	Base – Air Cleaner	1
968	77-7040	Cover – Air Cleaner	1
969	77-7920	Screw – Air Cleaner	1
971	77-7930	Screw – Air Cleaner	1

 ★ Included in Gasket Set – Part No. 77-8900

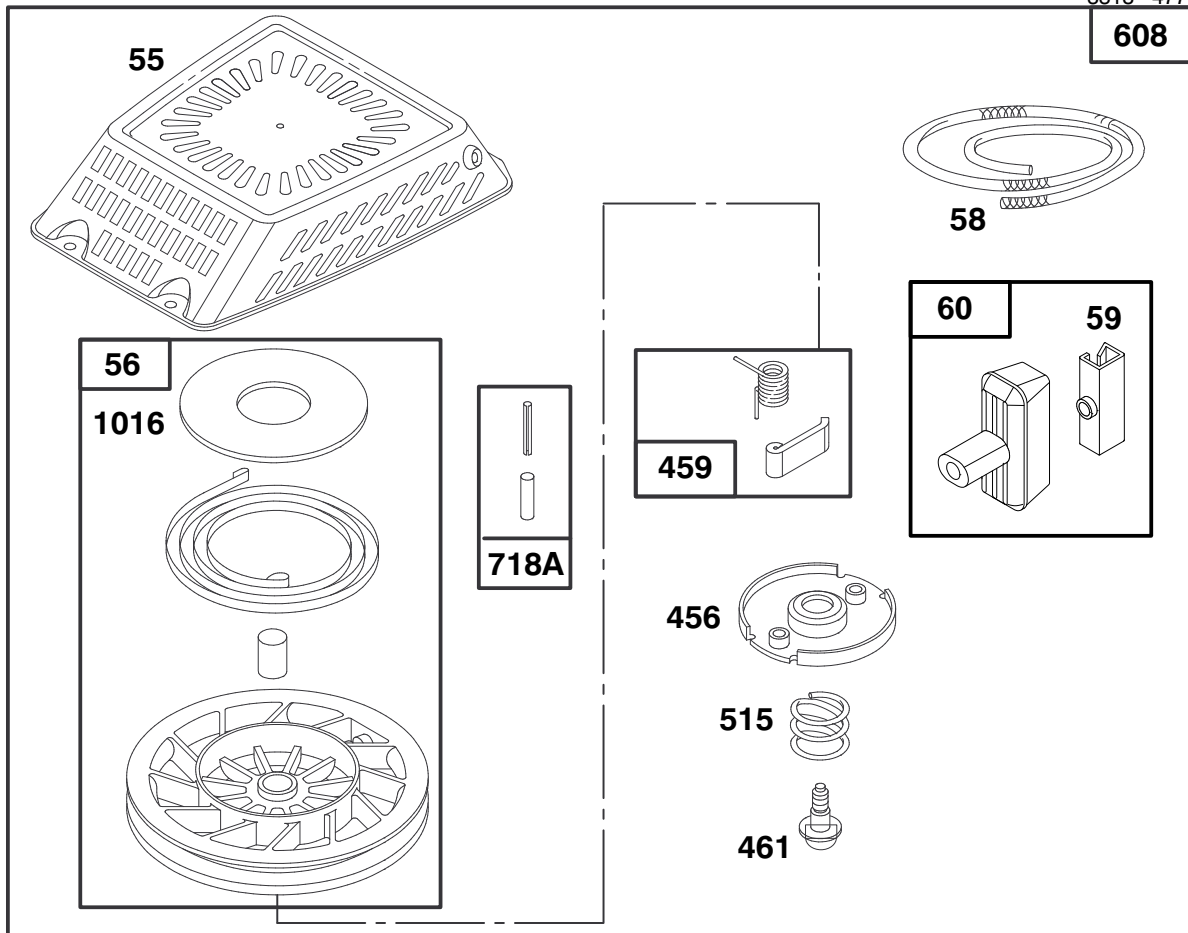


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
55	77-8890	Housing – Rewind Starter	1
56	77-9270	Pulley – Rewind Starter	1
58	77-8480	Rope – Starter (Cut To Suit)	1
59	77-7210	Insert – Rewind Handle	1
60	77-8520	Handle – Rewind Starter	1
65	77-8300	Screw – Hex. Head	1
456	77-8470	Retainer – Rewind Starter	1
459	77-8530	Pawl – Starter	1
461	77-8490	Screw – Rewind Starter	1
515	77-8500	Spring – Torsion	1
608	77-8840	Starter Assy. – Rewind	1

Ref. No.	Part No.	Description	No. Used
718A	77-8550	Pin – Spring	1
1016	77-8570	Cover – Spring	1
	77-9020	Short Block	1
<p>Model No. 20674-6900001 & Up may have been assembled with Starter Ass'y No. 77-8840 or 94-1661. Part identification will be required for service part replacement.</p>			



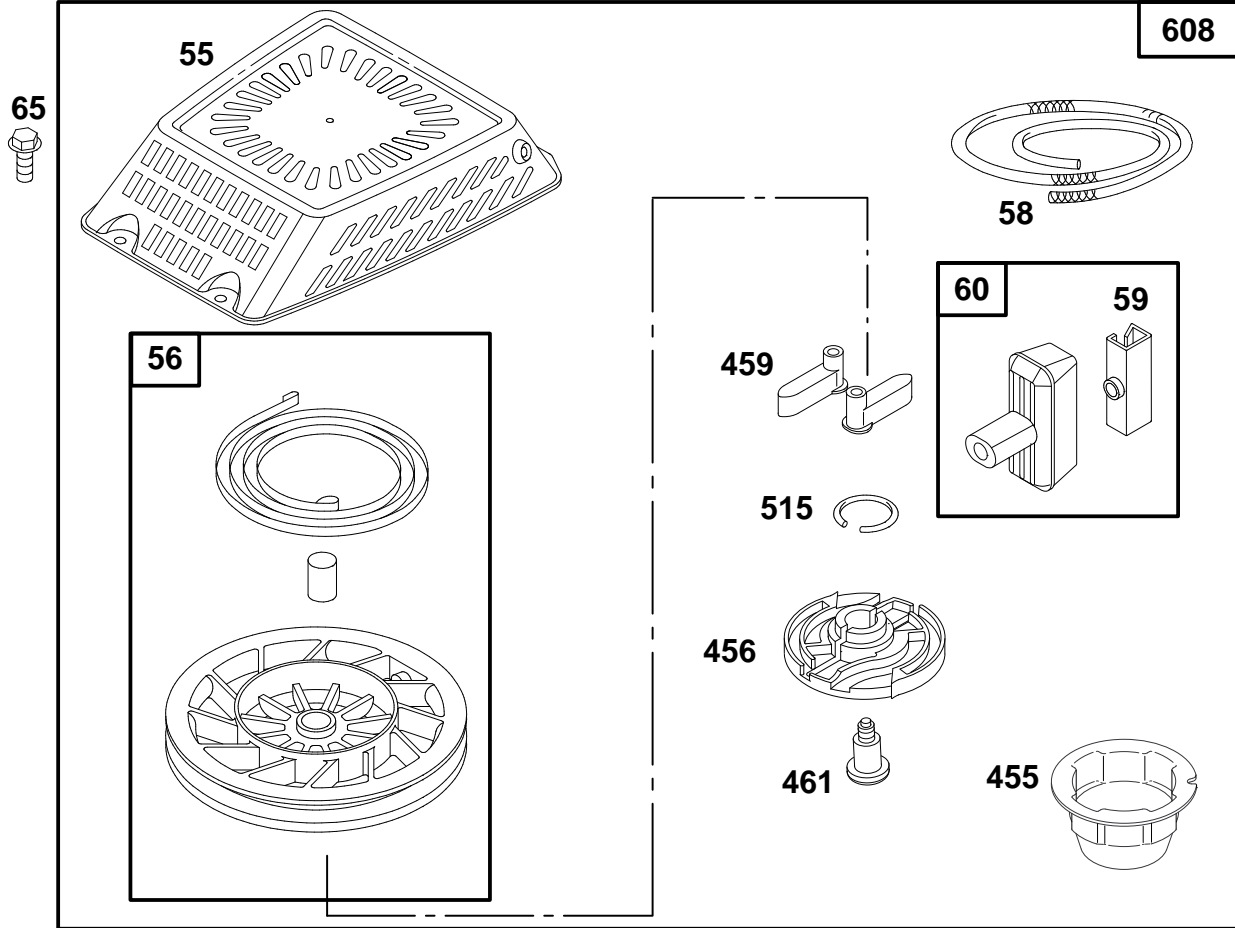 


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
55	94-1666	Housing - Rewind Starter	1
56	94-1657	Pulley - Rewind Starter	1
58	94-1668	Rope - Starter (Cut To Suit)	1
59	77-7210	Insert - Rewind Handle	1
60	77-8510	Handle - Rewind Starter	1
65	77-8300	Screw - Hex. Head	1
455	94-1653	Cup - Starter	1
456	94-1659	Retainer - Rewind Starter	1
459	94-1654	Pawl - Starter	1
461	94-1660	Screw - Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
515	94-1655	Spring - Torsion	1
608	94-1661	Starter Assy. - Rewind	1
	77-9020	Short Block	1
		Model No. 20464-6900001 & Up may have been assembled with Starter Ass'y No. 77-8840 or 94-1661. Part identification will be required for service part replacement.	

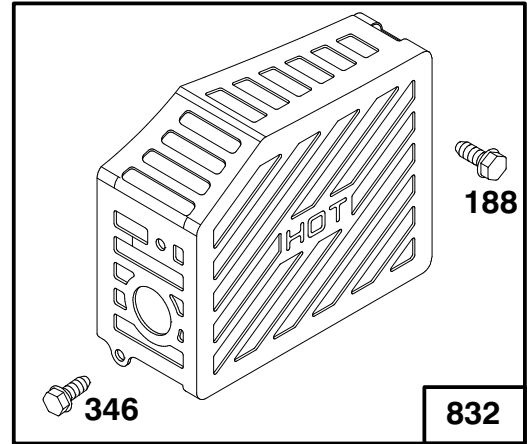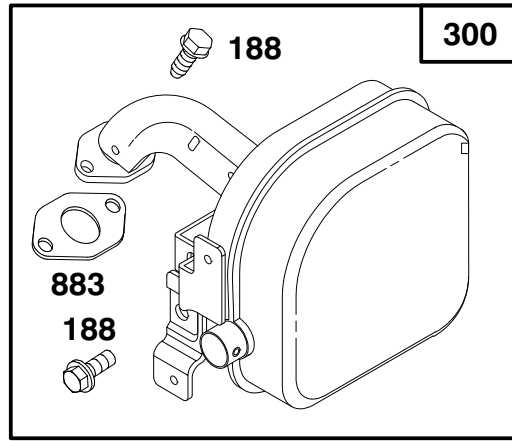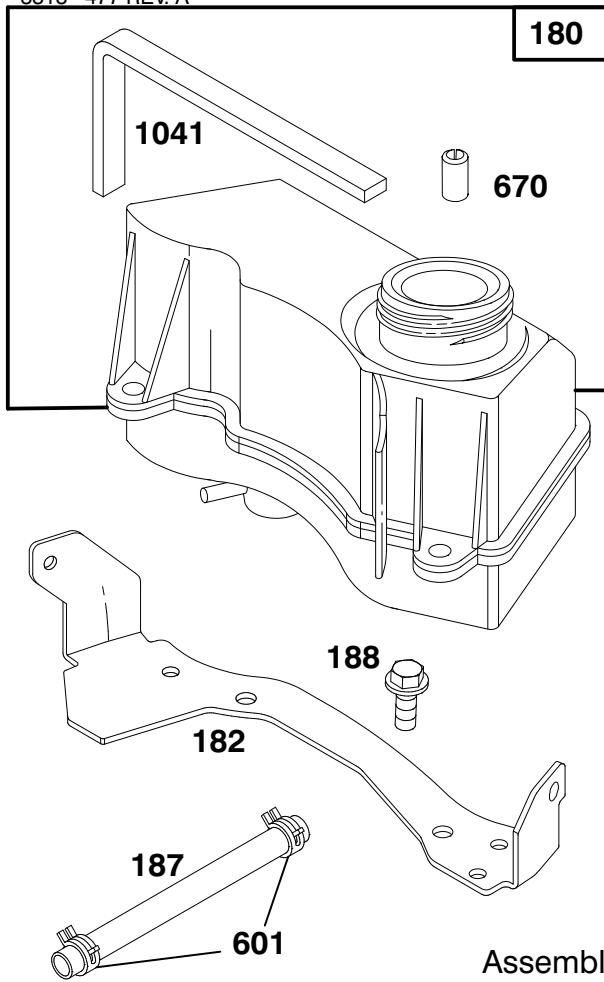   




Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
180	77-8580	Tank Assy. – Fuel	1
182	77-7170	Bracket – Fuel Tank	1
187	77-8620	Hose – Fuel (Cut To Suit)	1
188	77-9360	Screw – Hex. Head	1
300	77-8640	Muffler – Exhaust	1
346	77-9430	Screw – Hex.	1
601	78-4690	Clamp – Fuel Hose	1

Ref. No.	Part No.	Description	No. Used
670	77-9030	Spacer – Fuel Tank (Includes 2)	1
674	77-8600	Screw – Tank Mtg.	1
832	77-9290	Guard – Muffler	1
★883	77-7760	Gasket – Exhaust	1
★1041	77-8590	Seal – Foam	1

   * Included in Gasket Set – Part No. 77-8900

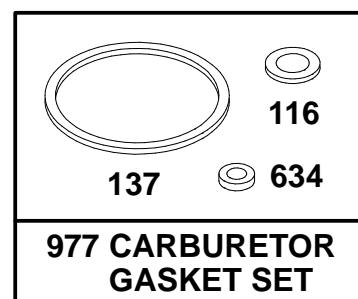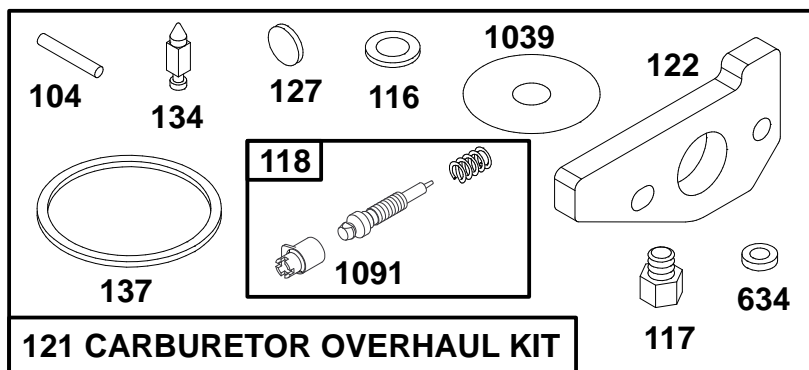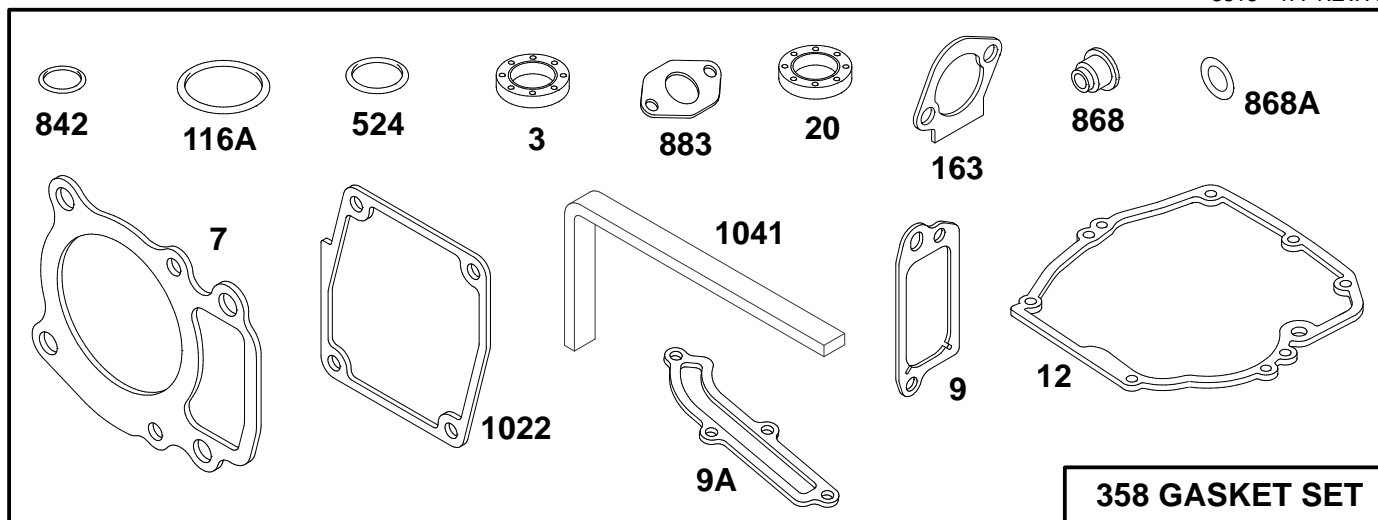

Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
★3	77-9060	Seal - Oil	1
★7	77-7740	Gasket - Cylinder Head	1
★9	77-9250	Gasket - Breather	1
★9A	77-7410	Gasket - Breather	1
★12	77-7550	Gasket - Engine Base	1
★20	77-7570	Seal - Oil	1
●104	77-8180	Pin - Float Hinge	1
●◆116	77-8210	Gasket - Sealing	1
★116A	77-7660	O-Ring	1
●118	77-9620	Valve and Spring - Needle	1
121	77-9580	Carburetor Overhaul Kit	1
●122	77-7820	Adapter Assembly	1
●127	94-1651	Plug - Welch	1
●134	77-8110	Valve - Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137	77-8200	Gasket - Float Bowl	1
★163	77-7960	Gasket - Air Cleaner	1
358	77-8900	Gasket Set	1
★524	77-7270	Seal - O-Ring	1
◆634	77-8150	Washer - Seal	1
★842	77-7300	Seal - O-Ring	1
★868	77-7890	Seal Assy. - Valve	1
★868A	77-7900	Seal - Valve	1
★883	77-7760	Gasket - Exhaust	1
977	77-8930	Carburetor Gasket Set	1
★1022	77-7320	Gasket - Rocker Cover	1
●1039	77-7250	Limiter - Float	1
★1041	77-8590	Seal - Foam	1
●1091	77-9650	Cap - Limiter	1

● Incl. in Carburetor Overhaul Kit - Part No. 77-9580

◆ Incl. in Carburetor Gasket Set - Part No. 77-8930

★ Included in Gasket Set - Part No. 77-8900

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3-3287	Spacer	6	5	2	63-8721	Spring Arm Assembly	4	4	2
14-4069	Cover - Recycler	1	12	1	65-2720	Ring - Retaining	4	24	4
14-9989	Wheel & Tire Assembly	1	25	2	65-4710	Ring - Friction	4	25	2
16-0029	Wheel - Tire & Gear Ass'y	4	30	2	65-4720	Spring	4	28	2
16-9479	Panel - Control	6	13	1	65-4730	Thrust Washer	4	22	2
16-9489	Housing - 21	1	1	1	65-4740	Thrust Washer	4	23	4
19-4050	Knob	6	12	2	65-4750	Pinion	4	1	2
25-7740	Knob - Arm	4	3	2	65-4760	Washer - Clutch	4	26	2
25-7740	Knob - Arm	1	21	4	65-4770	Shaft - Output	4	18	1
26-0670	Bolt - Blade	3	15	1	65-5250	Clip - Spring	5	61	1
27-6232	Bolt - Wheel	1	26	4	66-0541	Spring Arm Ass'y - Front	1	20	2
27-6232	Wheel Bolt	4	32	2	66-0560	Screw - Shoulder	1	24	2
27-6250	Bushing - Wheel	4	31	4	66-0570	Guide - Belt	3	9	1
27-7210	Screw - Shoulder	6	4	2	66-0580	Arm - Pivot	1	23	2
27-7211	Screw - Shoulder	6	8	2	66-5351	Lever - Control	6	20	1
29-9570	Bushing - Yoke	4	37	1	66-6040	Key - Rocker R.H.	4	*	1
33-3208	Rod - Shield	1	16	1	66-6050	Key - Rocker L.H.	4	27	1
36-4780	Washer - Thrust	4	42	1	70-9760	Bushing	4	19	2
36-4791	Washer - Thrust	4	46	2	71-8391	Control - Throttle	6	31	1
37-7260	Screw - Tapping	2	35	2	74-1660	Cover - Wheel	4	29	2
38-7820	Bearing - Ball	5	58	1	74-1670	Spacer - Wheel Cover	4	33	2
39-5770	Decal - Danger	1	3	1	76-0760	Key - Shift	4	40	2
40-1940	Washer	1	19	4	76-0770	Collar - Shift	4	41	1
42-3520	End Cap	4	5	2	76-0780	Sleeve - Shift Key	4	39	1
44-0580	Shield - Trailing	1	15	1	76-2712	Control - Speed Ground	6	30	1
46-5481	Cable - Traction	6	33	1	76-4331	Cable - Brake	6	32	1
46-5520	Lever - Traction	6	24	1	77-7040	Cover - Air Cleaner	10	968	1
46-6440	Cover - Cables Control	6	34	1	77-7140	Bracket - Blower Hsg.	13	980	1
46-6810	Screw - Hex Washer Hd.	1	14	1	77-7170	Bracket - Fuel Tank	14	182	1
46-6811	Screw - Hex Washer Hd.	1	13	3	77-7180	Grommet	13	1002	1
46-6980	Support - Cable	6	27	1	77-7190	Guard - Flywheel	13	37	1
46-7030	Retainer - Cable	1	29	1	77-7210	Insert - Rewind Handle	11	59	1
48-2060	Needle Bearing	4	21	2	77-7210	Insert - Rewind Handle	12	59	1
49-1630	Spacer - Support	6	23	2	77-7240	Bowl - Fuel	9	136	1
49-2040	Screw - Hex Hd.	2	33	2	77-7250	Limiters - Float	15	1039	1
49-2040	Screw - Self Tapping	4	8	8	77-7250	Limiters - Float	9	1039	1
52-7430	Bar - Control	6	19	1	77-7260	Dipstick - Oil	8	523	1
55-3570	Gas Cap Assembly	3	2	1	77-7270	Seal - O-Ring	15	524	1
55-3760	Gear - Pinion 15 Tooth	4	47	1	77-7270	Seal - O-Ring	8	524	1
55-3770	Gear - 49 Tooth 1st Gear	5	56	1	77-7280	Tube - Oil Filler	8	525	1
55-3780	Gear - Pinion 20 Tooth	4	48	1	77-7300	Seal - O-Ring	15	842	1
55-3790	Gear - 44 Tooth 2nd Gear	5	55	1	77-7300	Seal - O-Ring	8	842	1
55-3800	Gear - Pinion	5	49	1	77-7320	Gasket - Rocker Cover	15	1022	1
55-3810	Gear - 39 Tooth 3rd Gear	5	54	1	77-7320	Gasket - Rocker Cover	7	1022	1
60-8710	Gear Case - Upper	5	59	1	77-7330	Plug - Spark	7	337	1
60-8730	Cover - Gear Case	4	44	1	77-7340	Elbow - Spark Plug	7	635	1
60-8750	Bushing - Int. Shaft	4	45	2	77-7360	Screw - Hex. Head	7	10	1
60-8770	Bushing - Output Shaft	4	43	1	77-7370	Lever Assy. - Governor	8	227	1
60-8790	Sleeve - Gear	5	53	1	77-7380	Bolt - Governor Lever	8	562	1
60-8800	Shaft - Intermediate	5	50	1	77-7390	Nut - Hex.	8	592	1
60-8810	Retainer - Shift Fork	4	38	1	77-7400	Cover - Breather	7	572	1
60-8821	Lever - Shift	4	17	1	77-7410	Gasket - Breather	7	9A	1
60-8840	Pulley - Half	4	10	2	77-7410	Gasket - Breather	15	9A	1
60-8850	Bushing - Output Shaft	5	51	1	77-7420	Screw - Breather Cover	7	307	1
60-8870	Yoke - Shift	4	36	1	77-7450	Screw - Cap	8	819	1
60-8890	Pinion - Bevel	5	57	1	77-7460	Crank - Governor	8	616	1
62-3900	V-Belt	4	13	1	77-7470	Washer	8	230	1
62-4320	Bracket - Belt Guide	4	7	1	77-7480	Pushnut	8	615	1
62-4320	Bracket - Guide Belt	2	32	1	77-7490	Gear - Cam	8	46	1
62-6660	Spacer	4	9	1	77-7500	Gear - Governor	8	219	1
62-6673	Gear Case Assembly	5	*	1	77-7530	Gear - Timing	8	741	1
62-6673	Gear Case Assembly	1	31	1	77-7550	Gasket - Engine Base	15	12	1
62-7550	Pulley - Driver	3	10	1	77-7550	Gasket - Engine Base	8	12	1
63-8701-03	Pivot Arm Assembly	4	2	2	77-7560	Base - Engine	8	18	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No.	Qty.	Part No.	Description	Pg. Ref. No. No.	Qty.
77-7570	Seal - Oil	8	20 1	77-8180	Pin - Float Hinge	9	104 1
77-7570	Seal - Oil	15	20 1	77-8190	Bowl Assy. - Carburetor	9	975 1
77-7590	Cylinder Assy.	7	1 1	77-8200	Gasket - Float	15	137
77-7600	Pin - Cylinder	7	718 1	77-8200	Gasket - Float	9	137
77-7610	Tappet - Valve	7	45 1	77-8210	Gasket - Sealing	15	116 1
77-7620	Rod - Push	7	1026 1	77-8210	Sealing - Gasket	9	116 1
77-7630	Screw - Cylinder Head	7	13 1	77-8220	Screw - Hex. Head	9	955 1
77-7640	Pump - Oil	8	1024 1	77-8240	Screw - Idle Adj.	9	98 1
77-7650	Cover - Oil Pump	8	979 1	77-8260	Housing - Blower	13	304 1
77-7660	O-Ring	15	116A 1	77-8300	Screw - Hex. Head	11	65 1
77-7660	O-Ring	8	116A 1	77-8300	Screw - Hex. Head	12	65 1
77-7670	Rod - Connecting	8	29 1	77-8310	Screw - Hex. Head	8	305 1
77-7690	Piston Assy. (Std.)	8	25 1	77-8310	Screw - Hex. Head	13	305 1
77-7700	Ring Set (Std.)	8	26 1	77-8330	Flywheel - Magneto	13	23 1
77-7710	Lock - Piston Pin	8	27 1	77-8340	Key - Flywheel	13	24 1
77-7730	Head - Cylinder	7	5 1	77-8350	Cup - Starter	13	455 1
77-7740	Gasket - Cylinder Head	15	7 1	77-8360	Nut - Flywheel	13	332 1
77-7740	Gasket - Cylinder Head	7	7 1	77-8400	Wire - Ground	13	356 1
77-7760	Gasket - Exhaust	14	883 1	77-8420	Armature - Magneto	13	333 1
77-7760	Gasket - Exhaust	15	883 1	77-8470	Retainer - Rewind	11	456 1
77-7760	Gasket - Exhaust	7	883 1	77-8480	Rope - Starter	11	58 1
77-7770	Guide - Push Rod	7	1034 1	77-8490	Screw - Rewind Starter	11	461 1
77-7780	Stud - Rocker Arm	7	166 1	77-8500	Spring - Torsion	11	515 1
77-7790	Arm - Rocker	7	1029 1	77-8510	Handle - Rewind Starter	12	60 1
77-7800	Cap - Valve	7	238 1	77-8520	Handle - Rewind Starter	11	60 1
77-7810	Spring - Valve	7	35 1	77-8530	Pawl - Starter	11	459 1
77-7820	Adapter Assembly	15	122 1	77-8550	Pin - Spring	11	718A 1
77-7820	Adapter Assy.	7	122 1	77-8570	Cover - Spring	11	1016 1
77-7820	Adapter Assy	9	122 1	77-8580	Tank Assy. - Fuel	14	180 1
77-7860	Valve - Exhaust	7	33 1	77-8590	Seal - Foam	14	1041 1
77-7870	Retainer - Spring	7	40 1	77-8590	Seal - Foam	15	1041 1
77-7880	Valve - Intake	7	34 1	77-8600	Screw - Tank Mtg.	14	674 1
77-7890	Seal Assy. - Valve	15	868 1	77-8620	Hose - Fuel	14	187 1
77-7890	Seal Assy. - Valve	7	868 1	77-8640	Muffler - Exhaust	14	300 1
77-7900	Gasket - Valve	7	868A 1	77-8840	Starter Assy. - Rewind	11	608 1
77-7900	Seal - Valve	15	868A 1	77-8860	Spring - Brake	13	922 1
77-7910	Ball & Screw - Rocker	7	192 1	77-8890	Housing - Rewind	11	55 1
77-7920	Screw - Air Cleaner	10	969 1	77-8900	Gasket Set	15	358 1
77-7930	Screw - Air Cleaner	10	971 1	77-8930	Carburetor Gasket Set	15	977 1
77-7940	Base - Air Cleaner	10	966 1	77-9020	Short Block	11	1
77-7950	Element - Filter	10	535 1	77-9020	Short Block	12	1
77-7960	Gasket - Air Cleaner	10	163 1	77-9030	Spacer - Fuel Tank	14	670 1
77-7960	Gasket - Air Cleaner	15	163 1	77-9060	Seal - Oil	7	3 1
77-7970	Screw - Hex. Head	9	124 1	77-9060	Seal - Oil	15	3 1
77-7980	Link - Governor	10	201 1	77-9070	Screw - Engine Base	8	22 1
77-7990	Spring - Governor	10	209 1	77-9200	Screw - Hex. Head	7	10A 1
77-8000	Bracket - Carburetor	10	620 1	77-9240	Plug - Pipe	8	15 1
77-8010	Switch - Stop	10	621 1	77-9250	Gasket - Breather	7	9 1
77-8010	Switch - Stop	13	621 1	77-9250	Gasket - Breather	15	9 1
77-8020	Screw Assy. - Speed	10	98A 1	77-9270	Pulley - Rewind Starter	11	56 1
77-8040	Tube - Vent	9	1011 1	77-9290	Guard - Muffler	14	832 1
77-8080	Valve - Throttle	9	130 1	77-9300	Breather Assy.	7	8 1
77-8090	Screw - Valve Mtg.	9	95 1	77-9310	Screw - Set	7	192A 1
77-8100	Plug - Welch	9	127 1	77-9320	Cover - Valve	7	1023 1
77-8110	Valve - Inlet	15	134 1	77-9330	Crankshaft	8	16 1
77-8110	Valve - Inlet	9	134 1	77-9340	Pin Assy. - Piston	8	28 1
77-8130	Shaft - Choke	9	141 1	77-9350	Screw - Connecting Rod	8	32 1
77-8140	Spring - Choke	10	618 1	77-9360	Screw - Hex. Head	10	188 1
77-8150	Washer - Seal	15	634 1	77-9360	Screw - Hex. Head	14	188 1
77-8150	Washer - Seal	9	z634 1	77-9360	Screw - Hex. Head	13	188 1
77-8160	Shaft - Throttle	9	131 1	77-9360	Screw - Hex. Head	8	188 1
77-8170	Float - Carburetor	9	133 1	77-9410	Tube - Breather	7	11 1
77-8180	Pin - Float Hinge	15	104 1	77-9420	Screw - Armature Mtg.	13	334 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
77-9430	Screw - Hex.	14	346	1	94-1651	Plug - Welch	15	127	1
77-9450	Terminal - Spark Plug	13	851	1	94-1653	Cup - Starter	12	455	1
77-9460	Brake Assy.	13	923	1	94-1654	Pawl - Starter	12	459	1
77-9470	Tube - Breather	10	529	1	94-1655	Spring - Torsion	12	515	1
77-9550	Cover - Brake	3	16	1	94-1657	Pulley - Rewind Starter	12	56	1
77-9580	Carburetor Overhaul Kit	15	121	1	94-1659	Retainer - Rewind Starter	12	456	1
77-9600	Valve - Choke	9	108	1	94-1660	Screw - Rewind Starter	12	461	1
77-9610	Jet - Main	9	117	1	94-1661	Starter Assy - Rewind	12	608	1
77-9620	Valve & Spring -	9	118	1	94-1666	Housing - Rewind Starter	12	55	1
77-9620	Valve and Spring -	15	118	1	94-1668	Rope - Starter	12	58	1
77-9630	Carburetor Assy.	9	125	1	94-6060	Decal - Engine	3	4	1
77-9640	Adapter - Jet	9	147	1	2210-249	Clamp - Casing (P/W Eng.)	3	6	1
77-9650	Cap - Limiter	15	1091	1	2210-316	Stop - Rope (P/W Eng.)	3	5	1
77-9650	Cap - Limiter	9	1091	1	237-153	O-Ring	5	60	2
78-4690	Clamp - Fuel Hose	14	601	1	2412-50	Clip - Tubing Convoluted	6	35	4
82-5531	Handle - Lower	6	1	1	302-56	Fitting - Grease	4	20	2
82-5680	Bracket - Adjustment Trac.	1	27	1	321-39	Screw - Hex Hd. Cap	6	21	1
82-8450	Decal - Danger Deck	1	5	1	3253-22	Washer - Lock	3	14	1
82-8780	Cable - Retainer	4	15	1	3256-1	Washer - Flat	6	28	1
82-9910	Cover - Belt	1	30	1	3256-24	Washer - Flat	4	12	1
84-8361	Latch - Handle LH	6	2	1	3272-10	Pin - Cotter	4	14	1
84-8401	Latch - Handle RH	6	3	1	3272-72	Nut - Lock	6	7	3
86-9671	Guide - Rope	6	29	1	3290-378	Tie - Cable	6	36	3
91-2253	Cover - Wheel	2	36	1	3296-5	Locknut	4	11	1
92-1720	Kicker - RH Front	1	7	1	3296-6	Locknut	4	34	2
92-1730	Kicker - LH Front	1	8	1	3296-6	Nut - Lock	1	18	6
92-1750	Plate - Kicker Rear	1	6	1	3296-47	Nut - Lock	6	6	1
92-2260	Screw - Handle	6	11	4	3296-73	Nut - Lock	6	22	3
92-2269	Screw - Handle	6	26	1	3296-74	Nut - Flange	6	25	2
92-2277	Handle - Upper	6	9	1	32121-120	Pin - Coil	5	52	1
92-2279	Decal - HOC	1	17	4	32144-70	Screw - Tapping	1	28	4
92-2289	Plate - Logo Toro	3	3	1	32144-70	Screw - Thread Forming	4	16	1
92-4086	Grip - Foam	6	10	1	32144-85	Screw	4	35	2
92-9665	Screw - Phillips Hd.	6	18	5	32144-85	Screw - Hex Hd.	1	22	4
93-0248	Decal - Warning	2	34	1	32144-102	Screw	3	8	3
93-3696	Decal - Deck	1	2	1	32144-111	Screw - PPH	1	9	6
93-3697	Decal - Panel Front	6	16	1					
93-4106	Blade - 21	3	12	1					
93-4107	Retainer - Blade	3	11	1					
93-7166	Decal - Instruction	6	14	1					
93-8470	Screw - Clamp (P/W Eng.)	3	7	1					
94-1604	Engine GTS-150	3	1	1					
94-1608	Accelerator - Blade	3	13	1					

OPTIONAL EQUIPMENT

Recycler Side Discharge Kit	Model No. 59197
Recycler Bagging Kit	Model No. 59195
Dethatcher Kit	Model No. 59131
Mow & Feed	Model No. 52070

*Not Illustrated

