



Z Master
60" Side Discharge
Deck

Model No. 78476 – 790001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Deck Asm And Decals	1	Idler And Pulley Asm	3
Deck Plate, Spindle And Blade Asm	2	Belt And Lift Arm Asm	4

Note:

..

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations


This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

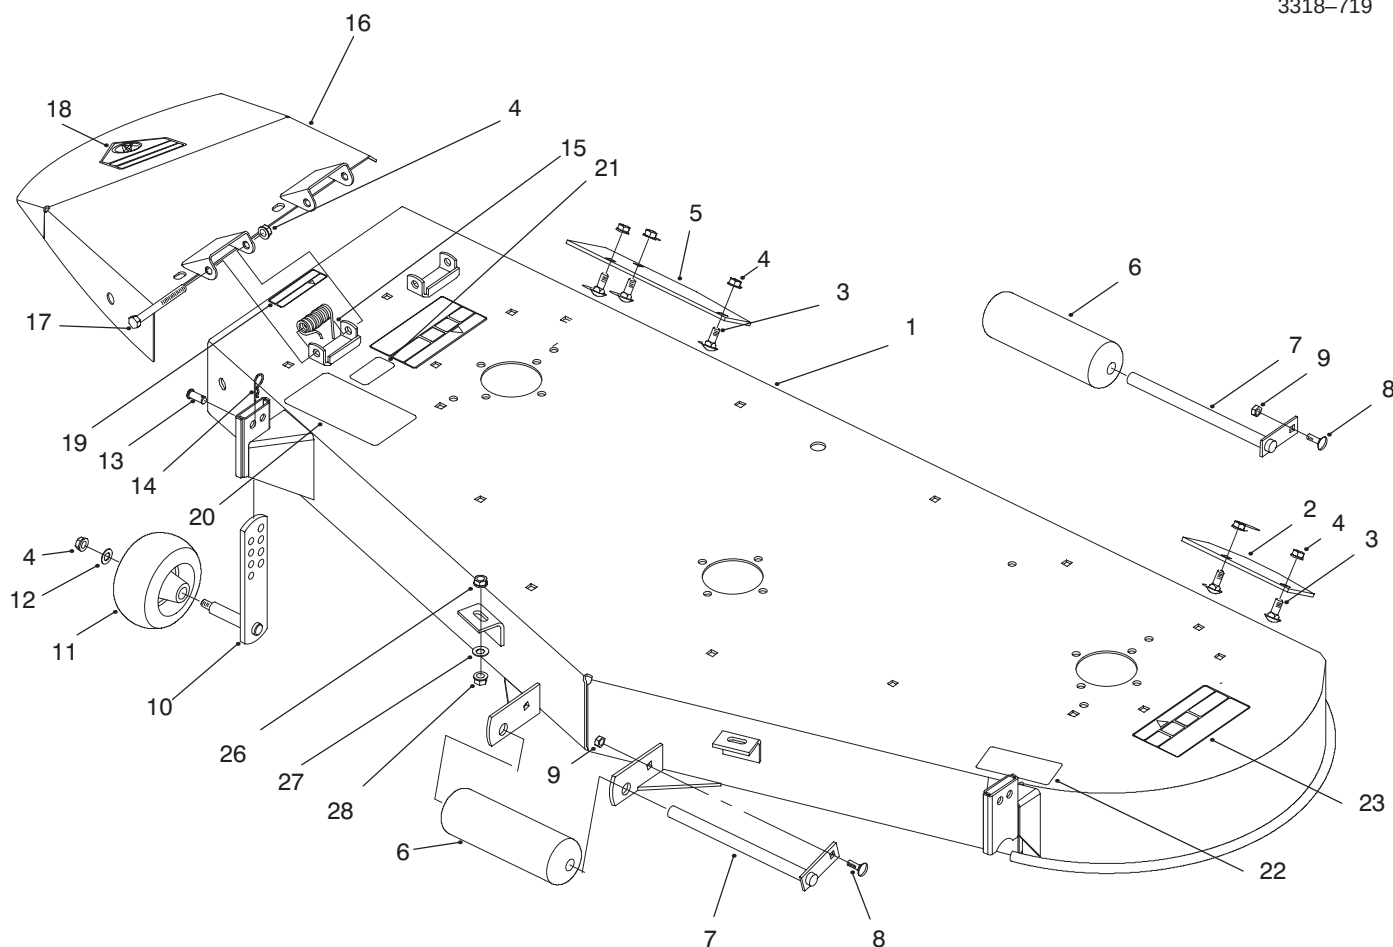


Sheet No.: 2

Deck Asm And Decals

Ref. No.	Part No.	Qty.	Description
1	92-7697-01	1	Deck & Decal Asm
2	79-1290-01	1	Plate-Wear
3	3231-2	5	Screw-CARR
4	3296-39	9	Nut-Lock
5	79-1240-01	1	Plate-Wear
6	113349	2	Roller-Anti Scalp
7	113603-01	2	Shaft
8	3230-1	2	Bolt-CARR
9	3296-29	2	Nut-Lock
10	68-2350	2	Plate-Gage Wheel
11	68-2730	2	Wheel-Gage
12	3256-24	2	Washer-Flat
13	9329634	2	Pin-Clevis
14	9335044	2	Hairpin
15	40-6230	2	Spring-Torsion
16	92-6508-01	1	Chute & Decal ASM
17	323-42	2	Screw-HH
18	93-1122	1	Decal-Danger
19	66-6380	1	Decal-Danger
20	94-6281	1	Decal-Belt Installation
21	94-6225	1	Decal-Safety
22	68-3380	1	Decal-Wheel Adjustment
23	66-1340	2	Decal-Discharge
26	3296-39	2	Nut-Lock


Ref. No.	Part No.	Qty.	Description
27	3256-24	2	Washer-Flat
28	32128-43	2	Nut-Flange

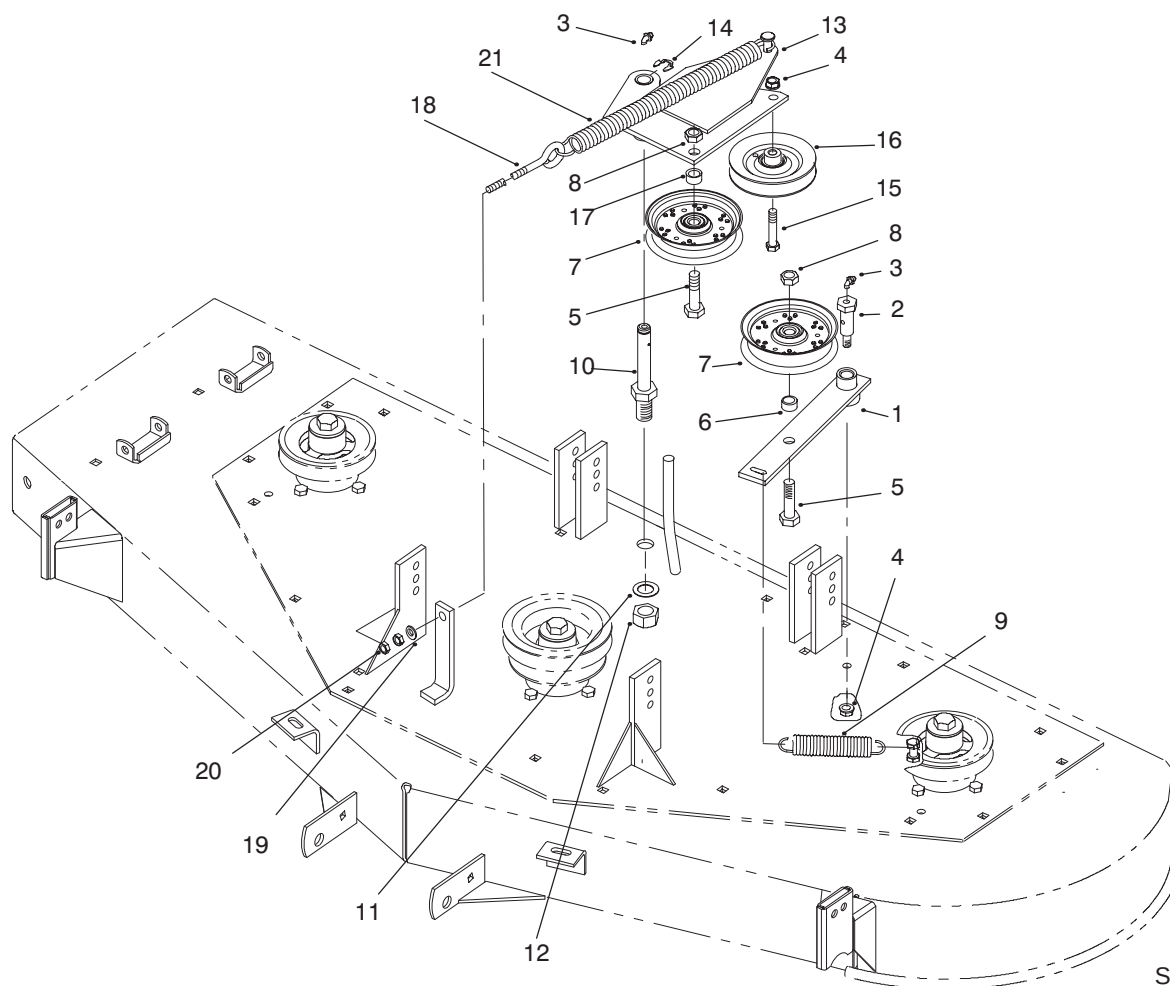

Sheet No.: 4

Idler And Pulley Asm

Ref. No.	Part No.	Qty.	Description
1	114835-01	1	Arm-Idler
2	120060	1	Screw-Hhshldr
3	302-40	2	Fitting-Grease
4	3296-39	2	Nut-Lock
5	325-8	2	Screw-HH
6	9118	1	Spacer
7	113633	2	Pulley-Flat
8	3296-23	2	Nut-Lock
9	100071	1	Spring-Extension
10	114911	1	Shaft-Idler Plate
11	67-9410	1	Washer-Flat
12	3296-50	1	Nut-Hex Lock
13	94-6216	1	Idler Plate ASM
14	105005	1	Ring-Retaining
15	323-10	1	Screw-HH
16	94-6218	1	Pulley-Idler
17	9118	1	Spacer
18	79-3120	1	Bolt-Eye
19	3256-23	1	Washer-Flat
20	3217-6	2	Nut-Hex
21	114868	1	Spring-Idler

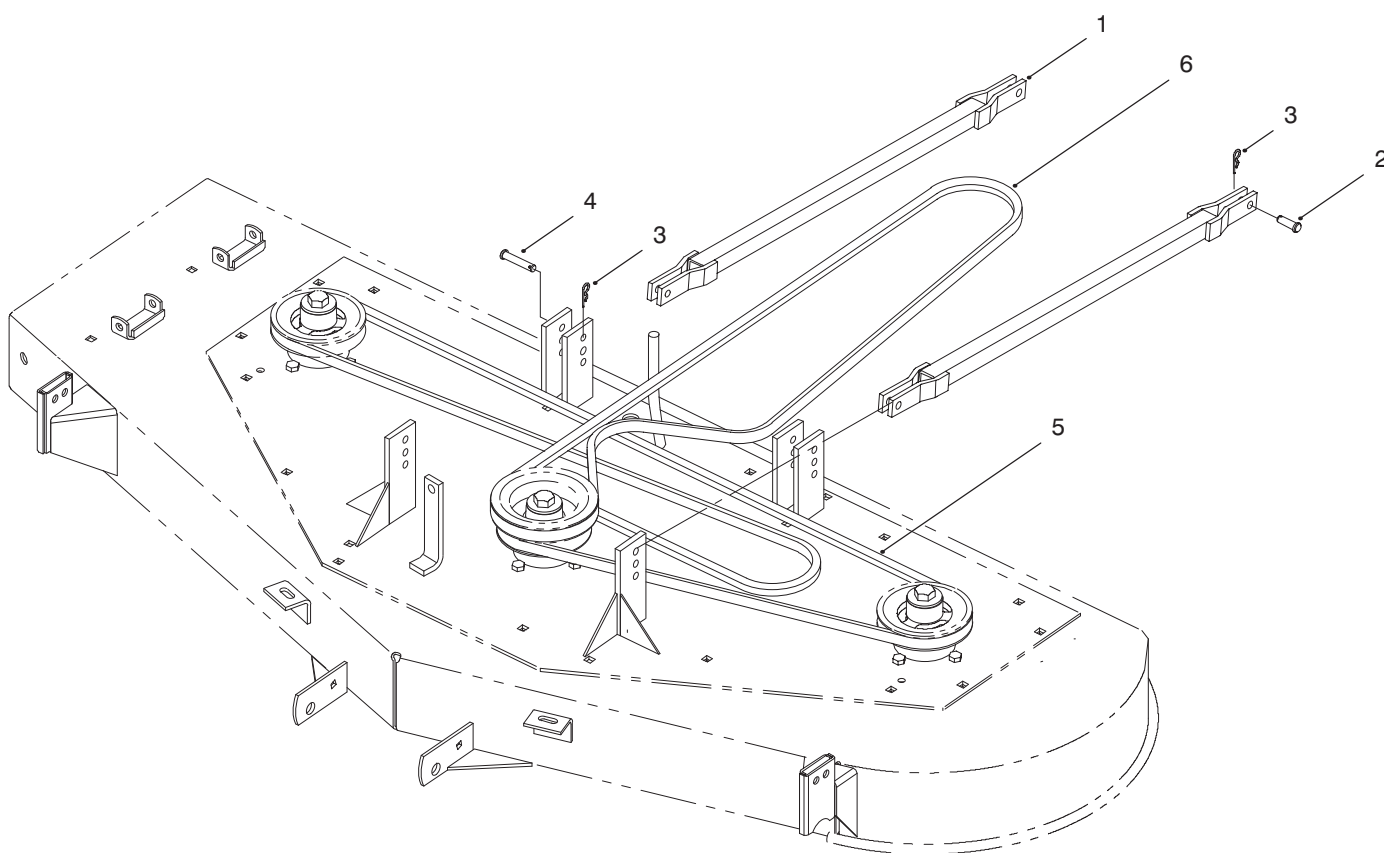

Sheet No.: 5

Belt And Lift Arm Asm

Ref. No.	Part No.	Qty.	Description
1	113635-03	2	Bar-Stabilizer
2	9329644	4	Pin-Clevis
3	112444	6	Cotter-Hairpin
4	9329674	2	Pin-Clevis
5	112449	1	Belt-V
6	94-6143	1	Belt-Drive

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
1481	2	5	3	Fitting—Grease
9118	3	6	1	Spacer
9118	3	17	1	Spacer
100071	3	9	1	Spring—Extension
105005	3	14	1	Ring—Retaining
110047	2	13	3	Spacer
112444	4	3	6	Cotter—Hairpin
112449	4	5	1	Belt—V
112947	2	11	3	Blade—20.62"
113349	1	6	2	Roller—Anti Scalp
113511	2	7	3	Tube
113512	2	10	3	Cup—Spindle
113513	2	6	3	Shaft—Spindle
113514	2	8	6	Bearing—Ball
113516	2	4	3	Housing—Spindle
113525	2	17	2	Pulley—Outer
113526	2	14	1	Pulley—Center
113633	3	7	2	Pulley— Flat
114810	2	15	3	Washer—Flat
114868	3	21	1	Spring—Idler
114911	3	10	1	Shaft—Idler Plate
120060	3	2	1	Screw—Hhshldr
920260	2	9	6	Washer—Flat
9329634	1	13	2	Pin—Clevis
9329644	4	2	4	Pin—Clevis
9329674	4	4	2	Pin—Clevis
9335044	1	14	2	Hairpin
40-6230	1	15	2	Spring—Torsion
66-1340	1	23	2	Decal—Discharge
66-6380	1	19	1	Decal—Danger
67-9410	3	11	1	Washer—Flat
68-2350	1	10	2	Plate—Gage Wheel
68-2730	1	11	2	Wheel—Gage
68-3380	1	22	1	Decal—Wheel Adjustment
78-1970-01	2	1	1	Plate
79-1240-01	1	5	1	Plate—Wear
79-1290-01	1	2	1	Plate—Wear
79-3120	3	18	1	Bolt—Eye
92-6508-01	1	16	1	Chute & Decal ASM
92-7697-01	1	1	1	Deck & Decal ASM
93-1122	1	18	1	Decal—Danger
94-6143	4	6	1	Belt—Drive
94-6216	3	13	1	Idler Plate ASM
94-6218	3	16	1	Pulley—Idler
94-6225	1	21	1	Decal—Safety
94-6281	1	20	1	Decal—Belt Installation
94-6288	2	20	2	Decal—HOC
113603-01	1	7	2	Shaft
113635-03	4	1	2	Bar—Stabilizer
114835-01	3	1	1	Arm—Idler
302-40	3	3	2	Fitting—Grease
323-8	2	19	1	Screw—HH
323-10	3	15	1	Screw—HH
323-42	1	17	2	Screw—HH
325-8	3	5	2	Screw—HH
327-6	2	12	6	Screw—HH
3217-6	3	20	2	Nut—Hex
3218-3	2	18	1	Nut—HJ
3230-1	1	8	2	Bolt—CARR
3231-2	1	3	5	Screw—CARR
3231-2	2	2	15	Screw—CARR
3235-22	2	16	11	Screw—HH Lock

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3256-23	3	19	1	Washer-Flat
3256-24	1	12	2	Washer-Flat
3256-24	1	27	2	Washer-Flat
3290-271	1	25	2	Rivet-Pop
3296-23	3	8	2	Nut-Lock
3296-29	1	9	2	Nut-Lock
3296-39	1	4	9	Nut-Lock
3296-39	1	26	2	Nut-Lock
3296-39	2	3	15	Nut-Lock
3296-39	3	4	2	Nut-Lock
3296-50	3	12	1	Nut-Hex Lock
32128-43	1	28	2	Nut-Flange

[illegible]