

PART NO. 94-5330

INSTALLATION INSTRUCTIONS

INTERLOCK MODULE KIT GREENS AERATOR

- **1.** Stop engine, engage parking brake and remove key from ignition switch.
- 2. Unplug interlock module connector from main wire harness.
- **3.** Remove self tapping screw and external tooth lockwasher securing interlock module and engine wire ring terminal to rear of control panel base. Retain fasteners.

IMPORTANT: Coat all connectors with skin—over grease, Toro part No. 505—36, before installing.

- 4. Plug new wire harness into new interlock module.
- **5.** Mount new interlock module, ring terminal from black wire and ring terminal from engine wire to rear of

control panel base with self tapping screw and external tooth lockwasher. Electrical ground must be achieved at this connection.

- **6.** Plug interlock module wire harness into main wire harness.
- 7. Check function of module:
- Engine should not start when coring head is down in coring position unless override lever is engaged. Refer to Greens Aerator Operator's Manual for operation of the override system.
- Engine should kill when coring head is down in coring position and operator releases interlock lever switches.

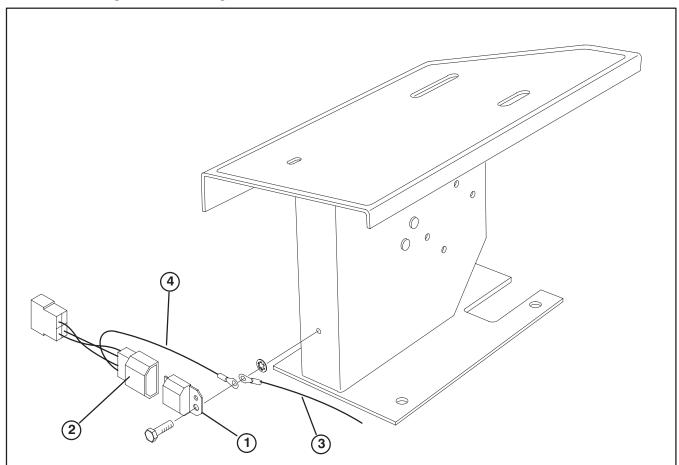


Figure 1

- 1. Interlock module
- 2. Wire harness
- 3. Engine wire
- 4. Harness wire