



- 1. Switch—parking-brake interlock (950865)
- 2. Glow-plug timer (15694-65992)
- 3. Light—parking brake (924601/950858)
- 4. Light—glow plugs (924601/950857)
- 5. Light—Neutral (924601/950862)
- 6. Light—cutting unit, drive off (924601/950861)
- 7. Light—return filter (924601/950866)
- 8. Light—pressure filter (924601/950863)
- 9. Light—battery warning (924601/924605)
- 10. Light—engine oil pressure (924601/924606)
- 11. Light—engine coolant temperature (924601/924602)
- 12. Light—hydraulic oil temperature (924601/924603)
- 13. Diodes—overheat, audible warning (950868)
- 14. Switch—beacon (supplied with beacon kit) 924608
- 15. Switch—work/transport mode (924607)
- 16. Solenoid—center cutting unit drive, reverse (70-06-246)
- 17. Solenoid—center cutting unit drive, forward (70-06-246)
- 18. Solenoid—wing cutting unit drive, reverse (70-06-246)
- 19. Solenoid—wing cutting unit drive, forward (70-06-246)
- 20. Switch—cutting unit drive (924864)
- 21. Fusebox (70-09-096)
  - 1. 10A—cutting unit drive and lift config. (70-09-026)
  - 2. 10A—transmission and horn (70-09-026)
  - 3. 3A Instruments (70-09-024)
- 22. Switch—ignition (74-09-009)
- 23. Switch—horn (924618)
- 24. Relay—cutting unit drive warning lamps (70-09-148)
- 25. Relay—overheat audible warning (995718)
- 26. Relay—neutral start (924625)
- 27. Relay—glow plugs (924625)
- 28. Timer—operator presence interlock (70-01-512)
- 29. Switch—cutting unit lift configuration (924608)
- 30. Solenoids—lift configuration (63-06-082)
- 31. Temperature-gauge kit (obsolete)
- 32. Relay—fuel solenoid (16259-60250)
- 33. Connectors for lighting kit
- 34. Horn (70-09-108)
- 35. Switch—operator seat (111-0410)
- 36. Solenoid—differential lock (910627)
- 37. Switch—differential lock (994860)
- 38. Switch—pressure filter
- 39. Switch—hydraulic oil temperature (940852)
- 40. Connection for beacon kit
- 41. Switch—neutral/starter interlock (111-0143)
- 42. Battery (70-09-015)
- 43. Switch—engine oil pressure
- 44. Starter motor
- 45. Alternator/regulator
- 46. Engine temperature sender (supplied with temp kit)
- 47. Glow plugs
- 48. Switch—engine overheat
- 49. Solenoid—fuel (1A021-60014)
- 50. Engine (950950)
- 51. Hour meter (910850)
- 52. Switch—return filter
- 53. Solenoids—work/transport mode (910627)
- 54. Fuse—engine glow plugs, 60A
- 55. Fuse—main, 60A
- 56. Diode—parking brake (950868)
- 57. Diode—seat switch (950868)
- 58. Relay—seat switch (70-09-148)
- 59. Delay Module—seat (924722)