



Item Number	Description	Part Number	Item Number	Description	Part Number
1	HYDRAULIC MOTOR - CENTER CUTTING UNIT	111-4445	27	CHECK VALVE - STEERING SHOCK BYPASS RIGHT	111-3267
2	HYDRAULIC MOTOR - LEFT	111-4446	28	RELIEF VALVE (18 BAR) STEERING	111-3267
3	HYD MOTOR - RIGHT CUTTING UNIT	111-4445	29	RELIEF VALVE (18 BAR) STEERING	111-3267
4	CHECK VALVE / ORIFICE - MOTOR BYPASS	111-4445	30	HYDRAULIC MOTOR - LT - REAR WHEEL	111-2260
5	ORIFICE - INDIVIDUAL MOTOR PROTECTION	111-4453	31	HYDRAULIC MOTOR - RT - REAR WHEEL	111-2260
6	PILOT SPOOL VALVE - CUTTER ENGAGE	111-4629	32	ROCK TRANSMISSION MANIFOLD	924857
7	CUTTER CONTROL MANIFOLD	111-4629	33	CHECK VALVE - 170 PSI (120 PSI) BYPASS LEFT	924858
8	12V SOLENOID VALVE - CUTTER ENGAGE	125-7544	34	CHECK VALVE - 170 PSI (120 PSI) BYPASS RIGHT	924858
9	12V SOLENOID VALVE - CUTTER FWD/REVERSE CONTROL	111-6833	35	HYDRAULIC MOTOR - LEFT FRONT WHEEL	111-3267
10	12V SOLENOID VALVE - CUTTER FWD/REVERSE CONTROL	111-6833	36	HYDRAULIC MOTOR - RIGHT FRONT WHEEL	111-3267
11	12V PROPORTIONAL RELIEF VALVE	111-6832	37	FRONT TRANSMISSION MANIFOLD	111-3267
12	TEST PORT - MAIN CUTTER PRESSURE	111-7445	38	ROCK TRANSMISSION MANIFOLD	111-3267
13	LEFT CONTROL MANIFOLD	111-3435	39	SUCTION STRAINER	1006-025
14	SOLENOID VALVE - LIFT RT FRONT ARM	111-3436	40	GEAR PUMP - CUTTING UNIT DRIVE	111-3263
15	SOLENOID VALVE - LIFT LT FRONT ARM	111-3436	41	GEAR PUMP - LIFT & STEER	924798
16	SOLENOID VALVE - LOWER RIGHT	111-3437	42	PRESSURE FILTER	924798
17	SOLENOID VALVE - LOWER LEFT	111-3437	43	FRONT TRANSMISSION MANIFOLD	111-3267
18	SOLENOID VALVE - LOWER FRONT ARM	111-3437	44	TRAVEL 100 BAR	111-4775
19	SOLENOID VALVE - LOWER FRONT ARM	111-3437	45	TRANSMISSION RELIEF VALVE REVERSE	111-4775
20	SOLENOID VALVE - LOWER FRONT ARM	111-3437	46	TRANSMISSION RELIEF VALVE FORWARD	111-3719
21	SOLENOID VALVE - LOWER FRONT ARM	111-3437	47	CHECK VALVE TRANSMISSION REVERSE BYPASS	111-3263
22	SOLENOID VALVE - LOWER FRONT ARM	111-3437	48	CHECK VALVE TRANSMISSION FORWARD BYPASS	111-3263
23	SOLENOID VALVE - LOWER FRONT ARM	111-3437	49	PRESSURE RELIEF VALVE - CHARGE	910615
24	SOLENOID VALVE - LOWER FRONT ARM	111-3437	50	PRESSURE RELIEF VALVE - TRANSMISSION	910615
25	SOLENOID VALVE - LOWER FRONT ARM	111-3437	51	TEST PORT - PRESSURE	111-3269
26	SOLENOID VALVE - LOWER FRONT ARM	111-3437	52	ORIFICE PLATE - 2 WAY	111-3269
27	SOLENOID VALVE - LOWER FRONT ARM	111-3437	53	TRANSMISSION BYPASS VALVE	111-4466
28	SOLENOID VALVE - LOWER FRONT ARM	111-3437	54	VALVE DIFFERENTIAL LOCK	111-4467
29	SOLENOID VALVE - LOWER FRONT ARM	111-3437	55	VALVE DIVERTER	910629
30	SOLENOID VALVE - LOWER FRONT ARM	111-3437	56	SHUTTLE VALVE	111-4777
31	SOLENOID VALVE - LOWER FRONT ARM	111-3437	57	SOLENOID VALVE RELIEF 100 BAR	910615
32	SOLENOID VALVE - LOWER FRONT ARM	111-3437	58	SHUTTLE VALVE	910615
33	SOLENOID VALVE - LOWER FRONT ARM	111-3437			
34	SOLENOID VALVE - LOWER FRONT ARM	111-3437			