

# Instructions: Tractor Seat Cover



## Installation

Your seat cover has storage pockets on the back of the cover. This side faces back.

If your seat has armrests, lift the armrests into the vertical position. Pull the seat cover over the seat back while inserting armrests through the side holes. Then pull the rest of the cover over the seat front.

If your seat does not have armrests, simply pull the seat cover over the seat back. Then pull the rest of the cover over the seat front.



## Cleaning and Care

Clean your cover with a soft brush and lukewarm water. DO NOT USE SOAP as it may remove the protective coatings added by the factory. Line dry or machine dry on air or delicate settings only. Do not dry on high heat as it could melt the foam in the cover.

Do not dry on high heat as it could melt the foam in the cover.

## Storage

To avoid any possibility of mildew be sure your seat cover is completely dry before you store it in an enclosed area for a long period.

## Toro General Commercial Parts Warranty A Ninety-Day Limited Warranty

### Conditions and Products Covered

The Toro Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant your Toro Commercial parts ("Part") to be free from defects in materials or workmanship for ninety (90) days.

Where a warrantable condition exists, we will repair or replace the part at no cost to you. This warranty begins on the date the Part is purchased by the original retail purchaser.

### Instructions for Obtaining Warranty Service

You are responsible for notifying the Commercial Products Distributor or Authorized Commercial Products Dealer from whom you purchased the Product as soon as you believe a warrantable condition exists. If you need help locating a Commercial Products Distributor or Authorized Dealer, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Toro Commercial Products Service Department  
Toro Warranty Company  
8111 Lyndale Avenue South  
Bloomington, MN 55420-1196  
952-888-8801 or 800-982-2740  
E-mail: [commercial.warranty@toro.com](mailto:commercial.warranty@toro.com)

### Items and Conditions Not Covered

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. This warranty does not cover the following:

- Part failures which result from the use of non-Toro replacement parts, or from installation and use of add-on, or modified non-Toro branded accessories and products. A separate warranty may be provided by the manufacturer of these items.
- Part failures which result from failure to perform recommended maintenance and/or adjustments. Failure to properly maintain your Toro product per the recommended maintenance listed in the Operator's Manual can result in claims for warranty being denied.
- Part failures which result from operating the Product in an abusive, negligent or reckless manner.
- Parts subject to consumption through use unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to, brake pads and linings, clutch linings, blades, reels, rollers and bearings (sealed or greasable), bed knives, aerator cranks shafts and stomper arm bearings, tines, spark plugs, castor wheels and bearings, tires, filters, belts, and certain sprayer components such as diaphragms, nozzles, and check valves, etc.

- Failures caused by outside influence. Conditions considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved coolants, lubricants, additives, fertilizers, water, or chemicals, etc. Normal noise, vibration, and deterioration, "wear and tear". Normal "wear and tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.

### General Conditions

Repair by an Authorized Toro Distributor or Dealer is your sole remedy under this warranty.

Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Except for the Emissions warranty referenced below, if applicable, there is no other express warranty. All implied warranties of merchantability and fitness for use are limited to the duration of this express warranty.

Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### Countries Other than the United States or Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer.



**Form No. 3396-657 Rev A**

Toro Large, Part #131-6691

Toro Small, Part #131-6690

15cH54\_18043