Form Number 3357-808 Rev B

DH 200 Lawn Tractor

Model No. 74573 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Frame Assembly	4
Front Axle Assembly	6
Steering Assembly	7
Hood Assembly	8
Engine Assembly	9
Operation, Brake and Bypass Assembly	10
Operation and Travel Pedal Assembly	11
Transmission Drive Assembly	12
Control Shaft Assembly Transmission Assembly No. 104-2889	14
Motor Shaft Assembly Transmission Assembly No. 104-2889	15
Transaxle Case Assembly Transmission Assembly 104-2889	16
Differential Gear Assembly Transmission Assembly No. 104-2889	17
Final Pinion Assembly Transmission Assembly No. 104-2889	18
Axle Shaft Assembly Transmission Assembly No. 104-2889	19
Brake Assembly Transmission Assembly No. 104-2889	20
Fan Pulley Assembly Transmission Assembly No. 104-2889	21
Range Shift Assembly Transmission Assembly No. 104-2889	22
Center Case Assembly Transmission Assembly No. 104-2889	23
Pump Shaft Assembly Transmission Assembly No. 104-2889	24
Grass Collector Assembly No. 106-5760	25
Tunnel Assembly	26
Deck Housing Assembly	27
Cutting Pan and Bag on Demand Assembly	28
Cutting Pan and Drive System Assembly	29
Mower Lift Assembly	31
Harness Assembly	32
Electrical Switch No. 1 Assembly	33
Electrical Switch No. 2 Assembly	34
Electrical Switch No. 3 Assembly	35
Cylinder Assembly Briggs and Stratton Model 31A607-0117-E1	36
Cylinder Head Assembly Briggs and Stratton Model 31A607-0117-E1	37
Crankshaft Assembly Briggs and Stratton Model 31A607-0117-E1	38
Crankcase Assembly Briggs and Stratton Model 31A607-0117-E1	39
Carburetor Assembly Briggs and Stratton Model 31A607-0117-E1	40
Carburetor Assembly (Nikki) Briggs and Stratton Model 31A607-0117-E1	41
Governor Assembly Briggs and Stratton Model 31A607-0117-E1	42
Blower Housing Assembly Briggs and Stratton Model 31A607-0117-E1	43
Starter Assembly Briggs and Stratton Model 31A607-0117-E1	44
Gasket Set Briggs and Stratton Model 31A607-0117-E1	45
Carburetor Overhaul Kit Briggs and Stratton Model 31A607-0117-E1	46
Carburetor Overhaul Kit (Nikki) Briggs and Stratton Model 31A607-0117-E1	47
Attachments and Accessories List	48

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Obtain from your local Briggs & Stratton dealer
❹ Included in Carburetor Overhaul Kit (Ref. No. 121)
❺ Included in Engine Gasket Set (Ref. No. 358)
❻ Included in Carburetor Gasket Set (Ref. No. 977)
❼ Included in Valve Gasket Set (Ref. No. 1095)
❽ For Service of Nikki Carburetors
❾ Included in Carburetor Overhaul Kit (Ref. No. 121, 121A)
❿ Included in Carburetor Overhaul Kit (Ref. No. 121A)

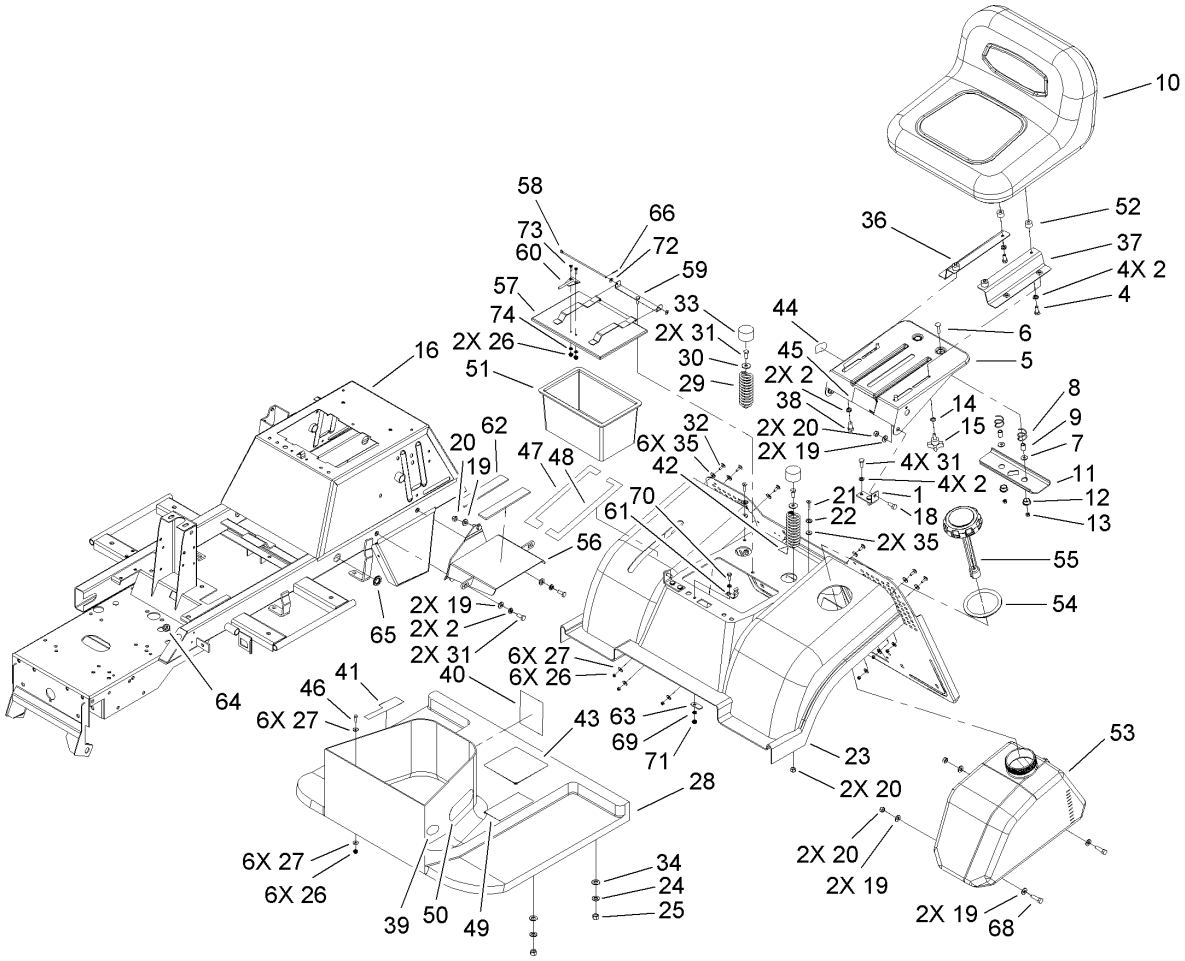

Frame Assembly

Ref	Part No.	Qty.	Description
1	104-2926	2	Bracket-Support, Seat
2	42-9850	12	Washer-Lock, Spring
4	322-3	4	Screw-HH
5	104-2929	1	Support-Seat
6	104-2930	2	Bolt-Carriage
7	104-2931	2	Washer-Flat
8	104-2932	2	Spring-Seat
9	104-2933	2	Spacer-Split
10	107-2214	1	Seat ASM
11	104-2934	1	Bracket
12	104-2935	2	Bushing
13	33023-00	2	Nut-Lock
14	104-2936	2	Washer-Spring
15	104-2937	2	Knob-Adj.
16	107-8948	1	Chassis-Frame
18	104-2939	2	Screw-Support, Seat
19	33094-00	9	Washer-Plain
20	33024-00	7	Nut-Lock
21	104-2940	2	Screw-HSFH
22	104-2941	2	Washer-Finish
23	110-8668	1	Fender-Rear
24	33095-00	4	Washer-Flat
25	33025-00	4	Nut-Lock
26	87-5140	14	Nut-Lock

Ref	Part No.	Qty.	Description
27	104-2943	18	Washer-Flat
28	104-2944	1	Footrest ASM
29	104-2945	2	Spring-Seat
30	104-2946	2	Washer-Plain
31	33114-020	8	Screw-HH
32	104-2948	6	Bolt-Carriage
33	104-2857	2	Cap-Hub
34	104-2951	4	Washer-Rubber
35	104-2952	8	Washer-Rubber
36	107-8915	1	Bracket-Seat, RH
37	107-8916	1	Bracket-Seat, LH
38	104-3195	2	Screw
39	104-3237	1	Decal-Brake, Parking
40	104-3238	1	Decal-Starting
41	104-3241	1	Decal-Operation, Hydro
42	104-3242	1	Decal-Bag To Frame
43	104-2903	1	Decal-Instruction
44	99-5340	1	Decal-Switch
45	93-7276	1	Decal-Danger
46	60-6910	6	Screw
47	104-3239	1	Decal-HOC, LH
48	104-3240	1	Decal-HOC, RH
49	106-8552	1	Decal-Operation
50	107-8974	2	Decal-Tower

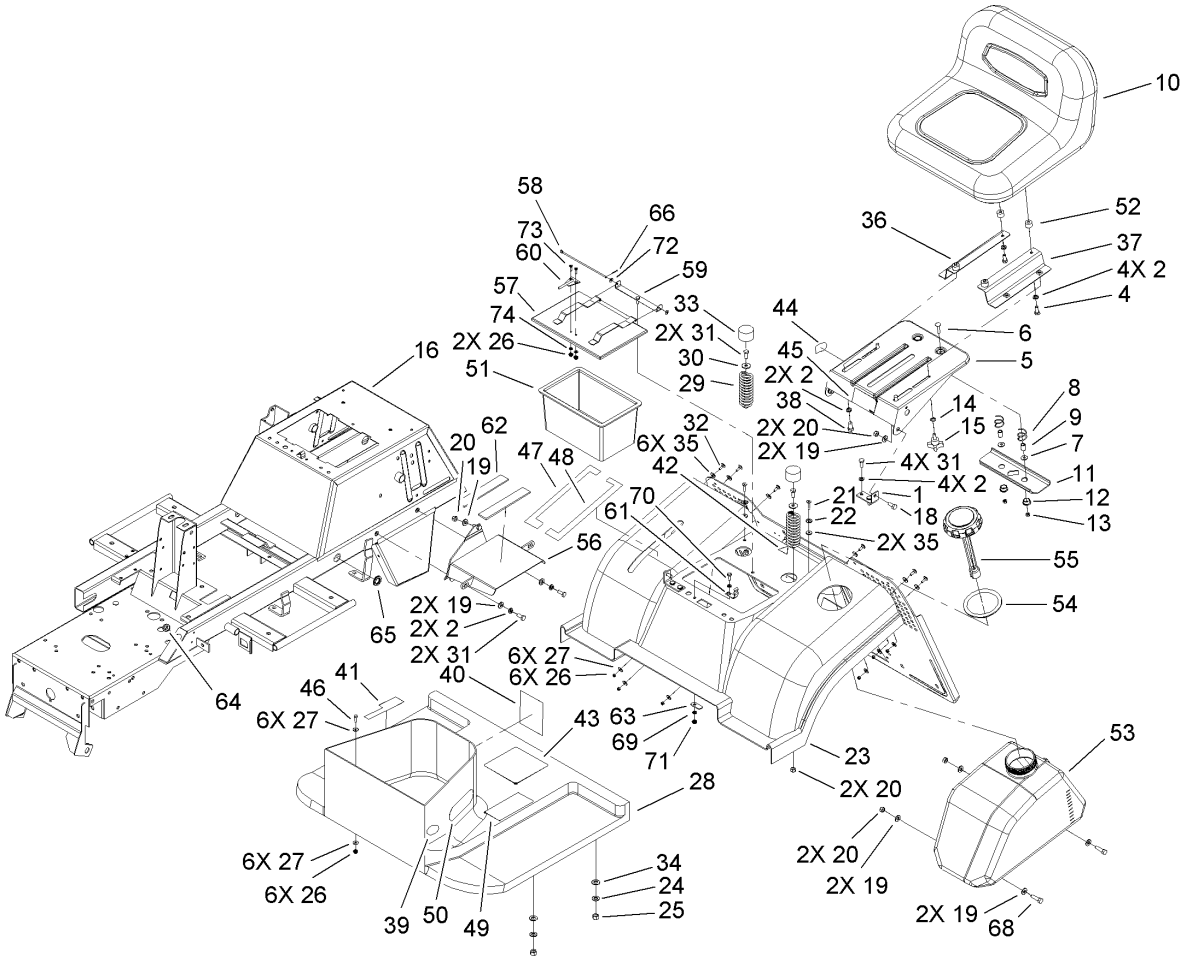

Frame Assembly (continued)

Ref	Part No.	Qty.	Description
51	106-5756	1	Box-Battery
52	107-8924	2	Shim-Seat
53	110-8689	1	Tank-Fuel
54	110-8691	1	Protector-Filler Neck
55	110-8697	1	Cap-Fuel, Assembly
56	110-8684	1	Bracket-Fuel, Tank
57	110-8669	1	Cover-Storage
58	110-8662	1	Hinge-Storage, Cover
59	110-8671	1	Bracket-Storage, Hinge
60	110-8670	1	Latch-Storage, Cover
61	110-8667	1	Catch-Storage, Latch
62	110-8690	2	Strip-Rubber, Fuel Tank
63	110-8666	1	Support-Latch
64	107-8950	1	Grommet
65	110-8683	1	Grommet
66	3272-1	1	Pin-Cotter
68	33114-030	2	Screw-HH
69	33093-00	2	Washer-Flat
70	33113-016	1	Screw-HH
71	33013-00	1	Nut-Hex
72	104-3175	2	Washer
73	106-5759	2	Screw
74	52-6430	2	Washer

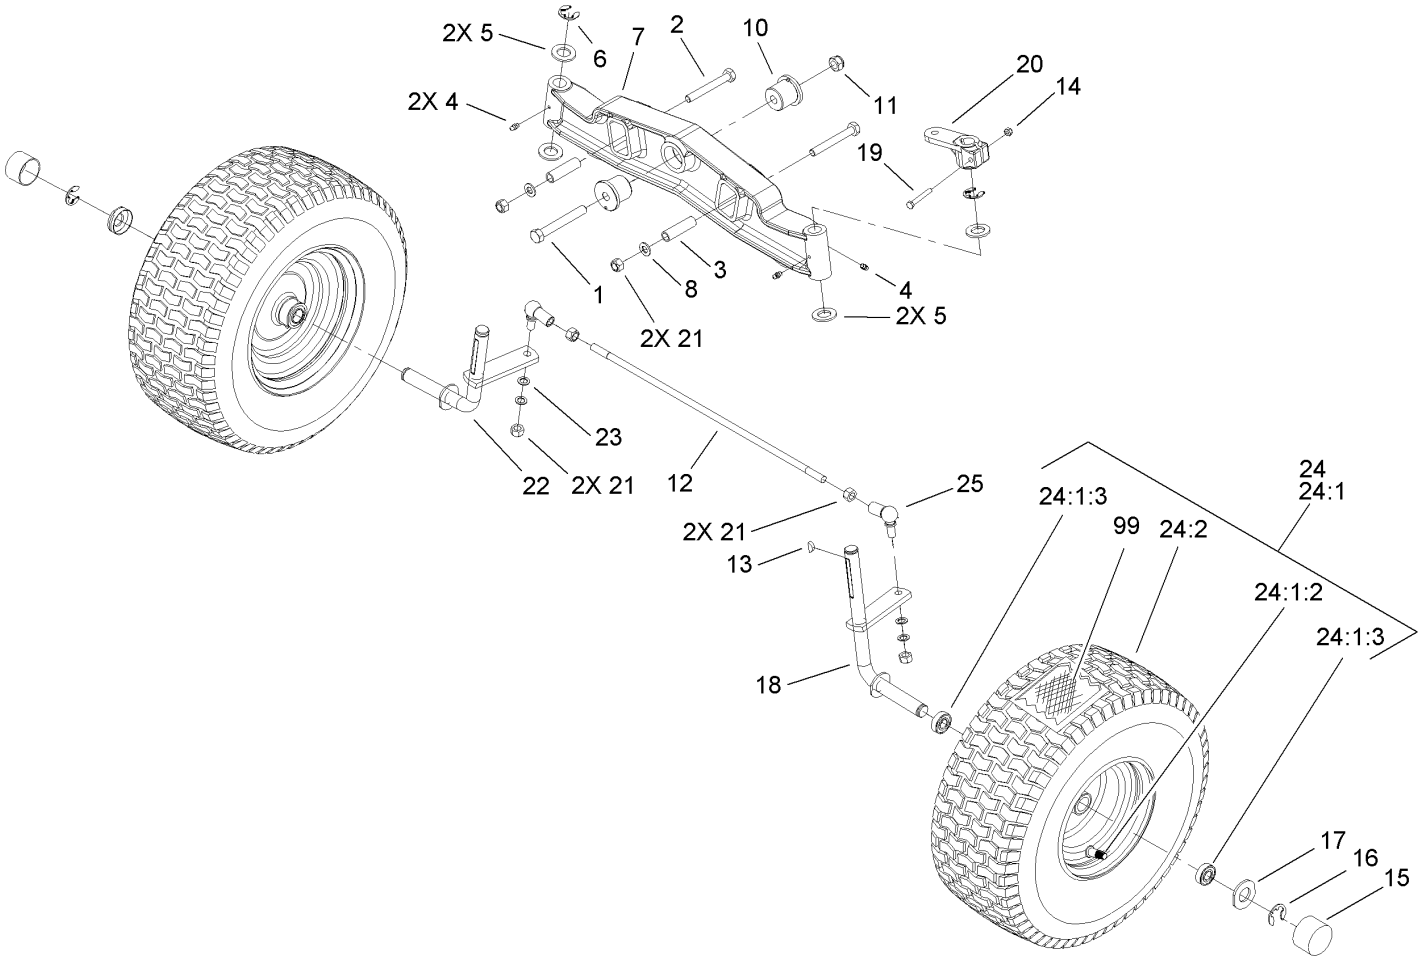

Front Axle Assembly

Ref	Part No.	Qty.	Description
1	33116-090	1	Screw-HH
2	33115-080	2	Screw-HH
3	107-8949	2	Spacer
4	104-2904	3	Fitting-Grease
5	104-2905	4	Washer-Flat
6	104-2891	2	Clip-Spring
7	104-2852	1	Axle-Front
8	104-2906	2	Washer-Flat
10	104-2890	2	Bushing-Axle, Front
11	104-2907	1	Nut-Self Locking
12	104-2855	1	Rod-Tie, Front Axle
13	104-2856	1	Key-Woodruff
14	33023-00	1	Nut-Lock
15	104-2857	2	Cap-Hub
16	104-2891	2	Clip-Spring
17	107-8998	2	Retainer-Cap, Hub
18	108-8776	1	Spindle-LH
19	33113-045	1	Screw-HH
20	104-2862	1	Lever-Spindle, Steering
21	33025-00	6	Nut-Lock
22	107-8926	1	RH Spindle ASM
23	106-5757	4	Washer
24	110-9087	2	Wheel And Tire ASM
24:1	110-9088	1	Wheel ASM(15X6.0X6)

Ref	Part No.	Qty.	Description
24:1:2	106-8596	1	Valve-Tire
24:1:3	110513	2	Bearing-Wheel
24:2	99-2988	1	Tire
25	104-2876	2	Joint-Ball, Angle
99	232-39	1	Tube-Inner

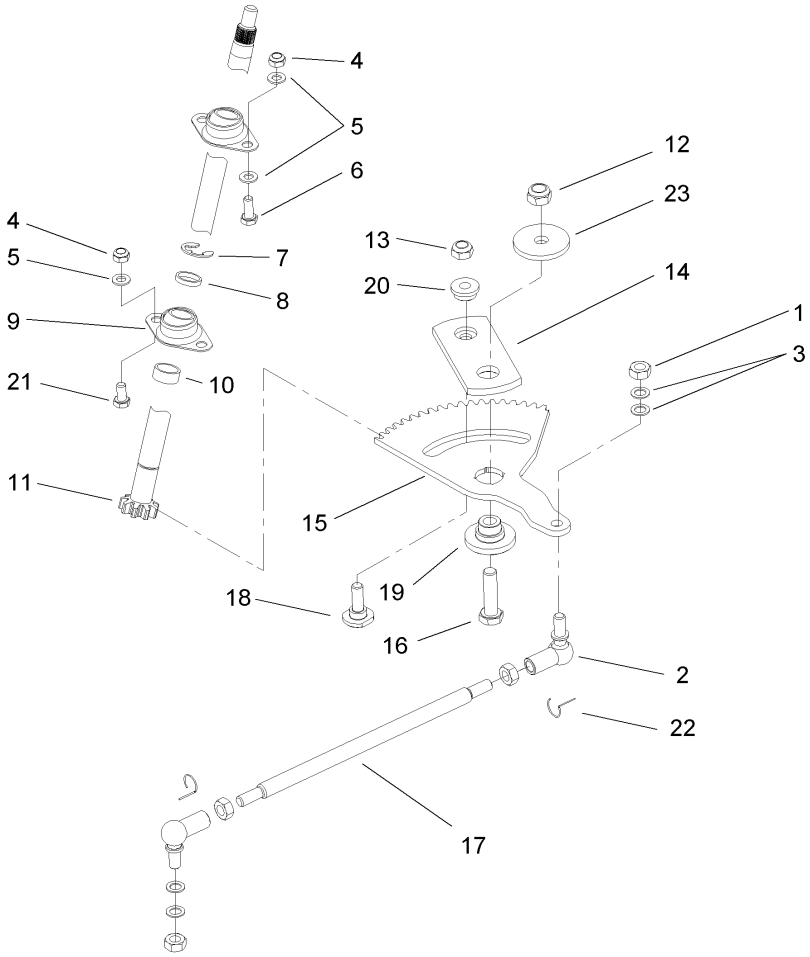

Steering Assembly

Ref	Part No.	Qty.	Description
1	33025-00	4	Nut-Lock
2	104-2876	2	Joint-Ball, Angle
3	106-5757	4	Washer
4	33024-00	4	Nut-Lock
5	33094-00	6	Washer-Plain
6	33114-020	2	Screw-HH
7	104-2891	1	Clip-Spring
8	104-2877	1	Spacer-Upper
9	104-2878	2	Bearing-Spherical
10	104-2879	1	Spacer-Lower
11	106-5773	1	Shaft-Steering
12	33026-00	1	Nut-Lock
13	33025-00	1	Nut-Lock
14	105-1238	1	Plate-Steering
15	104-2883	1	Gear-Sector
16	104-2910	1	Screw-Hex
17	104-2886	1	Link-Drag
18	105-1239	1	Bolt-Shoulder
19	105-1240	1	Pivot-Steering
20	105-1241	1	Bushing
21	33114-016	2	Screw-HH
22	104-2865	2	Stirrups-Locking
23	108-8892	1	Washer

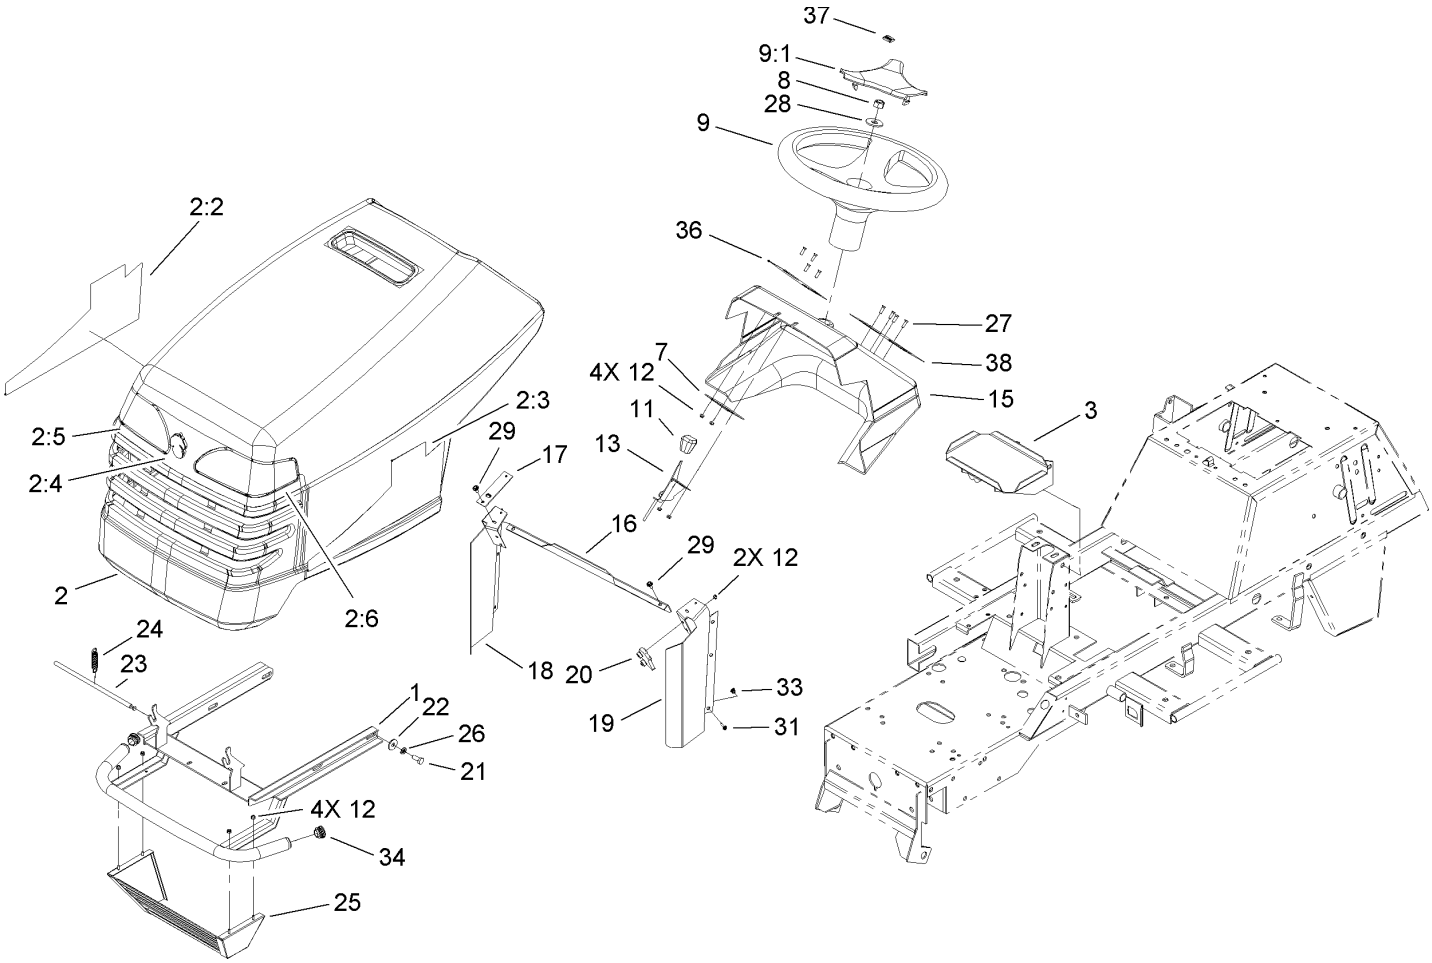

Hood Assembly

Ref	Part No.	Qty.	Description
1	107-2216	1	Support-Bumper
2	107-8986	1	Hood-Assembly
2:2	107-8913	1	Decal-Hood, RH
2:3	107-8902	1	Decal-Hood, LH
2:4	95-4248	1	Decal
2:5	107-8983	1	Lens-Headlamp, RH
2:6	107-8984	1	Lens-Headlamp, LH
3	110-8679	1	Tray-Battery
7	104-2962	1	Brace
8	33026-00	1	Nut-Lock
9	98-1471	1	Wheel-Steering
9:1	98-1468	1	Cover-Wheel, Steering
11	66-0120	1	Knob
12	87-5140	10	Nut-Lock
13	106-4166	1	Cable-Throttle And Choke
15	104-2968	1	Panel-Dash
16	104-2970	1	Brace
17	104-2971	1	Bracket
18	104-2972	1	Panel-Right
19	104-2973	1	Panel-Left
20	92-6960	2	Latch-Hood
21	33114-020	4	Screw-HH
22	104-2946	4	Washer-Plain
23	104-2974	1	Bar-Safety

Ref	Part No.	Qty.	Description
24	104-2975	1	Spring-Hood
25	107-2218	1	Guard-Muffler
26	42-9850	4	Washer-Lock, Spring
27	106-5759	4	Screw
28	106-5758	1	Washer
29	104-2980	2	Screw
31	107-8918	6	Screw
33	104-2985	6	Nut-Hex
34	107-8943	2	End Cap-Tube
36	107-8920	1	Decal-Dash Throttle And Ignition
37	98-1459	1	Decal
38	104-3235	1	Decal-PTO

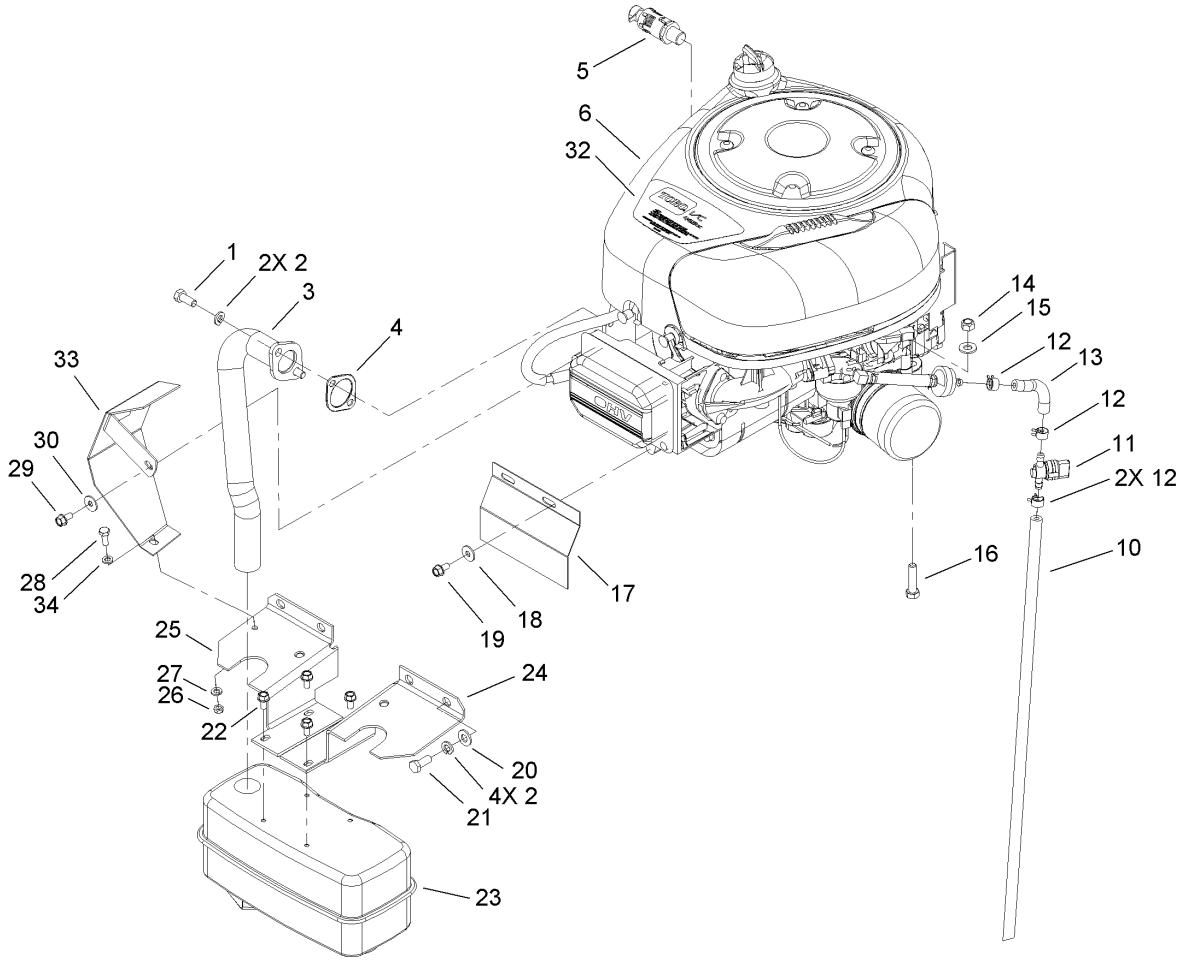

Engine Assembly

Ref	Part No.	Qty.	Description
1	322-3	2	Screw-HH
2	42-9850	6	Washer-Lock, Spring
3	104-3221	1	Tube-Exhaust
4	88-4410	1	Gasket-Muffler
5	104-3208	1	Valve-Oil Drain
❷❸6		1	Engine-Briggs And Stratton, 31A607-0117-E1
10	110-8692	1	Line-Fuel
11	104-3224	1	Valve-Tank, Fuel
12	104-3212	4	Clamp-Line, Fuel
13	104-3213	1	Line-Fuel
14	33024-00	4	Nut-Lock
15	33094-00	4	Washer-Plain
16	33114-035	4	Screw-HH
17	104-3222	1	Cover-Front
18	104-2931	2	Washer-Flat
19	106-5763	2	Screw
20	33094-00	4	Washer-Plain
21	33114-020	4	Screw-HH
22	106-5763	4	Screw
23	104-3229	1	Muffler
24	104-3214	1	Guard-Muffler, LH
25	104-3215	1	Guard-Muffler, RH
26	33013-00	1	Nut-Hex

Ref	Part No.	Qty.	Description
27	104-3186	1	Washer-Spring
28	33113-016	1	Screw-HH
29	106-5763	1	Screw
30	104-2931	1	Washer-Flat
32	107-4924	1	Decal
33	105-1242	1	Cover-Manifold, Exhaust
34	33093-00	1	Washer-Flat

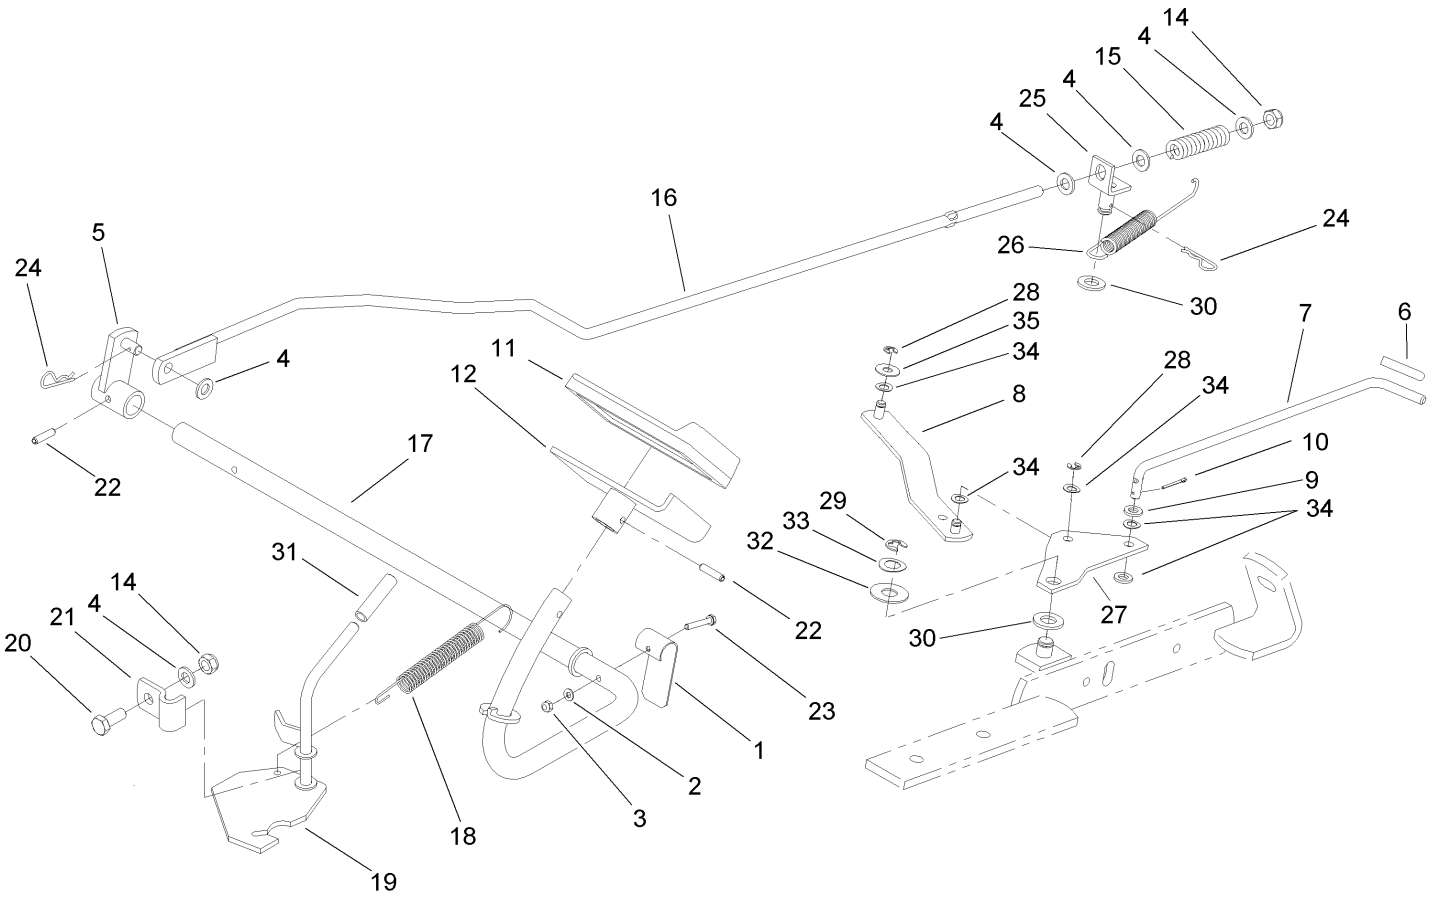

Operation, Brake and Bypass Assembly

Ref	Part No.	Qty.	Description
1	104-2992	1	Lever-Spring
2	104-2984	1	Washer
3	104-2985	1	Nut-Hex
4	33094-00	5	Washer-Plain
5	104-2993	1	Bracket-Rod, Brake
6	108-8708	1	Cap-Bypass Lever, Hydro
7	104-2995	1	Rod-Lever, Bypass
8	107-8944	1	Lever-Bypass
9	104-3193	2	Washer
10	104-2997	1	Pin-Cotter
11	104-2998	1	Pad-Pedal
12	104-2999	1	Pedal
14	33024-00	2	Nut-Lock
15	104-3002	1	Spring-Brake
16	104-3003	1	Rod-Connecting, Brake
17	104-3004	1	Shaft-Brake
18	104-3005	1	Spring-Brake, Hand
19	104-3006	1	Lever-Brake, Hand
20	33114-020	1	Screw-HH
21	104-3007	1	Clamp-Lever, Parking Brake
22	104-3008	2	Pin-Spring
23	104-3009	1	Screw-Hex
24	104-3016	2	Pin-Cotter
25	104-3011	1	Bracket-Rod, Brake

Ref	Part No.	Qty.	Description
26	104-3012	1	Spring
27	104-3323	1	Plate-Bypass
28	104-3014	2	Stirrup
29	104-3015	1	Stirrup
30	33095-00	2	Washer-Flat
31	104-3247	1	Cap
32	106-5768	1	Washer
33	106-5769	1	Washer
34	106-5770	4	Washer
35	106-5771	1	Washer

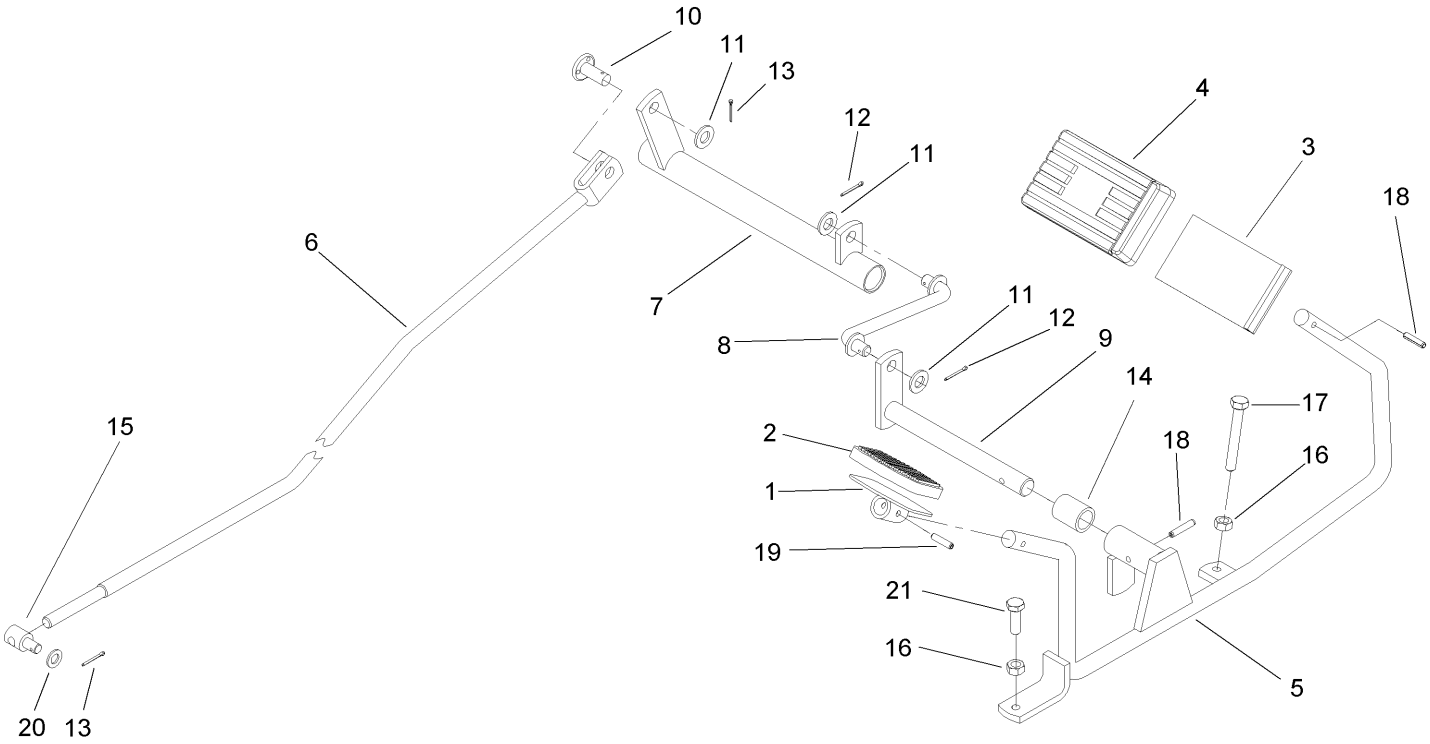

Operation and Travel Pedal Assembly

Ref	Part No.	Qty.	Description
1	104-3017	1	Pedal-Rear, Travel
2	104-3018	1	Pad-Pedal
3	104-3019	1	Pedal-Travel, Front
4	104-3020	1	Pad-Pedal, Front
5	104-3021	1	Pad-Travel
6	104-3022	1	Rod-Tie
7	104-3023	1	Shaft-Diagonal
8	104-3024	1	Link-Formed
9	104-3025	1	Shaft-Diagonal
10	104-3026	1	Pin
11	33095-00	3	Washer-Flat
12	104-3016	2	Pin-Cotter
13	104-3027	2	Pin-Cotter
14	104-3028	1	Spacer
15	104-3029	1	Pin
16	33014-00	2	Nut-Hex
17	33114-060	1	Screw-HH
18	104-3008	2	Pin-Spring
19	104-3030	1	Pin-Spring
20	104-3031	1	Washer
21	33114-025	1	Screw-HH

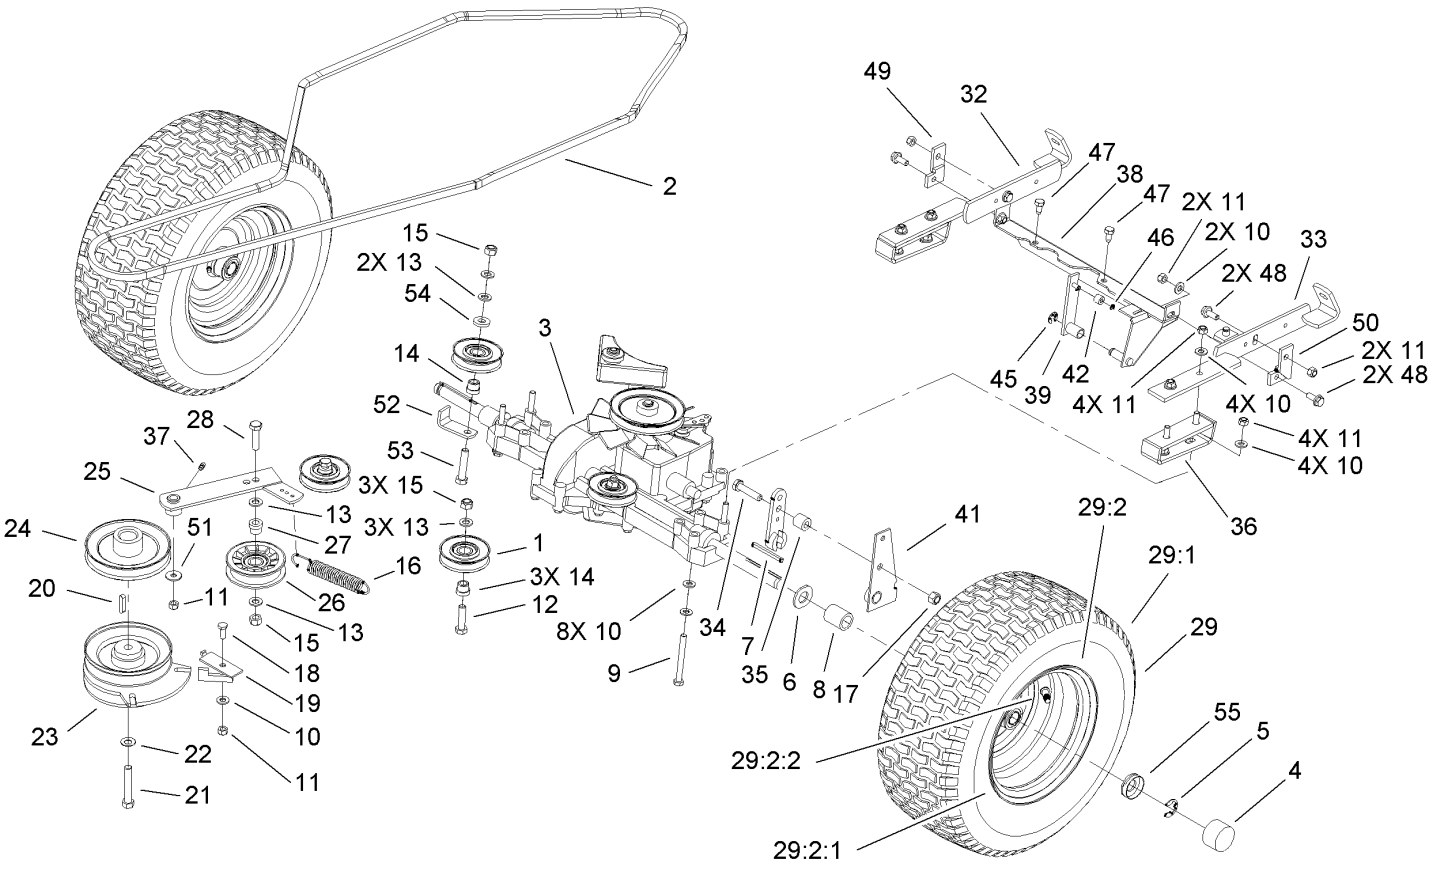

Transmission Drive Assembly

Ref	Part No.	Qty.	Description
1	104-2887	4	Pully-Idler
2	104-2888	1	V-Belt-Traction
3	104-2889	1	Transmission
4	104-2857	2	Cap-Hub
5	104-2891	2	Clip-Spring
6	104-3206	2	Washer
7	104-2892	2	Key-Square
8	104-2895	2	Spacer-Axle
9	33114-080	4	Screw-HH
10	33094-00	19	Washer-Plain
11	33024-00	14	Nut-Lock
12	33115-040	3	Screw-HH
13	33095-00	7	Washer-Flat
14	104-2896	4	Bushing-Idler
15	33025-00	5	Nut-Lock
16	104-2897	1	Spring
17	33025-00	1	Nut-Lock
18	33114-020	1	Screw-HH
19	104-2898	1	Retainer
20	104-2899	1	Key-Square
21	3212-10	1	Screw-HH
22	93-9043	1	Washer-Spring, Belleville
23	104-3334	1	Clutch-Electric
24	104-2911	1	Pulley-Engine

Ref	Part No.	Qty.	Description
25	104-2912	1	Arm-Idler
26	104-2913	1	Pulley-Idler
27	104-2896	1	Bushing-Idler
28	33115-040	1	Screw-HH
❷29		2	Wheel And Tire ASM
29:1	99-2996	1	Tire
29:2	107-8928	1	Wheel ASM
❷29:2:1		1	Rim
29:2:2	106-8596	1	Valve-Tire
32	106-8594	1	Bracket-Right
33	106-8593	1	Bracket-Left
34	33115-045	1	Screw-HH
35	104-2925	1	Sleeve
36	107-8947	2	Bracket-Support
37	104-2904	1	Fitting-Grease
38	104-3327	1	Bar ASM
39	104-3328	1	Arm-Switch
41	104-3326	1	Tenon
42	104-3329	1	Roller
45	104-3341	1	Stirrup
46	104-3014	1	Stirrup
47	104-3344	2	Screw-Thread Forming
48	104-3065	4	Screw-Hex
49	107-8945	1	Bracket-Right

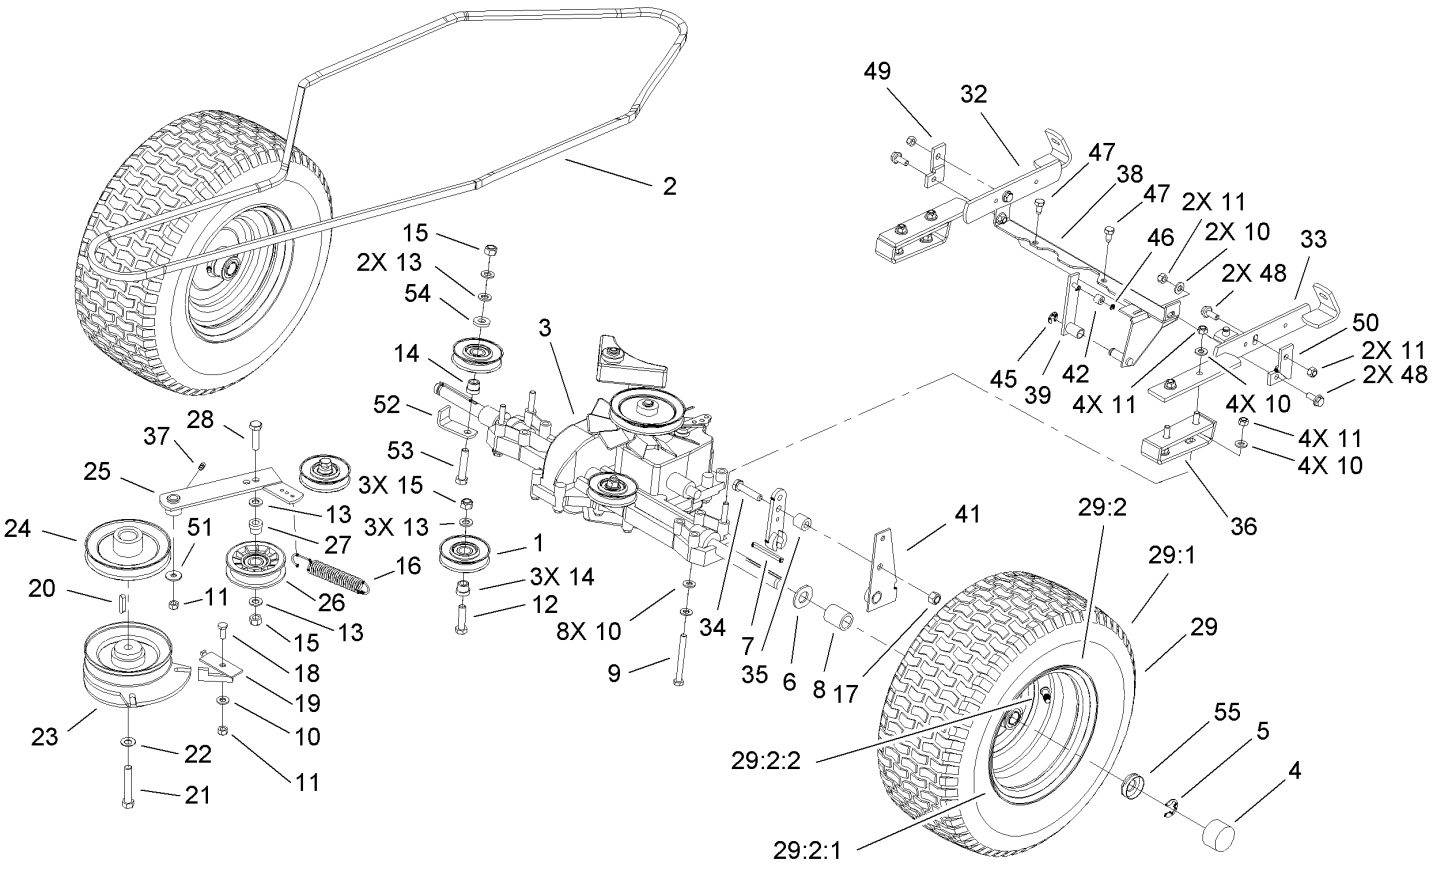

Transmission Drive Assembly (continued)

Ref	Part No.	Qty.	Description
50	107-8946	1	Bracket-Left
51	104-2946	1	Washer-Plain
52	108-8732	1	Retainer-Belt
53	33115-050	1	Screw-HH
54	108-8709	1	Washer-Flat
55	107-8998	2	Retainer-Cap, Hub
❶99	232-37	1	Tube

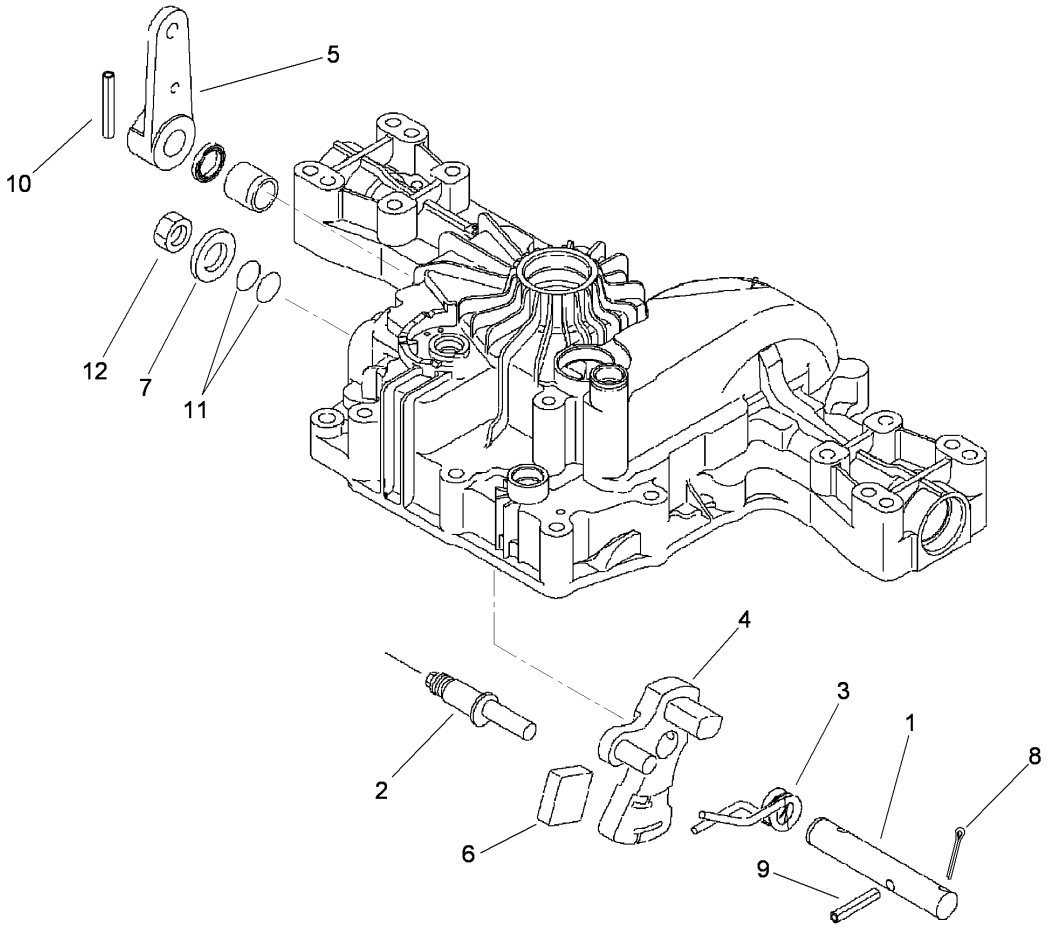

Control Shaft Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	114-3181	1	Shaft-Control
2	104-3292	1	Fulcrum-Eccentricity
3	104-3293	1	Spring-Torsion
4	114-3180	1	Arm-Control
5	104-3342	1	Arm-Transaxle
6	104-3296	1	Plate-Jerky
7	93-0417	1	Washer
8	114-3182	1	Pin-Cotter
9	104-3297	1	Pin
10	93-0411	1	Pin-Roll
11	104-3298	2	Packing
12	93-0420	1	Nut

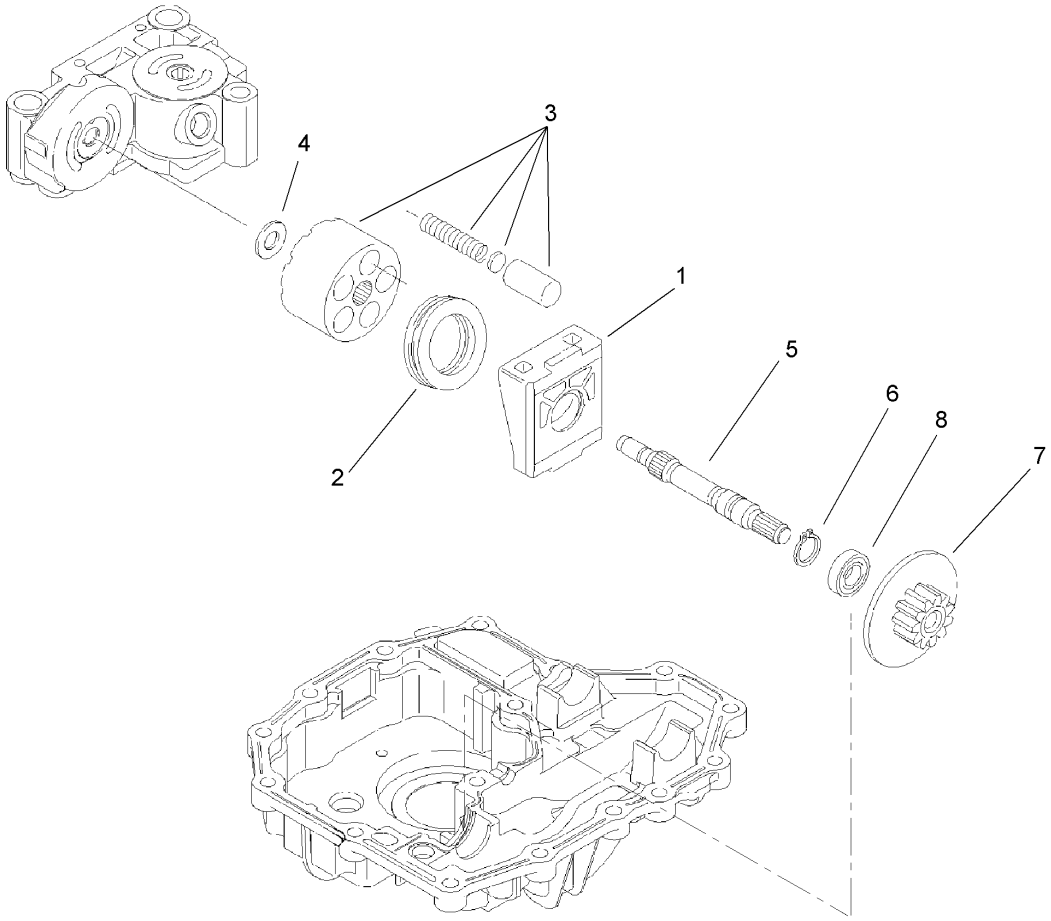

Motor Shaft Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3279	1	Housing
2	104-3280	1	Bearing
3	104-3281	1	Block-Cylinder
4	104-3282	1	Washer
5	104-3283	1	Shaft-Motor
6	93-0373	1	Ring-Snap
7	104-3284	1	Motor-Gear
8	104-3285	1	Bearing

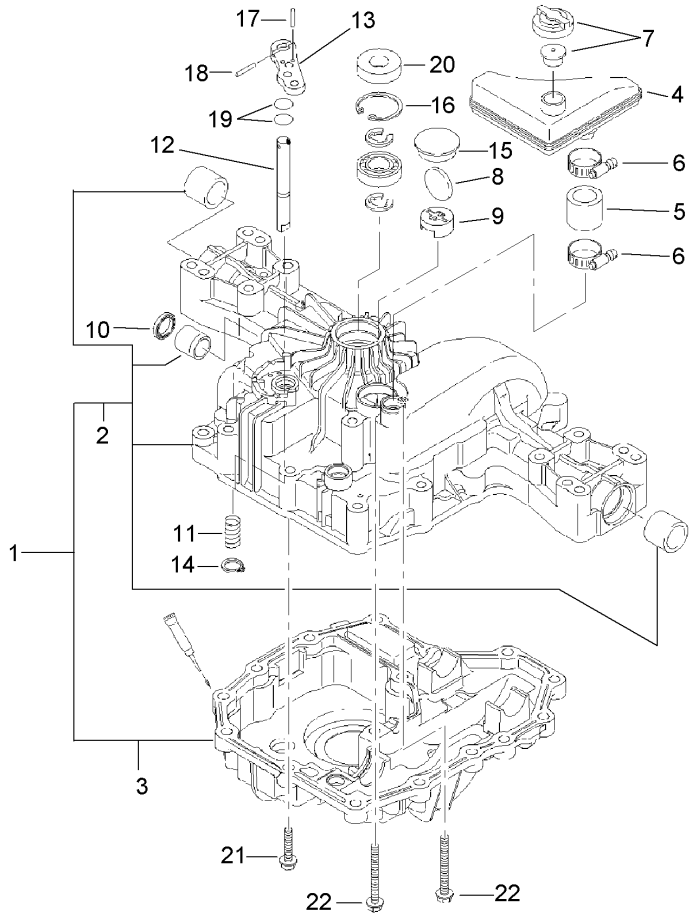

Transaxle Case Assembly
Transmission Assembly 104-2889

Ref	Part No.	Qty.	Description
1	104-3251	1	Transaxle Case Set
2	104-3252	1	Housing-Upper
3	104-3253	1	Housing-Lower
4	104-2914	1	Tank-Reservoir, With Cap
5	104-3254	1	Tube
6	104-3255	2	Clamp-Miniature
7	104-3256	1	Valve-Vent, 15
8	104-3257	1	Magnet
9	104-3258	1	Holder-Magnet
10	104-3259	1	Seal-Oil
11	93-0396	1	Spring
12	104-3260	1	Shaft-Bypass
13	104-3261	1	Lever-Bypass
14	104-3262	1	Ring
15	104-3263	1	Plug-Bore
16	93-0360	1	Ring
17	104-3264	1	Pin
18	104-3265	1	Pin
19	93-0419	2	Packing
20	93-0361	1	Seal
21	93-0363	14	Screw-TAP
22	104-3266	2	Screw-TAP

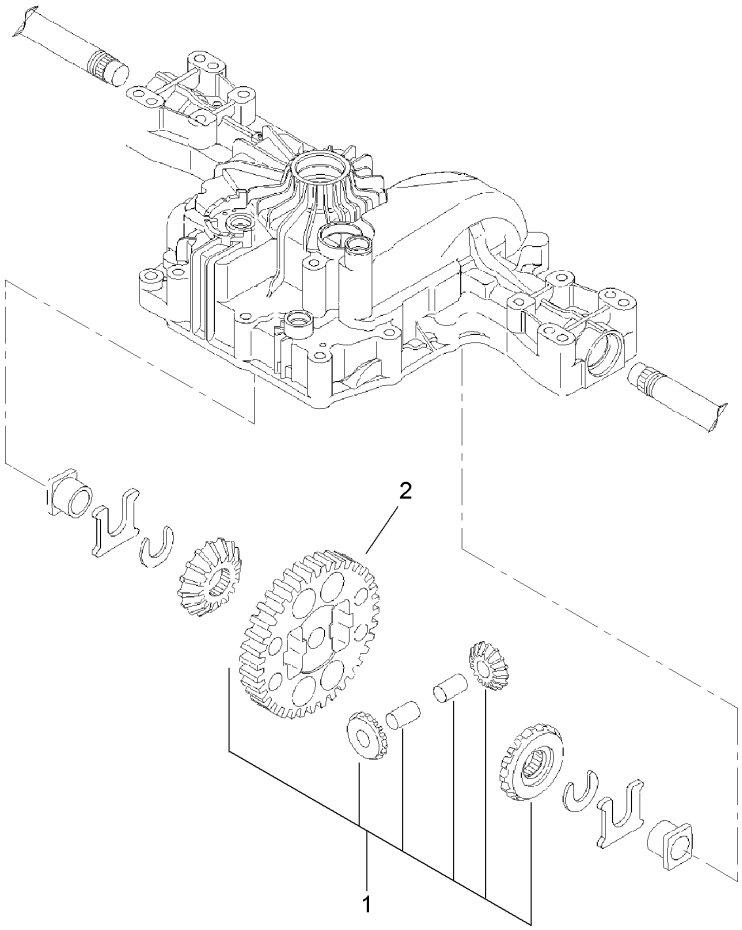

Differential Gear Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3299	1	Differential Gear Kit
2	104-3301	1	Gear-Final

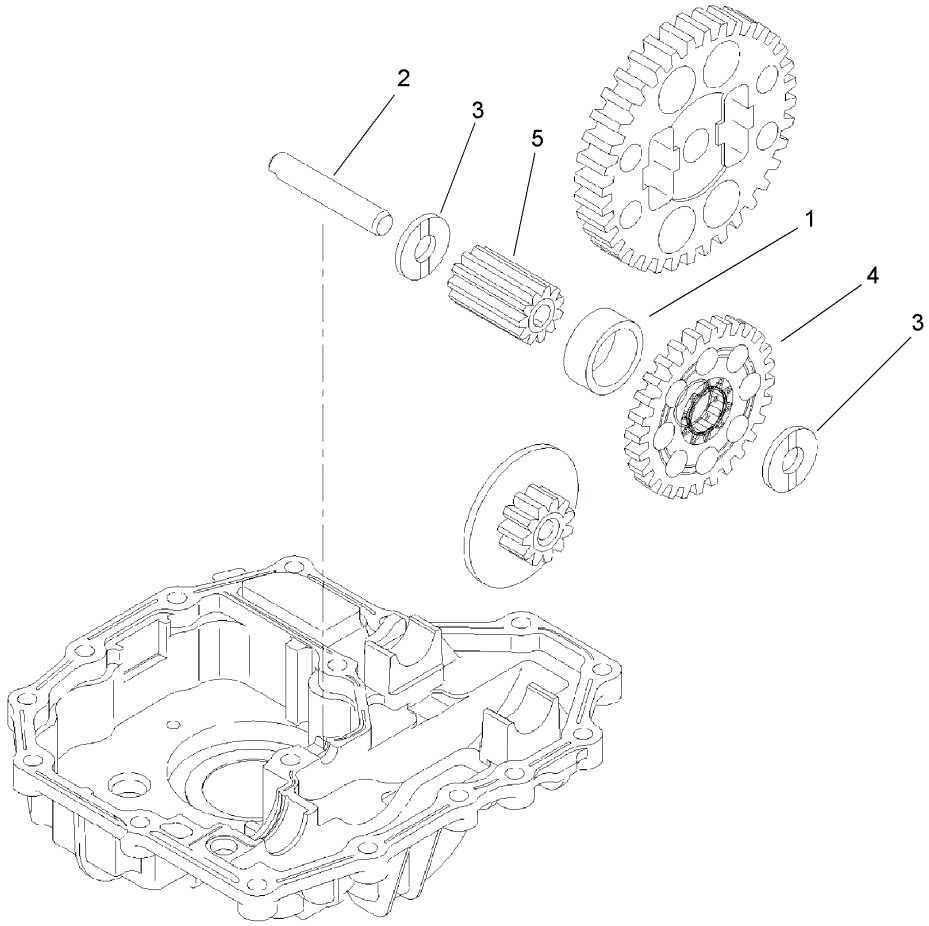

Final Pinion Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3302	1	Collar-Final Pinion
2	104-3303	1	Shaft-Reduction
3	104-3304	2	Washer
4	104-3305	1	Gear-Reduction
5	104-3306	1	Pinion-Final

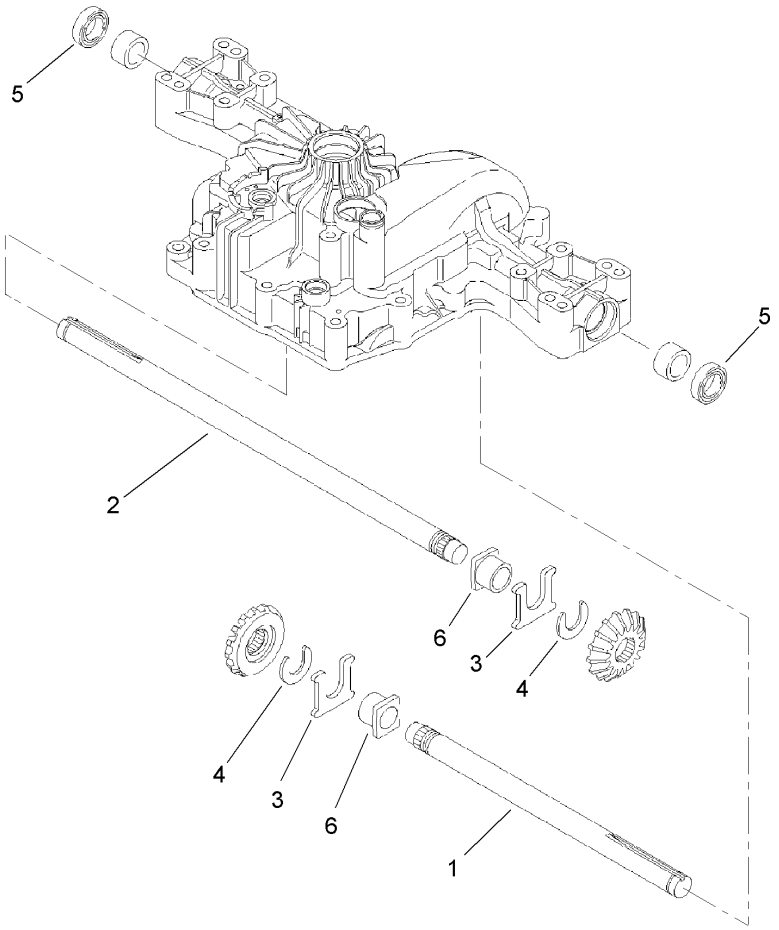

Axle Shaft Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3307	1	Shaft-Axle, LH
2	104-3308	1	Shaft-Axle, RH
3	104-3309	2	Washer-Thrust
4	104-3310	2	Ring
5	104-3311	2	Seal
6	104-3312	2	Bushing

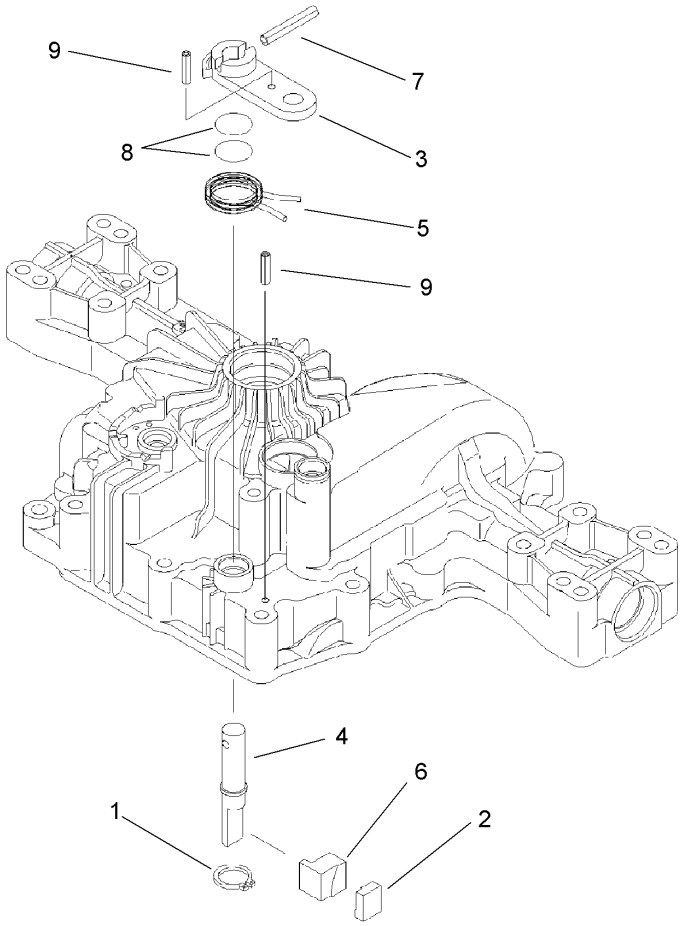

Brake Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3313	1	Ring
2	104-3314	1	Shoe-Brake
3	104-3315	1	Arm-Brake
4	104-3316	1	Shaft-Brake
5	104-3317	1	Spring-Return, Brake
6	104-3318	1	Actuator-Brake
7	92-0767	1	Pin
8	92-0786	2	O-Ring
9	104-3319	2	Pin

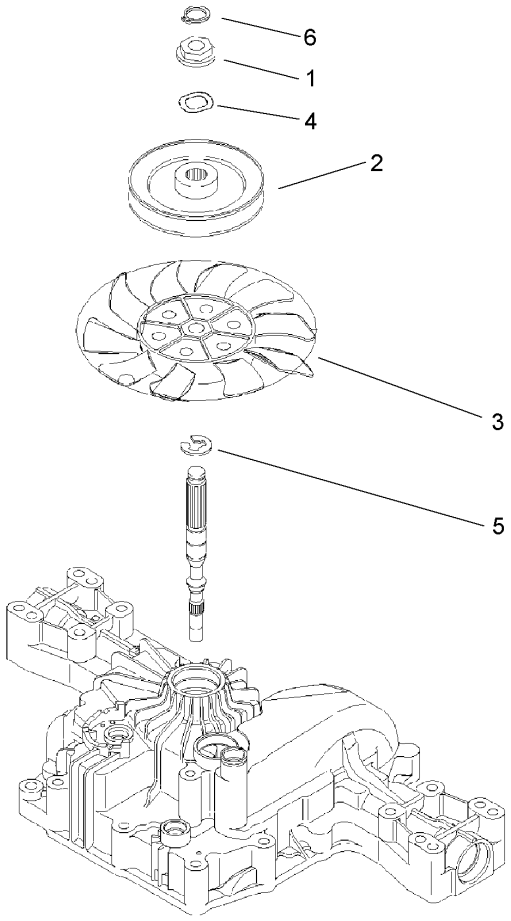

Fan Pulley Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3320	1	Collar-Spline
2	104-3197	1	Pulley-Transmission
3	104-3199	1	Fan- Transmission
4	104-3321	1	Washer-Lock
5	93-0387	1	E-Ring
6	104-3198	1	E-Ring

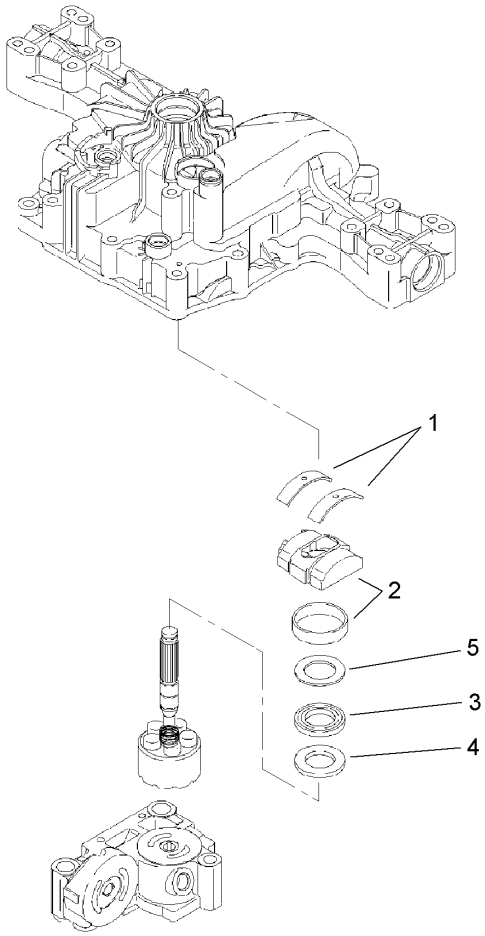

Range Shift Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3286	2	Metal-Thrust
2	104-3287	1	Plate-Swash
3	104-3288	1	Bearing
4	104-3289	1	Plate-Thrust, A
5	104-3290	1	Plate-Thrust, B

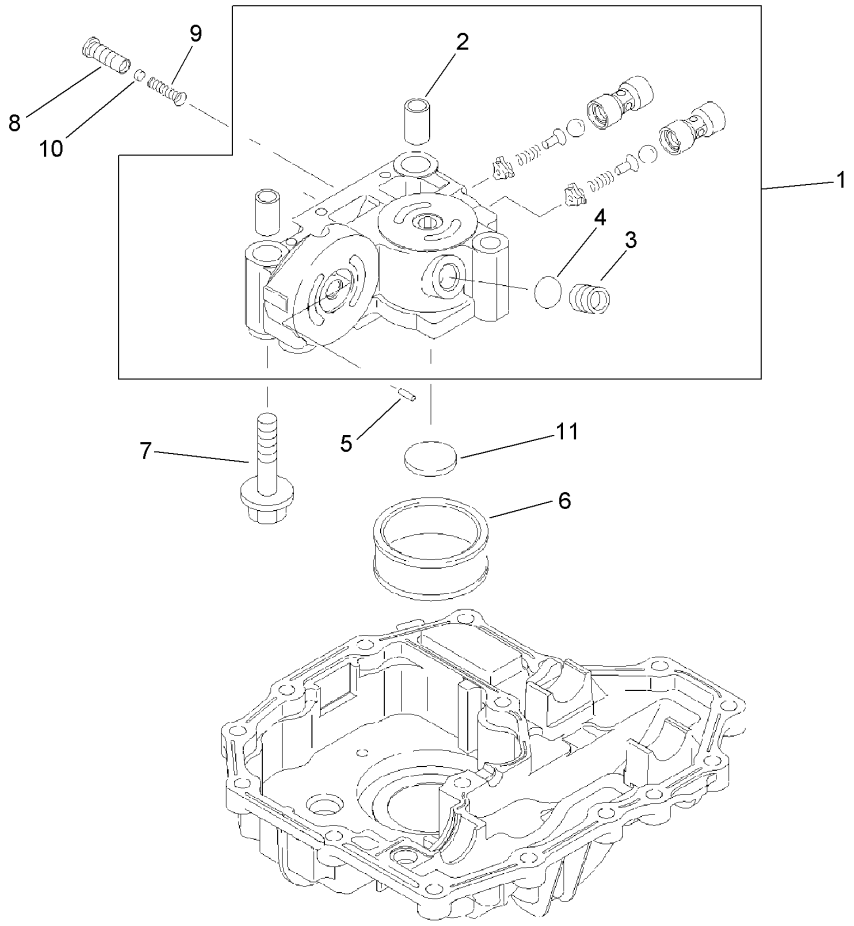

Center Case Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3267	1	Case-Center
2	104-3268	2	Pin-Knock
3	104-3269	1	Plug
4	93-0419	1	Packing
5	104-3270	1	Pin
6	104-3271	1	Filter
7	104-3272	3	Bolt
8	104-3273	2	Valve
9	104-3274	2	Spring
10	104-3275	2	Filter
11	104-3257	1	Magnet

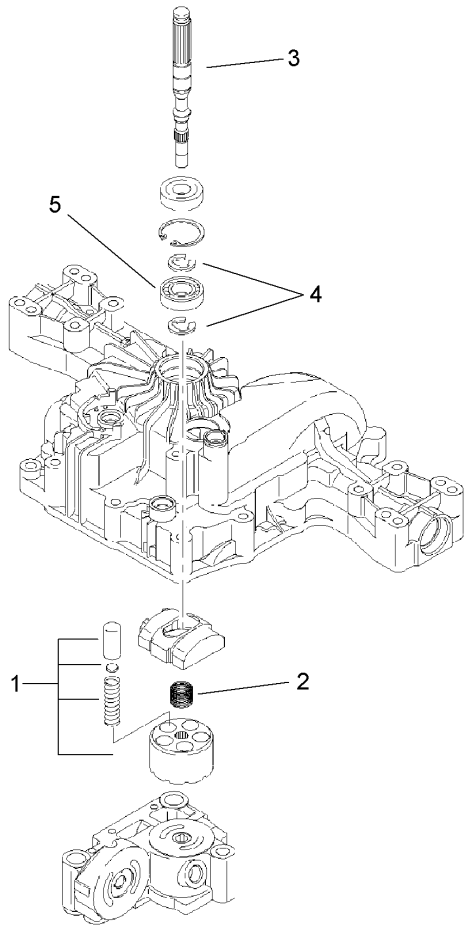

Pump Shaft Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3276	1	Block-Cylinder
2	104-3277	1	Spring-Pump
3	104-3278	1	Shaft-Pump
4	93-0387	2	E-Ring
5	93-0374	1	Bearing-Ball

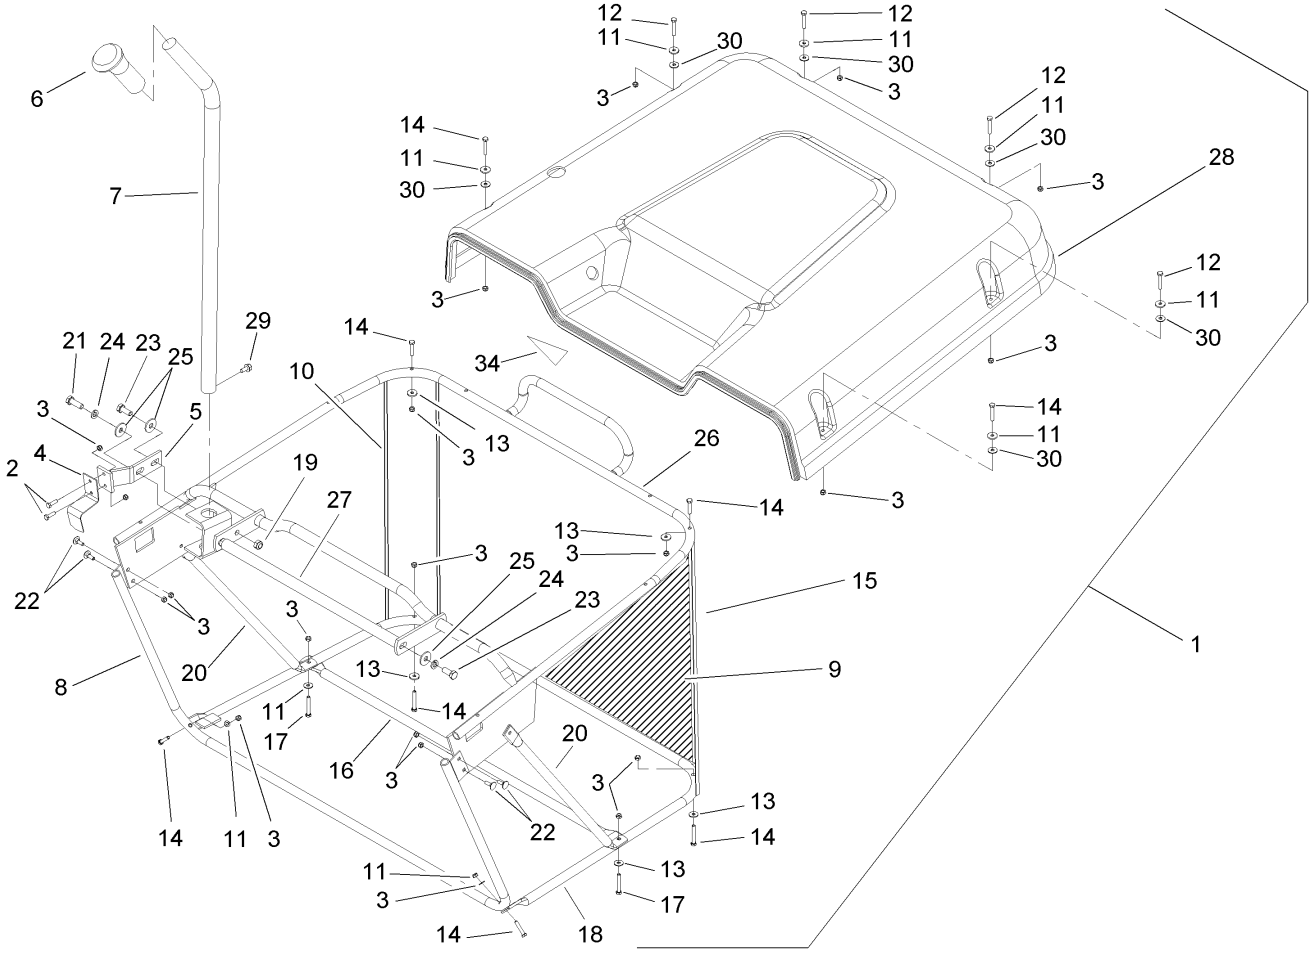

Grass Collector Assembly No. 106-5760

Ref	Part No.	Qty.	Description
1	106-5760	1	Collector ASM
2	60-6910	2	Screw
3	87-5140	22	Nut-Lock
4	104-3033	1	Spring-Coll, Interlock Switch
5	106-5761	1	Bracket-Spring
6	104-3035	1	Grip-Handle
7	107-8917	1	Lever-Dump
8	104-3037	1	Front Frame ASM
9	104-3038	1	Bag-Grass
10	104-3039	1	Support-Corner, Right
11	104-2943	8	Washer-Flat
12	87-5150	4	Bolt
13	52-6430	14	Washer
14	104-3041	10	Screw-Hex
15	104-3042	1	Support-Corner, Left
16	104-3043	1	Brace-Connecting
17	104-3044	2	Screw-Hex
18	104-3045	1	Bottom Frame ASM
19	33024-00	1	Nut-Lock
20	104-3046	2	Brace
21	33114-025	1	Screw-HH
22	104-2948	4	Bolt-Carriage
23	33114-020	2	Screw-HH
24	42-9850	2	Washer-Lock, Spring

Ref	Part No.	Qty.	Description
25	104-2946	4	Washer-Plain
26	104-3047	1	Top Frame ASM
27	104-3048	1	Handle-Lift
28	106-5762	1	Cover-Collector
29	106-5763	1	Screw
30	104-2952	6	Washer-Rubber
34	104-3242	1	Decal-Bag To Frame

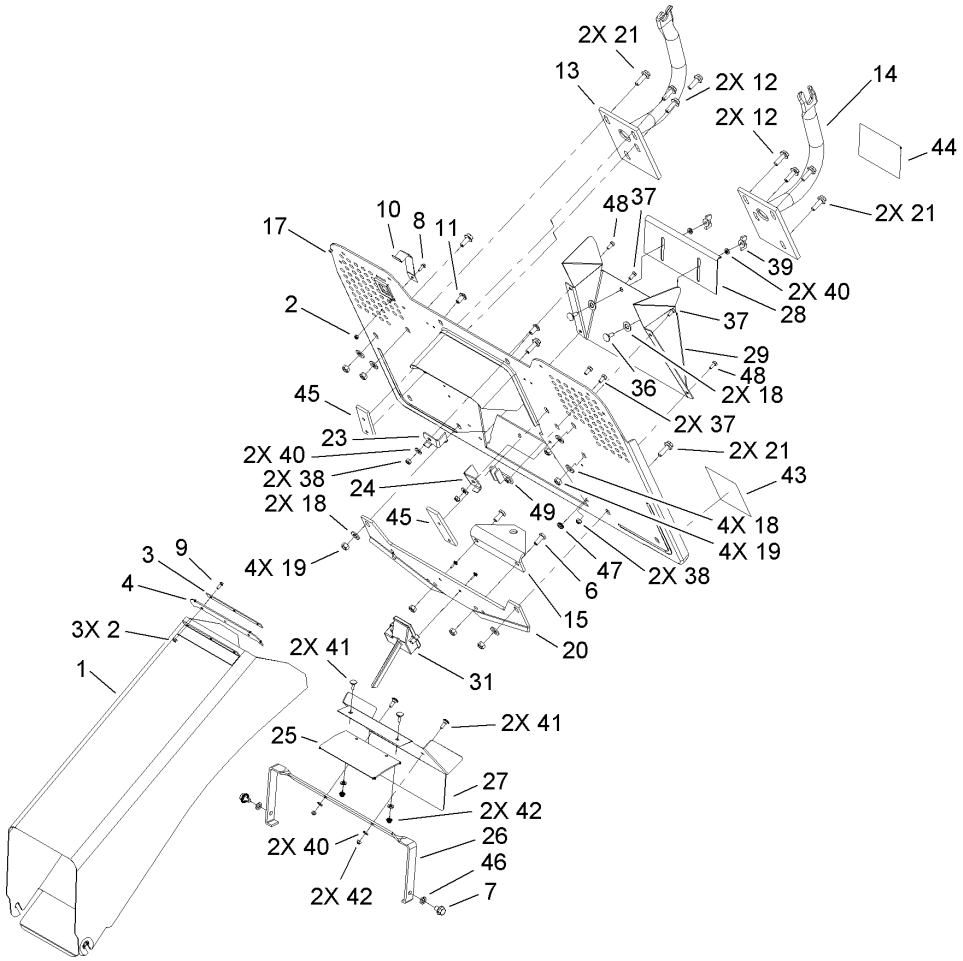

Tunnel Assembly

Ref	Part No.	Qty.	Description
1	106-8562	1	Tunnel
2	104-2985	4	Nut-Hex
3	104-3055	1	Plate-Support
4	104-3056	1	Seal-Rubber
6	33114-020	2	Screw-HH
7	68-9410	2	Screw-Flange
8	104-2983	1	Screw
9	104-3058	3	Screw-SFH
10	104-3059	1	Cover-Switch
11	104-3060	2	Bolt-Carriage
12	104-3061	4	Screw
13	104-3062	1	Support-Collector, Right
14	104-3063	1	Support-Collector, Left
15	104-3064	1	Hitch-Tow
17	104-3066	1	Collector Plate ASM
18	33095-00	8	Washer-Flat
19	33024-00	8	Nut-Lock
20	104-3067	1	Support-Hitch, Tow
21	104-3068	6	Screw-Hex
23	106-8597	1	Support-Tunnel, Left
24	106-8598	1	Support-Tunnel, Right
25	106-8599	1	Shield-Rubber
26	104-3069	1	Bracket-Shield, Protective
27	104-3070	1	Shield-Protective

Ref	Part No.	Qty.	Description
28	104-3336	1	Shield-Adjustable
29	104-3335	1	Hopper-Receiving
31	104-3074	1	Overload Switch ASM
36	104-2961	2	Screw
37	33113-012	4	Screw-HH
38	33023-00	4	Nut-Lock
39	32103-28	2	Nut-Wing
40	33093-00	6	Washer-Flat
41	104-2948	4	Bolt-Carriage
42	87-5140	4	Nut-Lock
43	104-3243	1	Decal-Bypass, Hydro
44	104-2853	1	Decal-Position, Bagging
45	104-3347	2	Plate-Reinforcing
46	104-3348	2	Washer-Spring
47	106-5772	1	Bushing
48	106-8575	2	Screw-HH
49	110-8688	1	Bracket-Support, Fuel Tank

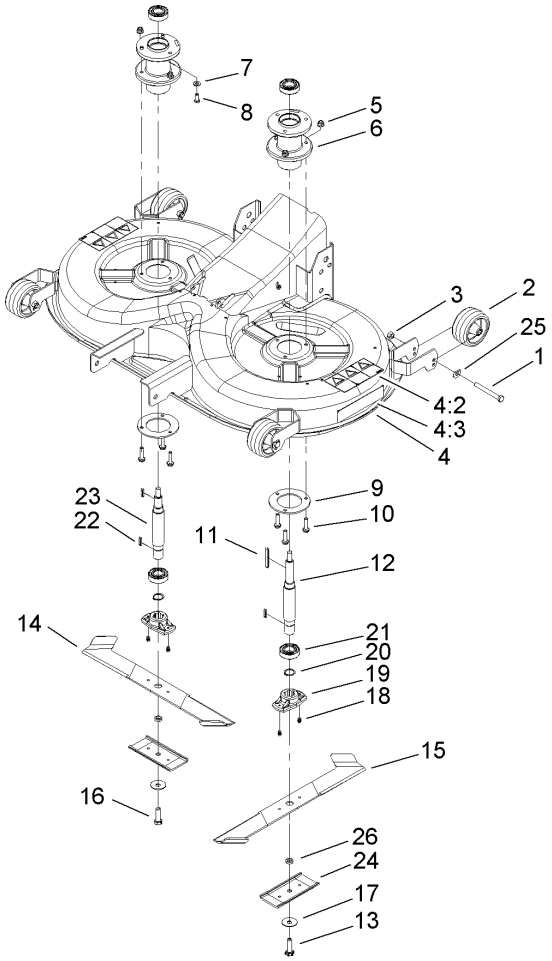

Deck Housing Assembly

Ref	Part No.	Qty.	Description
1	33115-090	4	Screw-HH
2	104-3080	4	Wheel-Gauge
3	33025-00	4	Nut-Lock
4	110-9071	1	Deck ASM
4:2	93-7824	2	Decal-Danger
4:3	106-8563	1	Decal-Recycler
5	104-3082	6	Nut-Lock, HF
6	107-8992	2	Housing-Spindle
7	33094-00	6	Washer-Plain
8	33114-020	6	Screw-HH
9	104-3084	2	Support-Ring
10	104-3085	6	Bolt-HHF
11	104-3086	1	Key
12	106-8565	1	Shaft-Blade, Left
13	106-5797	1	Bolt-HH, Blade
14	106-8557	1	Blade-RH
15	106-8558	1	Blade-LH
16	106-5798	1	Bolt-Blade, HH
17	106-6532	2	Washer-Blade
18	104-3093	4	Pin-Shear, Grooved
19	106-4185	2	Adapter-Blade
20	104-3095	2	Ring-Locking
21	104-6325	4	Bearing-Ball
22	104-3097	3	Key-Square

Ref	Part No.	Qty.	Description
23	106-8566	1	Shaft-Blade, Right
24	106-6533	2	Stiffener-Blade
25	106-5767	4	Washer
26	106-6530	2	Spacer

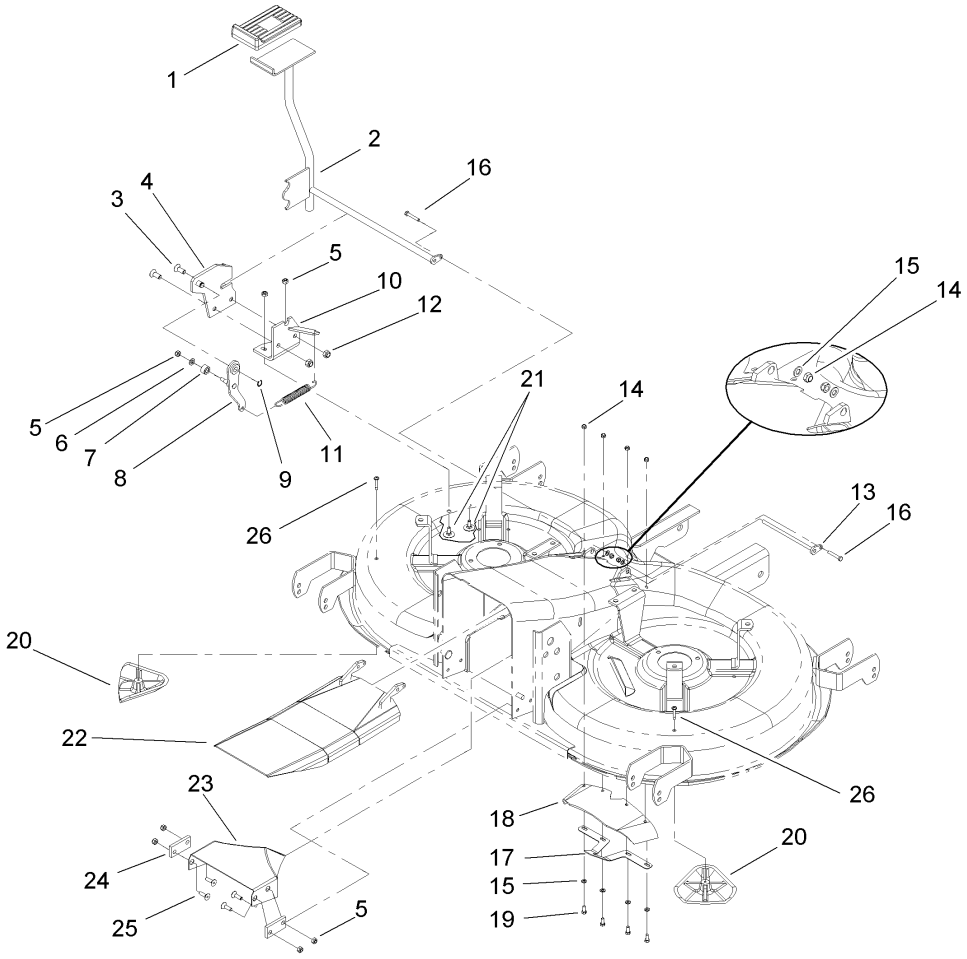

Cutting Pan and Bag on Demand Assembly

Ref	Part No.	Qty.	Description
1	106-8583	1	Cover-Lever, Foot
2	106-8582	1	Lever-Foot
3	100-8159	2	Screw-HSFH
4	106-8578	1	Plate-Stop
5	33023-00	7	Nut-Lock
6	33093-00	1	Washer-Flat
7	106-8581	1	Roller
8	106-8579	1	Lever-Spring
9	106-8592	1	Ring-Locking
10	106-8577	1	Bracket-Mounting
11	106-8580	1	Spring
12	48-9510	2	Nut
13	106-8585	1	Rod-Door, Mulch
14	87-5140	6	Nut-Lock
15	52-6430	6	Washer
16	87-5150	2	Bolt
17	106-8567	2	Guide
18	106-8586	1	Gasket-Door, Mulch
19	106-8575	4	Screw-HH
20	106-8587	1	Kicker
21	33123-016	2	Screw-CARR
22	107-8968	1	Door-Mulch
23	106-8573	1	Baffle-Center
24	106-8572	2	Plate-Baffel, Center

Ref	Part No.	Qty.	Description
25	106-8574	4	Screw
26	104-1451	2	Screw-TAP, PPH

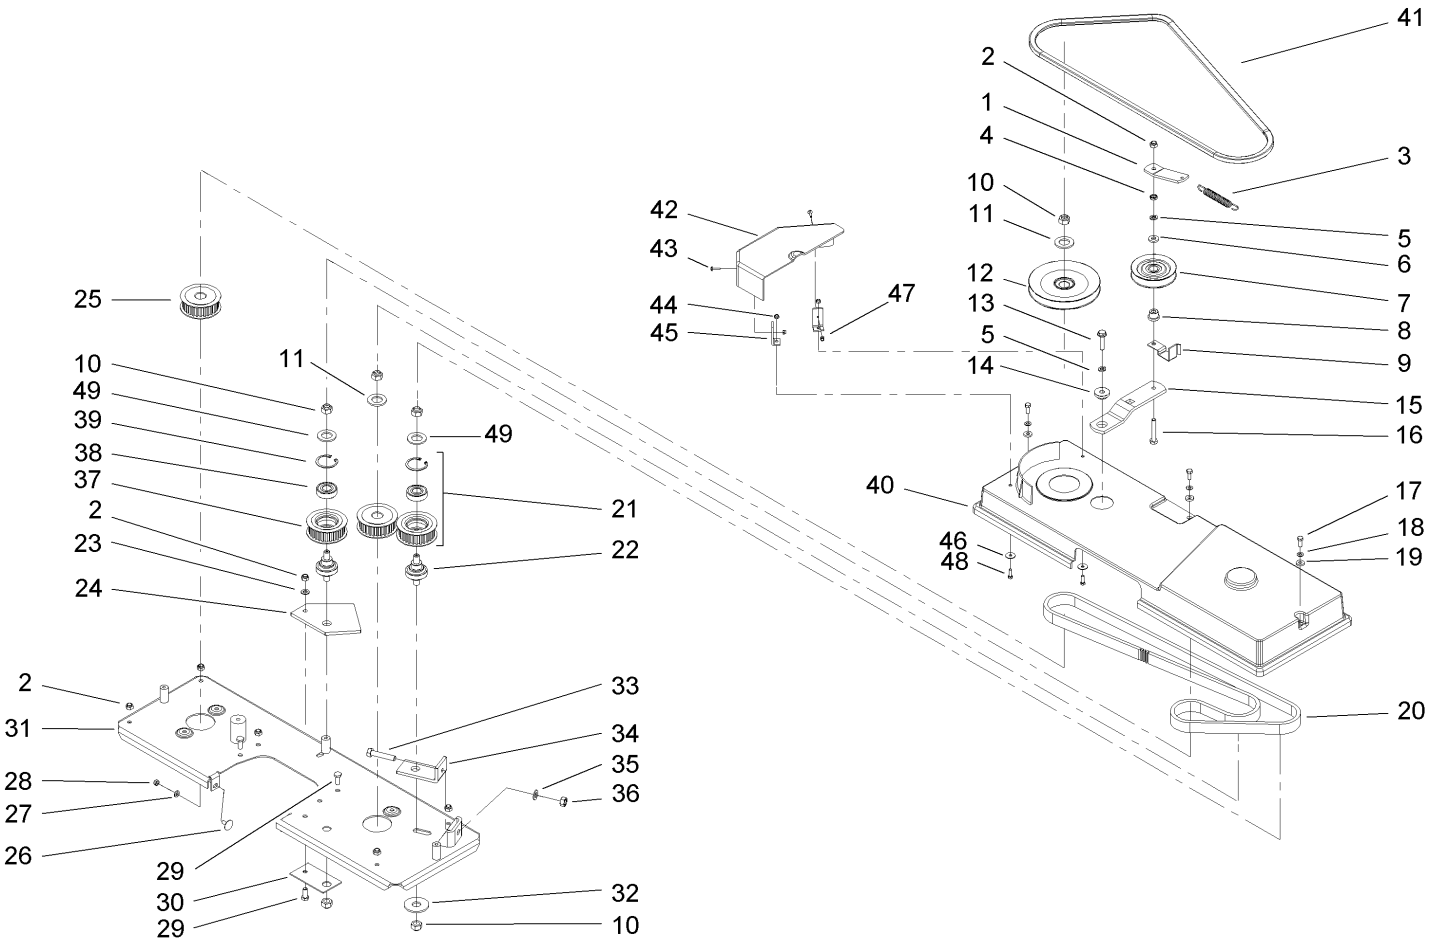

Cutting Pan and Drive System Assembly

Ref	Part No.	Qty.	Description
1	104-3099	1	Lever-Engagement
2	48-9510	8	Nut
3	104-3101	1	Spring
4	57-6390	1	Nut-Jam
5	42-9850	1	Washer-Lock, Spring
6	106-8588	1	Washer-Flat
7	104-3103	1	Pulley-Idler
8	104-3104	1	Bushing
9	104-3105	1	Retainer-Belt
10	48-9540	6	Nut-Lock, Hex NI
11	33099-00	4	Washer-Flat
12	104-3107	1	Pulley-Drive
13	33105-025	1	Screw-HHF
14	107-8995	1	Shim-Arm, Idler
15	104-3109	1	Arm-Idler
16	33114-050	1	Screw-HH
17	33113-016	3	Screw-HH
18	106-8568	3	Washer-Flat
19	83-7420	3	Washer-Rubber
20	106-8591	1	Belt-Cog
21	104-3113	2	Cog Pulley ASM
22	104-3114	2	Pin-Pulley, Cog
23	33094-00	1	Washer-Plain
24	104-3115	1	Support-Pulley

Ref	Part No.	Qty.	Description
25	104-3116	2	Pulley-Cog, Drive
26	33123-016	2	Screw-CARR
27	33093-00	2	Washer-Flat
28	33023-00	2	Nut-Lock
29	33114-025	3	Screw-HH
30	104-3117	1	Plate-Anchor
31	107-8996	1	Plate-Drive, Blade
32	104-2909	1	Washer
33	33115-050	1	Screw-HH
34	104-3120	1	Bracket-Idler
35	108-8709	2	Washer-Flat
36	48-9520	1	Nut
37	104-3121	1	Pulley-Cog
38	100-1048	1	Bearing-Ball
39	104-3123	1	Ring-Locking
40	106-8589	1	Belt-Cover
41	104-3127	1	V-Belt
42	107-8941	1	Guard-Belt
43	60-6910	2	Screw
44	87-5140	2	Nut-Lock
45	107-8940	2	Bracket
46	3256-61	4	Washer-Flat
47	46-0430	2	Nut-Lock
48	107-8918	2	Screw

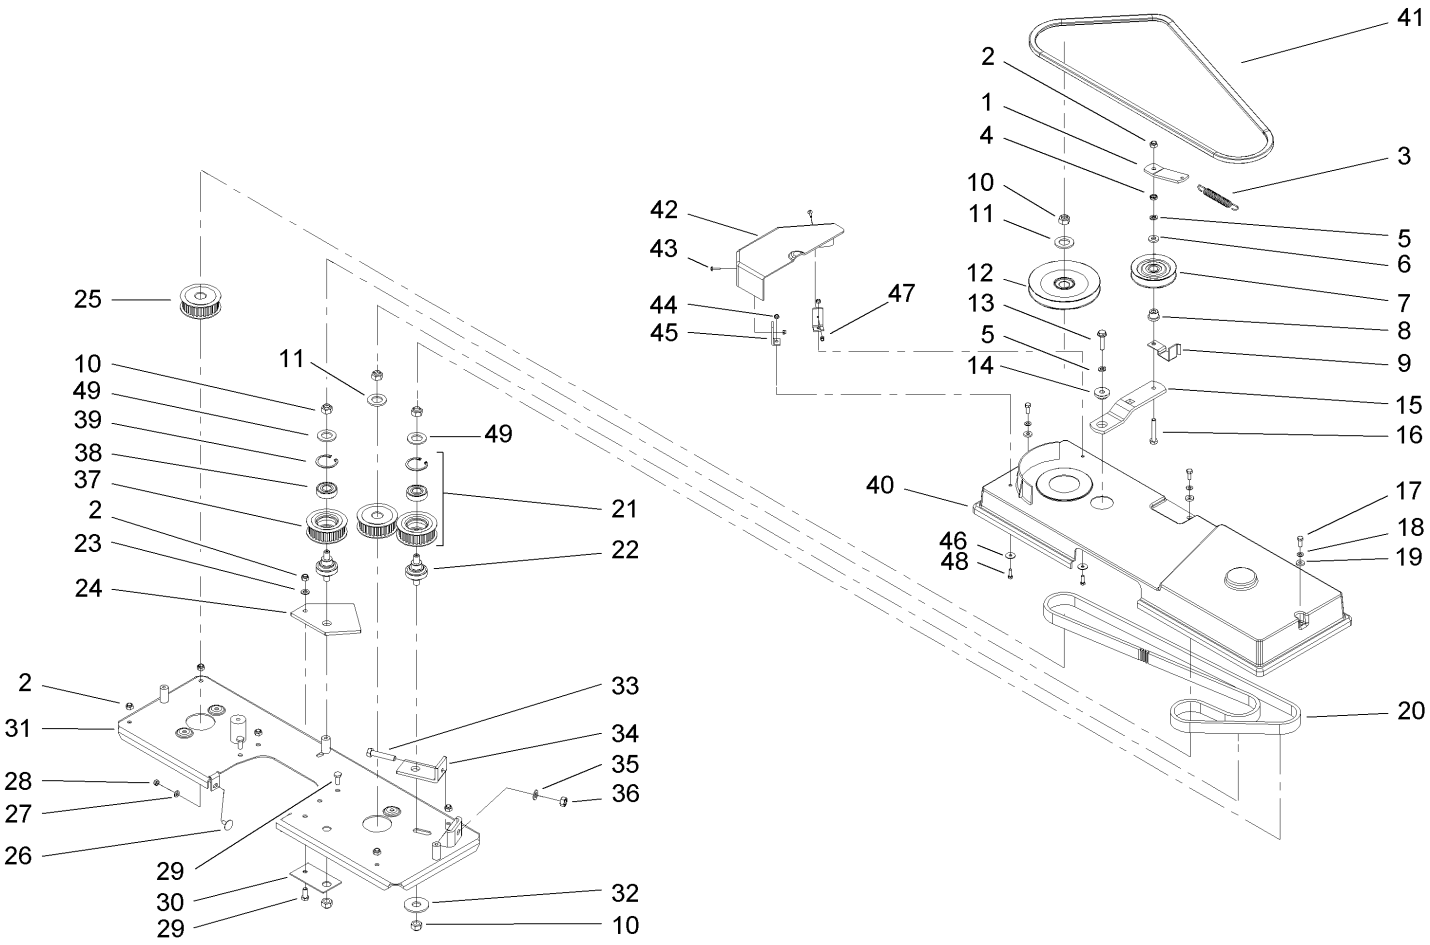

Cutting Pan and Drive System Assembly (continued)

Ref	Part No.	Qty.	Description
49	33096-00	2	Washer-Flat

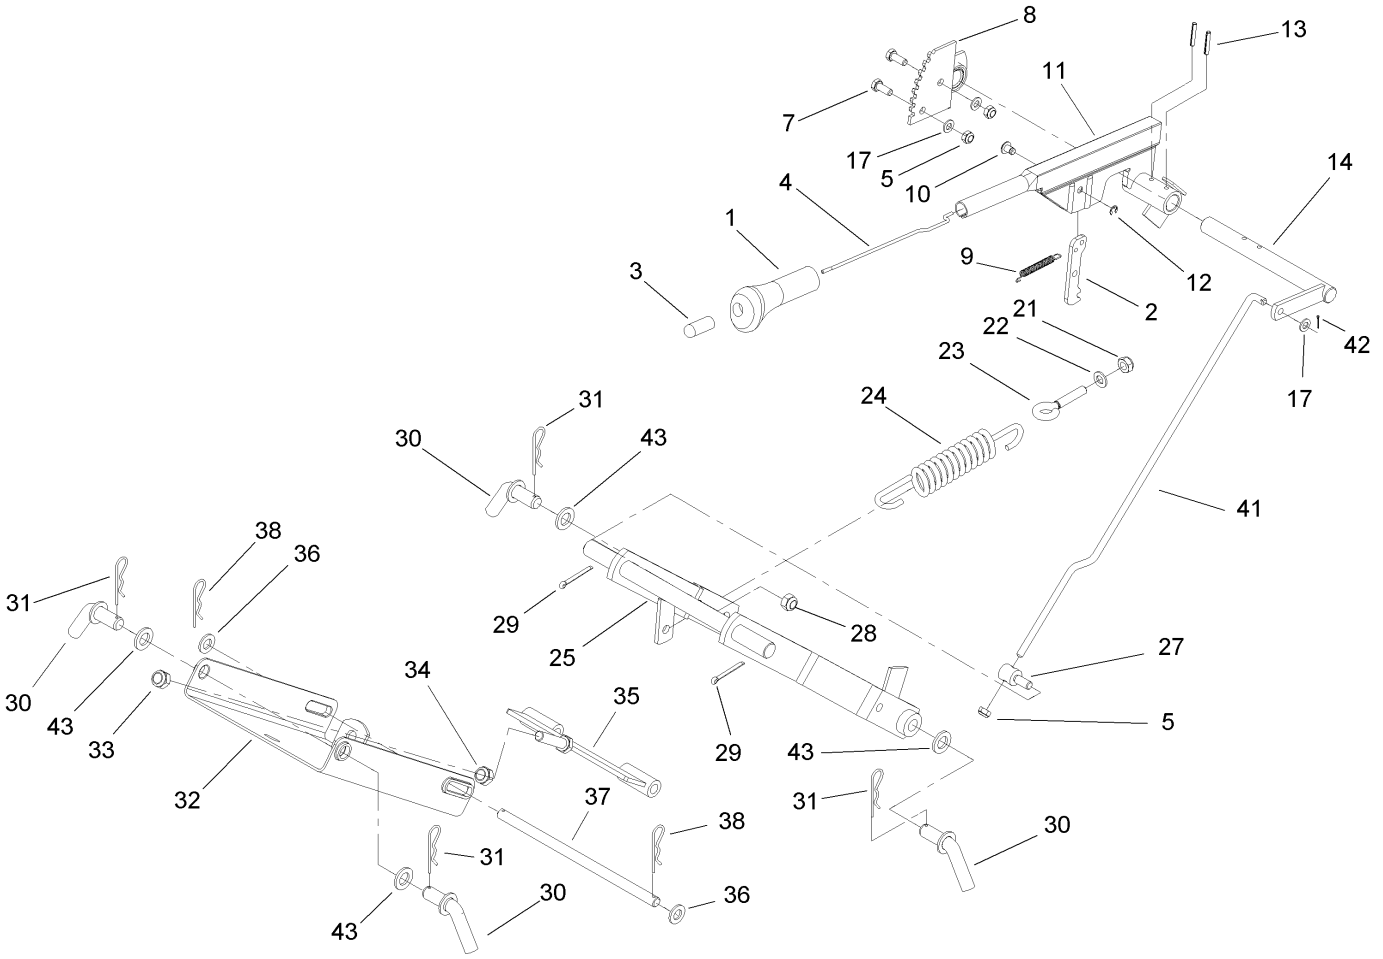

Mower Lift Assembly

Ref	Part No.	Qty.	Description
1	104-3129	1	Grip-Handle
2	104-3130	1	Ratchet-Plate, Pivot
3	104-3131	1	Button-Plunger
4	104-3132	1	Rod-Connection
5	33024-00	3	Nut-Lock
7	33114-020	2	Screw-HH
8	104-3133	1	Segment-Gear
9	104-3134	1	Spring
10	104-3135	1	Pin-Arm Lever
11	104-3136	1	Lever-Arm, Height Adj.
12	104-3137	1	Clip-Pin
13	104-2994	2	Pin-Spring
14	104-3138	1	Shaft-Height Adj.
17	33094-00	3	Washer-Plain
21	33025-00	1	Nut-Lock
22	33095-00	1	Washer-Flat
23	104-3139	1	Bolt-Eye
24	104-3140	1	Spring-Lift
25	104-3141	1	Pivot Arm ASM
27	104-3142	1	Pin-Lifting
28	33025-00	1	Nut-Lock
29	104-3016	2	Pin-Cotter
30	104-3143	4	Pin-Bent
31	104-3144	4	Pin-Hair

Ref	Part No.	Qty.	Description
32	104-3145	1	Suspension-Mower Deck, Front
33	33026-00	1	Nut-Lock
34	33016-00	1	Nut-Hex
35	104-3146	1	Holder-Front
36	104-3124	2	Washer-Flat
37	104-3147	1	Pin
38	104-3148	2	Clip-Hair Pin
41	104-3149	1	Rod-Height Adj.
42	104-3151	1	Pin-Cotter
43	34-9270	4	Washer-Hose

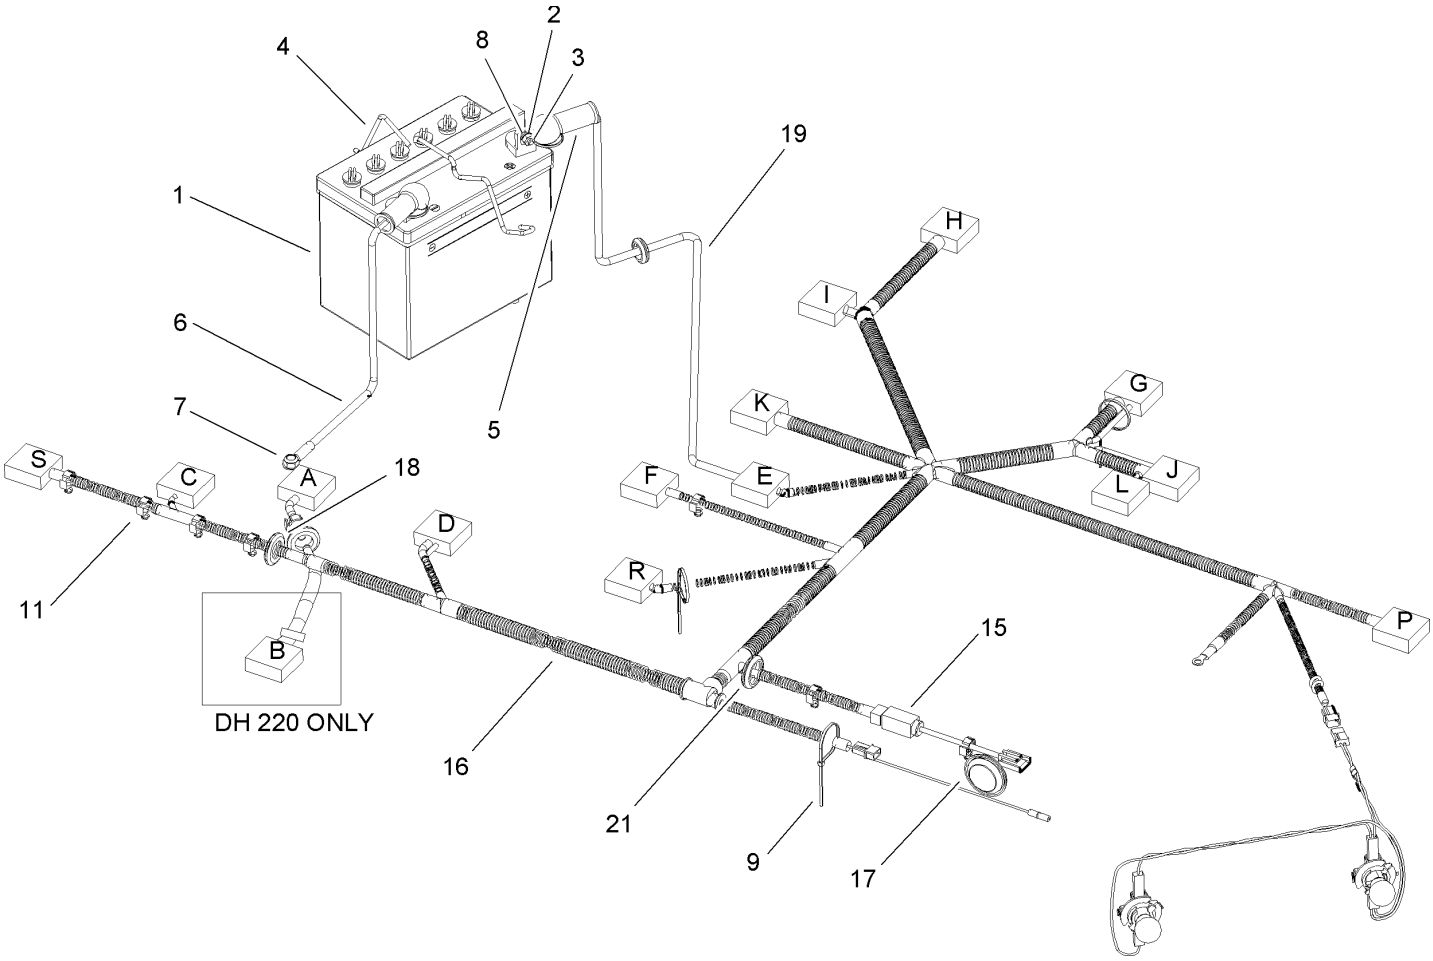

Harness Assembly

Ref	Part No.	Qty.	Description
1	104-2491	1	Battery
2	33013-00	2	Nut-Hex
3	33113-016	2	Screw-HH
4	110-8676	1	Clamp-Battery
5	104-3154	2	Boot-Rubber
6	110-8678	1	Cable-Battery, Negative
7	33024-00	1	Nut-Lock
8	33093-00	2	Washer-Flat
9	3334-945	3	Tie-Cable
11	104-3157	8	Clip-Snap
15	104-3160	1	Harness-Clutch
16	108-8754	1	Harness-Wiring
17	104-3163	1	Cap
18	104-3165	2	Bushing
19	110-8677	1	Cable-Battery, Positive
21	104-3168	1	Bushing

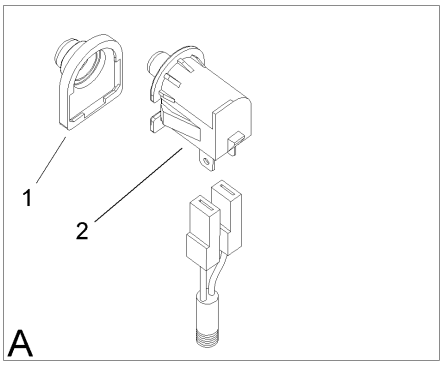

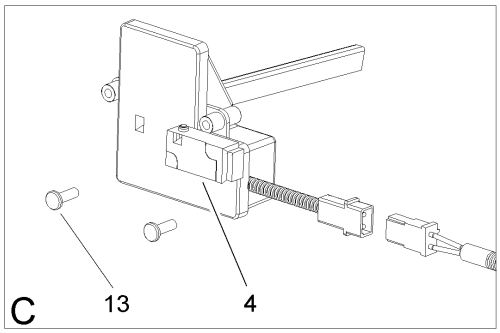

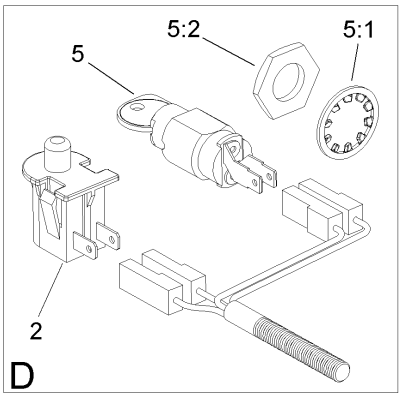

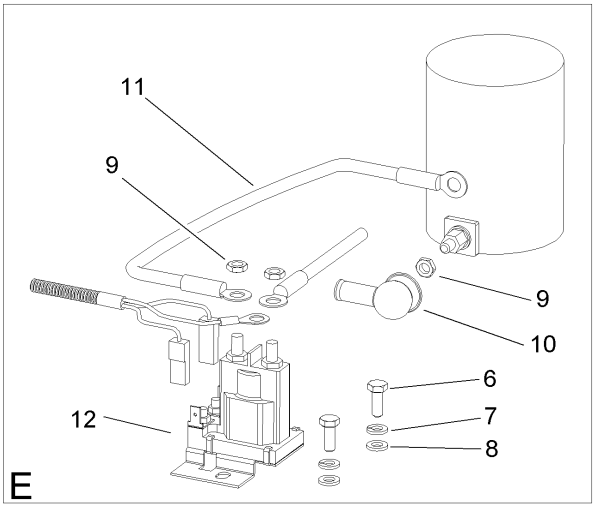

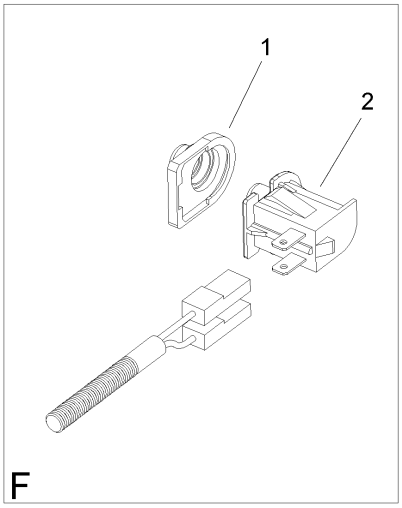

Electrical Switch No. 1 Assembly

Ref	Part No.	Qty.	Description
1	104-3178	2	Cover-Protective
2	104-3179	3	Switch-Delta
4	104-3185	1	Switch-Omron
5	46-5780	1	Switch-Starter
5:1	3254-5	1	Washer-Tooth
5:2	218-461	1	Nut-HH
6	33113-012	2	Screw-HH
7	104-3186	2	Washer-Spring
8	33093-00	2	Washer-Flat
9	32128-32	3	Nut-HHF
10	104-3187	1	Boot-Rubber
11	104-3188	1	Lead-Starter, Electric
12	47-1910	1	Solenoid
13	104-3349	2	Screw

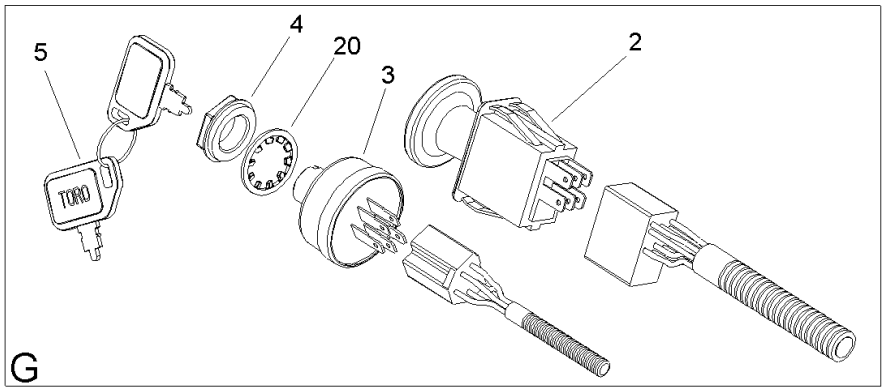

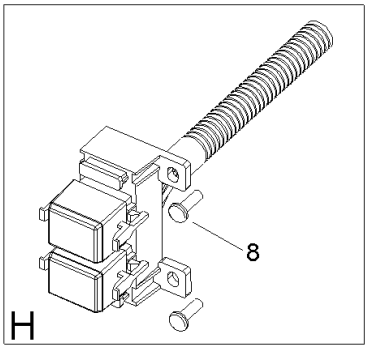

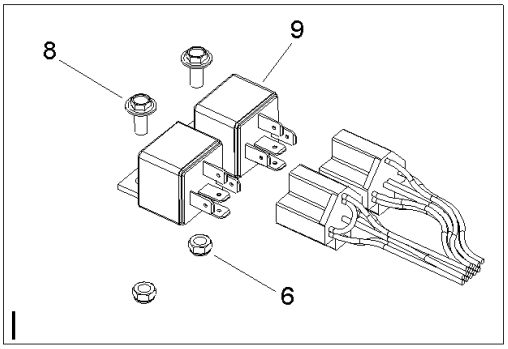

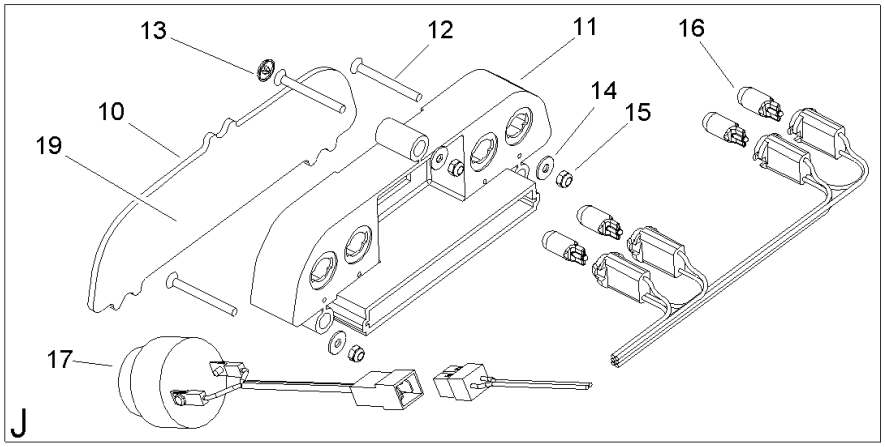

Electrical Switch No. 2 Assembly

Ref	Part No.	Qty.	Description
2	93-9998	1	Switch-PTO
3	92-6785	1	Switch-Ignition
4	218-461	1	Nut-HH
5	62-7770	2	Key-Ignition
6	87-5140	2	Nut-Lock
8	104-2978	4	Screw-Hex
9	104-3173	2	Relay
10	92-6707	1	Lens-Dash Lights
11	92-6732	1	Housing-Light, Indicator
12	104-3191	3	Screw
13	104-3174	3	Screw-Cap
14	104-3175	3	Washer
15	104-2985	3	Nut-Hex
16	104-3176	3	Bulb
17	104-3177	1	Buzzer
19	107-2220	1	Decal-Dash
20	3254-5	1	Washer-Tooth

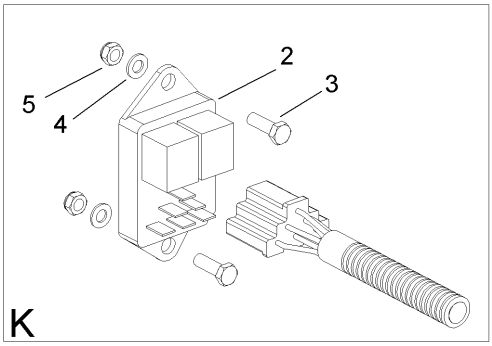

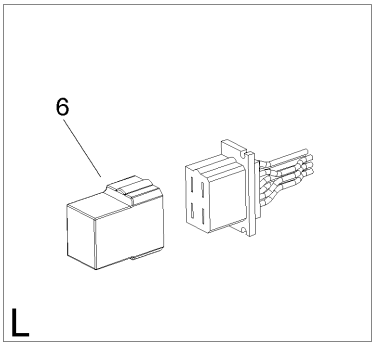

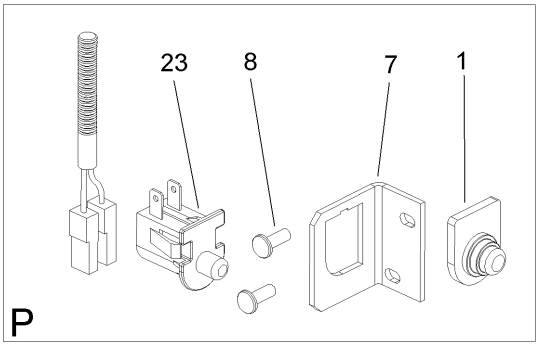

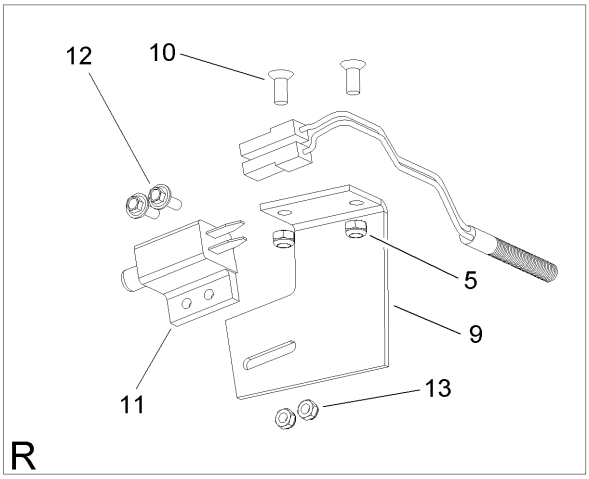

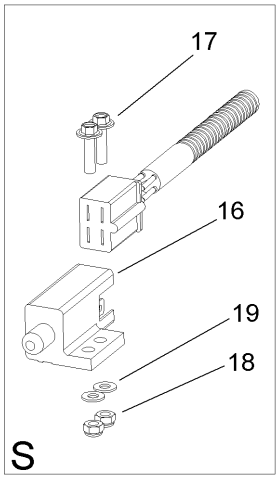

Electrical Switch No. 3 Assembly

Ref	Part No.	Qty.	Description
1	104-3178	1	Cover-Protective
2	99-3701	1	Module-Clutch
3	60-6910	2	Screw
4	52-6430	2	Washer
5	87-5140	4	Nut-Lock
6	104-3169	1	Circuit-Memory
7	107-8954	1	Holder-Switch
8	104-3190	2	Screw
9	107-8955	1	Holder-Switch
10	104-2980	2	Screw
11	95-1653	1	Switch-Pole, Single
12	104-2983	2	Screw
13	104-2985	2	Nut-Hex
16	104-3330	1	Switch-Delta
17	104-3331	2	Bolt
18	46-0430	2	Nut-Lock
19	52-6430	2	Washer
23	104-3179	1	Switch-Delta

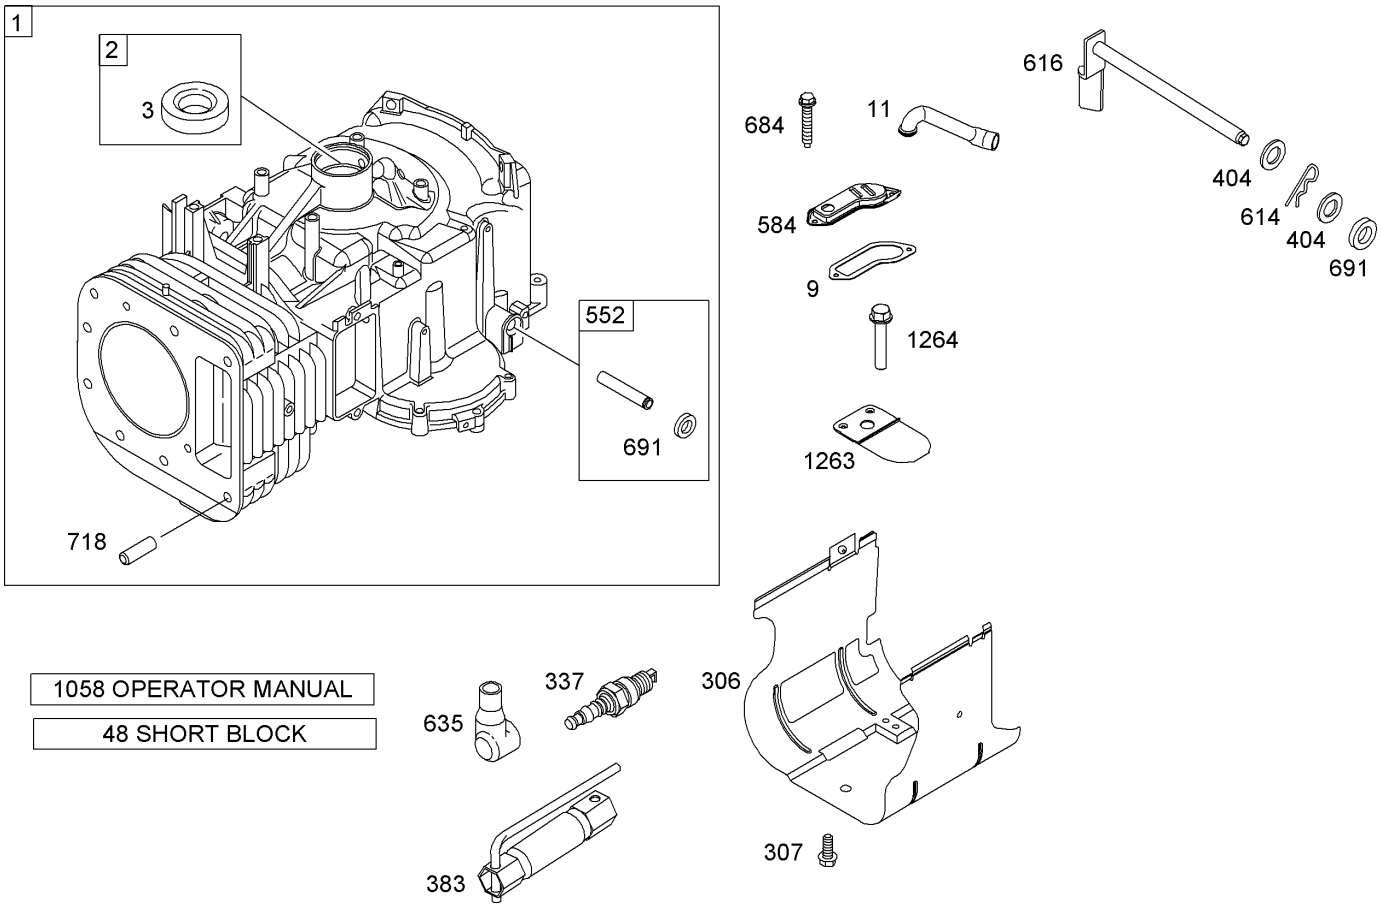

1058 OPERATOR MANUAL

48 SHORT BLOCK

Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❸1	793987	1	Cylinder ASM
❸2	399265	1	Bushing And Seal Kit
❸❺3	391086s	1	Seal-Oil (Magneto Side)
❸❺9	697109	1	Gasket-Breather
❸11	697113	1	Tube-Breather
❸48	697761	1	Short Block
❸306	697107	1	Shield-Cylinder
❸307	691003	1	Screw (Cylinder Shield)
❸337	691043	1	Spark Plug
❸383	89838s	1	Wrench-Spark Plug
❸404	691691	1	Washer (Governor Crank)
❸552	697144	1	Bushing-Crank, Governor
❸584	697112	1	Cover-Passage, Breather
❸614	691620	1	Pin-Cotter
❸616	692012	1	Crank-Governor
❸635	691909	1	Boot-Spark Plug
❸684	697157	1	Screw (Breather Passage Cover)
❸❺691	692407	1	Seal-Shaft, Governor
❸718	690959	1	Pin-Locating
❸1058	MS5935	1	Manual-Operator
❸1263	697124	1	Reed-Breather
❸1264	697104	1	Screw (Breather Reed)

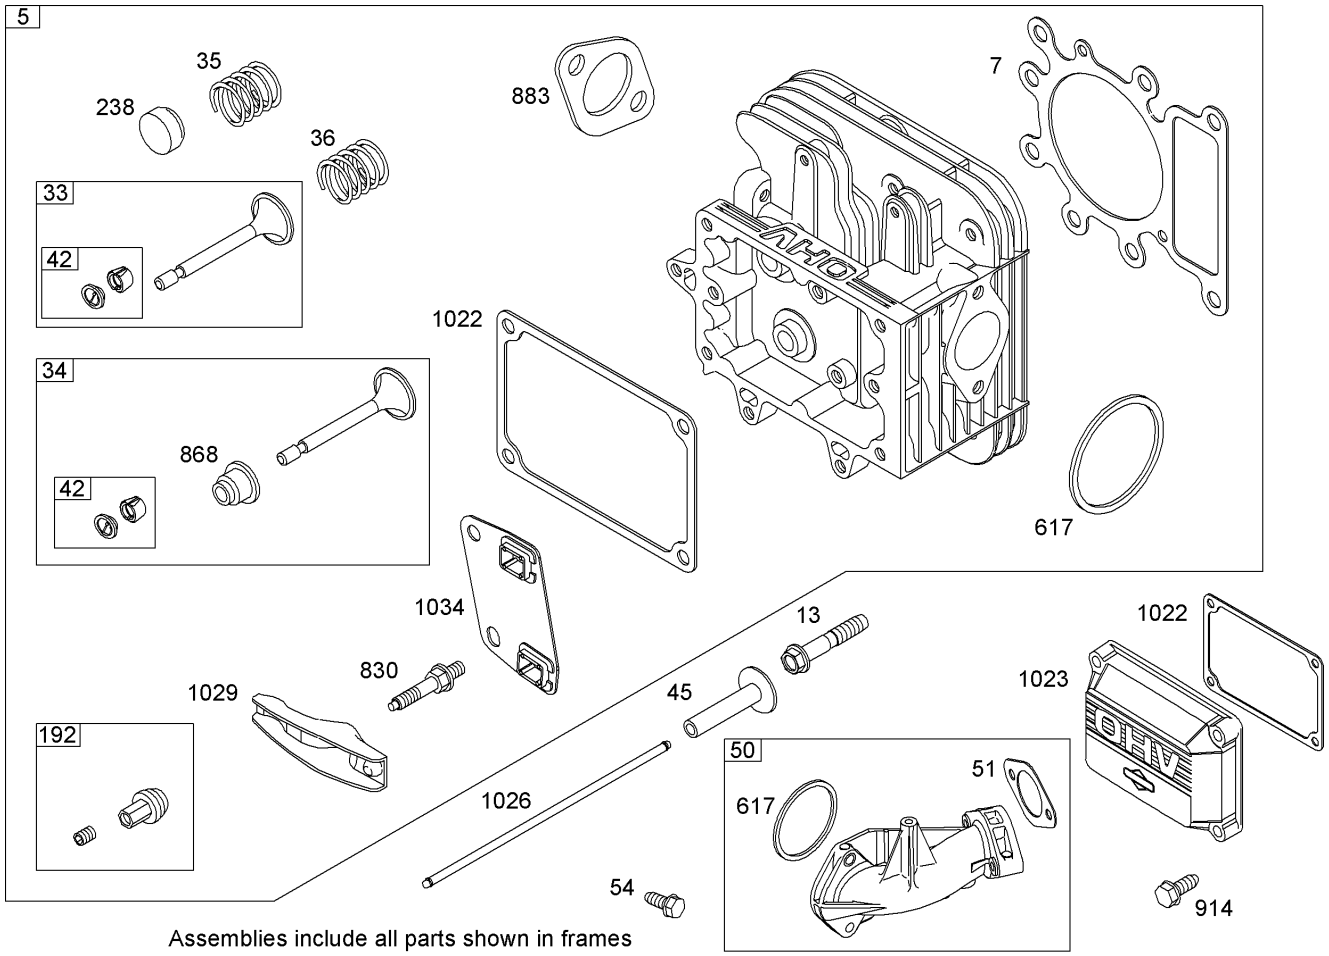

Assemblies include all parts shown in frames

Cylinder Head Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❸5	793989	1	Head-Cylinder
❸❺7	699168	1	Gasket-Head, Cylinder
❸13	793988	1	Screw (Cylinder Head Gasket)
❸33	791934	1	Valve-Exhaust
❸34	791935	1	Valve-Intake
❸35	691279	1	Spring-Valve (Intake)
❸36	691279	1	Spring-Valve (Exhaust)
❸42	499586	1	Keeper-Valve
❸45	690564	1	Tappet-Valve
❸50	690193	1	Manifold-Intake
❸❺51 ❻❾	692137	1	Gasket-Intake
❸54	691148	1	Screw (Intake Manifold)
❸192	691986	1	Adjustor-Arm, Rocker
❸238	691843	1	Cap-Valve
❸❺617 ❾	692138	1	Seal-O Ring (Intake Manifold)
❸830	691095	1	Stud-Arm, Rocker
❸❺868 ❼	690968	1	Seal-Valve
❸883	692236	1	Gasket-Exhaust
❸914	691108	1	Screw (Rocker Cover)
❸❺1022 ❼	272475s	1	Gasket-Cover, Rocker
❸1023	791079	1	Cover-Rocker

Ref	Part No.	Qty.	Description
❸1026	692003	1	Rod-Push (Intake)
❸1026	692011	1	Rod-Push (Exhaust)
❸1029	691751	1	Arm-Rocker
❸1034	690822	1	Guide-Rod, Push

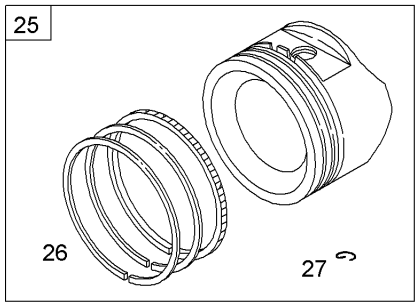

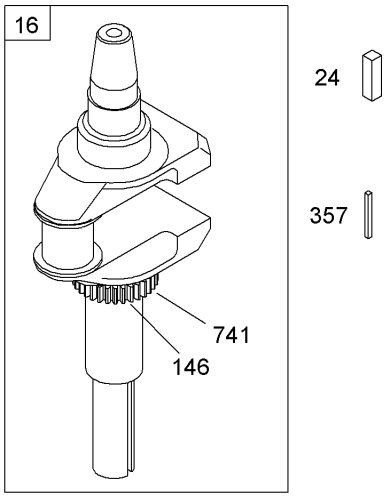

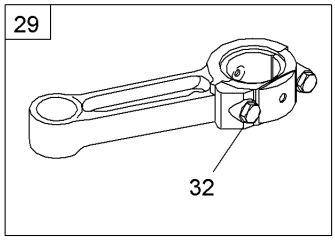

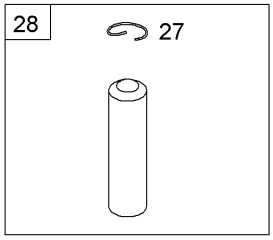

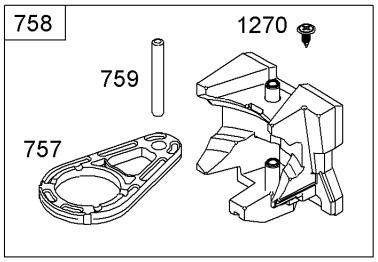

Assemblies include all parts shown in frames

Crankshaft Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❸16	697127	1	Crankshaft
❸24	222698s	1	Key-Flywheel
❸25	792507	1	Piston ASM (STD)
❸25	792648	1	Piston ASM (.020 O S)
❸26	792649	1	Ring Set (STD)
❸26	791947	1	Ring Set (.020 O S)
❸27	698469	1	Lock-Pin, Piston
❸28	697099	1	Pin-Piston (STD)
❸29	791631	1	Ring Set (STD)
❸32	791118	1	Screw (Connecting Rod)
❸146	691639	1	Key-Timing
❸357	691483	1	Key–Pulley, Drive
❸741	697128	1	Gear-Timing
❸757	793242	1	Link-Counterweight
❸758	697134	1	Counterweight
❸759	697392	1	Pin-Counterweight
❸1270	793243	1	Plug-Counterweight, A V S

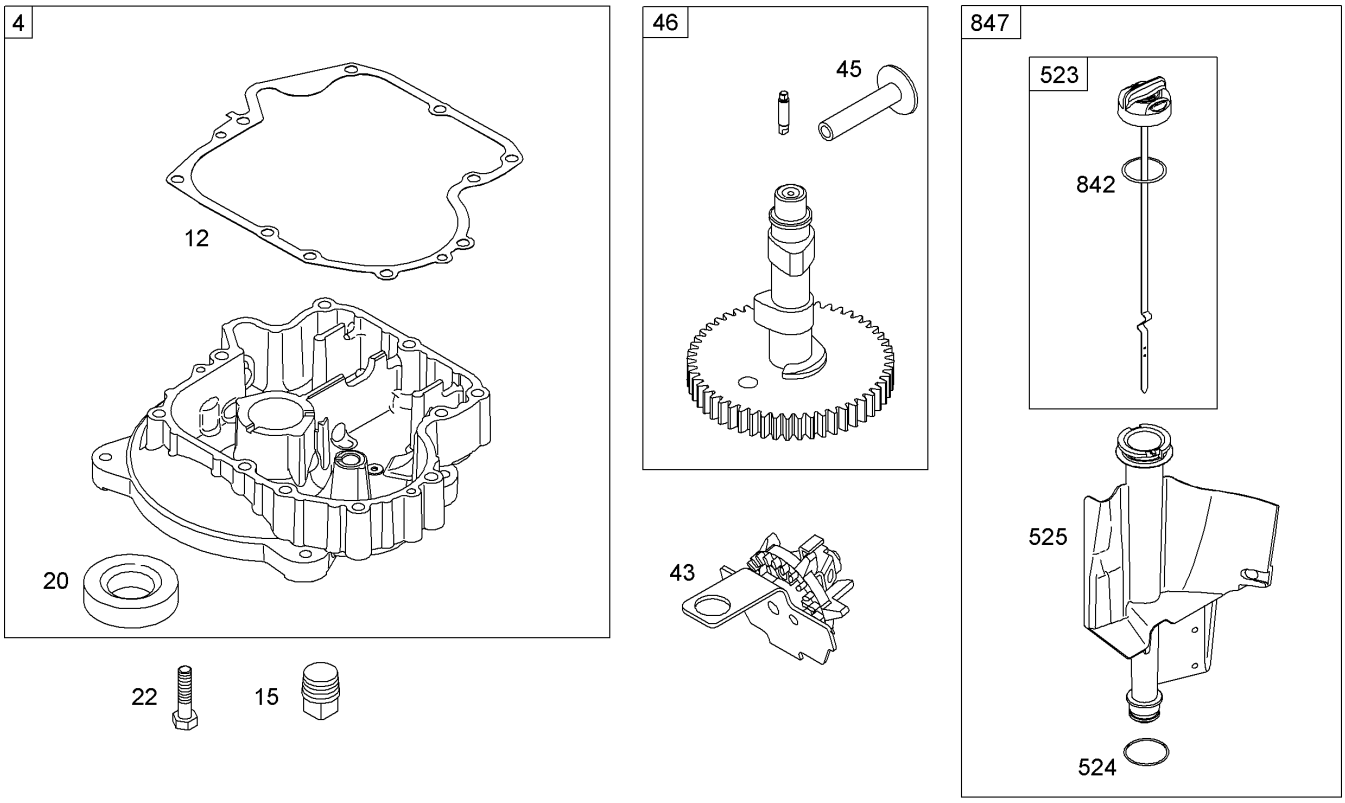

Assemblies include all parts shown in frames

Crankcase Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❸4	697106	1	Sump-Engine
❸❺12	697110	1	Gasket-Crankcase
❸15	690946	1	Plug-Drain, Oil
❸❺20	791892	1	Seal-Oil (P-T-O Side)
❸22	692125	1	Screw (Engine Sump)
❸43	691968	1	Slinger-Governor, Oil
❸45	690564	1	Tappet-Valve
❸46	793583	1	Camshaft
❸523	699908	1	Dipstick
❸❺524	691032	1	Seal-O Ring (Dipstick Tube)
❸525	697085	1	Tube–Dipstick
❸❺842	691031	1	Seal-O Ring (Dipstick)
❸847	790443	1	Dipstick Tube ASM

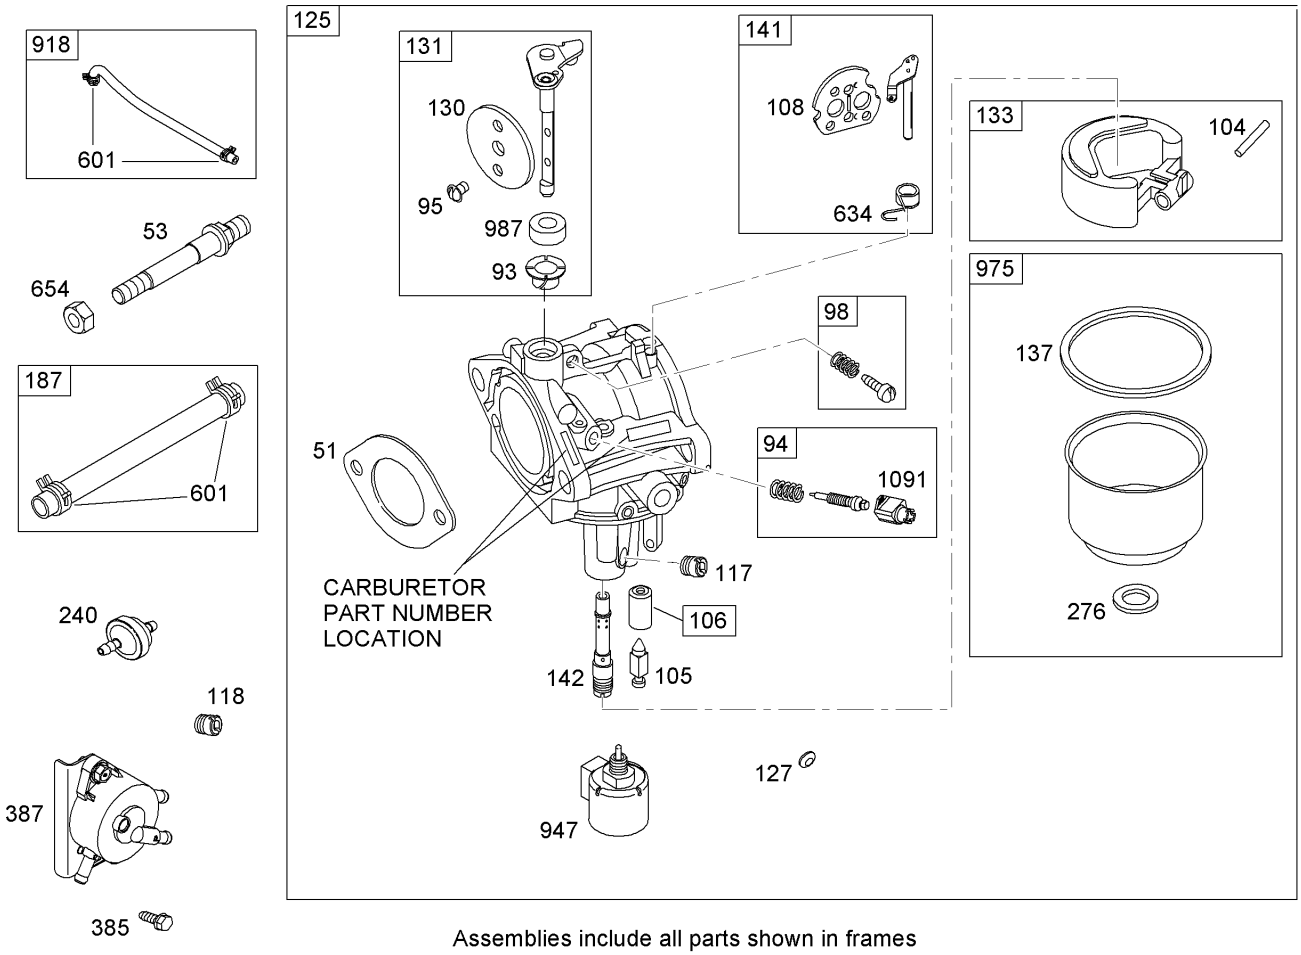

Assemblies include all parts shown in frames

Carburetor Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❺❻51 ❼❾	692137	1	Gasket-Intake
❸53	690227	1	Stud (Carburetor)
❸❹93 ❿	690602	1	Bushing-Shaft, Throttle
❸94	794176	1	Idle Mixture Kit
❸❹95	691636	1	Screw (Throttle Valve)
❸98	495800	1	Idle Speed Kit
❸❹104 ❿	690525	1	Pin-Hinge, Carburetor Float
❸❹105 ❿	231855s	1	Valve-Float, Needle
❸❹106 ❿	691780	1	Seat–Inlet
❸108	692344	1	Valve-Choke
❸❹117 ❿	694352	1	Jet-Main (STD)
❸118	697228	1	Jet-Main (High Altitude)
❸125	793224	1	Carburetor
❸127	695005	1	Plug-Welch
❸130	691750	1	Valve-Throttle
❸131	494379	1	Throttle Shaft Kit
❸133	494381	1	Float-Carburetor
❸❹137 ❻❿	281165s	1	Gasket-Bowl, Float
❸141	495931	1	Choke Shaft Kit

Ref	Part No.	Qty.	Description
❸❹142 ❿	697140	1	Nozzle-Carburetor
❸187	791805	1	Line-Fuel (Cut To Required Length)
❸240	691035	1	Filter-Fuel
❸❹276 ❻❿	692255	1	Washer-Sealing
❸385	694476	1	Screw (Fuel Pump)
❸387	697090	1	Pump-Fuel (With Bracket)
❸601	791850	1	Clamp-Hose
❸❹634 ❿	690802	1	Spring And Seal ASM
❸654	690958	1	Nut (Carburetor)
❸918	791851	1	Line-Vacuum
❸947	694393	1	Solenoid-Fuel
❸975	495933	1	Bowl-Float
❸❹987 ❿	691326	1	Seal-Shaft, Throttle
❸1091	691333	1	Cap-Limiter

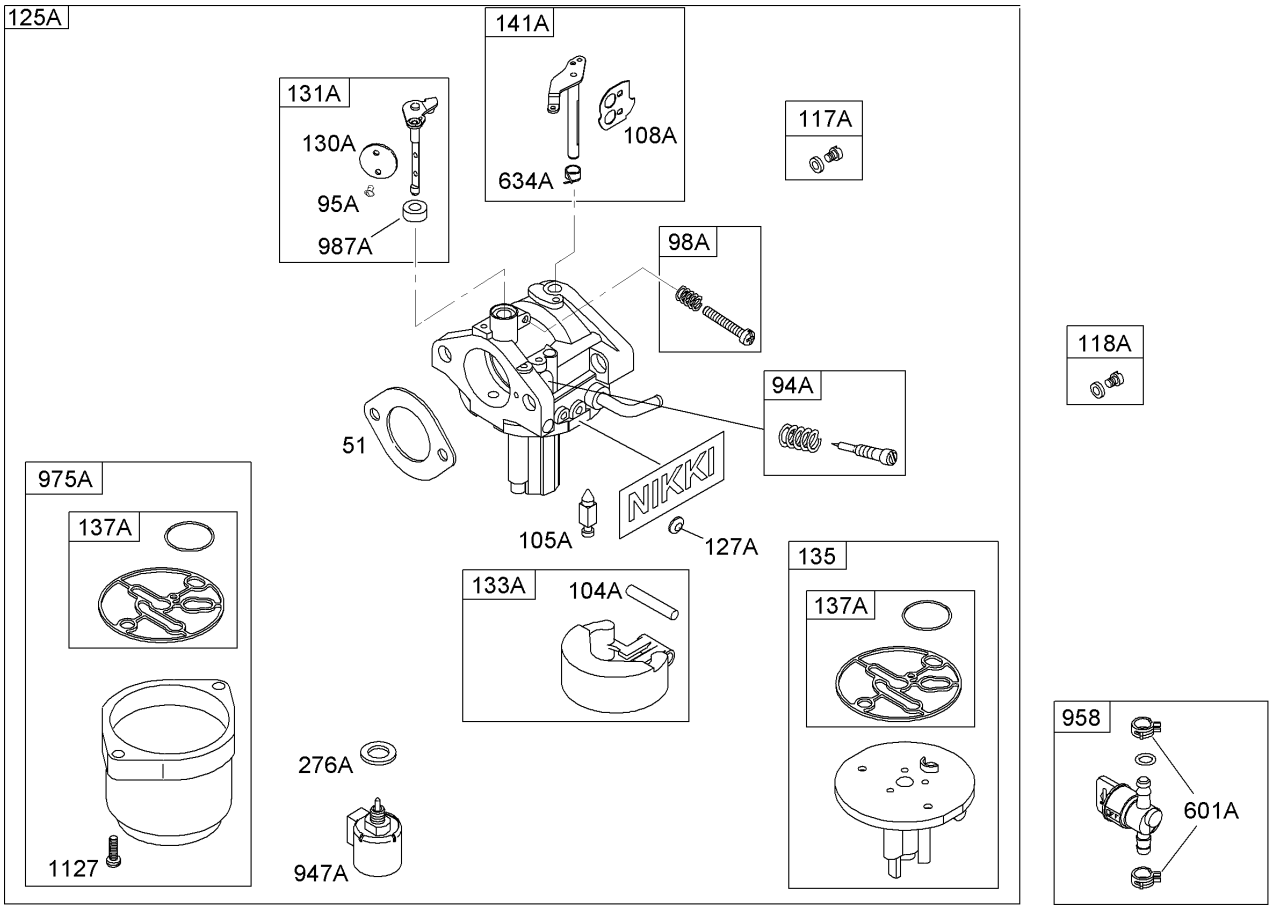

Assemblies include all parts shown in frames

Carburetor Assembly (Nikki)
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❺❻51 ❼❾	692137	1	Gasket-Intake
❸94A	695425	1	Idle Mixture Kit
❸❹95A ❿	690718	1	Screw (Throttle Valve)
❸98A	695408	1	Idle Speed Kit
❸❹104A ❿	694918	1	Pin-Hinge, Float
❸❹105A ❿	696136	1	Valve-Float, Needle
❸108A	695419	1	Valve-Choke
❸❹117A ❿	699457	1	Jet-Main (STD)
❸118A	699458	1	Jet-Main (High Altitude)
❸125A		1	Carburetor (Nikki) (For Service See Ref 125)
❸❹127A ❿	690727	1	Plug-Welch
❸130A	699500	1	Valve-Throttle
❸131A	699501	1	Throttle Shaft Kit
❸133A	694914	1	Carburetor Float ASM
❸135	698780	1	Fuel Transfer Tube ASM
❸❹137A ❿	698781	1	Gasket-Bowl, Float
❸141A	695420	1	Choke Shaft Kit
❸276A	695410	1	Washer-Sealing
❸601A	691038	1	Clamp-Hose

Ref	Part No.	Qty.	Description
❸❹634A ❿	698779	1	Spring And Seal ASM
❸947A	699915	1	Solenoid, Fuel
❸958	698183	1	Valve–Shut Off, Fuel
❸975A	699502	1	Bowl-Float
❸❹987A ❿	698777	1	Seal-Shaft, Throttle
❸1127	695407	1	Screw (Float Bowl)

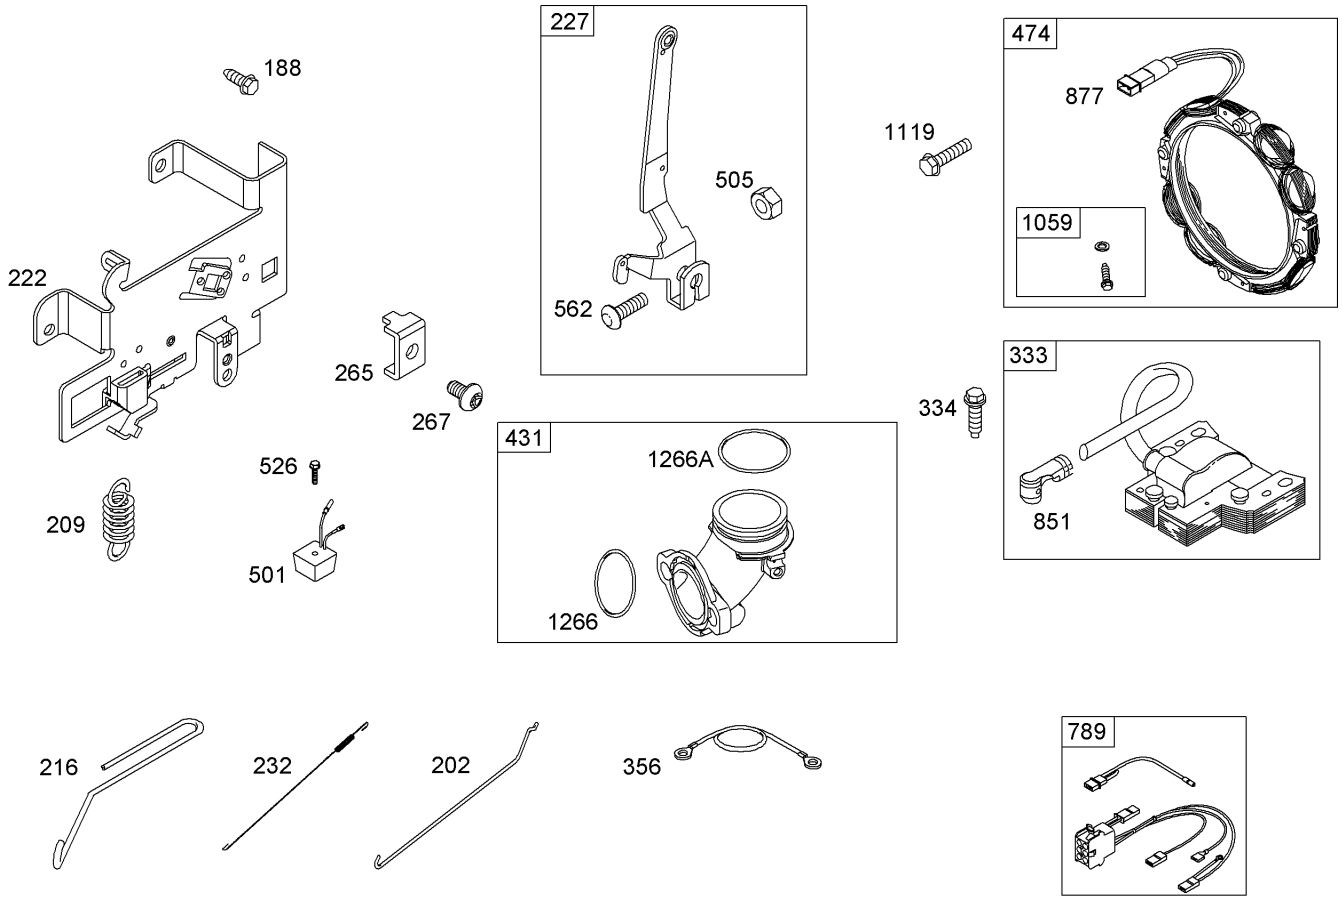

Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❸188	691693	1	Screw (Control Bracket)
❸202	691841	1	Link-Governor, Mechanical
❸209	691795	1	Spring–Governor
❸216	691840	1	Link-Choke
❸222	694042	1	Bracket-Control
❸227	691374	1	Lever-Control, Governor
❸232	691842	1	Spring-Link, Governor
❸265	691024	1	Clamp-Casing
❸267	690804	1	Screw (Casing Clamp)
❸333	492341	1	Armature-Magneto
❸334	691061	1	Screw (Magneto Armature)
❸356	697089	1	Stop-Wire
❸431	697122	1	Elbow-Intake (Magneto Armature)
❸474	696457	1	Alternator
❸501	691188	1	Regulator
❸505	691251	1	Nut (Governor Control Lever)
❸526	697088	1	Screw (Regulator)
❸562	691119	1	Bolt (Governor Control Lever)
❸789	698329	1	Harness–Wiring
❸851	493880s	1	Terminal-Spark Plug
❸877	393537	1	Connector-Wire, Tri Circuit
❸1059	698516	1	Screw And Washer Kit
❸1119	691183	1	Screw (Alternator)

Ref	Part No.	Qty.	Description
❸❹1266 ❺❿	691917	1	Seal-O Ring (Intake Elbow)
❸❹1266A ❿	697123	1	Seal-O Ring (Intake Elbow)

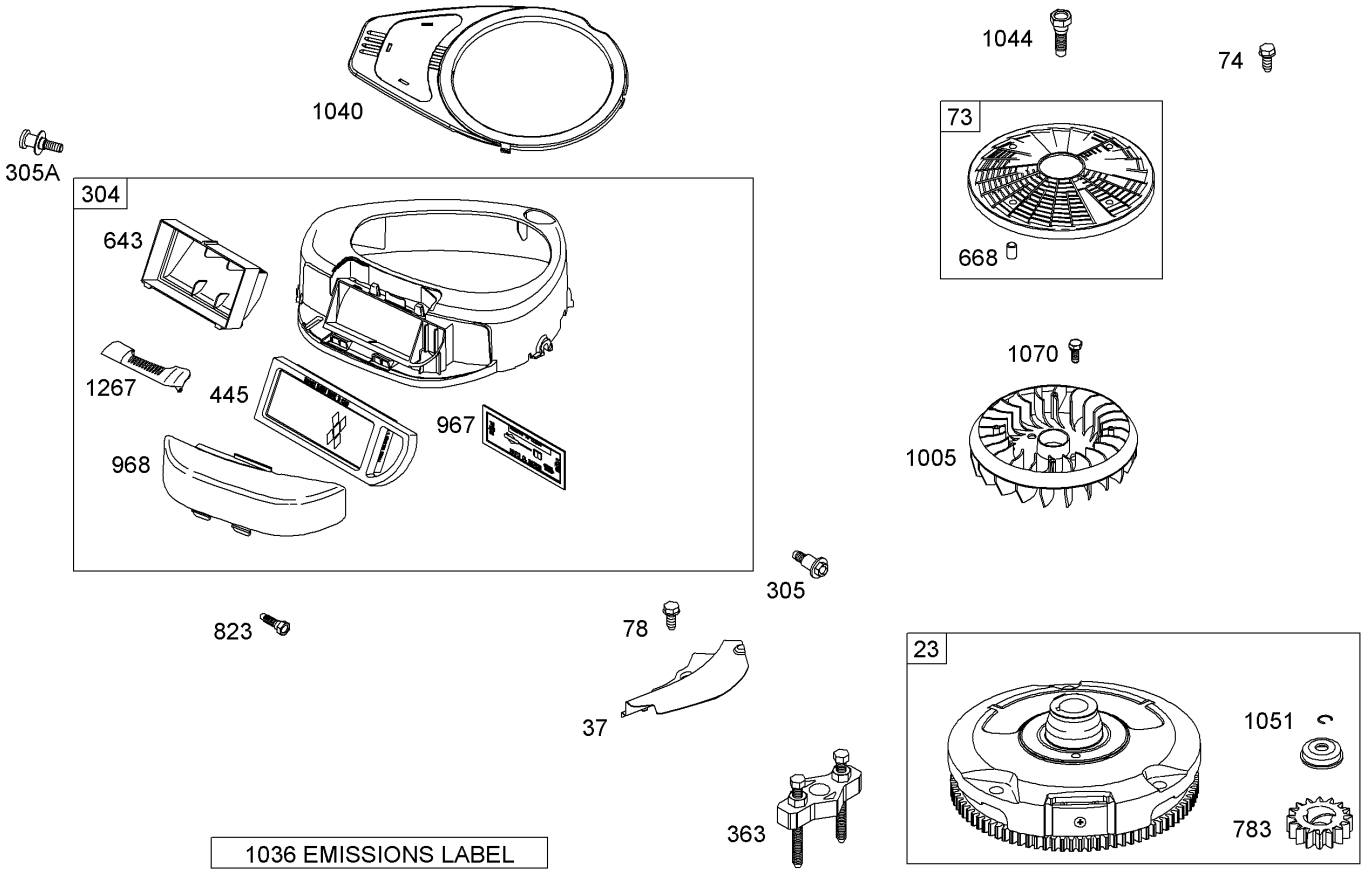

Assemblies include all parts shown in frames

Blower Housing Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❸23	790835	1	Flywheel
❸37	697352	1	Guard-Flywheel
❸73	697133	1	Screen-Rotating
❸74	697897	1	Screw (Rotating Screen)
❸78	691003	1	Screw (Flywheel Guard)
❸304	698402	1	Housing–Blower
❸305	697102	1	Screw (Blower Housing)
❸305A	793376	1	Screw (Blower Housing)
❸363	19203	1	Puller-Flywheel
❸445	698083	1	Filter-Cartridge, Air Cleaner
❸643	698401	1	Retainer-Filter, Air
❸668	691500	1	Spacer
❸783	693713	1	Gear-Pinion
❸823	698941	1	Screw (Muffler Adapter)
❸967	697015	1	Filter-Cleaner, Pre
❸968	698403	1	Cover–Cleaner, Air
❸1005	699043	1	Fan-Flywheel
❸1036		1	Label-Emissions (Available From A Briggs And Stratton Authorized Service Dealer)
❸1040	698368	1	Plate-Trim
❸1044	698139	1	Screw (Crankshaft Extension)
❸1051	691265	1	Ring-Retaining
❸1070	690372	1	Screw (Flywheel Fan)

Ref	Part No.	Qty.	Description
❸1267	697419	1	Latch-Housing, Blower

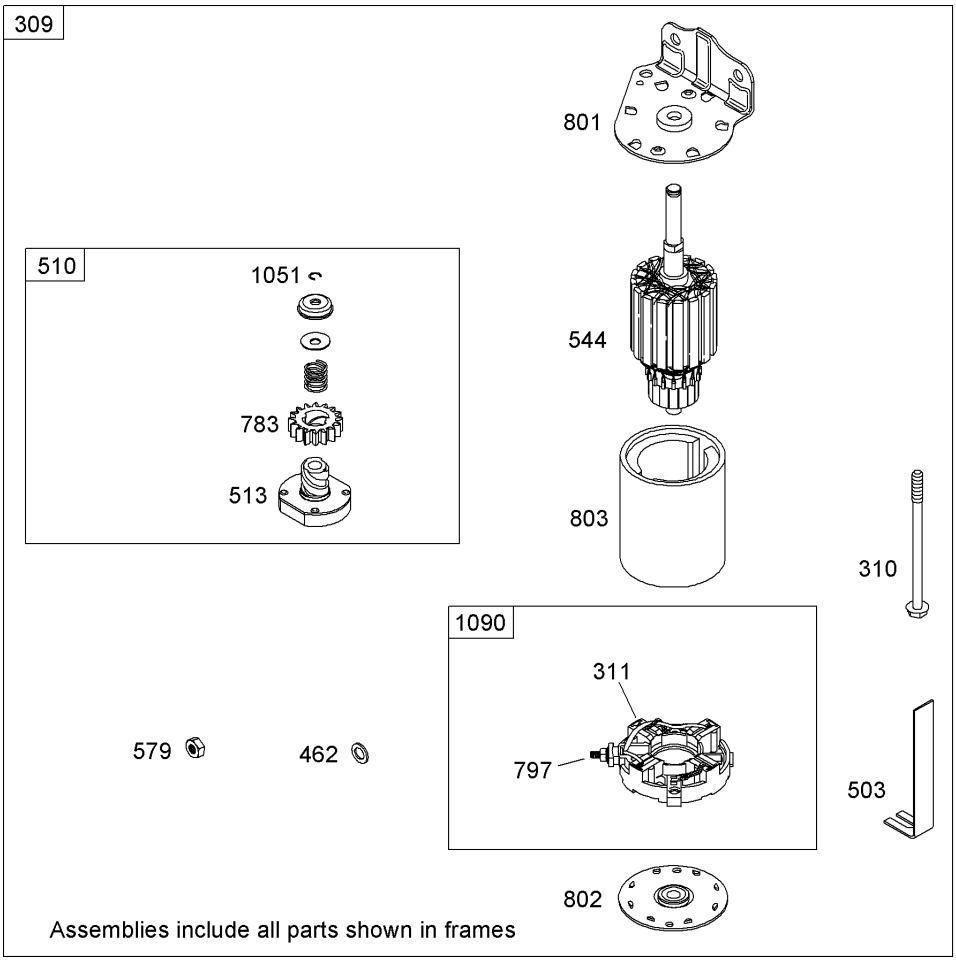

Starter Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❸309	693551	1	Motor-Starter
❸310	690323	1	Bolt (Starter Motor)
❸311	497608	1	Brush Set
❸462	691261	1	Washer (Brush Retainer)
❸503	691532	1	Strap-Starter
❸510	693699	1	Drive-Starter
❸513	692024	1	Clutch-Drive
❸544		1	Armature-Starter (For Service Order 693551)
❸579	691029	1	Nut (Brush Retainer)
❸697	690372	1	Screw (Drive Cap)
❸729	691224	1	Clip-Wire
❸783	693713	1	Gear-Pinion
❸797	693167	1	Nut (Brush Retainer)
❸801	691283	1	Cap-Drive
❸802	691286	1	Cap-End
❸803		1	Housing-Starter (For Service Order 693551)
❸1051	691265	1	Ring-Retaining
❸1090	691293	1	Retainer-Brush

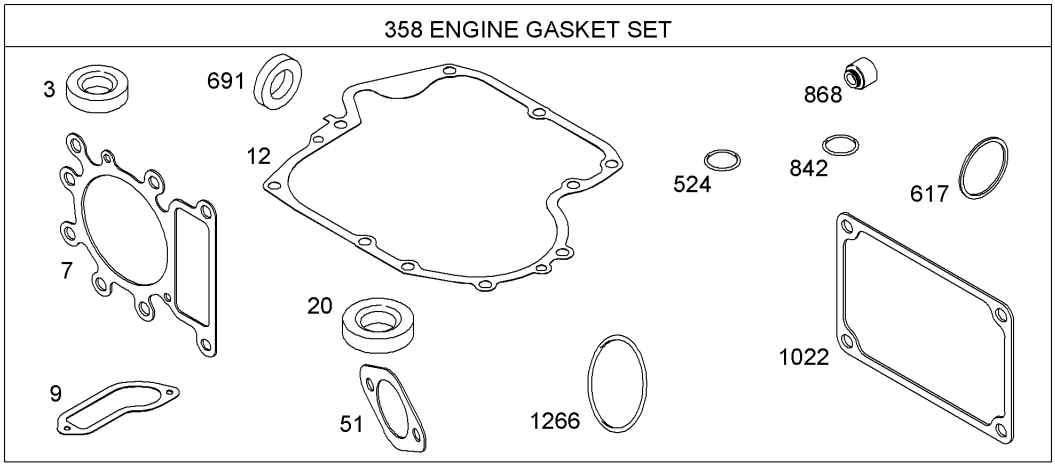

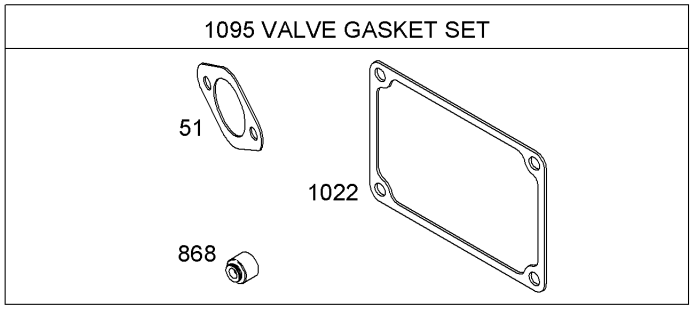

Assemblies include all parts shown in frames

Gasket Set
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❸❺3	391086s	1	Seal-Oil (Magneto Side)
❸❺7	699168	1	Gasket-Head, Cylinder
❸❺9	697109	1	Gasket-Breather
❸❺12	697110	1	Gasket-Crankcase
❸❺20	791892	1	Seal-Oil (P T O Side)
❺❻51 ❼❾	692137	1	Gasket-Intake
❸358	794150	1	Engine Gasket Set
❸❺524	691032	1	Seal (Dipstick Tube)
❸❹617 ❺	692138	1	Seal-O Ring (Intake Manifold)
❸❺691	692407	1	Seal-Shaft, Governor
❸❺842	691031	1	Seal-O Ring (Dipstick Tube)
❸❺868 ❼	690968	1	Seal-Valve
❸❺1022 ❼	272475s	1	Gasket-Cover, Rocker
❸1095	691581	1	Valve Gasket Set
❸❹1266 ❺❿	691917	1	Seal-O Ring (Intake Elbow)

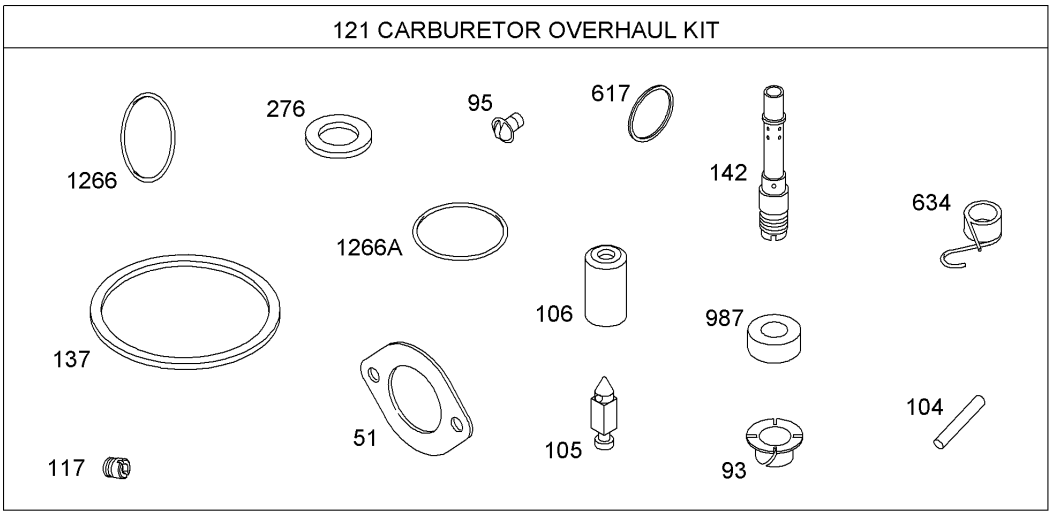

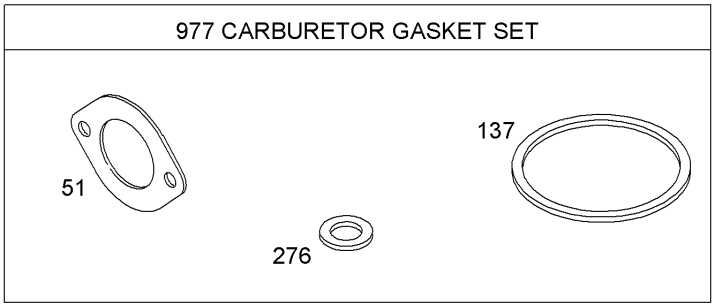

Assemblies include all parts shown in frames

Carburetor Overhaul Kit
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❺❻51 ❼❾	692137	1	Gasket-Intake
❸❹93 ❿	690602	1	Bushing-Shaft, Throttle
❸❹95 ❿	691636	1	Screw (Throttle Valve)
❸❹104 ❿	690525	1	Pin-Hinge, Carburetor Float
❸❹105 ❿	231855s	1	Valve-Float, Needle
❸❹106 ❿	690577	1	Seat-Inlet
❸❹117 ❿	694352	1	Jet-Main (STD)
❸121	697241	1	Carburetor Overhaul Kit
❸❹137 ❻❿	281165s	1	Gasket-Bowl, Float
❸❹142 ❿	697140	1	Nozzle-Carburetor
❸❹276 ❻❿	692255	1	Washer-Sealing
❸❹617 ❺❿	692138	1	Seal-O Ring (Intake Manifold)
❸❹634 ❿	690802	1	Spring And Seal ASM
❸977	690192	1	Carburetor Gasket Set
❸❹987 ❿	691326	1	Seal-Shaft, Throttle

Ref	Part No.	Qty.	Description
❸❹1266 ❺❿	691917	1	Seal-O Ring (Intake Elbow)
❸❹1266A ❿	697123	1	Seal-O Ring (Intake Elbow)

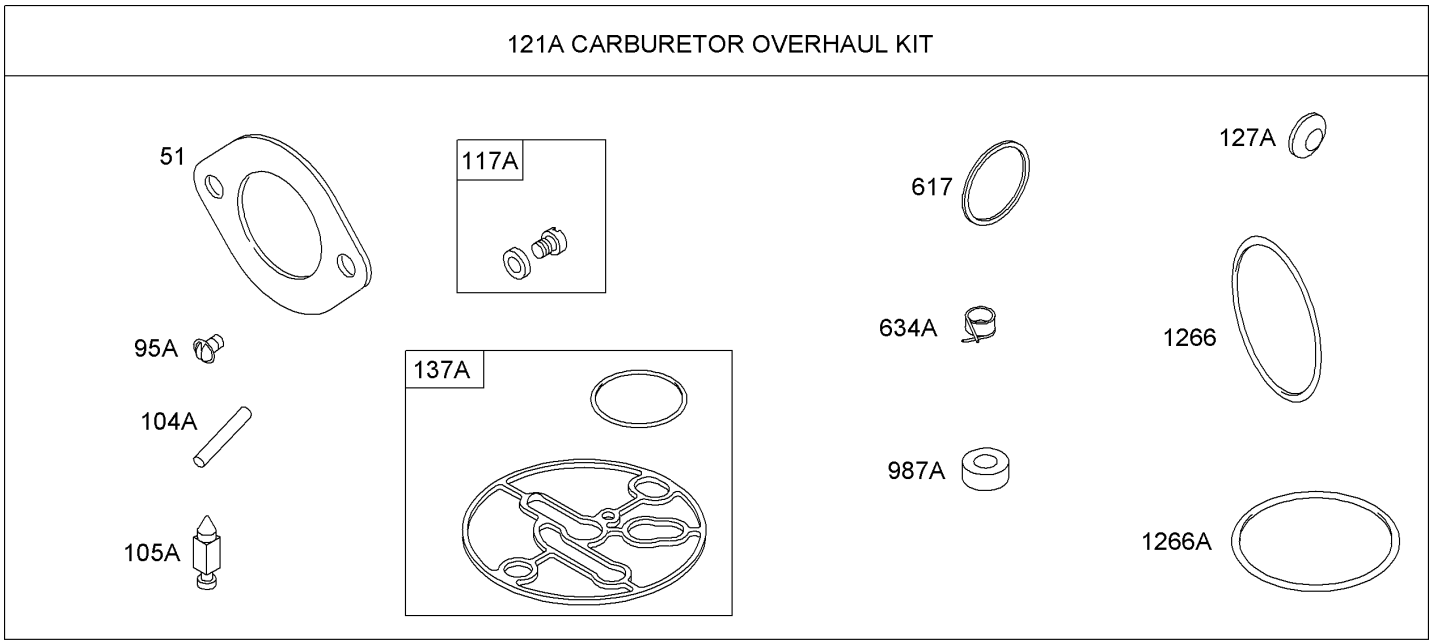

Assemblies include all parts shown in frames

Carburetor Overhaul Kit (Nikki)
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❺❻51 ❼❽	692137	1	Gasket-Intake
❸❹95A ❽❿	690718	1	Screw (Throttle Valve)
❸❹104A ❽❿	694914	1	Carburetor Float ASM
❸❹105A ❽❿	696136	1	Valve-Float, Needle
❸❹117A ❽❿	699457	1	Jet-Main (STD)
❸❽121A	699521	1	Carburetor Overhaul Kit
❸❹127A ❽❿	690727	1	Plug-Welch
❸❻137A ❽❾	698781	1	Gasket-Bowl, Float
❸❺617 ❽❾	692138	1	Seal-O Ring (Intake Manifold)
❸❹634A ❽❿	698779	1	Spring And Seal ASM
❸❹987A ❽❿	698777	1	Seal-Shaft, Throttle
❸❺1266 ❽❾	691917	1	Seal-O Ring (Intake Elbow)
❸❹1266A ❽❿	697123	1	Seal-O Ring (Intake Elbow)

Attachments and Accessories

For 74573 - DH 200 Lawn Tractor

Product Name	Model/Part
Rear Discharge Kit	79471

NOTES

NOTES

NOTES

TORO®