**Installation Instructions** 

### **A WARNING**

#### **CALIFORNIA**

**Proposition 65 Warning** 

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

# Installation

1

## **Preparing the Machine**

No Parts Required

#### **Procedure**

- 1. Park the machine on a level surface.
- 2. Disengage the PTO, move the motion-control levers to the NEUTRAL-LOCK position, and engage the parking brake.
- 3. Shut off the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.





# Installing the Kit

#### Parts needed for this procedure:


2	Weight
8	Adapter nut
8	Washer
8	Bolt (1/2 x 3-1/2 inches)


### **Procedure**

1. Remove the existing 4 lug nuts from a rear tire.

**Note:** Retain the lug nuts for securing the tire if you remove the wheel weight later.

- 2. Install 4 adapter nuts to the tire.
- 3. Torque the nuts to 103 to 127 N·m (76 to 94 ft-lb).
- 4. Install the weight using 4 bolts and 4 washers.
- 5. Torque the bolts to 103 to 127 N·m (76 to 94 ft-lb).
- 6. Repeat the procedure for the other rear tire.

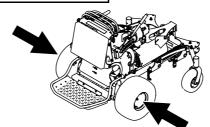

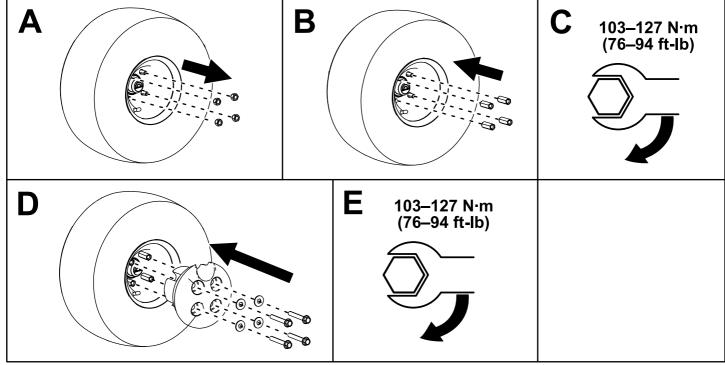

g187914