



Floormat Kit

MyRide® TimeCutter® Riding Mower

Model No. 147-8764

Installation Instructions

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
No parts required	–	Prepare the machine.
Floormat	1	Install the floormat.
Plastic plug	4	

Preparing the Machine

Gas Models Only

1. Park the machine on a level surface.
2. Disengage the blade-control switch.
3. Move the motion-control levers outward to the NEUTRAL-LOCK position.
4. Shut off the engine and remove the key.
5. Wait for all moving parts to stop.
6. Allow machine components to cool.

Electric Models Only

1. Park the machine on a level surface.
2. Disengage the blade-control switch.
3. Move the motion-control levers outward to the NEUTRAL position.
4. Engage the parking brake.
5. Shut off the machine and remove the key.
6. Wait for all moving parts to stop.
7. Allow machine components to cool.
8. Remove the battery packs from the machine.



Installing the Floormat

Secure the floormat to the platform using the 4 plastic plugs.

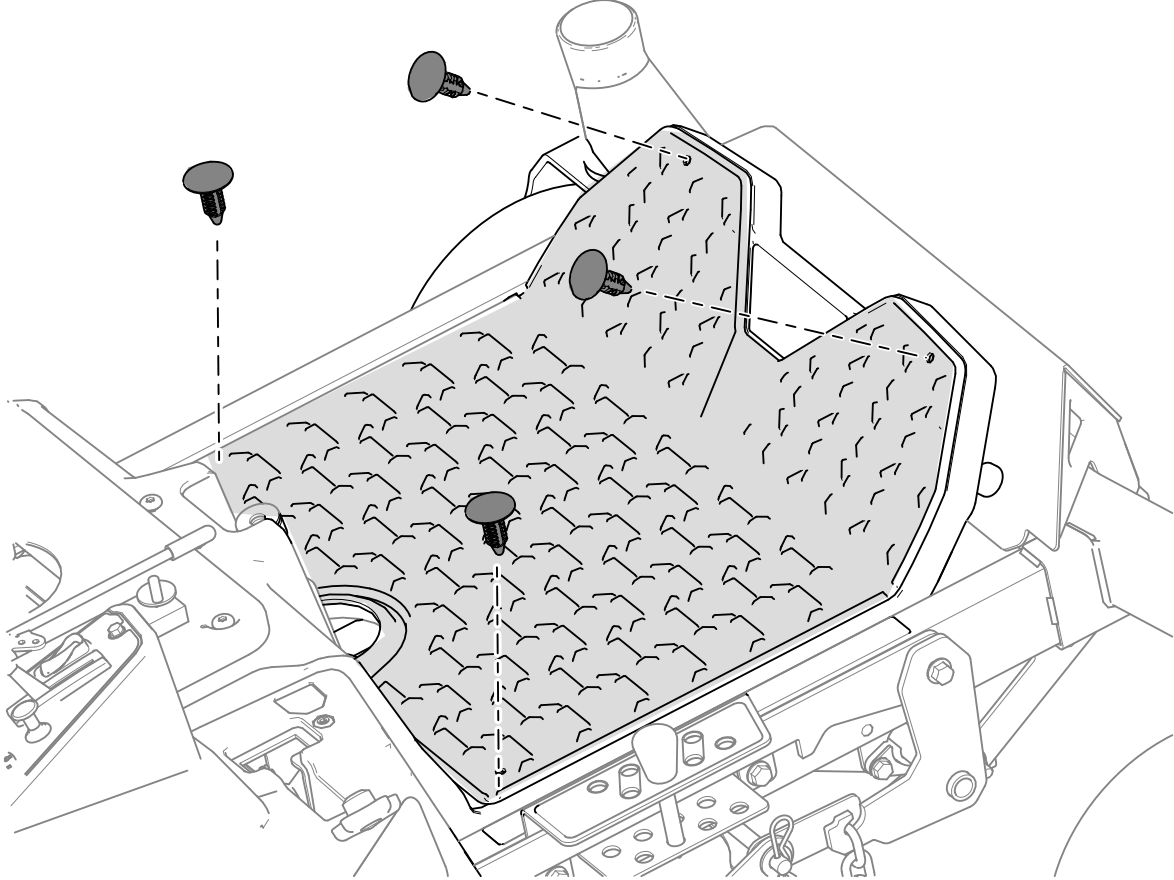


Figure 1

g469333