



# CE Bagger Compliance Kit

## for 48in, 52in, or 60in Z Master® G3 Mower

Model No. 127-0336

Model No. 127-0337

Model No. 127-0338

### Installation Instructions

**Note:** Determine the left and right sides of the machine from the normal operating position.

**Note:** This kit needs to be installed on model 78551, 78552, 78553, 78562, 78563, 78566, or 78567 Blower and Drive Kit to create a CE bagger.

## Installation

### Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
<b>1</b>	No parts required	–	Prepare the mower.
<b>2</b>	Warning decal Cover missing decal	1 1	Install the decals.
<b>3</b>	Blower cover Bolt (1/4 x 3/4 inch) Washer (1/4 inch) Washer (5/16 inch) Plastic plug Push nut (1/4 inch)	1 1 1 1 1 1	Install the covers.
<b>4</b>	Left guard Back guard Front guard Lower guard Bolt (5/16 x 3/4 inch) Flange nut (5/16 inch)	1 1 1 1 1 1	Install the guards.
<b>5</b>	Support rod	1	Install the support rod.
<b>6</b>	Muffler guard	1	Install the muffler guard.



# 1

## Preparing the Mower

### No Parts Required

### Procedure

1. Thoroughly clean mower deck. All debris must be removed to ensure the kit will fit properly.
2. Repair all bent or damaged areas and replace any missing parts.

# 2

## Installing the Decals

### Parts needed for this procedure:

1	Warning decal
1	Cover missing decal

### Procedure

1. Remove the existing blower cover (Figure 3). Save the hardware.
2. Clean the area where the decals will go (Figure 1).
3. Install the decals as shown in Figure 1.

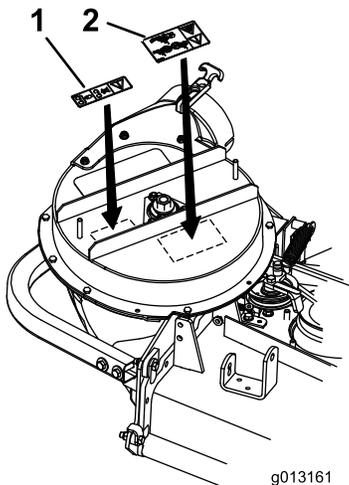


Figure 1

1. Cover missing decal
2. Warning decal

# 3

## Installing the Covers

### Parts needed for this procedure:

1	Blower cover
1	Bolt (1/4 x 3/4 inch)
1	Washer (1/4 inch)
1	Washer (5/16 inch)
1	Plastic plug
1	Push nut (1/4 inch)

### Procedure

1. Loosen and remove the bottom bolt of the mower-deck curtain to release the curtain (Figure 2). Retain the bolt.


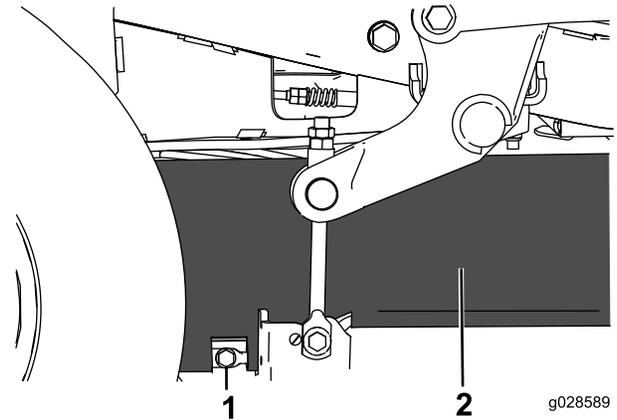


Figure 2

1. Bolt
2. Curtain


2. Remove the existing belt cover retaining knob and discard.
3. Remove the existing belt cover (Figure 3 or Figure 4).
4. Attach the bolt (1/4 x 3/4 inch) and a flat washer (5/16 inch) to the belt cover with a flat washer (1/4 inch) and push nut (1/4 inch) (Figure 3 or Figure 4).
5. Install the belt cover and tighten the bolt (1/4 x 3/4 inch) (Figure 3 or Figure 4).
6. Install the new blower cover using the existing hardware previously removed (Figure 3 or Figure 4).
7. Install the plastic plug in the existing belt cover (Figure 3 or Figure 4).

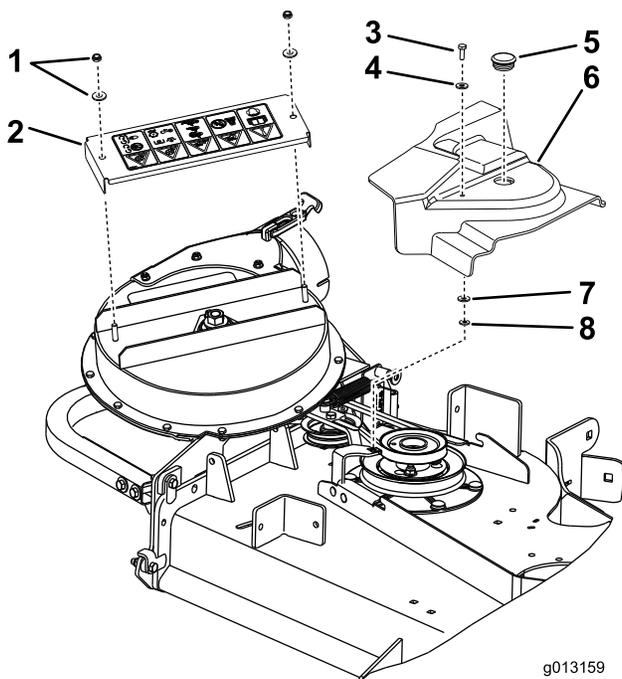

**Figure 3**

For model 78551, 78552, 78562, and 78566 (48-inch (122 cm) or 52-inch (132 cm))

- |                          |                        |
|--------------------------|------------------------|
| 1. Existing hardware     | 5. Plastic plug        |
| 2. New blower cover      | 6. Existing belt cover |
| 3. Bolt (1/4 x 3/4 inch) | 7. Washer (1/4 inch)   |
| 4. Washer (5/16 inch)    | 8. Push nut (1/4 inch) |

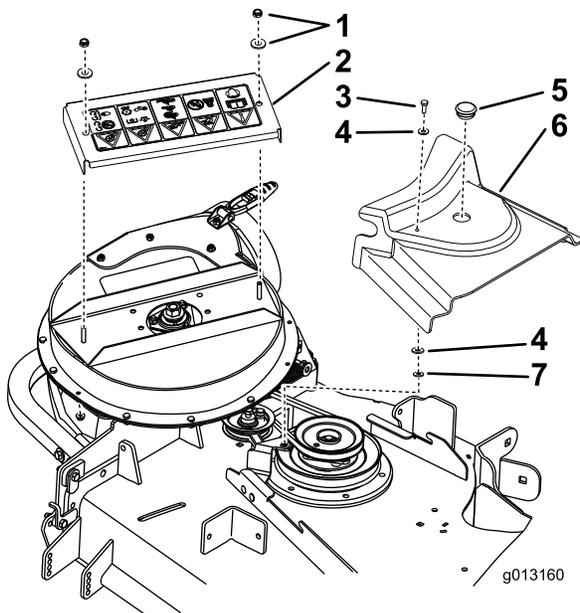

**Figure 4**

For model 78553, 78563, and 78567 (60 inch (152 cm))

- |                          |                        |
|--------------------------|------------------------|
| 1. Existing hardware     | 5. Plastic plug        |
| 2. New blower cover      | 6. Existing belt cover |
| 3. Bolt (1/4 x 3/4 inch) | 7. Push nut (1/4 inch) |
| 4. Washer (5/16 inch)    |                        |

# 4




## Installing the Guards

### Parts needed for this procedure:

1	Left guard
1	Back guard
1	Front guard
1	Lower guard
1	Bolt (5/16 x 3/4 inch)
1	Flange nut (5/16 inch)

### Procedure

1. Remove the existing hardware around the blower for the left guard, lower guard and back guard (Figure 5 or Figure 6). Save all existing hardware
2. Install the left guard with existing hardware (Figure 5 or Figure 6).
3. Install the back guard with existing hardware (Figure 5 or Figure 6).
4. Install the lower guard with existing hardware (Figure 5 or Figure 6).
5. Install the front guard with a bolt (5/16 x 3/4 inch) and a flange nut (5/16 inch) (Figure 5 or Figure 6).

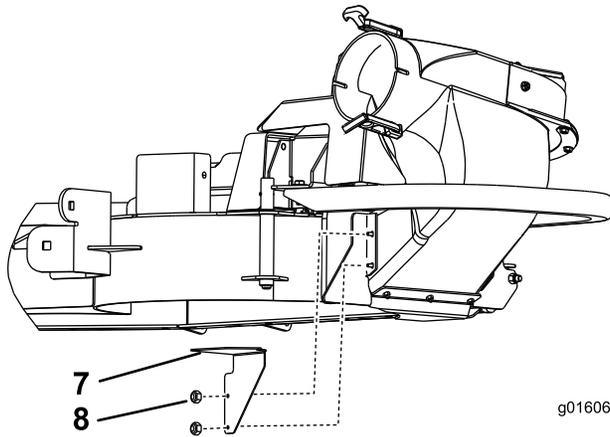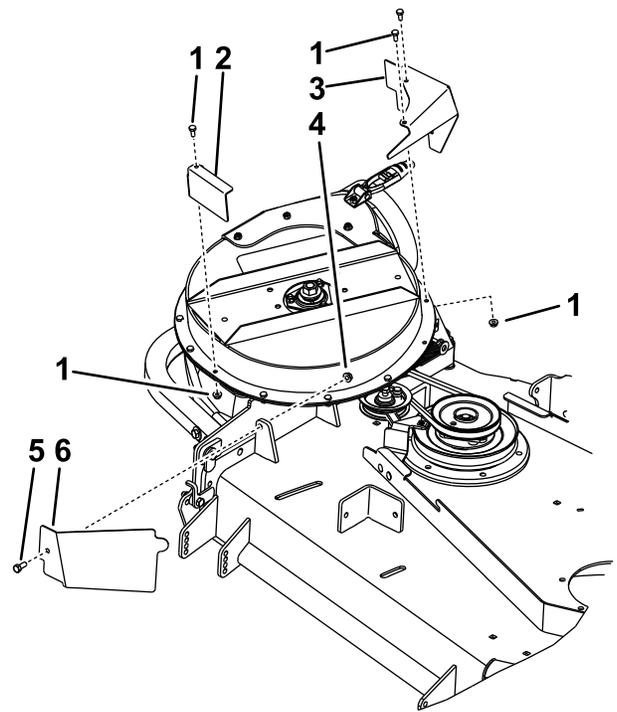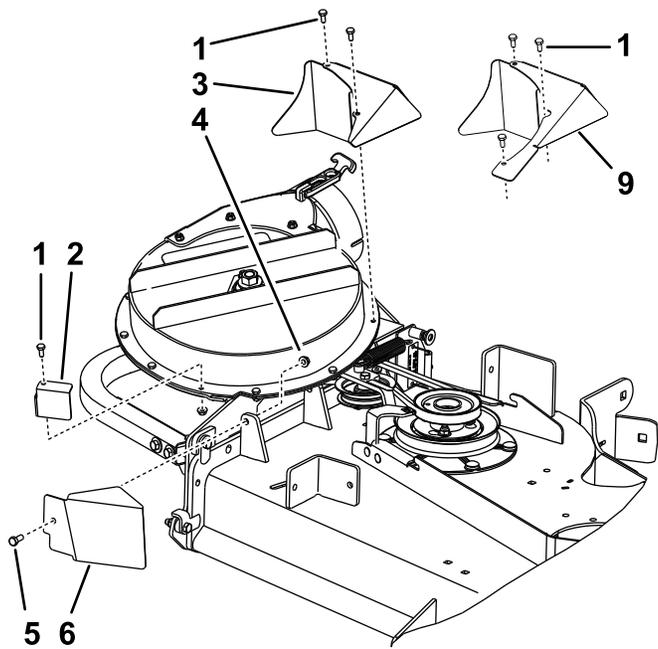


g016066

**Figure 5**

For model 78551, 78552, 78562, and 78566 (48-inch (122 cm) or 52-inch (132 cm))

- |                                |                                |
|--------------------------------|--------------------------------|
| 1. Existing hardware           | 6. Front guard                 |
| 2. Left guard                  | 7. Lower guard                 |
| 3. Back guard, 52 inch (132cm) | 8. Existing nuts               |
| 4. Flange nut (5/16 inch)      | 9. Back guard, 48 inch (122cm) |
| 5. Bolt (5/16 x 3/4 inch)      |                                |

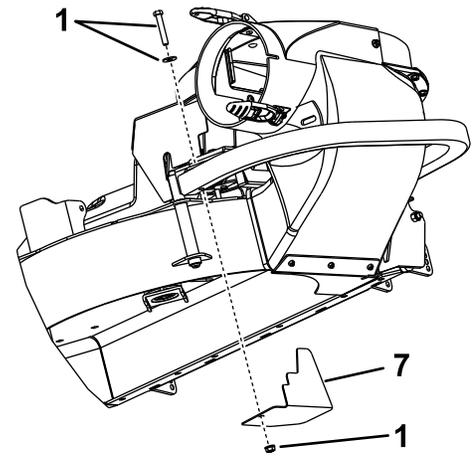

G011760

**Figure 6**

For model 78553, 78563, and 78567 (60 inch (152 cm))

- |                           |                           |
|---------------------------|---------------------------|
| 1. Existing hardware      | 5. Bolt (5/16 x 3/4 inch) |
| 2. Left guard             | 6. Front guard            |
| 3. Back guard             | 7. Lower guard            |
| 4. Flange nut (5/16 inch) |                           |

# 5

## Installing the Support Rod

### Parts needed for this procedure:

1	Support rod
---	-------------

### Procedure

1. Slide the existing support rod out of the mower-deck curtain (Figure 7); retain the rod for future use of the machine without the bagger.

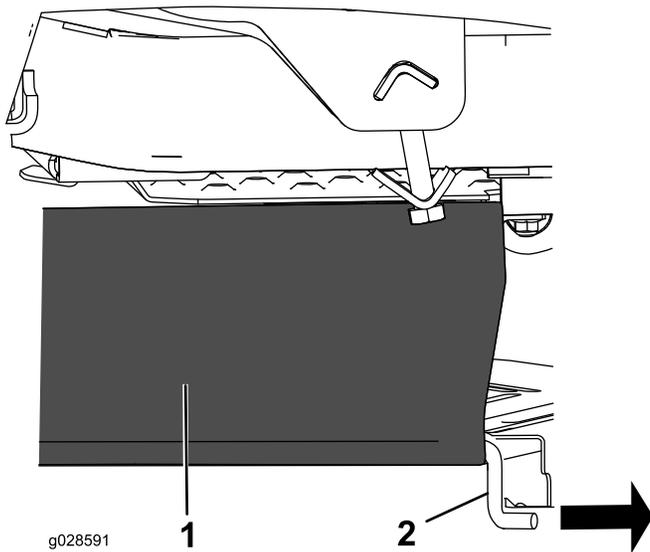


Figure 7

1. Curtain
2. Support rod

2. Insert the new support rod into the curtain (Figure 8).

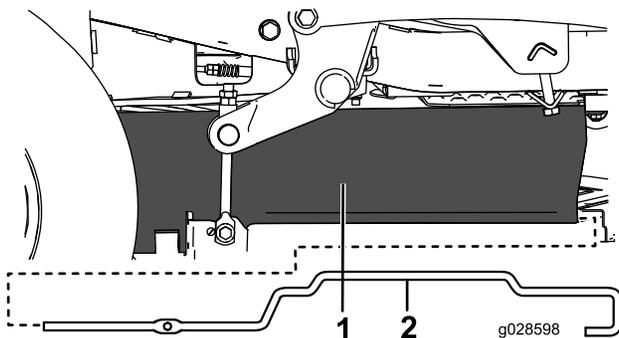


Figure 8

1. Curtain
2. Support rod

3. Secure the support rod and mower-deck curtain with the bolt you removed in 3 Installing the Covers (page 2)(Figure 2).

# 6

## Installing the Muffler Guard

### Parts needed for this procedure:

1	Muffler guard
---	---------------

### Procedure

1. Remove the existing muffler guard and save the hardware. Save the existing muffler guard for use when the bagger is removed.
2. Install the new muffler guard with the previously removed hardware (Figure 9).

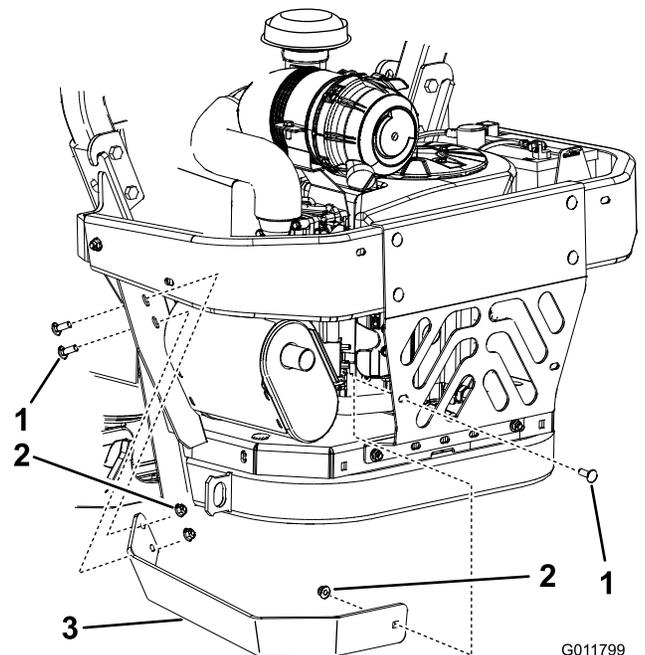


Figure 9

1. Carriage bolt
2. Flange nut
3. New muffler guard

**Notes:**

**Notes:**



**Count on it.**