



## Customer Service Bulletin Commercial Business Group

---


### Groundsmaster<sup>®</sup> 200 and 300 Series 4WD

<u>Model/Serial Range:</u>	<u>Model Number:</u>	<u>Serial Numbers:</u>
	30243	00000-49999
	30741	00000-49999
	30795	00000-49999

#### **Subject: Skid Plate protection for Rear Steering Knuckle.**

When climbing curbs or other obstacles, the bottom surface of the Steering Knuckle may contact concrete or asphalt. Repeat contact may wear the fasteners and drain plug, making them difficult to remove, and could damage the Steering Knuckle. Skid Plate (93-1395) is available through your local Toro distributor to protect the Steering Knuckle. This Plate is attached to the bottom surface of each Steering Knuckle. See the illustration below for correct Skid Plate orientation.

Steering Knuckle

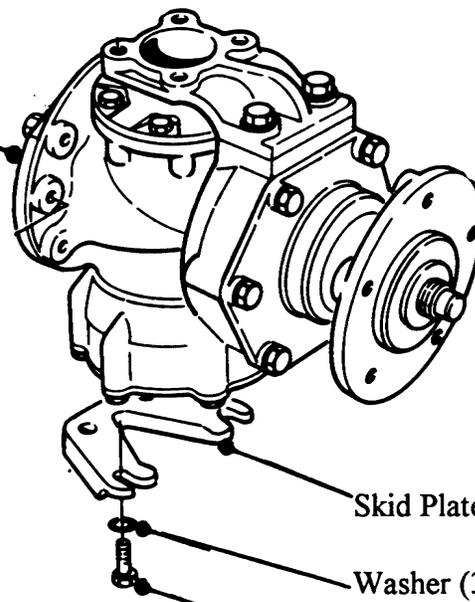

Skid Plate (93-1395)

Washer (3256-23)

Cap Screw (48-7730)

1. Remove the two Cap Screws that align with the slotted holes of Skid Plate (93-1395).
2. Install Skid Plates as illustrated using Cap Screw (48-7730) and Washer (3256-23).

**NOTE:** The two round holes in the Skid Plate are large enough to allow the Skid Plate to fit against the Steering Knuckle without removing additional fasteners.

3. Tighten Cap Screws to 18 ft-lbs (2.5 Kgm).