Installation Instructions

Safety


Safety and Instructional Decals



Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or missing.



- Park the machine on a level surface, engage the parking brake, lower the hopper, shut off the engine, and remove the key.
- 2. Remove the existing tub; retain the hardware.
- Secure the new tub to the frame using the previously removed 4 bolts, 4 washers, and 4 nuts.

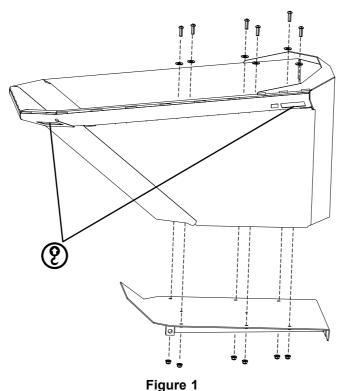

g347428



A WARNING

Using a drill without proper eye protection may allow debris to enter the eye, causing injury.

When drilling, always wear eye protection.

4. Using the new tub as a template, mark and drill 2 holes (9/16 inch).

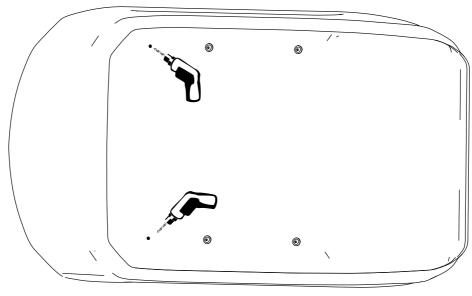


Figure 2

g322994

g322996

5. Install the remaining hardware to secure the tub to the frame.

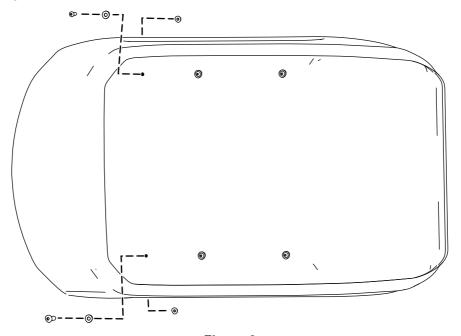


Figure 3

6. Torque the bolt to 37 to 45 N·m (27 to 33 ft-lb).