

**TORO**<sup>®</sup>MODEL NO: 30795 - 90001 thru  
00001 & UP**OPERATOR'S  
MANUAL****GROUNDMASTER<sup>®</sup> 322-D 4 WHEEL DRIVE**  
WITH POWER STEERING

To assure maximum safety, optimum performance, and to gain knowledge of the machine, it is essential that you or any other operator of the machine read and understand the contents of this manual before the engine is started. Pay particular attention to SAFETY INSTRUCTIONS highlighted by this safety alert symbol.

The GROUNDMASTER 322-D 4 WHEEL DRIVE conforms to the American National Standards Institute's safety standards for riding mowers; thus, Toro proudly displays the ANSI safety seal.



It means CAUTION, WARNING or DANGER - "personal safety instruction". Failure to comply with the instruction may result in personal injury.

**TORO**<sup>®</sup>THIS UNIT CONFORMS  
TO ANSI B71.4 - 1984

**ONLY COPY  
DO NOT REMOVE**

Tech. Publications



# FOREWORD

The GROUNDSMASTER 322-D 4 WHEEL DRIVE was developed to satisfy the demand for a maneuverable, intermediate size, turf maintenance rotary mower. The machine has advanced concepts in engineering and design, and if maintained properly, it will give excellent service.

Since the GROUNDSMASTER 322-D 4 WHEEL DRIVE is a high-quality product, Toro is concerned about the future use of the machine and safety of the user. Therefore, read this manual to familiarize yourself with proper set-up operation and maintenance instructions. The major sections of the manual are:

1. Safety Instructions
2. Set-Up Instructions
3. Before Operating
4. Operating Instructions
5. Maintenance

Certain information in this manual is emphasized. DANGER, WARNING, and CAUTION identify personal safety-related information. IMPORTANT identifies mechanical information demanding special attention. Be sure to read the directive because it deals with the possibility of damaging a part or parts of the machine. NOTE identifies general information worthy of special attention.

## SPARK ARRESTOR

Because in some areas there are local, state, or federal regulations requiring that a spark arrestor be used on the engine of this mower, a spark arrestor is incorporated with the muffler assembly.

These parts are approved by the United States Department of Agriculture Forestry Service.

**When mower is used or operated on any California forest, brush, or grass covered land, a working order spark arrestor muffler must be attached. If not, the operator is violating state law, Section 4442 Public Resources Code.**

If help concerning set-up, operation, maintenance, or safety is ever needed, contact the local Authorized TORO Distributor. In addition to genuine TORO replacement parts, the distributor also has optional equipment for the complete line of TORO turf care equipment. Keep your Toro all TORO. Buy genuine TORO replacement parts and accessories.

A service and overhaul manual, form no. 83-400-ST is available from your Authorized TORO Distributor.

# TABLE OF CONTENTS

SAFETY INSTRUCTIONS .....	4-6	Cleaning Radiator and Screen .....	28
SAFETY AND INSTRUCTION DECALS .....	6-8	Changing Crankcase Oil and Filter .....	29
SPECIFICATIONS .....	8-9	Servicing Fuel System .....	29-30
LOOSE PARTS .....	10	Bleeding Air From Injectors .....	30
SET-UP INSTRUCTIONS .....	11-16	Servicing Engine Belts .....	30-31
BEFORE OPERATING .....	17-19	Changing Coolant in Cooling System .....	31
Check Crankcase Oil .....	17	Servicing Spark Arrestor Muffler .....	31-32
Fill Fuel Tank with Diesel Fuel .....	17-18	TRACTION DRIVE MAINTENANCE .....	32-33
Check Cooling System .....	18	Adjusting Traction Control Rod .....	32
Check Hydraulic System Oil .....	18-19	Adjusting Traction Pedal Friction Wheel ....	32
Check Rear Axle .....	19	Adjusting Traction Drive for Neutral ....	32-33
CONTROLS .....	19-22	Adjusting Traction Interlock Switch .....	33
OPERATING INSTRUCTIONS .....	22-25	PTO DRIVE MAINTENANCE .....	33
Starting/Stopping Engine .....	22-23	Correcting PTO Drive Belt Slippage .....	33
Bleeding Fuel System .....	23	STEERING MAINTENANCE .....	34
Checking Interlock Switches .....	23-24	Adjusting Rear Wheel Toe-In .....	34
Pushing or Towing Traction Unit .....	24	Adjusting Steering Stops .....	34
Operating Characteristics .....	24-25	BRAKE MAINTENANCE .....	34-35
LUBRICATION MAINTENANCE .....	25-26	Adjusting Brakes .....	34-35
ELECTRICAL MAINTENANCE .....	26-27	HYDRAULIC SYSTEM MAINTENANCE .....	35-37
Replacing Seat Switch .....	26	Adjusting Lift Lever Latch .....	35-36
Replacing PTO Switch .....	26-27	Replacing Hydraulic Oil Filter .....	36
Servicing Battery .....	27	Changing Hydraulic System Oil .....	36-37
AIR CLEANER MAINTENANCE .....	27-28	REAR AXLE MAINTENANCE .....	37
General Maintenance Practices .....	27	Changing Rear Axle Lubricant .....	37
Servicing Dust Cup and Baffle .....	27	IDENTIFICATION AND ORDERING .....	38
Servicing Air Cleaner Filter .....	27-28	PREPARATION FOR SEASONAL STORAGE .....	38
Inspecting Filter Element .....	28	SERVICE INTERVAL CHART .....	39
ENGINE MAINTENANCE .....	28-32	THE TORO PROMISE .....	40



## SAFETY INSTRUCTIONS

The GROUNDMASTER 322-D 4 WHEEL DRIVE was tested and certified by TORO for compliance with the B71.4—1984 specifications of the American National Standards Institute. Although hazard control and accident prevention partially are dependent upon the design and configuration of the machine, these factors are also dependent upon the awareness, concern, and proper training of the personnel involved in the operation, transport, maintenance, and storage of the machine. Improper use or maintenance of the machine can result in injury or death. To reduce the potential for injury or death, comply with the following safety instructions.

### BEFORE OPERATING

1. Read and understand the contents of this manual before starting and operating the machine. Become familiar with all controls and know how to stop quickly. A free replacement manual is available by sending complete Model and Serial Numbers to:

The Toro Company  
8111 Lyndale Avenue South  
Minneapolis, Minnesota 55420

2. Never allow children to operate the machine. Do not allow adults to operate the machine without proper instruction. Only trained operators, skilled in slope operation and who have read this manual should operate this machine.
3. Never operate machine when under the influence of drugs or alcohol.
4. Remove all debris or other objects that might be picked up and thrown by cutter blades or fast moving components from other attached implements. Keep all bystanders away from the operating area.
5. Keep all shields and safety devices in place. If a shield, safety device, or decal is defective or damaged, repair or replace it before operation is commenced. Also, tighten any loose nuts, bolts, and screws to insure machine is in safe operating condition.
6. Do not wear loose-fitting clothing because it could get caught in moving parts. Always wear long pants and substantial shoes. Wearing safety glasses, safety shoes, and a helmet is advisable and required by some local ordinances and insurance regulations.

7. Be sure interlock switches are adjusted correctly so engine cannot be started unless traction pedal is released—neutral position—and PTO lever is in OFF position.

8. Grass deflectors must be installed in lowest position on side discharge units and properly attached to Triflex cutting unit wings.

9. Fill fuel tank with diesel fuel before starting the engine. Avoid spilling any fuel. Since diesel fuel is flammable, handle it carefully.

- A. Use an approved fuel container.
- B. Do not fill fuel tank when engine is hot or running.
- C. Do not smoke while handling fuel.
- D. Fill fuel tank outdoors and up to about one inch (25 mm) from the top of the tank, not the filler neck.
- E. Wipe up any spilled fuel.

### WHILE OPERATING

10. Sit on the seat when starting the engine and operating the machine.

11. Always use seat belt and ROPS together. Make sure seat pivot retaining pin is installed.

12. Before starting the engine:

- A. Engage parking brake.
- B. Make sure traction pedal is in neutral and PTO is in OFF (disengage) position.
- C. After engine is started, release parking brake and keep foot off traction pedal. Machine must not move. If movement is evident, the neutral return mechanism is adjusted incorrectly. Shut engine off and adjust until machine does not move when traction pedal is released.

13. Do not run the engine in a confined area without adequate ventilation. Exhaust fumes are hazardous and could possibly be deadly.

14. Maximum seating capacity is one person. Therefore, never carry passengers.

15. Check carefully for overhead clearances before driving under any objects.

16. Using the machine demands the operator's complete attention. To prevent loss of control:

- A. Operate only in daylight or when there is good artificial light.
- B. Drive slowly.
- C. Avoid sudden stops and starts.



## SAFETY INSTRUCTIONS

- D. Look behind machine before backing up.
- E. Watch for holes or other hidden hazards.
- F. Do not drive close to a sand trap, ditch, creek, or hazard.
- G. Reduce speed when making sharp turns and when turning on a hillside.
- H. The cutting deck must be lowered when going down slopes for steering control.

17. To maintain machine control, 35 lb. of weight must be mounted on rear of traction unit before using the TRIFLEX 88" cutting unit. More weight may be required in some steeper slope conditions.

18. Operator must be skilled and trained in how to drive on hillsides. Failure to use caution on slopes or hills may cause loss of control and vehicle to tip or roll possibly resulting in personal injury or death.

19. Traverse slopes carefully. Do not start or stop suddenly when traversing slopes or when traveling uphill or downhill.

20. If engine stalls or machine loses headway and cannot make it to the top of a slope, do not turn machine around. Always back slowly straight down the slope.

21. The grass deflector(s) must always be installed and in lowest position on the cutting unit. This product is designed to drive objects into the ground where they lose energy quickly in grassy areas. However, don't take an injury risk!! When a person or pet appears unexpectedly in or near the mowing area, STOP MOWING. Careless operation, combined with terrain angles, ricochets, or improperly positioned guards, can lead to thrown object injuries. Do not resume mowing until area is cleared.

22. Never raise the cutting unit or other attached implement while the blades or other parts are rotating.

23. If cutting blades or other implement components strike a solid object or the machine vibrates abnormally, disengage PTO, move throttle to SLOW, set parking brake, and shut engine off. Remove key from switch to prevent possibility of accidental starting. Check cutting unit or other implement and traction unit for damage and defective parts. Repair any damage before restarting the engine and operating the implement or cutting unit. Assure cutting unit blades are in good condition and blade bolts are torqued to proper specifications (See Cutting Deck Operator's Manual).

24. To stop machine, remove foot from traction pedal and use brakes. Gradually reversing the traction pedal can provide additional braking.

25. Do not touch engine, muffler, or radiator while engine is running or soon after it has stopped. These areas could be hot enough to cause a burn.

26. Lower the cutting unit or other attached implement to the ground and remove key from switch whenever machine is left unattended.

27. Before getting off the seat:

- A. Move traction pedal to neutral position and remove foot from pedal.
- B. Set the parking brake and disengage the PTO.
- C. Shut the engine off and remove key from ignition switch. Wait for all movement to stop before getting off the seat.

### MAINTENANCE

28. Remove key from ignition switch to prevent accidental starting of the engine when servicing, adjusting, or storing the machine.

29. If major repairs are ever needed or assistance is desired, contact an Authorized TORO Distributor.

30. To reduce potential fire hazard, keep the engine free of excessive grease, grass, leaves, and accumulations of dirt.

31. THE ASBESTOS BRAKE LININGS CONTAIN ASBESTOS FIBERS. BREATHING ASBESTOS DUST MAY BE HAZARDOUS TO YOUR HEALTH AND MAY CAUSE SERIOUS RESPIRATORY OR OTHER BODILY HARM. For your protection:

- A. Avoid creating dust.
- B. Do not remove brake drum without proper equipment.
- C. Do not work on brake linings without proper protective equipment.
- D. Do not replace brake linings without proper protective equipment.
- E. Do not attempt to sand, grind, chisel, file, hammer, or alter brake linings in any manner without proper protective equipment.
- F. Follow O.S.H.A. standards for proper protective devices to be used when working with asbestos materials.

32. If the cutting unit discharge area ever plugs, disengage PTO and shut engine off before removing the obstruction.



# SAFETY INSTRUCTIONS

33. Make sure machine is in safe operating condition by keeping nuts, bolts, and screws tight. Check all cutting unit blade mounting bolts frequently to assure they are torqued to proper specifications (See Cutting Deck Operator's Manual).

34. Periodically inspect the roll bar and roll bar mounting. Repair, as necessary. Do not weld, cut, drill, or modify roll bar in any manner.

34. Make sure all hydraulic line connectors are tight, and all hydraulic hoses and lines are in good condition before applying pressure to the system.

35. Keep body and hands away from pin hole leaks or nozzles that eject hydraulic fluid under high pressure. Use paper or cardboard, not hands, to search for leaks. Hydraulic fluid escaping under pressure can have sufficient force to penetrate skin and do serious damage. If fluid is ejected into the skin, it must be surgically removed within a few hours by a doctor familiar with this form of injury or gangrene may result.

36. Before disconnecting or performing any work on the hydraulic system, all pressure in system must be relieved by stopping engine and lowering implement to the ground.

37. If the engine must be running to perform maintenance or an adjustment, keep clear of PTO shaft, cutting unit blades, and other moving parts.

38. Do not overspeed the engine by changing the governor settings. Maximum engine speed with no load is 3200 ± 50 rpm. To ensure safety and accuracy, have an Authorized TORO Distributor check maximum engine speed with a tachometer.

39. Engine must be shut off before checking oil or adding oil to the crankcase.

40. At the time of manufacture, the machine conformed to safety standards in effect for riding mowers. To ensure optimum performance and continued safety certification of the machine, use genuine TORO replacement parts and accessories. Replacement parts and accessories made by other manufacturers may result in non-conformance with the safety standards, and the warranty may be voided.

## SAFETY AND INSTRUCTION DECALS

The following safety and instruction decals are mounted on the traction unit. If any decal becomes damaged or illegible, install a new decal. Part numbers are listed below or in your parts catalog.

<p>STARTING INSTRUCTIONS (SEE OPERATOR'S MANUAL)</p> <ol style="list-style-type: none"> <li>1. Disengage power take-off.</li> <li>2. Place traction drive pedal in neutral position.</li> <li>3. Depress brake pedal.</li> <li>4. Set throttle control – full open.</li> <li>5. Push glow plug switch to on position and preheat until the glow plug indicator turns red hot and hold on while starting.</li> <li>6. Turn key to start position. To stop turn key to off position and remove key.</li> </ol>	<p>NOTE: ENGINE WILL SHUT OFF AUTOMATICALLY DUE TO HIGH ENGINE TEMPERATURE. WHEN THIS HAPPENS:</p> <ol style="list-style-type: none"> <li>1. Allow engine to cool.</li> <li>2. Clean debris from front of radiator.</li> <li>3. Check coolant level.</li> </ol> <p>CAUTION: Coolant under pressure. Use caution when removing radiator cap to prevent burns.</p> <ol style="list-style-type: none"> <li>4. Depress high temperature reset on dash.</li> <li>5. Restart according to starting instructions.</li> </ol>
--	---

READ AND UNDERSTAND OPERATOR'S MANUAL BEFORE OPERATING THIS MACHINE.  
REPLACEMENT MANUAL AVAILABLE BY SENDING COMPLETE MODEL NUMBER TO:  
THE TORO COMPANY, 8111 LYNDALE AVE., MINNEAPOLIS, MN. 55420

**ON BATTERY COVER**  
(Part No. 43-4290)


**CAUTION**  
MAINTAIN WHEEL FASTENER TORQUE AT 46-55 ft.-lb.  
SEE OPERATORS MANUAL FOR INSTRUCTIONS. 67-1720

**ON FRAME NEAR FRONT WHEELS**  
(Part No. 67-1720)

**TRACTION PEDAL**

**FORWARD OF TRACTION PEDAL**  
(Part No. 27-7320)

# SAFETY AND INSTRUCTION DECALS



**CAUTION**

- KEEP ALL SHIELDS IN PLACE.
- BEFORE LEAVING OPERATOR'S POSITION:
  - MOVE TRANSMISSION TO NEUTRAL.
  - DISENGAGE POWER TAKE-OFF.
  - SET PARKING BRAKE.
  - SHUT OFF ENGINE.
  - REMOVE IGNITION KEY.
- WAIT FOR ALL MOVEMENT TO STOP BEFORE SERVICING MACHINE.
- STOP ENGINE BEFORE ADDING FUEL OR LIFTING HOOD.
- KEEP PEOPLE AND PETS A SAFE DISTANCE AWAY FROM MACHINE.

27-7290

NEAR PTO LEVER  
(Part No. 27-7290)



**CAUTION**  
**ROTATING MEMBER**

ON RADIATOR FAN SHROUD  
(Part No. 54-0890)

**WARNING**



**THIS ARM CAN SPRING UPWARD!**  
SEE OPERATOR'S MANUAL FOR DISASSEMBLY PROCEDURE.

61-3610

ON LIFT ARM AND PUSH ARMS  
(Part No. 61-3610)




**CAUTION**

FILL FUEL TANK TO 1 INCH BELOW FILLER NECK.  
DO NOT OVERFILL

NEAR FUEL TANK CAP  
(Part No. 27-7310)

**TRACTION PEDAL INSTRUCTIONS**



VEHICLE SPEED INCREASES WITH MORE PEDAL PRESSURE.

**IMPORTANT**  
USE FLOAT POSITION WHEN TRAILERING THIS UNIT

**CAUTION**

TURN OFF PTO BEFORE RAISING IMPLEMENT TO TRANSPORT POSITION.  
DO NOT OPERATE IMPLEMENT IN TRANSPORT POSITION.


LIFT CONTROL

NEAR LIFT LEVER  
(Part No. 66-6390)



66-6390

- DEPRESS BRAKE PEDAL.
- PULL KNOB TO LOCK TO UNLOCK: DEPRESS BREAK PEDAL.



**PARKING BRAKE**

ON STEERING COLUMN SUPPORT  
(Part No. 66-6190)



**DIESEL ONLY**

ALONGSIDE FUEL CAP  
(Part No. 49-2280)

**CAUTION**

DO NOT USE STARTING FLUID.

ON AIR CLEANER TUBE  
(Part No. 43-6430)

**CAUTION**

CHECK PERFORMANCE OF ALL INTERLOCK SWITCHES DAILY. SEE OPERATOR'S MANUAL FOR INSTRUCTION. DO NOT DEFEAT INTERLOCK SYSTEM. IT IS FOR YOUR PROTECTION.

67-1710


NEAR TOOL BOX COVER  
(Part No. 67-1710)



**IMPORTANT**

FILL RADIATOR TO 1 INCH BELOW FILLER NECK.  
DO NOT OVERFILL.  
USE 50-50 SOLUTION OF WATER AND ETHYLENE GLYCOL TYPE ANTI-FREEZE.

UNDER HOOD ABOVE RADIATOR CAP  
(Part No. 26-7530)

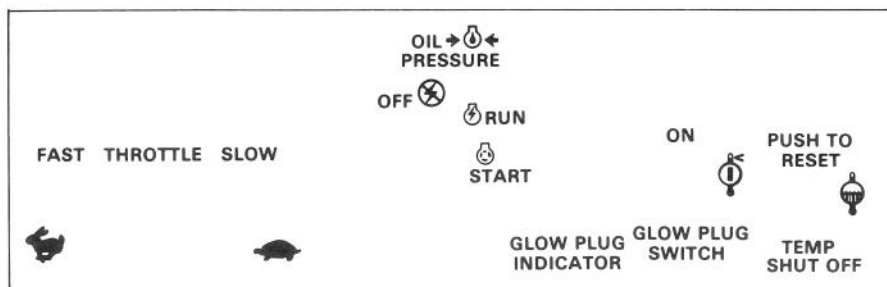

OIL PRESSURE

OFF RUN START


FAST THROTTLE SLOW

ON PUSH TO RESET

GLOW PLUG INDICATOR GLOW PLUG SWITCH TEMP SHUT OFF

ON CONTROL PANEL  
(Part No. 43-3980)

# SAFETY AND INSTRUCTION DECALS

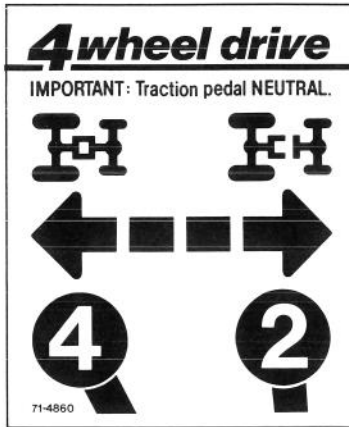

ON INSTRUMENT COVER  
(Part No. 71-4860)




ON TOOL BOX COVER  
(Part No. 72-3700)



ON REAR AXLE  
(Part No. 70-2560)

BEHIND FRONT TIRE  
(Part No. 75-0810)

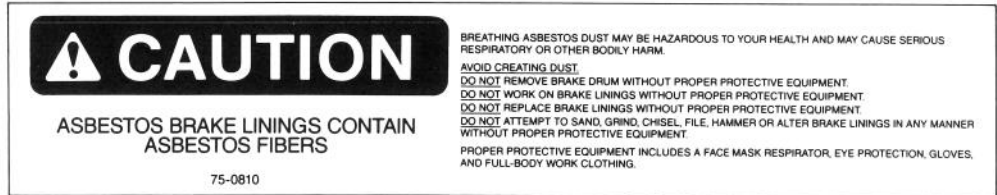

## SPECIFICATIONS

**Engine:** The 4-cycle, 3 cylinder, overhead valve Mitsubishi diesel engine, Model K3D, is water cooled and delivers 22 HP (16.4 kw) @ 3600 rpm. Cylinder bore is 2-7/8 in. (73 mm), stroke is 3-1/16 in. (78 mm) and displacement is 59.7 cu. in. (979 cc). Compression ratio is 23:1. Crank-case oil capacity w/filter is 3.7 qt. (3.5 L). Filter is full flow, replaceable, screw-on type. Mechanical centrifugal type governor limits maximum no-load engine speed to 3200 ± 50 rpm. Idle speed is 1500 ± 50 rpm. Glow plug is installed in each cylinder for starting assist.

**Air Cleaner:** Heavy duty, remote mounted.

**Muffler:** Volume equal to approximately six times engine displacement for excellent silencing. Spark arrestor incorporated with muffler.

**Cooling System:** Radiator has tube and fin construction with hydraulic oil cooler in lower tank. Capacity of cooling system is approximately 6 quarts (5.7 L) of a 50% mixture of permanent, ethylene glycol anti-freeze and water. Radiator is equipped with a 15 psi (103 kPa) pressure cap and engine has a 170° F (76.5°C) thermostat.

**Fuel System:** Fuel tank holds approximately 8-1/2 gal. (32 L) of No. 1 or 2 automotive type diesel fuel oil, per SAE J313c spec. 12 volt, electric (transistor type), fuel pump w/replaceable filter mounted on frame. Fuel filter/water separator with replaceable cartridge is mounted on frame.

**Front Axle:** The heavy Duty Dana GT 20 axle has reduction of 20.9:1. Axle has automotive type differential, bevel gear pinion and ring gear with spur gear reduction from transmission. All axle components are mounted in tapered roller bearings.

**Rear Axle:** The rear axle is mechanically driven from the front axle by a universal shaft. Axle has a mechanical clutch for engagement/disengagement of 4 wheel drive and an overrunning clutch in rear driveshaft. When lubricating, use SAE 80W-90 gear lube, API GL-5. Lubricant capacity is approximately 1.9 qt. (1.8 L).

**Transmission:** Sundstrand in-line hydrostatic transmission is mounted directly to the front axle and driven by flexible drive couplings. Operating pressure is 500 to 5200 psi (3400 to 36,000 kPa) and normal charge pressure is 70 to 150 psi (450 to 1000 kPa). Implement relief valve setting is 700 to 900 psi (4800 to 6200 kPa.). Relief valve in traction loop set at 5200 psi (36,000 kPa) (forward only). Displacement is 0.913 cubic inch (15 cm<sup>3</sup>) per revolution, and transmission is controlled by foot-actuated pedal. Front axle is the hydraulic fluid reservoir, and its capacity is 5 quarts (4.7 L) of engine oil (see viscosity chart on page 18). The 25 micron hydraulic oil filter is a screw on replaceable type. For replacement filters, order Toro part number 67-8110.

**Ground Clearance:** Clearance at rear axle is 4-1/2" (11 cm).



# SPECIFICATIONS

**Ground Speed:** Speed is infinitely variable from 0 to 9.5 mph (0 to 15 km/hr) forward or reverse. No 4 wheel drive in reverse with standard driveshaft.

**Tires:** Two rear tires are 18 x 6.50-8 extra traction tread, 4-ply rating rib, on demountable, drop center wheels. The two front tires are 23 x 8.50-12, extra traction tread, 4-ply rating, on demountable, drop center wheels. Recommended air pressure for both the front and rear tires is 12 psi (83 kPa).

**Brakes:** Brakes controlled by 3 pedals. Two are for steering assist. Are individually controlled by left foot. Third pedal operates both brakes; is controlled by either foot. Parking brake latch provided for third pedal. Pedals are connected to brakes by multi-stranded cable and conduit.

**Steering:** The 15 inch (38 cm) steering wheel is mounted on steering valve consisting of a control valve and metering section which regulates pressure and meters flow to the steering cylinder.

**Main Frame:** Frame is welded, formed steel, reinforced with square and rectangular tubing.

**Interlock Switches:** PTO Switch—Shuts engine off when PTO is engaged with no operator in seat. Traction Switch—Shuts engine off when traction pedal is engaged with no operator in seat. Seat Switch—Shuts engine off if operator leaves seat without disengaging PTO and/or traction pedal. Engine will not start if PTO or traction pedal is engaged.

**Instrument Panel and Control:** Ammeter, hour-meter, fuel gauge, ignition switch, coolant temperature switch gauge to prevent overheating, oil pressure warning light, glow plug switch and glow plug indicator and throttle control are on instrument panel. hand operated PTO lever is located to right of the seat. Foot pedal control for transmission operation at right of steering column.

**ROPS:** 2-Post ROPS is standard.

**PTO Drive:** Shaft is driven by a tight-slack double "A" section, torque team V-belt directly from output shaft of engine. Shaft is clutched by pivoting the shaft support with a spring loaded, over center, hand operated lever. PTO speed—1810 rpm @ 3200 rpm engine speed. Connection to implement is with high quality, needle bearing universal joint with slip joint.

**Implement Lift:** Cutting unit or implement is lifted by hydraulic cylinder that has 2-1/2 in. (64 mm) bore and 3-1/4 in. (82 mm) stroke.

**Steering Cylinder:** 1.50" bore x 7.15" stroke high quality cylinder.

**Tie Rods:** The tie rods are 1.0" o.d. x .18" wall steel tubing with greasable ball joint on both ends.

**Turning Radius:** A minimum of 25" from center of turn to closest side of drive wheel for right turn; 35" for left turn. However, zero turning radius results when individual wheel brakes are used.

## Dimensions and Weights (approx.)

<u>Traction Unit</u>	Length:	115 in.
with	Width:	85-1/2 in.
<u>Cutting Unit</u>	Height:	78.5 in. to top of ROPS; 50 in. to top of steering wheel
	Curb Weight:	2,065 lb (72" SDD)

## Optional Equipment:

Leaf Mulcher Kit, Model No. 30732 (for Model 30721 C.U.)

Standard Seat Kit, Model No. 30770

Deluxe Seat Kit Model No. 30772 w/Model No. 30791 Seat Adapter Kit

Cutting Unit, Model No. 30721 (L.H. Side Discharge)

Cutting Unit, Model No. 30710 (Rear Discharge)

Cutting Unit, Model No. 30715 (88" Triflex Deck)

Tire Chains, Part No. 11-0390

V-Plow—48 in. (1.219 m) for snow removal Model No. 30750

Drive Wheel Weights, Part No. 11-0440

Rear Weights (2 per kit), Part No. 24-5780

48 in. (1.219 m) Snowthrower Adapter Kit, Model 30571

48 in. (1.219 m) Snowthrower, Model 30570

23 x 10.5 x 12 Tire and Wheels, Part No. 62-7020

High Sail Blade, Part No. 23-2410 (72" decks only)

Rear Axle Direct Drive Shaft Kit, Part No. 72-3740

# LOOSE PARTS

**Note:** Use this chart as a checklist to ensure all parts necessary for assembly have been shipped. If any of these parts are missing, total set-up cannot be completed.

DESCRIPTION	QTY.	USE
Flat washer 3/8 I.D. x 7/8 O.D. Locknut 5/16-24 Cotter Pin 3/32 x 1/2 in. (13 mm) Flatwasher 9/32 I.D. x 5/8 in. (16 mm) O.D. Parking Brake Rod Compression Spring Steering Column Cover Self-Tapping Screw Knob	4 4 3 1 1 1 1 6 1	Install Steering Valve Assembly, page 11.
Wheel Bolt Wheel	10 2	Mount Rear Steering Wheels, page 11.
Wheel Nut 1/2-20 Wheel	10 2	Mount Front Wheels, page 11.
Steering Wheel Steering Wheel Cap Jam Nut (on steering column)	1 1 1	Install Steering Wheel, page 11.
Manual Tube Tube Cap R-Clamp	1 1 2	Install on right underside of seat, page 13.
Seat Belt Bolt 7/16 x 1" lg. Lockwasher 7/16"	1 2 2	Install Seat Belts to Seat, page 14.
Roll Bar Bolt 3/4 x 3-1/2" lg. Lockwasher 3/4" Nut 3/4"	1 4 4 4	Install Roll Bar, page 14.
Ball Joint R.H. (Shipped in tool box)	1	Install Ball Joint (implement installation) and Connect Lift Cylinder, page 16.
Roll Pin 3/16 x 1-1/2 in. (38 mm) Lift Chain Shackle Shackle Pin 3/8 x 1-1/2 in. (38 mm) Cotter Pin 1/8 x 3/4 in. (19 mm) Tension Spring	1 3 6 6 6 1	Use with implements; refer to implement operator's manual for installation instructions.
Operator's Manual (Traction Unit) Parts Catalog	2 1	
Registration Card	1	Affixed to machine.
Commercial Products Set-up Card	1	Fill out and return to Toro
Hydraulic Oil Filter	1	Change after 10 hours

# SET-UP INSTRUCTIONS

## INSTALL STEERING GEAR ASSEMBLY

1. Loosen clamp half mounting screws securing steering post to tower.

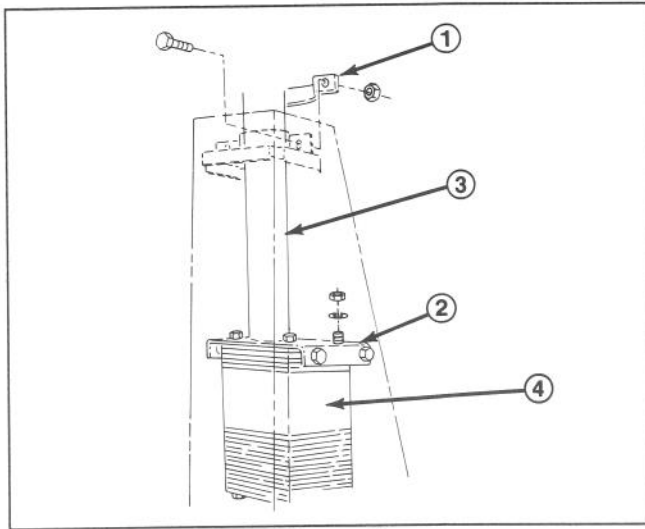


Figure 1

- |                     |                  |
|---------------------|------------------|
| 1. Clamp half       | 3. Steering post |
| 2. Mounting bracket | 4. Valve         |

2. Slide steering post upward until valve mounting studs are positioned into mounting bracket (Fig. 1).

3. Secure valve to bracket with (4) locknuts 5/16-18) and (4) flat washers (3/8 I.D. x 7/8 O.D.).

4. Retighten half clamp mounting screws to secure steering post to tower.

5. Install cotter pin (3/32 x 1/2 in.—2.4 x 13 mm) through hole at top of parking brake rod. Install another cotter pin (3/32 x 1/2 in.—2.4 x 13 mm) through inside hole at L-shaped end of brake rod (Fig. 2).

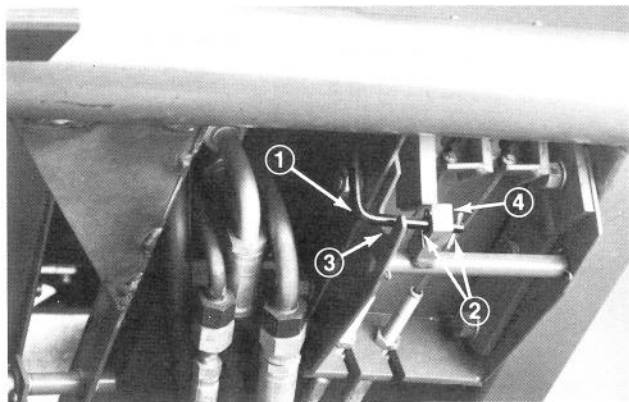


Figure 2

- |                      |           |
|----------------------|-----------|
| 1. Parking brake rod | 3. Cutout |
| 2. Cotter pins       | 4. Latch  |

6. Slide flat washer (9/32 x 5/8 in. O.D.—7.1 x 16 mm) and compression spring onto rod. Assure parts stay on the rod.

7. Slide top or rod up the steering tower and bottom of rod between cutout in brake mount and through hole in parking brake latch (Fig. 2).

8. Slide steering column cover onto steering post and parking brake rod (Fig. 3). Mount the cover to inside of steering tower with six self tapping screws (1/4-20 x 5/8 in.) (Fig. 3). Install the knob on parking brake rod.

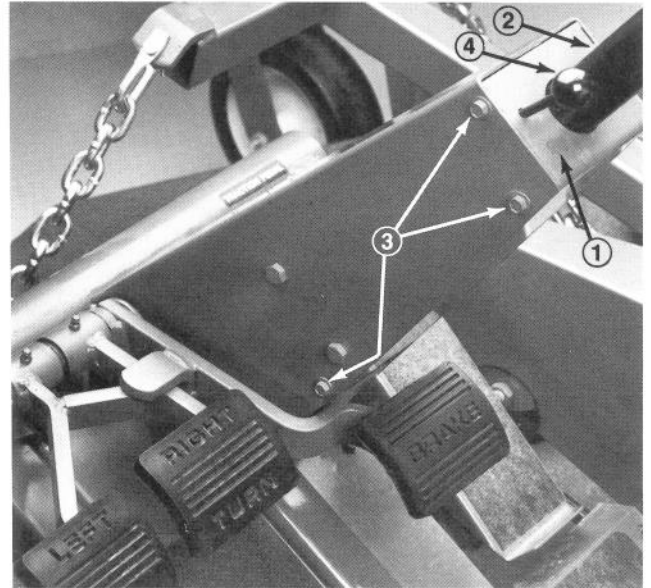


Figure 3

- |                          |                        |
|--------------------------|------------------------|
| 1. Steering column cover | 3. Self tapping screws |
| 2. Steering column       | 4. Knob                |

## INSTALL REAR WHEELS

1. Mount wheels and torque mounting screws to 45-55 ft-lbs (61-75 N·m).

## INSTALL FRONT WHEELS

1. Mount wheels and torque mounting nuts to 45-55 ft-lb (61-75 N·m).

## INSTALLING STEERING WHEEL

1. Move rear wheels so they point straight ahead.
2. Remove jam nut from steering shaft. Slide steering wheel onto steering shaft. (Fig. 4).
3. Secure steering wheel in place with jam nut (Fig. 4) and tighten it to 70 ft-lb (95 N·m).
4. Insert tab of steering cap into cutout in steering wheel hub (Fig. 4). Press cap into groove in hub.

# SET-UP INSTRUCTIONS

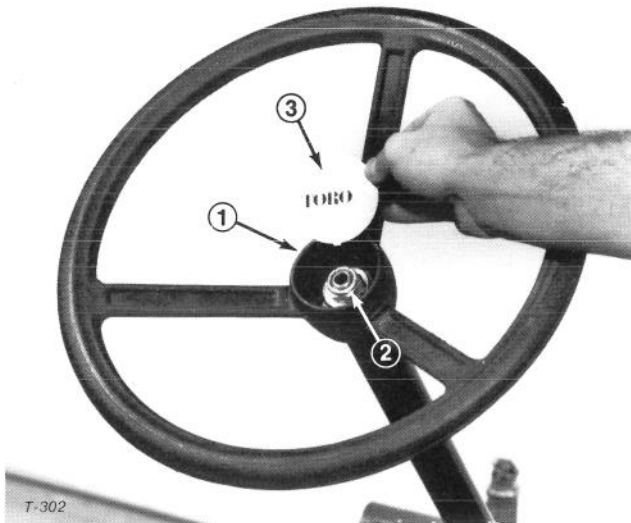


Figure 4

1. Cutout
2. Jam nut
3. Steering wheel cap

## INSTALL REAR TIE ROD

1. Remove cotter pins and nuts shipped on ball joints.
2. Position tires so ball joint ends align with holes in mounting brackets. Secure ball joints to brackets with nuts and cotter pins. Torque nuts to 55-80 ft-lb (75-110 N-m).
3. Check toe-in and adjust as necessary; refer to Adjusting Rear Wheel Toe-In, page 34.

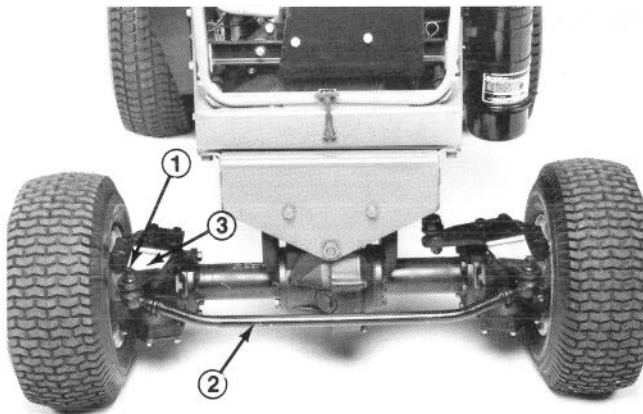


Figure 5

1. Cotter Pin & Nut
2. Tie Rod
3. Mounting Bracket

## REMOVE BATTERY FROM CHASSIS

1. Release the two latches holding instrument cover in place. Carefully remove instrument cover to expose the battery.
2. Remove two wing nuts and hold down strap that secures battery and seat switch in place (Fig. 6). Lift battery out of chassis. Keep wing

nuts and hold down strap in safe place for later use.

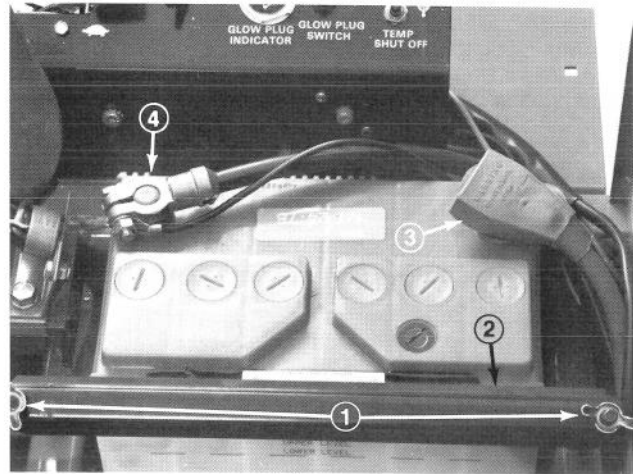


Figure 6

1. Wing nuts
2. Hold down strap
3. Positive terminal
4. Negative terminal
5. Seat switch and shipping bracket (not shown)

## INSTALLING SEAT

The Groundsmaster 322-D 4 wheel Drive is shipped without the seat assembly. Either optional Seat Kit, Model No. 30770 or 30772 must be installed.

### Seat Kit, Model No. 30770, Standard Seat

**CAUTION:** Spring under tension. Use caution when removing and installing spring and pin.

1. Remove roll pin securing spring and pin to seat support bracket shipped with seat kit. Remove spring and pin.
2. Insert pin part way into hole in top of seat support bracket on machine (Fig. 7).

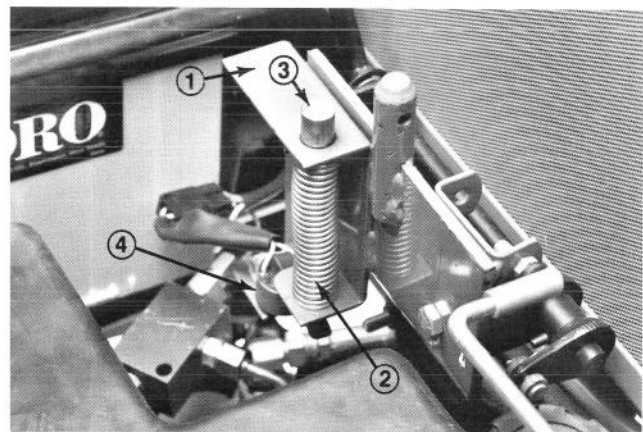


Figure 7

1. Seat Support Bracket
2. Spring
3. Pin
4. Seat Switch

3. Slide spring up onto pin while pushing down on pin.
4. Pry top of spring down and insert roll pin through pin.

# SET-UP INSTRUCTIONS

5. Check operation of pin.
6. Remove seat switch from shipping bracket and mount to seat support bracket using same fasteners (Fig. 7). Connect switch connector to main wire harness connector (Fig. 7).
7. Secure (2) R-clamps to right side of seat bottom with (2) capscrews supplied in kit (Fig. 8). Install manual tube into R-clamps, insert manual into tube and place cap over tube end (Fig. 8).

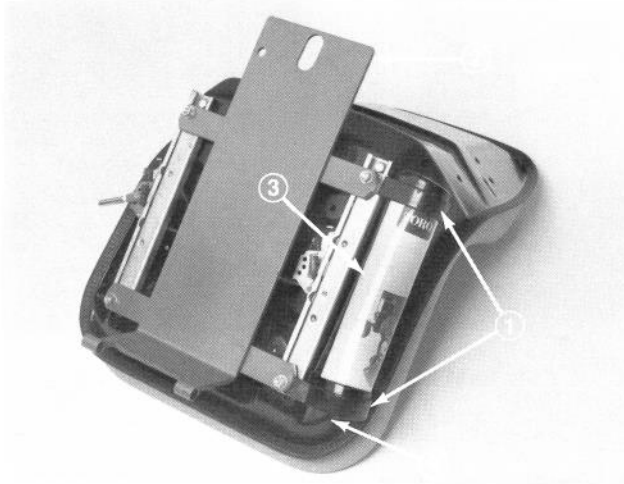


Figure 8

- |                 |                |
|-----------------|----------------|
| 1. R-clamps     | 3. Manual tube |
| 2. Seat support | 4. Cap         |

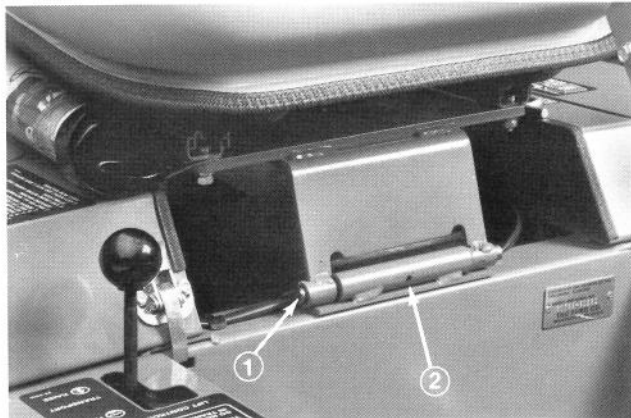


Figure 9

- |                |             |
|----------------|-------------|
| 1. Pivot shaft | 2. Roll pin |
|----------------|-------------|

8. Mount seat and seat support to unit with pivot shaft and roll pin (Fig. 9).
9. Install seat support rod to seat support bracket with jam nut (Fig. 10).
10. Hold seat up with seat support rod.

**Seat Kit, Model No. 30772, Deluxe Seat with Model 30791 Seat Adapter Kit:**

**CAUTION:** Spring under tension, use caution when removing and installing spring and pin.

1. Remove roll pin securing spring and pin to seat support bracket shipped with seat kit. Remove spring and pin. (Fig. 7)

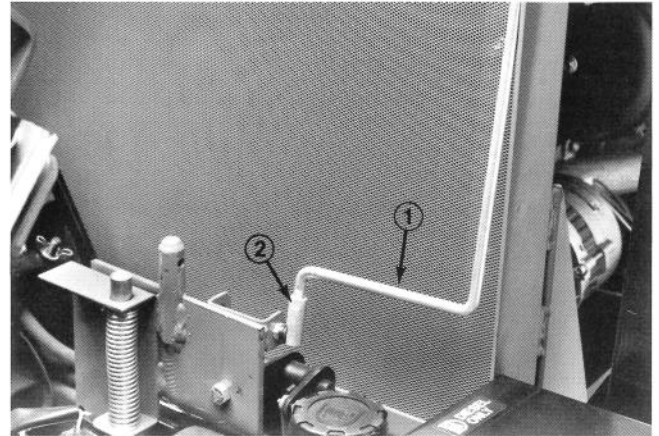


Figure 10

- |                     |            |
|---------------------|------------|
| 1. Seat support rod | 2. Jam nut |
|---------------------|------------|

2. Insert pin part way into hole in top of seat support bracket on machine.
3. Slide spring up onto pin while pushing down on pin.
4. Pry top of spring down and insert roll pin through pin.
5. Check operation of pin.
6. Remove seat switch from shipping bracket and mount to seat support bracket using same fasteners (Fig. 7). Connect switch connector to main wire harness connector (Fig. 7).
7. Install seat support rod to seat support bracket with jam nut (Fig. 10).
8. Assemble spacer to hex head capscrew, insert capscrew into hole in the seat support and secure capscrew and spacer with a locknut at the bottom of the seat support (Fig. 11).

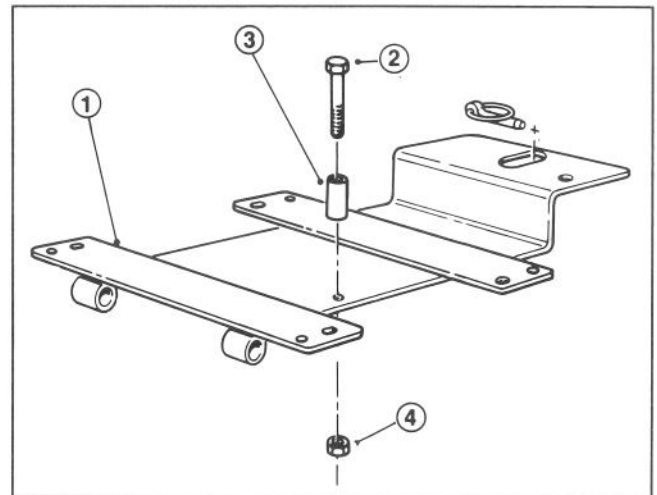


Figure 11

- |                 |            |
|-----------------|------------|
| 1. Seat support | 3. Spacer  |
| 2. Capscrew     | 4. Locknut |

# SET-UP INSTRUCTIONS

9. Assemble seat suspension assembly to four capscrews on seat bottom and install a lockwasher and flatwasher at all four locations. Install an R-clamp over right front and right rear capscrews of seat and install and tighten nuts to secure all four locations (Fig. 12). Install manual tube into R-clamps, insert manual into tube, and place cap over tube end (Fig. 12).

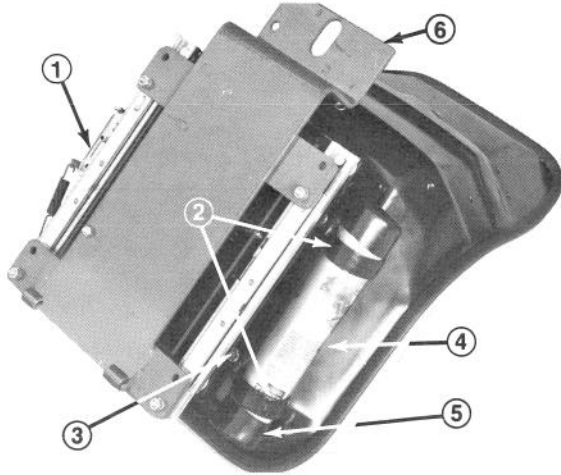


Figure 12

- |   |                 |
|---|-----------------|
| 1. Seat suspension assembly   | 4. Manual tube  |
| 2. R-clamps   | 5. Cap          |
| 3. Lockwasher, flatwasher, R-clamp, and nut (right front, right rear) | 6. Seat support |

10. Mount seat support over four threaded studs at the bottom of seat suspension assembly and secure in place with lockwashers and nuts (Fig. 12).

11. Mount seat and seat support to unit with pivot shaft and roll pin (Fig. 13).

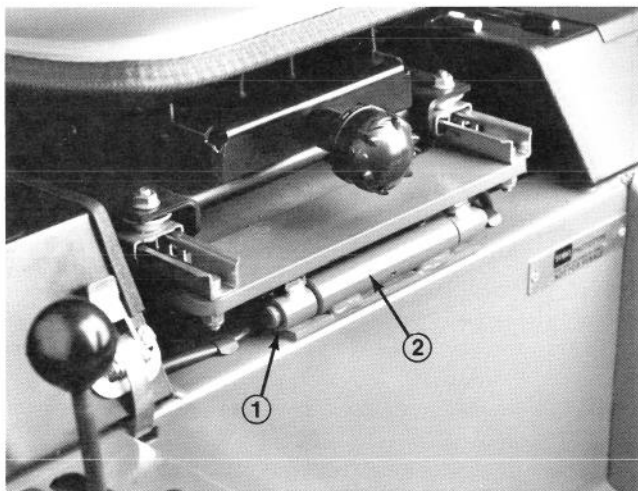


Figure 13

- |                |             |
|----------------|-------------|
| 1. Pivot shaft | 2. Roll pin |
|----------------|-------------|

12. Hold seat up with seat support rod.

## INSTALL SEAT BELTS

1. Install seat belt to holes in back of seat with (2) 7/16 x 1" lg. bolts and lockwashers (Fig.14). Tighten securely.

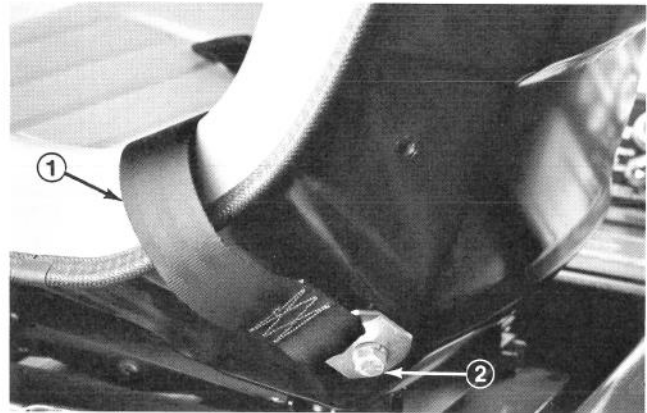


Figure 14

- |              |                      |
|--------------|----------------------|
| 1. Seat Belt | 2. Bolt & Lockwasher |
|--------------|----------------------|

## INSTALL ROLL BAR

1. Lower roll bar onto frame, aligning mounting holes as shown in Fig. 15.

2. Secure roll bar to frame with (4) 3/4 x 3-1/2" lg. bolts, lockwashers, and nuts (Fig. 15). Tighten securely.



Figure 15

- |             |
|-------------|
| 1. Roll Bar |
|-------------|

# SET-UP INSTRUCTIONS

## PUSH TRACTION UNIT OFF PALLET

1. Reach in and rotate by-pass valve on transmission (Fig. 16) counterclockwise 1/2 to 1 turn. Opening the valve opens an internal passage in the pump, thereby bypassing transmission oil. Because fluid is by-passed, the machine can be pushed without damaging the transmission.

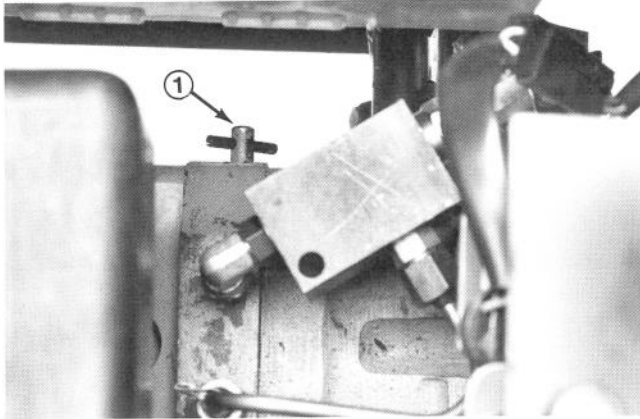


Figure 16

1. By-pass valve

2. Slowly push machine off pallet.
3. Close by-pass valve by rotating it clockwise until it is securely seated. Do not exceed 5 to 8 ft-lb (7 to 11 N·m). Do not start engine when valve is open.

## ACTIVATE AND CHARGE BATTERY

1. Since battery is not filled with electrolyte or charged, bulk electrolyte with 1.260 specific gravity must be purchased from a local battery supply outlet.



### CAUTION

Wear safety goggles and rubber gloves when working with electrolyte, and charge the battery in a well-ventilated place so gases produced while charging can dissipate. Since the gases are explosive, keep open flame and electrical sparks away from the battery. Do not smoke. Nausea may result if the gases are inhaled. Unplug charger from electrical outlet before connecting to or disconnecting charger leads from battery posts.

2. Remove filler caps from battery and slowly fill each cell until electrolyte is just above the plates. Install filler caps.
3. Connect a 3 to 4 amp battery charger to the battery posts. Charge the battery at a rate of 3 to 4 amperes for 4 to 8 hours.
4. When battery is fully charged, disconnect charger from electrical outlet and battery posts.
5. Remove filler caps and slowly add electrolyte to each cell until level is up to fill ring. Install fill caps.

## INSTALL BATTERY IN CHASSIS

1. Install battery and secure with hold down strap and wing nuts (Fig. 6). Remove tape over ends of each cable.
2. Slide the red, positive battery cable (Fig. 6) onto positive battery post and tighten nut securely.
3. Slide the black, negative battery cable (Fig. 6) onto negative battery post and tighten nut securely.
4. Coat both battery connections with either Grafo 112X (skin-over) grease, Toro Part No. 505-47, petroleum jelly or light grease to prevent corrosion and slide rubber boot over positive terminal (Fig. 5).
5. Install the instrument cover and lock the two latches.
6. Disengage seat support rod and slide it into retaining clips (Fig. 17). Pivot seat down and push lynch pin through seat latch stud. Flip wire end of pin over latch stud (Fig. 17).

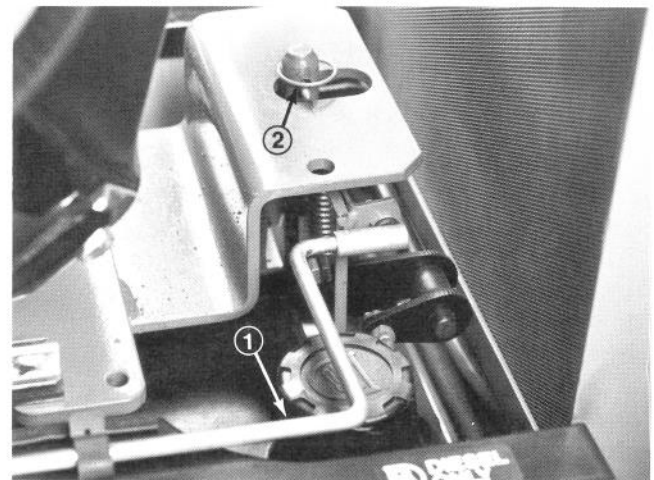


Figure 17


1. Seat support rod
2. Lynch pin

# SET-UP INSTRUCTIONS

## INSTALL BALL JOINT AND CONNECT LIFT CYLINDER

**Note:** Ball joints are not required for all implements; refer to implement operator's manual for requirements.

1. Thread jam nut fully onto right hand ball joint.
2. Screw ball joint into right hand push arm until center of ball joint is 2-3/8 inches (60 mm) away from front of push arm (Fig.18). Do not tighten jam nut.

 **WARNING**

Since push arms are spring-loaded, a helper is required to push the arms down during installation of the ball joints or other implements. Sudden release of the push arms could cause injury.

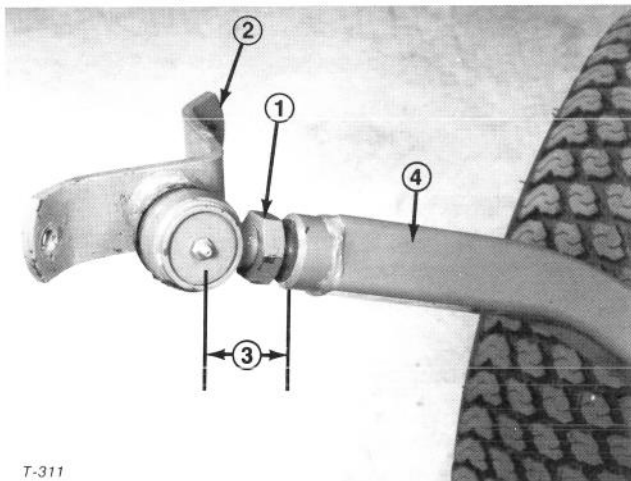


Figure 18

1. Jam nut
2. Ball joint mount
3. 2-3/8 in. (60 mm)
4. Right hand push arm

4. Have a helper push down on the left push arm. Then insert a 2 x 4 in. (51 x 102 mm) block of wood between the frame and top of the push arm (Fig. 19). Screw ball joint into left hand push arm until center of ball joint is 2-3/8 inches (60 mm) away from front of push arm (Fig.19). Do not tighten jam nut.

5. Carefully remove 2 x 4 in. (51 x 102 mm) block of wood from between frame and push arm.
6. Remove spring pin from cylinder pin and slide cylinder pin out of cylinder.

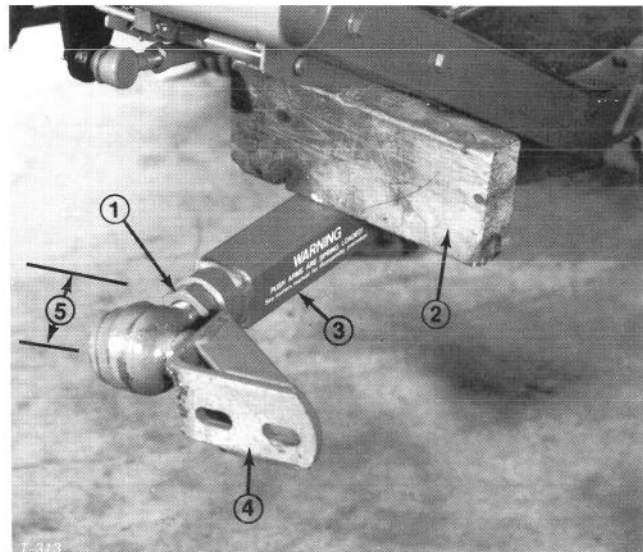


Figure 19

1. Jam nut
2. 2 x 4 in. (51 x 102 mm) block
3. Left hand push arm
4. Ball joint mount
5. 2-3/8 in. (60 mm)


7. Raise front of lift arm until hole in movable end of cylinder lines up with holes in lift arm brackets. Use caution as lift arm is spring-loaded. Hold parts together with cylinder pin, spring pin, and cotter pin. Cotter pin must be to the outside.

8. Install implement; refer to implement Operator's Manual for proper installation procedures.

## CHECK TIRE PRESSURE

The tires are over-inflated for shipping. Therefore, release some of the air to reduce the pressure. Correct air pressure in the front and rear tires is 12 psi (83 kPa).

## CHECK TORQUE OF FRONT WHEEL NUTS

 **WARNING**

Tighten front wheel nuts to 45-55 ft-lb (61-75 N·m) after 1-4 hours of operation and again after 10 hours of operation and every 250 hours thereafter. Failure to maintain proper torque could result in failure or loss of wheel and may result in personal injury.

## GREASE TRACTION UNIT

Before the machine is operated, it must be greased to assure proper operating characteristics; refer to Lubrication Maintenance, page 25. Failure to grease the machine will result in premature failure of critical parts.



# BEFORE OPERATING

## CHECK CRANKCASE OIL

The engine is shipped with 3.7 quarts (3.5 L) of oil in the crankcase. However, level of oil must be checked before and after the engine is first started.

1. Position the machine on a level surface.
2. Disengage hood latch and open the hood.
3. Remove dipstick and wipe it with a clean rag (Fig. 20). Push dipstick down into the tube and ensure it is fully seated. Pull dipstick out of the tube and check level of oil. If oil level is low, remove filler cap (Fig. 21) and add enough oil to raise level to top notch on dipstick (Fig. 20). DO NOT OVERFILL.

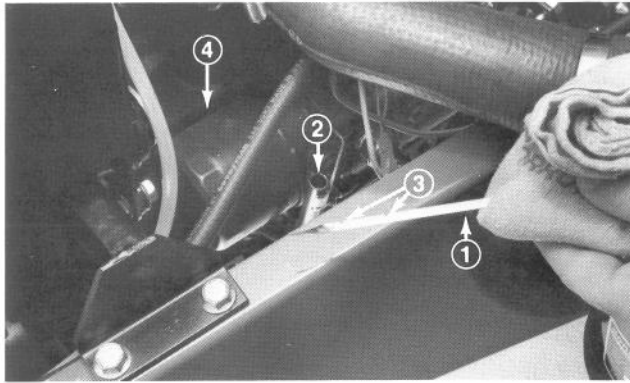


Figure 20

1. Dipstick
2. Dipstick tube
3. Keep oil level between notches
4. Engine oil filter

4. The engine uses any high-quality detergent oil having the American Petroleum Institute—API—“service classification” SF/CC or CD. Oil viscosity recommendations are: SAE 10W-30.

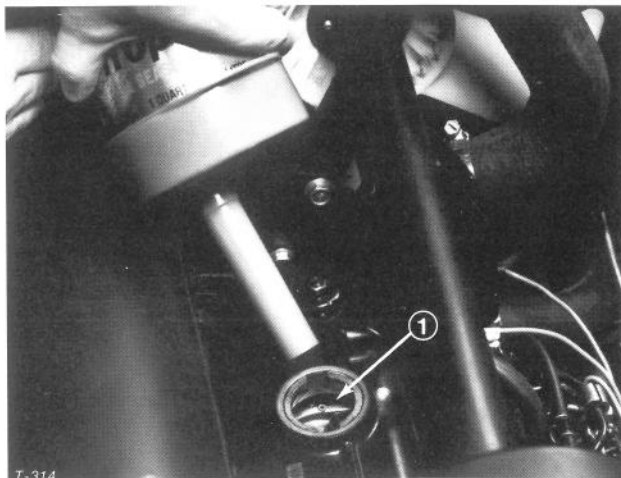


Figure 21

1. Oil fill hole

**IMPORTANT:** Check level of oil after every 5 hours of operation or daily. Change oil after every 50 hours and every 100 hours thereafter. Change oil and filter more frequently when engine is operated in extremely dusty or dirty conditions.

5. Install dipstick into tube.

## FILL FUEL TANK WITH DIESEL FUEL

The engine runs on No. 1-D or 2-D automotive type diesel fuel with a minimum cetane rating of 40.

**Note:** Higher cetane rated fuel may be required if machine is to be used at high altitudes and low atmospheric temperatures.

Use No. 2-D diesel fuel at temperatures above 20°F (-7°C) and No. 1-D diesel fuel below 20°F (-7°C). Use of No. 1-D diesel fuel at lower temperatures provides lower flash point and pour point characteristics, therefore, easing startability and lessening chances of chemical separation of the fuel due to low temperatures (wax appearance, which may plug filters).

Use of No. 2-D diesel fuel above 20°F (-7°C) contributes toward longer life of the pump components. Do not use furnace oil. Furnace oils usually contain heavy cracked distillates which are not suitable for diesel engines.

Store fuel outside of buildings in a convenient location. Tipping the front of the tank up slightly allows contaminants to collect at the lower end away from the outlet. Never empty the tank below 4 in. (10 cm) from the bottom of the tank to avoid picking up water and other contaminants that may have collected at the bottom. Either filter the remainder at the bottom through a chamois or dispose of it periodically to prevent excessive buildup of contaminants.

Keep all fuel containers free of dirt, water, scale, and other contaminants. Many engine difficulties can be traced to contaminants in the fuel.

Use only metal containers for fuel storage. DO NOT store the fuel in a galvanized metal container. A chemical reaction will result, which will plug the filters and cause possible fuel system damage.

If possible, fill the Groundsmaster 322-D 4 Wheel Drive fuel tank at the end of each day's operation. This will prevent possible buildup of condensation inside the fuel tank, which could cause possible engine damage. Allow the engine to thoroughly cool down before refueling.

1. Tip seat forward and prop it with the support rod so it cannot fall accidentally (Fig. 22). Using a clean rag, clean area around fuel tank cap.

# BEFORE OPERATING

2. Remove cap from the fuel tank (Fig. 22) and fill the 8-1/2 gallon (30 L) tank to within 1 inch (25 mm) from the top with diesel fuel. Install fuel tank cap tightly after filling tank.

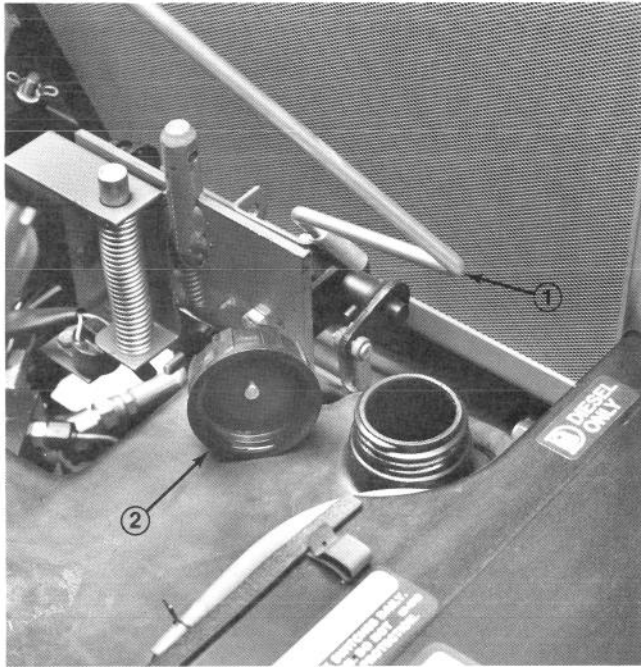


Figure 22

1. Support rod

2. Fuel tank cap



## DANGER

Because diesel fuel is flammable, caution must be used when storing or handling it. Do not fill fuel tank while engine is running, hot, or when machine is in an enclosed area. Vapors may build up and be ignited by a spark or flame source many feet away. **DO NOT SMOKE** while filling the fuel tank to prevent the possibility of an explosion. Always fill fuel tank outside and wipe up any spilled diesel fuel before starting engine. Use a funnel or spout to prevent spilling diesel fuel and fill tank to about 1 inch (25 mm) below the filler neck. Store diesel fuel in a clean, safety-approved container and keep the cap in place on the container. Keep diesel fuel in a cool, well-ventilated place, never in an enclosed area such as a hot storage shed. To assure volatility and to prevent contamination, do not buy more than a 6 month supply.

## CHECK COOLING SYSTEM

Clean debris off screen and front of radiator daily, hourly if conditions are extremely dusty and dirty; refer to Cleaning Radiator and Screen, page 28.

The cooling system is filled with a 50/50 solution of water and permanent ethylene glycol anti-freeze. Check level of coolant at beginning of each day before starting the engine. Capacity of cooling system is approximately 6 quarts (5.7 L).

1. Carefully remove radiator cap. Coolant is pressurized and may be hot if engine has been running.
2. Check level of coolant in radiator. Level of coolant must be above the core and about 1 inch (25 mm) below bottom of filler neck.
3. If coolant level is low, replenish the system. **DO NOT OVERFILL.**
4. Install radiator cap.

## CHECK HYDRAULIC SYSTEM OIL

The hydraulic system is designed to operate on any high-quality detergent oil having the American Petroleum Institute—API—“service classification” SF/CC or CD. Oil viscosity—weight—must be selected according to anticipated ambient temperature. Temperature/viscosity recommendations are:

Expected Ambient Temperature	Recommended Viscosity and Type
(Extreme) over 90°F	SAE 30, Type SF/CC or CD engine oil.
(Normal) 40–100°F	SAE 10W–30 or 10W–40, Type SF/CC or CD engine oil.
(Cool—Spring/Fall) 30–50°F	SAE 5W–30, Type SF/CC or CD engine oil.
(Winter) Below 30°F	Type “F” or “FA” ATF Automatic Transmission Fluid.

**Note:** Do not mix engine oil and automatic transmission fluid or hydraulic system component damage may result. When changing fluids, also change transmission filter. **DO NOT USE DEXRON II ATF.**

**Note:** Fluid to operate the power steering is supplied by the hydraulic system transmission charge pump. Cold weather start-up may result in “stiff” operation of the steering until the hydraulic system has warmed up. Using proper weight hydraulic oil in system minimizes this condition.


The front axle housing acts as the reservoir for the system. The transmission and axle housing are shipped from the factory with approximately 5 quarts (4.7 L) of SAE 10W–30 engine oil. However, check level of transmission oil before engine is first started and daily thereafter.

# BEFORE OPERATING

1. Position machine on a level surface, raise the implement, and stop the engine.
2. Unscrew dipstick cap (Fig. 20) from the filler neck and wipe it with a clean rag. Screw dipstick cap fingertight onto filler neck. Unscrew the dipstick and check level of oil. If level is not within 1/2 inch (13 mm) from the groove in the dipstick (Fig. 20), add enough oil to raise level to groove mark. DO NOT OVERFILL by more than 1/2 inch (13 mm) above groove.

**IMPORTANT:** When adding oil to the hydraulic system, use a funnel with a fine wire screen—200 mesh—and ensure funnel and oil are immaculately clean. This procedure prevents accidental contamination of the hydraulic system.

3. Screw dipstick filler cap finger-tight onto filler neck. It is not necessary to tighten cap with a wrench.
4. Lower the implement.

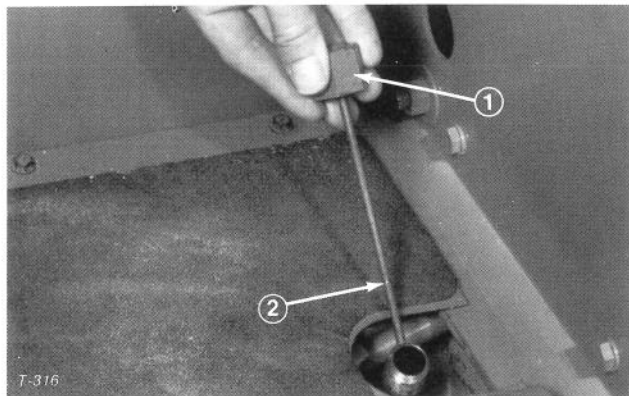


**Figure 23**  
1. Dipstick cap      2. Groove

## CHECK REAR AXLE

The rear axle has three separate reservoirs which use SAE 80W-90 wt. gear lube. Although the axle is shipped with lubricant from the factory, check the level before operating the machine.

1. Position the machine on a level surface.
2. Remove a check plug from each end of axle and make sure lubricant is up to bottom of hole. If level is low, remove one of the mounting bolts above each end plug and add enough lubricant to bring the level up to the bottom of the hole (Fig. 24).
3. Remove plug in center of axle and check level. If level is low, add enough lubricant to bring the level up to the bottom of the hole (Fig. 24).

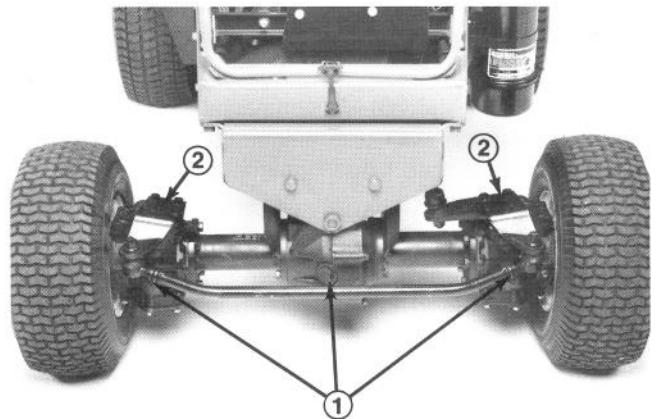


**Figure 24**

1. Check Plugs (3)
2. Mounting Bolts

4. To make sure that the cavities at each end of axle tube are filled, jack up each side of the axle approximately 6". Then with axle level, check level at center plug hole.

# CONTROLS

**Traction Pedal (Fig. 25)**—Traction pedal has two functions; one is to make the machine move forward, the other is to make it move backward. Using the heel and toe of the right foot, depress top of pedal to move forward and bottom of pedal to move backward. Ground speed is proportionate to how far pedal is depressed. For maximum ground speed with no load, traction pedal must be fully depressed while throttle is in FAST position. Maximum speed forward is approximately 9.5 mph (15 km/hr). To get maximum power under heavy load or when ascending a hill, have throttle in FAST position while depressing traction pedal slightly to keep engine rpm high. When engine rpm begins to decrease, release traction pedal slightly to allow engine rpm to increase.

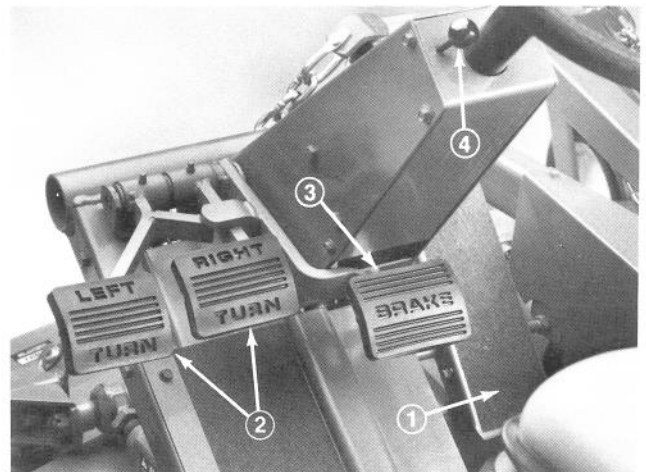

**Figure 25**

1. Traction pedal
2. Turn pedals
3. Brake pedal
4. Parking brake knob

# CONTROLS




## CAUTION

When foot is removed from the traction pedal, machine should stop; it must not creep in either direction. If machine does creep, do not operate until neutral assembly has been repaired and adjusted; refer to Adjusting Traction Drive for Neutral, page 32.

**Turn Pedals (Fig. 25)**—The left and right turn pedals are connected to the left and right front wheel brakes since both brakes work independently of each other. The brakes can be used to turn sharply or to increase traction if one wheel tends to slip while operating on a hillside. However, wet grass or soft turf could be damaged when brakes are used to turn.

**Brake Pedal (Fig. 25)**—Whenever the engine is shut off, the parking brake must be engaged to prevent accidental movement of the machine.

The hydrostatic transmission will not, at any time, act as a parking brake for the machine. To engage parking brake, push down fully on brake pedal and pull parking brake knob out; then release the pedal. To release parking brake, depress brake pedal until parking brake knob retracts. To stop quickly, remove right foot from traction pedal and depress the brake pedal. To permit straight stops, brake cables must be evenly adjusted.

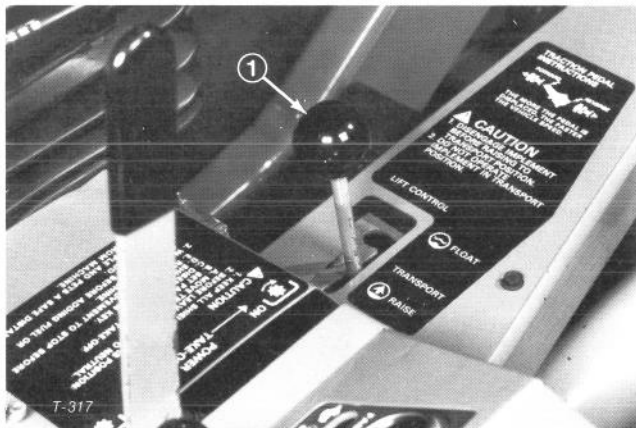

**Figure 26**  
1. Lift lever

**Lift Lever (Fig. 26)**—The hydraulic lift lever has three positions: FLOAT, TRANSPORT, and RAISE. To lower implement to the ground, move lift lever forward into notch, which is the FLOAT position. The FLOAT position is used for operation and also when machine is not in operation. To raise implement, pull lift lever backward to the RAISE position. After implement is raised, allow lift lever to move to the TRANSPORT position. Normally, imple-


ment should be raised when driving from one work area to another, except when descending steep slopes.



## CAUTION

Never raise implement or cutting unit while blades or other components are rotating. The exposed, rotating blades are hazardous.

**PTO Lever (Fig. 27)**—The PTO lever has two positions: ON (engage) and OFF (disengage). Slowly push PTO lever fully forward to ON position to start the implement or cutting unit blades. Slowly, pull lever backward to OFF position to stop implement operation. The only time PTO lever should be in the ON position is when implement or cutting unit is down in operating position.

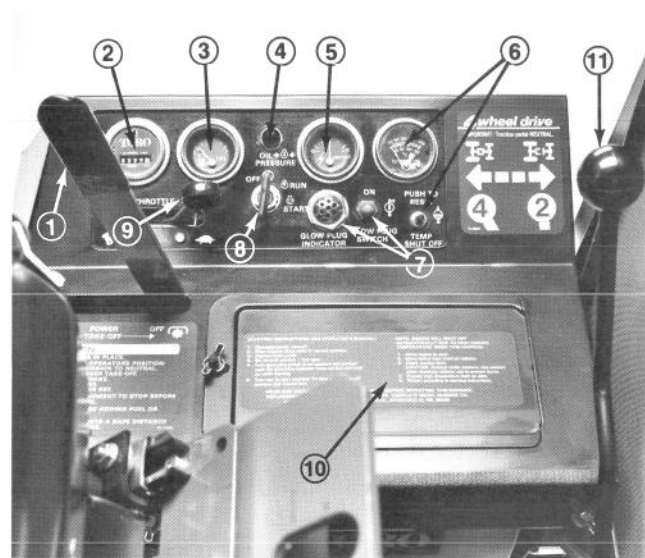

**Figure 27**

- |                           |                                   |
|---------------------------|-----------------------------------|
| 1. PTO lever              | 7. Glow plug switch and indicator |
| 2. Hour meter             | 8. Key switch                     |
| 3. Fuel gauge             | 9. Throttle control               |
| 4. Oil pressure indicator | 10. Battery cover                 |
| 5. Ammeter                | 11. 4 wheel drive control         |
| 6. Temp gauge and reset   |                                   |

**Hour Meter (Fig. 27)**—The hour meter registers accumulated hours of engine operation. Use the hour meter to determine intervals for service maintenance and lubrication.

**Fuel Gauge (Fig. 27)**—Indicates quantity of fuel remaining in fuel tank.

**Oil Pressure Warning Light (Fig. 27)**—The oil pressure warning light glows and a buzzer sounds when oil pressure in engine drops below a safe level. If low oil pressure ever occurs, stop engine and determine the cause. Repair the damage before starting the engine again.

# CONTROLS

**Ammeter** (Fig. 27)—Ammeter shows charge rate of the battery by the alternator. When engine is running, there usually is a slight charge, unless engine is idling slowly. Needle points to 0 when battery is fully charged. By contrast, alternator is not charging the battery when needle points to (-) negative side of ammeter. If this happens, repair the charging system to prevent discharge of the battery.

**Temperature Switch/Gauge and Reset Button** (Fig. 27)—The temperature switch/gauge registers the temperature of the coolant in the cooling system. If temperature of coolant gets too high the engine will shut off automatically. When this happens, rotate ignition key to OFF. Automatic shut-off of the engine usually results from debris on front of screen or radiator, which reduces air flow. After cleaning outside of screen and radiator or repairing some other damage, press the reset button and start the engine.

**IMPORTANT:** If the switch must be overridden because of an emergency, the engine can be started and will continue to run while reset button is held in.

**Glow Plug Switch and Indicator** (Fig. 27)—Use to preheat engine cylinders before and during starting procedures. Push switch lever upward and hold while watching indicator. Indicator glows red when sufficiently heated. Length of time necessary to preheat cylinders should be determined by atmospheric temperature; refer to Starting/Stopping Engine, page 22.

**Key Switch** (Fig. 27)—The key switch, which is used to start and stop the engine, has three position: OFF, RUN, and START. Rotate key clockwise to the START position to engage starter motor. When engine starts, release key and it will move automatically to the ON position. To shut engine off, rotate key counterclockwise to the OFF position.

**Throttle Control** (Fig. 27)—Throttle is used to operate engine at various speeds. Moving throttle forward increases engine speed—FAST; backward decreases engine speed—SLOW. The throttle regulates the speed of the cutter blades or other implement components and, in conjunction with traction pedal, controls ground speed of the traction unit.

**4 Wheel Drive Control** (Fig. 27)—Gently push lever forward to shift into 4 wheel drive or backwards to shift into 2 wheel drive. Always shift with traction pedal in neutral position. Make sure lever is all the way forward or backward.

**Electrical System Fuses** (Fig. 28)—An engine temperature reset relay fuse—SFE 14 amp—is lo-

ated at the rear of the reset relay. An inline fuse—AGC 10 amp—is also incorporated to protect the engine control module. Access to the fuses can be gained by removing the instrument panel cover.

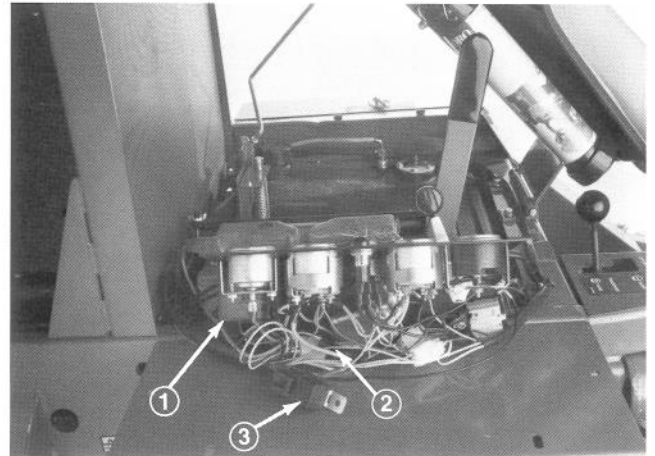


Figure 28

1. SFE 14 amp fuse—Engine temperature reset relay
2. Inline AGC 10 amp fuse—Engine control module
3. Engine start relay

A 40 amp circuit breaker is also incorporated to protect the entire wiring circuit. A reset button is located on the lower side of the panel, which can be reached after removal of the battery cover (Fig. 27, 29). The button should be depressed if a total loss of all electrical functions should occur. However, the electrical system should first be checked to ascertain the reason for the malfunction.

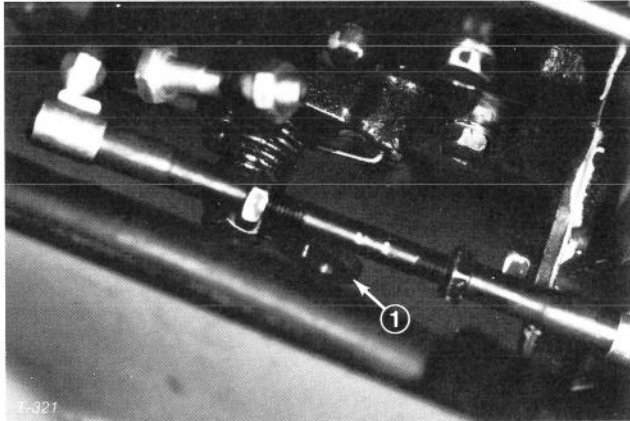


Figure 29

1. Circuit breaker reset button


# CONTROLS

**Engine Stop Lever** (Fig. 30)—Located on the lower right side of the engine inboard of the air cleaner assembly. Provided as a means to stop the fuel flow, thereby stopping the engine, if an electrical malfunction should occur. Use only for emergencies.



**Figure 30**  
1. Engine stop lever

**Seat Adjusting Lever** (Fig. 31)—To adjust standard seat, push lever backward and slide seat to the desired position. Release lever to lock seat in place. The suspension seat may be adjusted forward or rearward by pulling out the lever at the left side of the seat, sliding the seat to the desired position, and releasing the lever. The weight adjustment knob may be adjusted for any operator's comfort.

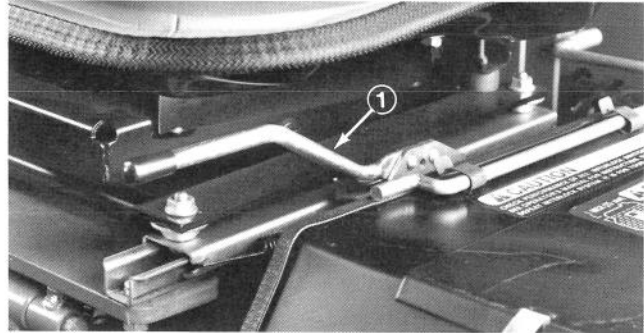

**Figure 31**  
1. Seat adjusting lever

## OPERATING INSTRUCTIONS

### STARTING/STOPPING ENGINE

**IMPORTANT:** The fuel system must be bled if any of the following situations have occurred:

- A. Initial start up of a new machine.
- B. Engine has ceased running due to lack of fuel.
- C. Maintenance has been performed upon fuel system components; i.e. filter replaced, separator serviced, and so on.

Refer to **Bleeding Fuel System**, page 23.

1. Ensure parking brake is set, PTO lever is in OFF position (Fig. 27), and lift lever is in TRANSPORT or FLOAT position (Fig. 26). Remove foot from traction pedal and insure it is in neutral.
2. Move throttle control (Fig. 27) to full FAST position.
3. Push glow plug switch to ON position and hold until indicator glows red. Continue to hold switch in position for suggested interval and turn key in key switch to START position. Release glow plug switch after engine starts and allow key to return to RUN position. Move throttle control to SLOW position.

**Note:** Refer to chart indicating approximate pre-heat time suggested in various temperature ranges.

**Note:** Do not exceed 1 minute of continuous use or glow plug may fail prematurely.

Temperature	Preheat time (sec)
above 41°F (5°C)	10
23°F to 41°F	20
below 23°F (-5°C)	30

**Note:** Do not run starter motor more than 10 seconds at a time or premature starter failure may result. If engine fails to start after 10 seconds, turn key to OFF position, recheck controls and procedures, wait 10 additional seconds and repeat starter procedure.

4. Turn key in key switch to START position (Fig. 27). Release key immediately when engine starts and allow it to return to RUN position. Move throttle control to SLOW position.
5. When engine is started for the first time, or after overhaul of the engine, transmission or axle, operate the machine in forward and reverse for one or two minutes. Also operate the lift lever and PTO lever to assure proper operation of all parts. Turn steering wheel to the left and right to check steering response. Then shut engine off and check for oil leaks, loose parts, and any other noticeable difficulties.

# OPERATING INSTRUCTIONS



## CAUTION

Shut engine off and wait for all moving parts to stop before checking for oil leaks, loose parts, or other difficulties.

6. To stop engine, move throttle control backward to SLOW position, move PTO lever to OFF position, and rotate ignition key to OFF. Remove key from switch to prevent accidental starting.

## BLEEDING FUEL SYSTEM

1. Unlatch and raise hood over engine.
2. Loosen air bleed screw on top of fuel filter/water separator (Fig. 32).

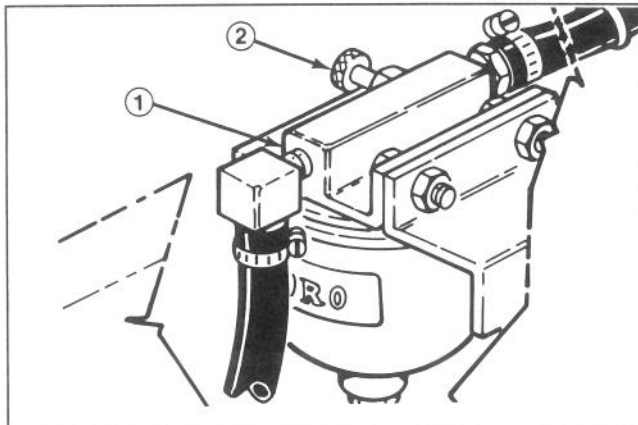


Figure 32

1. Fuel filter/water separator      2. Bleed screw

3. Turn key in ignition switch to the RUN position. Electric fuel pump will begin operation, thereby forcing air out around air bleed screw. Leave key in RUN position until solid stream of fuel flows out around screw. Tighten screw and turn key to OFF.

4. Open the air bleed screw on the fuel injection pump (Fig. 33) with a 12 mm wrench.

5. Turn key in ignition switch to the RUN position. Electric fuel pump will begin operation, thereby forcing air out around air bleed screw on fuel injection pump. Leave key in RUN position until solid stream of fuel flows out around the screw. Tighten screw and turn key to OFF.

**Note:** Normally, engine should start after above bleeding procedures are followed. However, if engine does not start, air may be trapped between injection pump and injectors; refer to Bleeding Air From Injectors, page 30.

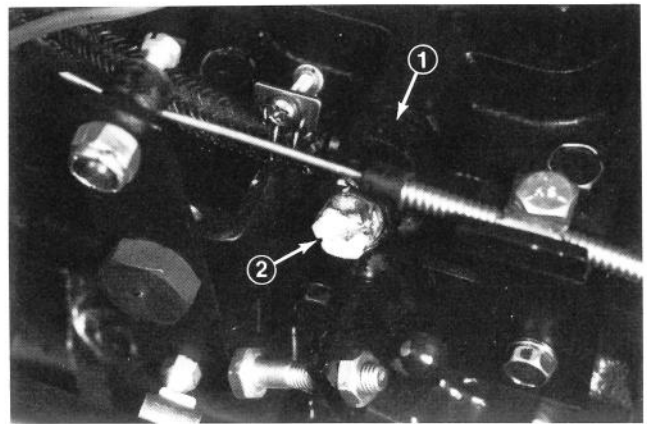


Figure 33

1. Fuel injection pump      2. Air bleed screw

## CHECKING INTERLOCK SWITCHES

The machine has interlock switches in the electrical system. These switches are designed to stop the engine when operator gets off the seat while either the PTO lever is engaged or traction pedal is depressed. However, operator may get off the seat while engine is running. Although engine will continue to run if PTO lever is disengaged and traction pedal is released, it is strongly recommended that the engine be stopped before dismounting from the seat.



## CAUTION

Do not disconnect the interlock switches. Check operation of switches daily to assure interlock system is operating correctly. If a switch is malfunctioning, replace it before operating the machine. To ensure maximum safety, replace all switches after every two years or 1000 hours, whichever comes first.

To check operation of interlock switches:

1. Drive the machine slowly to a large, relatively open area. Lower cutting unit, stop the engine and apply parking brake.

2. Sit on seat. Move PTO lever to ON position. With the traction pedal in neutral position, try to start the engine. The engine should not crank. If the engine cranks, there is a malfunction in the interlock system that should be corrected before beginning operation.

3. Sit on seat. Move PTO lever to OFF and depress the traction pedal. Try to start the engine. The engine should not crank. If the engine cranks, there is a malfunction in the interlock system that should be corrected before beginning operation.

# OPERATING INSTRUCTIONS



## WARNING

**Do not operate machine without implement unless the PTO driveshaft is also removed.**

4. Sit on seat and start the engine. Raise off the seat and move the PTO lever to ON. The engine should stop within 2-3 seconds. If the engine does not stop, there is a malfunction in the interlock system that should be corrected before beginning operation.

## PUSHING OR TOWING TRACTION UNIT

In an emergency, the traction unit can be pushed or towed for a very short distance. However, Toro does not recommend this as standard procedure.

**IMPORTANT: Do no push or tow the traction unit faster than 2 to 3 mph (3 to 4.8 km/hr) because transmission may be damaged. If traction unit must be moved a considerable distance, transport it on a truck or trailer. Whenever traction unit is pushed or towed, by-pass valve must be open.**

1. Reach under traction unit and rotate by-pass valve (Fig. 34) 1/2 to 1 turn counterclockwise. Opening the valve opens an internal passage in the transmission, thereby by-passing transmission oil. Because fluid is by-passed, traction unit can be moved without damaging the transmission.

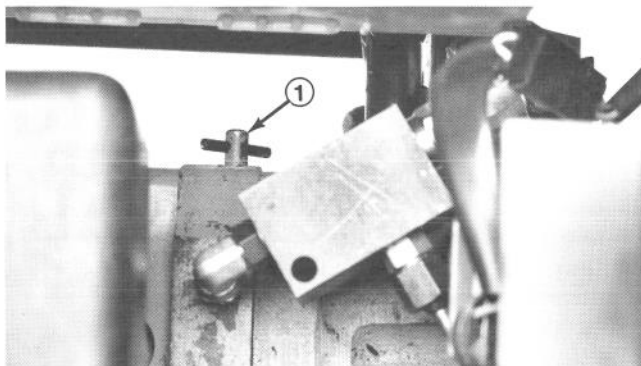


Figure 34

1. By-pass valve

2. Before starting engine, close by-pass valve by rotating it clockwise until it is securely seated. Do not exceed 5 to 8 ft-lb (7-11 N·m). Do not start engine when valve is open.

**IMPORTANT: Running the machine with by-pass valve open will cause the transmission to overheat.**

## OPERATING CHARACTERISTICS

Practice driving the GROUNDMASTER 322-D 4 Wheel Drive because it has a hydrostatic

transmission and its characteristics are different than many turf maintenance machines. Some points to consider when operating the traction unit, cutting unit, or other implement are the transmission, engine speed, load on the cutting blades or other implement components, and the importance of the brakes.

To maintain enough power for the traction unit and implement while operating, regulate traction pedal to keep engine rpm high and somewhat constant. A good rule to follow is: decrease ground speed as the load on the implement increases, and increase ground speed as the load decreases.

Therefore, allow traction pedal to move backward as engine rpm decrease, and depress pedal slowly as rpm increase. By comparison, when driving from one work area to another—with no load and cutting unit raised—have throttle in FAST position and depress traction pedal slowly but fully to attain maximum ground speed.

Another characteristic to consider is the operation of the turning pedals that are connected to the brakes. The brakes can be used to assist in turning the machine. However, use them carefully, especially on soft or wet grass because the turf may be torn accidentally. Another benefit of the turning brakes is to maintain traction. For example: in some slope conditions, the uphill wheel slips and loses traction. If this situation occurs, depress uphill turn pedal gradually and intermittently until the uphill wheel stops slipping, thus, increasing traction on the downhill wheel.

The grass deflector must always be installed and in lowest position on the side discharge cutting unit.



## WARNING

**This product is designed to drive objects into the ground where they lose energy quickly in grassy areas. However, when a person or pet appears suddenly in or near mowing area, STOP MOWING.**

**Careless operation, combined with terrain angle, ricochets, or improperly positioned safety guards can lead to thrown object injuries. Do not resume mowing until area is cleared.**

Use extra care when operating machine on slopes. Always use the seat belt and ROPS together and have seat pivot retaining pin installed. Drive slowly and avoid sharp turns on slopes to prevent roll overs. The cutting deck must be lowered when going downhill for steering control.



# OPERATING INSTRUCTIONS

**Note:** The machine is equipped with a relief valve to protect the drive train components from excessive pressure. When the machine is climbing a hill that is steep enough to open the relief valve, two things can occur. First, the traction wheels stop turning and a high pitched squealing noise may be heard. Second, if the operator continues trying to climb the hill, the relief valve will stay open and

the hydrostatic transmission will over heat.

Before stopping the engine, disengage all controls and move throttle to SLOW. Moving throttle to SLOW reduces high engine rpm, noise, and vibration. Turn key to OFF to stop engine.

**Note:** With the standard rear axle driveshaft, there is no 4 wheel drive when operating in reverse.

## LUBRICATION MAINTENANCE

### GREASING BEARINGS, BUSHINGS AND BRAKE CABLES

The traction unit must be lubricated regularly. If machine is operated under normal conditions, lubricate all bearings and bushings after every 50 hours of operation.

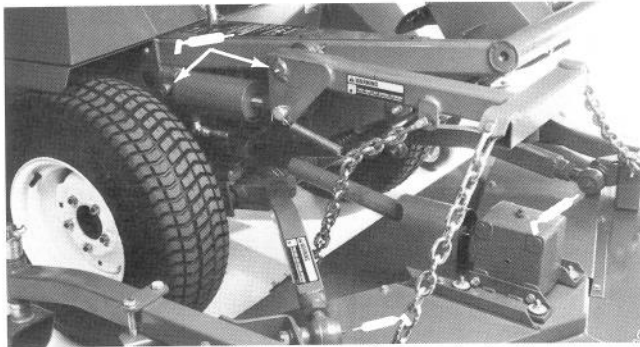


Figure 35

1. The traction unit bearings and bushings that must be lubricated are: PTO shaft and yokes (Fig. 35); lift arm pivots (Fig. 35); right and left push arm ball joints (Fig. 35); push arm pivot bushings (Fig. 36); PTO pivot housing blocks (Fig. 37); brake pivot bushings (Fig. 38); axle Tie Rod (2) (Fig. 39); axle pivot pin (Fig. 39); cylinder rod ends (2) (Fig. 39) drive shaft (3) (Fig. 40); clutch housing (Fig. 40) and engine output shaft bearing (Fig. 41). Also apply grease to both brake cables at the drive wheel and brake pedal ends.

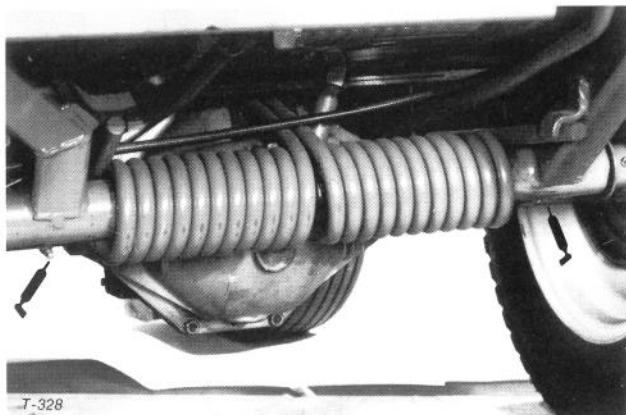


Figure 36



Figure 37

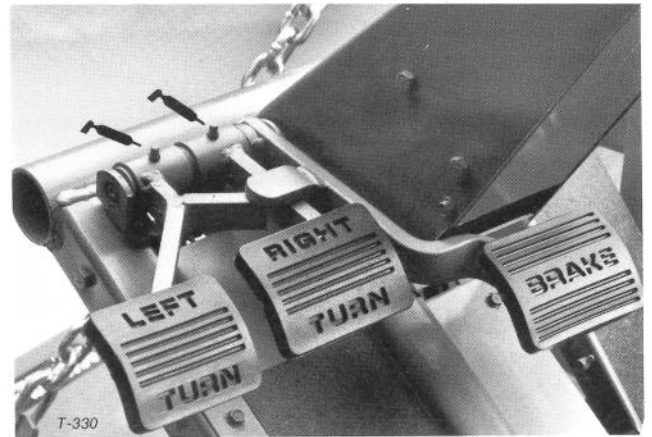


Figure 38

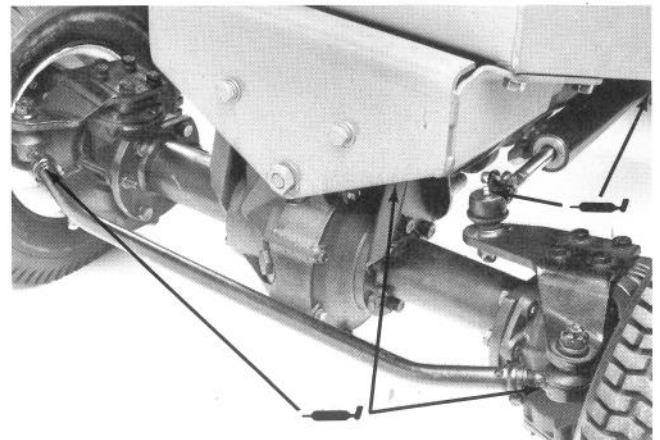


Figure 39

# LUBRICATION MAINTENANCE

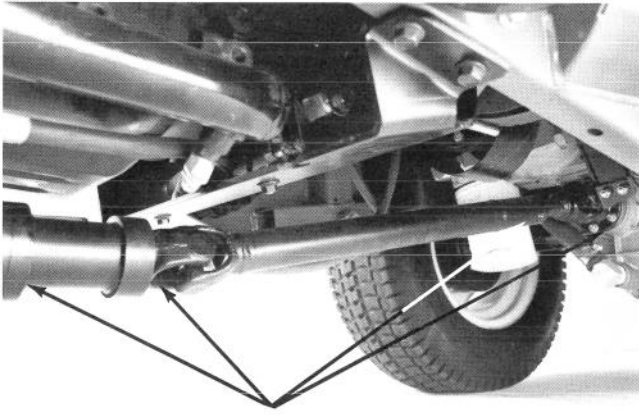


Figure 40

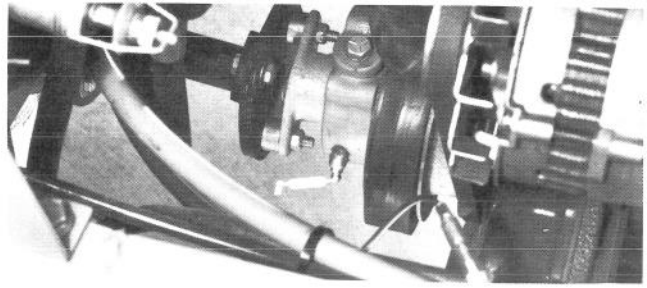


Figure 41

# ELECTRICAL MAINTENANCE

## REPLACING SEAT SWITCH

1. Raise seat and hold it up with seat support rod.
2. Remove instrument cover, disconnect negative battery cable from battery, and separate wire harness connectors (Fig. 42). Remove capscrew and locknut (Fig. 42) and lift switch up to disengage locating pin on bottom of switch from hole in mounting bracket.

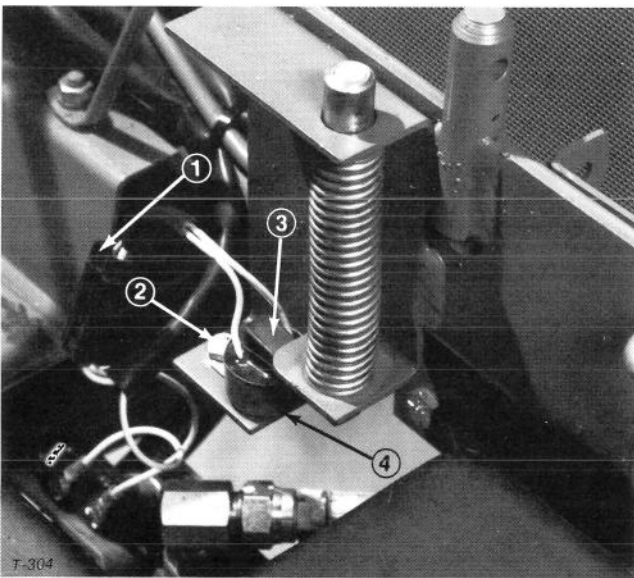


Figure 42

- |                         |                     |
|-------------------------|---------------------|
| 1. Connectors           | 3. Switch           |
| 2. Capscrew and locknut | 4. Mounting bracket |

3. To install new switch, set it on mounting bracket (Fig. 42) and assure locating pin on bottom of switch fits into hole in bracket. Secure switch in place with capscrew and locknut.

4. Liberally coat inside of connectors with Grafo 112X (skin-over) grease (Toro Part No. 505-47) and push wire harness connectors together.
5. Disengage support rod from seat and move seat to its normal position. Install lynch pin through the rod to hold seat in place and reconnect negative battery cable to battery.

## REPLACING PTO SWITCH

1. Disengage latches and remove instrument cover.
2. Disconnect negative battery cable from battery and separate wire harness connectors (Fig. 43).

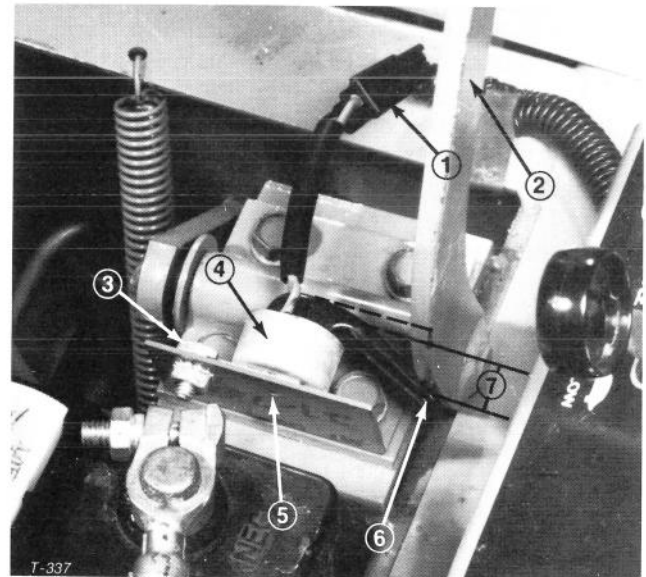


Figure 43

- |                         |                     |
|-------------------------|---------------------|
| 1. Connectors           | 5. Mounting bracket |
| 2. PTO lever            | 6. Switch arm       |
| 3. Capscrew and locknut | 7. 1/2 inch (13 mm) |
| 4. Switch               |                     |

# ELECTRICAL MAINTENANCE

3. Move PTO lever to the ON position and remove capscrew and locknut holding switch against mounting bracket (Fig. 43).
4. Install new switch with capscrew and locknut. Move PTO lever to OFF position. When lever is in its normal, released position, the switch arm must bend about 1/2 inch (13 mm) (Fig. 43). If switch arm does not bend 1/2 inch (13 mm), bend the mounting bracket to get the correct adjustment.
5. Liberally coat inside of connectors with Grafo 112X (skin-over) grease (Toro Part No. 505-47) push wire harness connectors together, and re-connect negative battery cable to battery.
6. Install instrument cover and lock the latches.

## SERVICING BATTERY

**IMPORTANT:** Before welding on the machine, disconnect ground cable from the battery to prevent damage to the electrical system.

**Note:** Check battery condition weekly or after every 50 hours of operation. Keep terminals and entire battery case clean because a dirty battery will discharge slowly. To clean the battery, wash the entire case with solution of baking soda and water. Rinse with clear water. Coat the battery posts and cable connectors with Grafo 112X (skin-over) grease (Toro Part No. 505-47) or petroleum jelly to prevent corrosion.

# AIR CLEANER MAINTENANCE

## GENERAL MAINTENANCE PRACTICES

Inspect air cleaner and hose periodically to maintain maximum engine protection and to ensure maximum service life.

1. Assure hose between air cleaner and carburetor is clamped securely in place. Replace the hose if it is cracked or punctured.
2. Check air cleaner body for dents and other damage which could possibly cause an air leak. Replace a damaged air cleaner body.
3. Be sure dust cap is sealing around bottom of air cleaner body.
4. Mounting screws and nuts holding air cleaner in place must be tight.
5. Inlet cap must be free of obstruction.

## SERVICING DUST CUP AND BAFFLE

Inspect the dust cup and rubber baffle once a week or every 50 hours operation. However, daily or more frequent inspection is required when operating conditions are extremely dusty and dirty. Never allow dust to build up closer than one inch (25 mm) from the rubber baffle.

**Note:** If conditions are extremely dusty and dirty, begin by checking dust cup and baffle after each day's operation to establish approximately how long an interval passes before dust cup should be emptied. Base further maintenance requirements on this figure. These conditions may be particularly prevalent if the rear discharge cutting unit is attached.

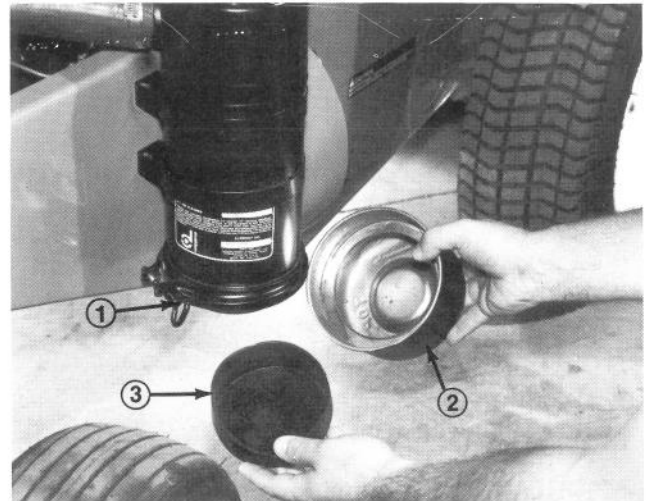


Figure 44

- |               |           |
|---------------|-----------|
| 1. Thumbscrew | 3. Baffle |
| 2. Dust cup   |           |

1. Loosen thumb screw until dust cup and baffle can be removed (Fig. 44). Separate dust cup and baffle (Fig. 44).
2. Dump dust out of the dust cup. After cleaning cup and baffle, assemble and reinstall both parts.

## SERVICING AIR CLEANER FILTER

Service the air cleaner filter every 250 hours or more frequently in extreme dusty or dirty conditions by washing or using compressed air. Replace the element after every six cleanings (1500 hours) or annually, whichever comes first.

1. Remove and service dust cup; refer to Servicing Dust Cup and Baffle, page 27.
2. Remove wing nut w/gasket and slide filter element out of air cleaner body (Fig. 45).



# ENGINE MAINTENANCE

## CHANGING CRANKCASE OIL AND FILTER

Check oil level after each day's operation or each time machine is used. Change oil after every 50 hours of operation; change oil filter after first 50 hours and every 100 hours operation thereafter. However, change oil more frequently when engine is operated in dusty or sandy conditions. If possible, run engine just before changing oil because warm oil flows better and carries more contaminants than cold oil.

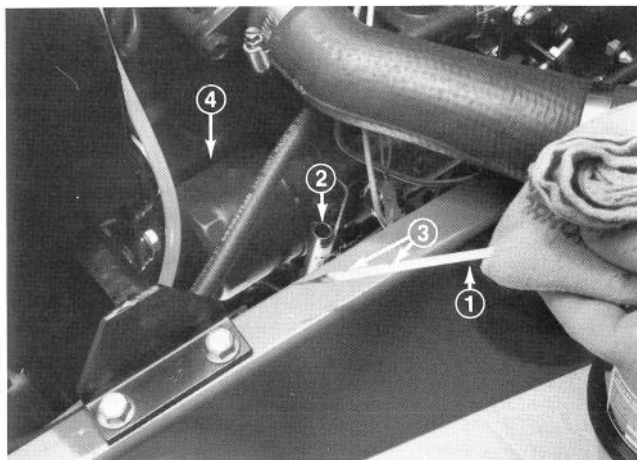


Figure 46

1. Dipstick
2. Dipstick tube
3. Keep oil level between notches
4. Engine oil filter

1. Position machine on a level surface.
2. Disengage hood latch and open the hood. Set drain pan under the housing and in line with drain plug (Fig. 47).

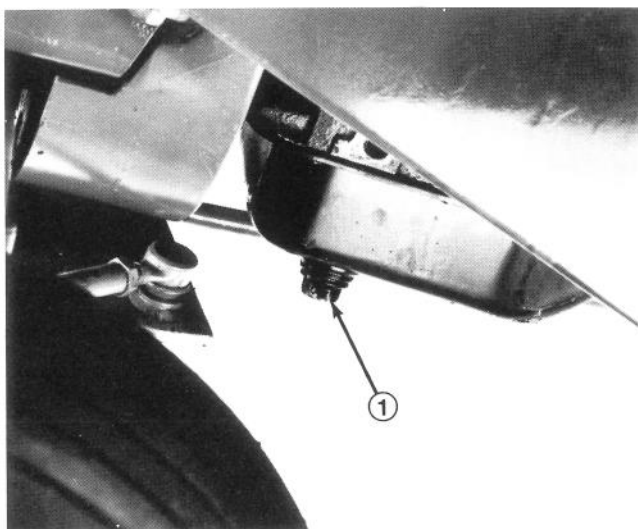


Figure 47

1. Oil drain plug

3. Clean area around drain plug.

4. Remove oil drain plug and allow oil to flow into drain pan. Remove and replace oil filter (Fig. 47); refer to parts catalog for part number.

5. After oil is drained, reinstall drain plug, and wipe up any oil that spilled.

6. Fill crankcase with oil; refer to Check Crankcase Oil, page 17.

## SERVICING FUEL SYSTEM

**Note:** Refer to Fill Fuel Tank With Diesel Fuel, page 17, for proper fuel recommendations.

### Fuel Tank

Drain and clean fuel tank every 400 hours of operation or yearly, whichever comes first. Also, drain and clean tank if fuel system becomes contaminated or if machine is to be stored for an extended period. Use clean fuel to flush out the tank.

### Fuel Lines and Connections

Check lines and connections every 400 hours or yearly, whichever comes first. Inspect for deterioration, damage, or loose connections.

### Fuel Filter/Water Separator

Drain water or other contaminants from fuel filter/water separator (Fig. 48) daily by loosening drain plug on filter canister. Tighten plug after draining. Replace filter canister after every 400 hours of operation.

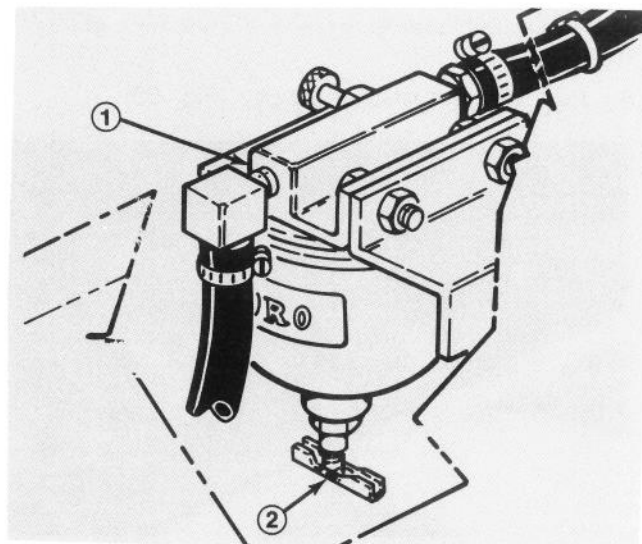


Figure 48

1. Fuel filter/water separator
  2. Drain plug
1. Clean area where filter canister mounts.
  2. Remove filter canister and clean mounting surface.
  3. Lubricate gasket on filter canister with engine oil.

# ENGINE MAINTENANCE

4. Install filter canister by hand until gasket contacts mounting surface, then an additional 1/2 turn.

## Fuel Pump Filter

Remove and replace the filter after every 400 hours of operation.

1. Fuel pump is located on inner frame bulkhead to left of drive coupling assembly (Fig. 49).

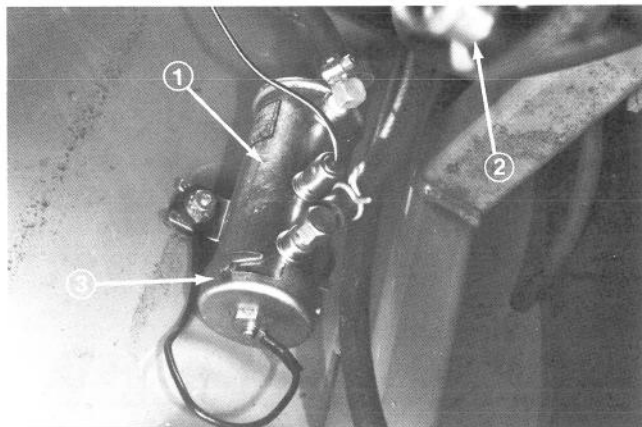


Figure 49

1. Fuel pump assembly      3. Fuel pump cover  
2. Drive coupling assembly

2. Thoroughly clean outside of assembly.  
3. Place a drain pan under fuel pump and remove cover from fuel pump with 17 mm wrench (Fig. 49). Take care not to damage wire while removing cover.  
4. Pull filter out of pump body (Fig. 50).

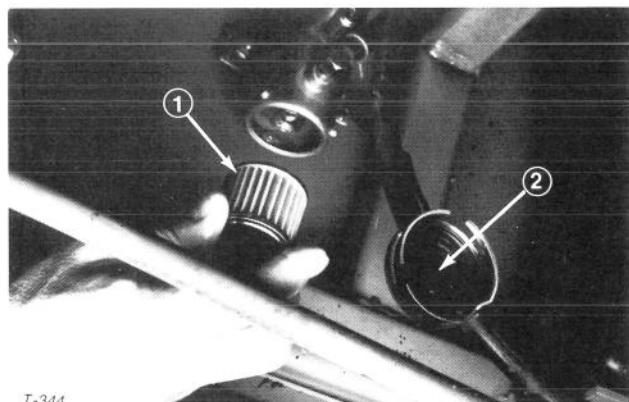


Figure 50

1. Filter      2. Magnet

5. If filter is to be cleaned, wash thoroughly in cleaning solvent and blow compressed air from inside toward outside of element. Hold air nozzle at least one inch (25 mm) from filter and move up and down while rotating filter. Do not exceed 100 psi (690 kPa) to avoid filter damage.

**Note:** Replace the filter if there is any visible dirt which cannot be washed out.

6. Clean magnet of any residue (Fig. 50), insert filter into body, and install cover (Fig. 49).

7. Inspect the two rubber gaskets. Replace them if damaged.

8. Bleed the fuel system; refer to Bleeding Fuel System, page 23.

## BLEEDING AIR FROM INJECTORS

**Note:** This procedure should be used only if fuel system has been purged of air through normal priming procedures and engine still will not start; refer to Bleeding Fuel System, page 23.

1. Loosen the pipe connection to the No. 1 nozzle and holder assembly.
2. Move throttle control to full FAST position.
3. Turn key in key switch to START position and watch fuel flow around connector. Turn key to OFF position when solid flow is observed.
4. Tighten pipe connector securely.
5. Repeat steps 1–4 on No. 2 and 3 nozzles.

## SERVICING ENGINE BELTS

Check tension of all belts initially after the first day of operation and every 100 hours thereafter.

### Alternator Belt

1. Unlatch and open hood.
2. Check tension by depressing belt midway between alternator and crankshaft pulleys. Belt should deflect 7/16 in. (11 mm). If deflection is incorrect, proceed to step 3. If correct, continue operation.
3. Loosen bolt securing brace to engine and bolt securing alternator to brace (Fig. 51).
4. Insert pry bar between alternator and engine and pry out on alternator (Fig. 51).
5. Hold alternator in position after proper belt tension setting is achieved and tighten alternator and brace bolts to secure adjustment.

**Note:** Metric wrenches will be required.

### Cooling Fan Belt

1. Unlatch and open hood.
2. Remove capscrews (5) securing fan belt guard and remove guard (Fig. 51).
3. Belt should deflect 1/4 in. (6 mm) midway between the pulleys with 5 lb force (22 n) (Fig. 52). If deflection is incorrect, proceed to step 4. If correct, proceed to step 5.

# ENGINE MAINTENANCE

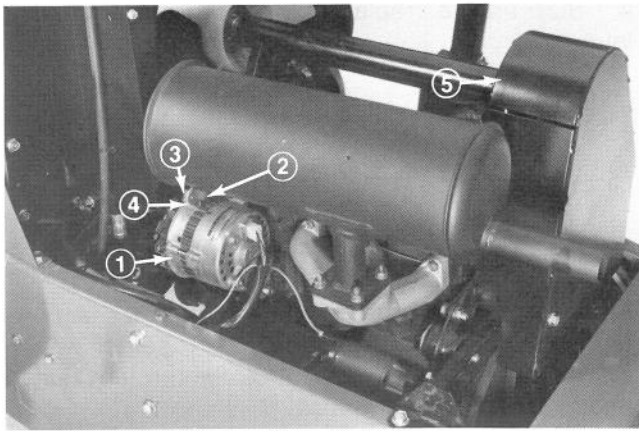


Figure 51

- |                          |                   |
|--------------------------|-------------------|
| 1. Alternator assembly   | 4. Brace          |
| 2. Engine brace bolt     | 5. Fan belt guard |
| 3. Alternator brace bolt |                   |

4. Loosen locknut securing idler pulley (Fig. 52). Push idler pulley against belt until proper deflection is achieved and tighten idler pulley locknut (Fig. 52).

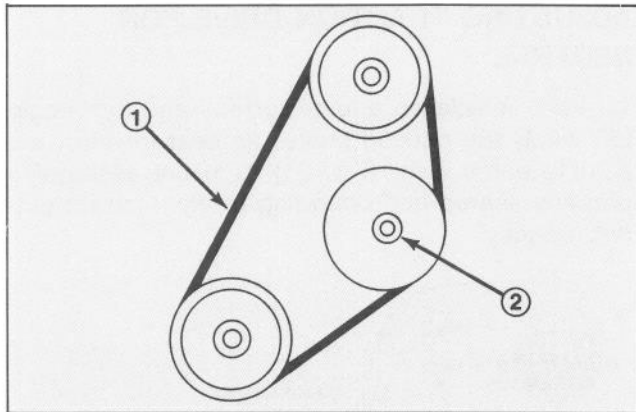


Figure 52

- |                              |                         |
|------------------------------|-------------------------|
| 1. 1/4 in. (6 mm) deflection | 2. Idler pulley locknut |
|------------------------------|-------------------------|

5. Install fan belt guard and secure with capscrews (Fig. 51). Close and latch hood.

To replace belt:

1. Follow procedures in step 1 and 2 above.
2. Loosen locknut securing idler pulley, slide pulley away from belt, and remove belt from top and bottom pulleys (Fig. 52).
3. Install new belt and adjust for proper tension. Push idler pulley against belt until belt deflects 1/4 inch (6 mm) with 5 lb force (22 N) midway between top and bottom pulley locknut to secure adjustments (Fig. 52).
4. Install fan belt guard and secure with capscrews (Fig. 51). Close and latch hood.

**Note:** Check fan belt tension after first day's operation. Readjust tension, if necessary. Follow regular maintenance check procedure thereafter.

## CHANGING COOLANT IN COOLING SYSTEM

The cooling system must be filled with a 50/50 solution of water and permanent ethylene glycol anti-freeze. Every two years, drain the coolant from the radiator and engine by opening the drain cock and block plug. After coolant is drained, flush the entire system and refill it with a 50/50 solution of water and anti-freeze. Capacity of cooling system is approximately 6 quarts (5.7 L). When filling the radiator, level of coolant must be above the core and 1 inch (25 mm) below bottom of filler neck. **DO NOT OVERFILL.** Always install radiator cap securely.

## SERVICING SPARK ARRESTOR MUFFLER

Every 250 hours operation, clear the muffler of carbon buildup.

1. Unlatch and raise hood assembly.
2. Remove pipe plug from clean-out port at lower side of muffler (Fig. 53).

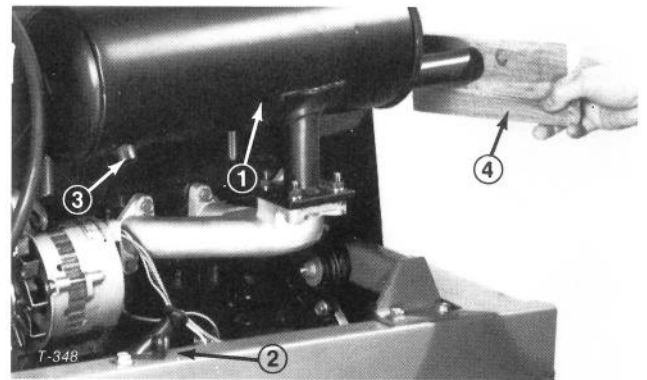


Figure 53

- |              |                                |
|--------------|--------------------------------|
| 1. Muffler   | 3. Outlet port                 |
| 2. Pipe plug | 4. Block normal exhaust outlet |



**CAUTION**

Be careful while working around muffler as it may be hot and could cause injury.

3. Start engine. Plug the normal muffler exit with block of wood or metal plate so exhaust flow will be forced out of the clean-out port (Fig. 53). Continue to block exit until carbon deposits cease coming out port.

# ENGINE MAINTENANCE



## CAUTION

Do not stand in line with the clean-out port. Always wear safety glasses.

4. Stop engine, replace pipe plug, and lower and latch hood.

## TRACTION DRIVE MAINTENANCE

### ADJUSTING TRACTION CONTROL ROD

1. Check traction drive neutral position to assure front wheels do not creep; refer to Adjusting Traction Drive for Neutral, page 32.
2. Depress traction pedal fully. There must be 1/16 inch (91.6 mm) between inside front edge of pedal and triangular support brace (Fig. 54). If distance is as specified, the control rod is adjusted correctly. If distance is not as specified, proceed to step 3 for an adjustment.
3. Loosen jam nut away from front of control rod (Fig. 54). Remove cotter pin and slotted nut retaining tapered socket in pivot mount on bottom of traction pedal (Fig. 54).

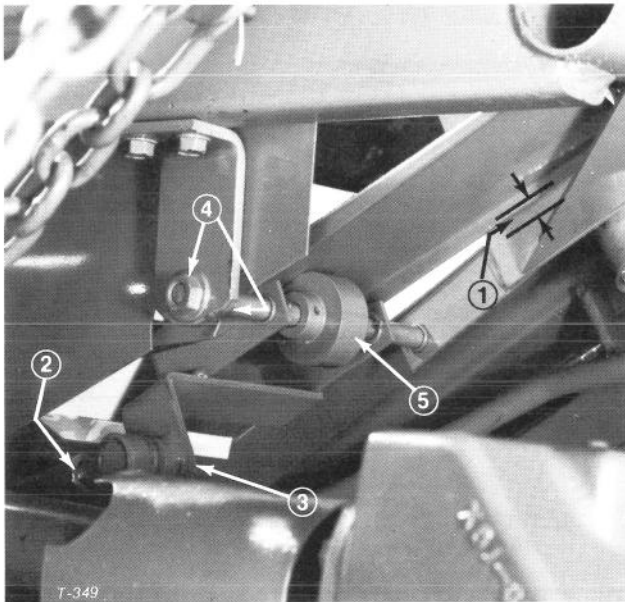


Figure 54

1. 1/16 in. (1.6 mm)
2. Jam nut
3. Cotter pin and slotted nut
4. Nuts
5. Friction wheel

4. Adjust tapered socket as required. Slide end of tapered socket through traction pedal pivot mount. Then depress pedal and check for 1/16 inch (1.6 mm) clearance between front edge of pedal and top of support brace. Adjust tapered socket until correct adjustment results.

5. After control rod is adjusted correctly, secure tapered socket and traction pedal together with slotted nut and cotter pin. Also tighten jam nut against front of control rod.

### ADJUSTING TRACTION PEDAL FRICTION WHEEL

1. Loosen two nuts securing traction pedal shaft on right side of pedal (Fig. 54).
2. Rotate shaft to relocate worn surface of friction wheel away from underside of traction pedal.
3. Tighten nuts to secure shaft and wheel in position.

### ADJUSTING TRACTION DRIVE FOR NEUTRAL

1. Park vehicle on a level surface and turn engine off. Apply the parking brake, tip seat forward, and actuate pump lever (Fig. 55) to insure assembly is properly seated and operating freely. Correct any discrepancy.

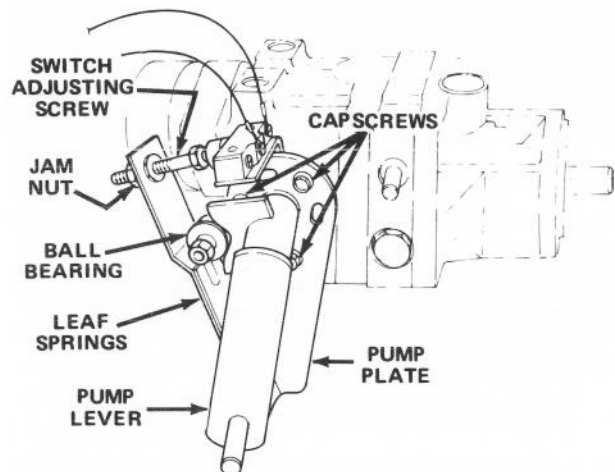


Figure 55

2. Block right front tire and both rear tires so vehicle cannot roll forward or backward.
3. Jack up frame so left front wheel is off the shop floor. Use a jack stand to support the frame.
4. Start engine and allow it to idle for 5 minutes to heat oil in transmission to operating temperature.



# TRACTION DRIVE MAINTENANCE

5. Release parking brake; then check left front wheel that is off shop floor. Wheel must not be rotating. If wheel is rotating, proceed to step 6 for an adjustment. If wheel is not rotating, proceed to step 8. Verify the adjustment with throttle in SLOW and FAST position.

6. Because the wheel is rotating, the pump plate must be adjusted. But before adjusting the pump plate, move throttle to SLOW. If wheel is rotating forward, loosen capscrews, and lightly tap bottom of pump plate counterclockwise (Fig. 55). By contrast, tap pump plate clockwise if wheel is rotating backward (Fig. 55). When wheel stops rotating, tighten capscrews holding pump plate against side of transmission. Verify the adjustment with throttle in SLOW and FAST position.

7. Should front wheel continue to rotate, check for the following:

- A. Ball bearing is loose or worn out (Fig. 55).
- B. Plunger on interlock switch is sticking.
- C. Loose or missing fasteners.
- D. Worn roll pin securing pump lever to transmission.
- E. Pump lever loose on control shaft.  
(Correct by applying Loc-tite 271 or 601 to shaft.)

- F. Weak or damaged leaf springs (Fig. 55). Replace.
- G. Internal transmission component malfunction. Contact your local Toro distributor for assistance.

8. Shut engine off.

9. Adjust traction control rod; refer to Adjusting Traction Control Rod, page 32.

## ADJUSTING TRACTION INTERLOCK SWITCH

1. Adjust transmission for neutral; refer to Adjusting Traction Drive for Neutral, page 32.
2. Actuate the pump lever (Fig. 55) to insure all parts are operating freely and seated properly.
3. Loosen jam nut. Rotate switch adjusting screw (Fig. 55) until there is a gap between head of screw and switch button.
4. Rotate adjusting screw until it contacts the switch button. Continue to rotate the screw until the circuit is completed (switch "clicks"). After the switch clicks, rotate the adjusting screw an additional 1/2 turn. Tighten jam nut.

# PTO DRIVE MAINTENANCE

## CORRECTING PTO DRIVE BELT SLIPPAGE

If belt begins to slip because it has stretched or because of worn linkage:

1. Unlatch and remove instrument cover.
2. Move PTO control lever to ON position.
3. Measure length of PTO spring between flat-washers (Fig. 56). There should be a spring length of 3-3/16 inches (81 mm).
4. To adjust, hold head of adjusting screw with wrench (under PTO actuating arm) and turn locknut (Fig. 56).
5. Move PTO lever to OFF position and install instrument cover.

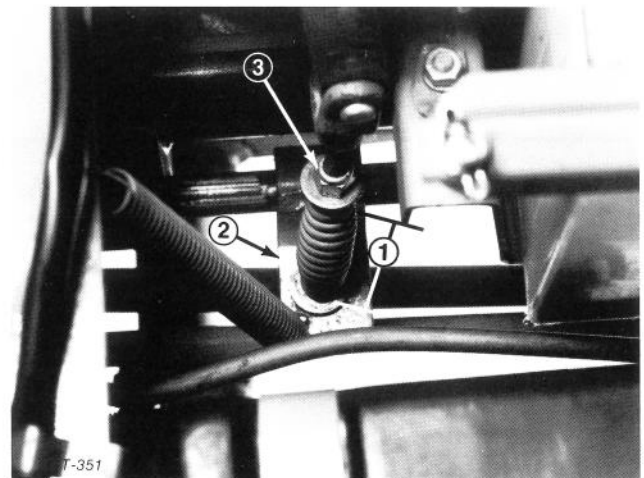


Figure 56

- 1. 3-3/16 in. (81 mm)
- 2. PTO actuating arm
- 3. Locknut

# STEERING MAINTENANCE

## ADJUSTING REAR WHEEL TOE-IN

The rear wheels should not toe-in or toe-out when they are adjusted correctly. To check the rear wheel toe-in, measure the center-to-center distance at wheel hub height, in front and in back of the rear tires. If the wheels toe-in or toe-out, an adjustment is required.

1. Rotate the steering wheel so rear wheels are straight ahead.
2. Remove cotter pin and nut securing one tie rod ball joint to mounting bracket on axle and disconnect ball joint from axle (Fig. 57).
3. Loosen screw on tie rod clamp (Fig. 57). Rotate ball joint in or out to adjust length of tie rod.

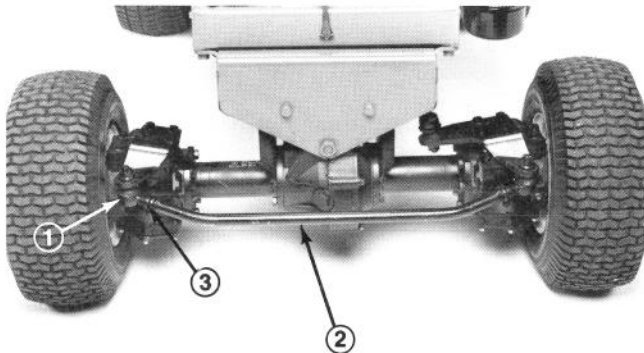


Figure 57

1. Ball Joint
2. Tie Rod
3. Tie Rod Clamp

4. Reinstall ball joint to mounting bracket and check wheel toe-in.

5. After attaining desired adjustment, tighten screw on tie rod clamp and resecure ball joint to mounting bracket.

## ADJUSTING STEERING STOPS

The rear axle steering stops help prevent over travel of the steering cylinder in case of impact on rear wheels. The stops should be adjusted so there is .090" clearance between bolt head and knuckle on axle when steering wheel is completely turned left or right.

1. Thread bolt in or out until .090" clearance is attained (Fig. 58).

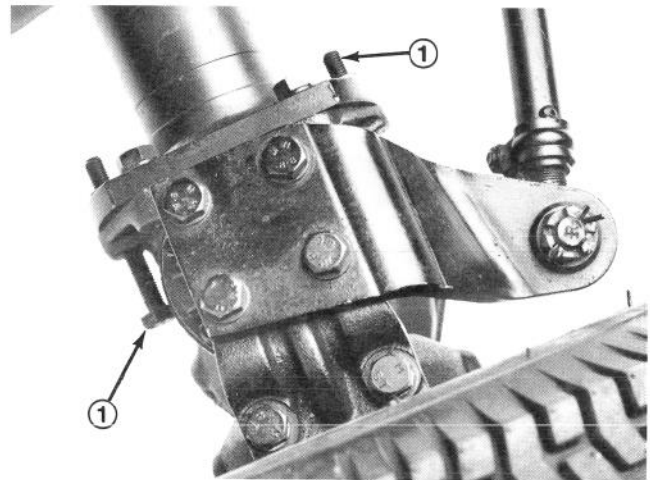


Figure 58

1. Steering Stops

# BRAKE MAINTENANCE



## WARNING

THE ASBESTOS BRAKE LININGS CONTAIN ASBESTOS FIBERS. BREATHING ASBESTOS DUST MAY BE HAZARDOUS TO YOUR HEALTH AND MAY CAUSE SERIOUS RESPIRATORY OR OTHER BODILY HARM.

Avoid creating dust. Do not remove brake drum, work on brake linings, replace brake linings or attempt to sand, grind, chisel, file, hammer, or alter brake linings in any manner without PROPER PROTECTIVE EQUIPMENT.

## ADJUSTING BRAKES

Adjust the service brakes when there is more than one inch (25 mm) of "free travel" of the turn ped-


als, or when the brakes do not work effectively. Free travel is the distance the brake pedal moves before braking resistance is felt.

The brakes should only need adjusting after considerable use. These periodic adjustments can be performed where the brake cables connect to the brake pedal mount. When the cables are no longer adjustable, the star nut on the inside of the brake drum must be adjusted to move the brake shoes outward. However, the brake cables must be adjusted again to compensate for this adjustment.

1. To reduce free travel of turn pedals—tighten the brakes—loosen front nut on threaded end of brake cable (Fig. 59). Then tighten rear nut to move cable backward until turn pedals have 1/2 to 1 inch (13 to 25 mm) of free travel. Tighten front nut after brakes are adjusted correctly.

# BRAKE MAINTENANCE

2. When adjustment of brake cable cannot get free travel within 1/2 to 1 inch (13 to 25 mm), the star nut inside the brake drum must be adjusted. However, before adjusting the star nut, loosen brake cable nuts to prevent unnecessary strain on the cables.

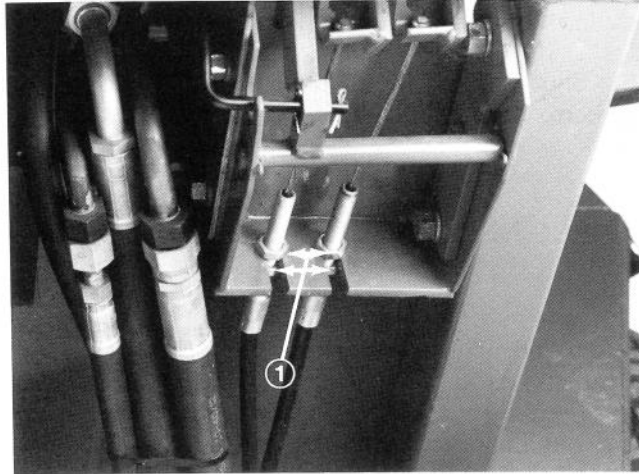

**Figure 59**  
1. Jam nut

9. Remove jack stands or blocking and lower machine to the shop floor.

10. Adjust the brake cables using step 1.



T-354

**Figure 60**  
1. Slot

3. Loosen five wheel nuts holding wheel and tire assembly on wheel studs.


4. Jack up machine until front wheel is off the shop floor. Use jack stands or block the machine to prevent it from falling accidentally.

5. Remove wheel nuts and slide wheel and tire assembly off studs. Rotate brake drum until adjusting slot is at bottom and centered over star nut that adjusts brake shoes (Fig. 60).

6. Using a brake adjusting tool or screwdriver, rotate star nut (Fig. 60) down until brake drum (Fig. 61) locks because of outward pressure of brake shoes (Fig. 61).

7. Loosen star nut about 12 to 15 notches or until brake drum rotates freely.

8. Install wheel and tire assembly on studs with five wheel nuts. Tighten nuts to 45–55 ft-lb (61–75 N·m).

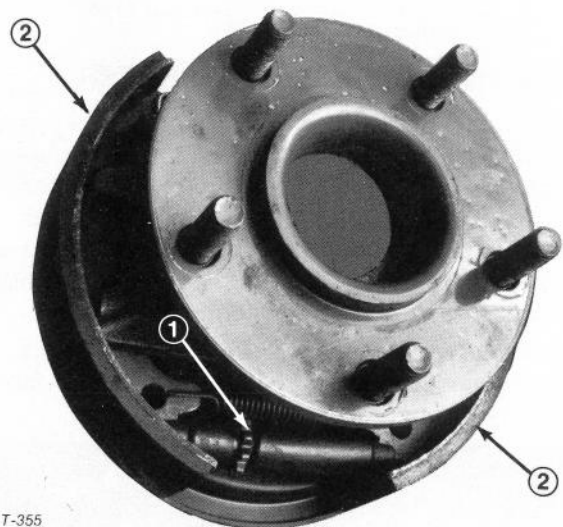

T-355

**Figure 61**  
1. Star nut      2. Brake shoes

# HYDRAULIC SYSTEM MAINTENANCE

## ADJUSTING LIFT LEVER LATCH

A lift lever latch that is positioned incorrectly can cause the lift lever to hold the spool in an actuated position when the implement is in the FLOAT position. This causes oil in the hydraulic system to overheat. When lift lever latch is adjusted cor-

rectly, the lift lever should just clear the rounded part of the latch as lever is moved into FLOAT position.

1. Unscrew ball from lift lever.

2. Remove self tapping screws and lift cover off lift lever to expose the latch.

# HYDRAULIC SYSTEM MAINTENANCE

- Loosen two capscrews on top of the lift lever latch (Fig. 62). Place lever on rounded tip of latch (Fig. 62), and slide latch w/lever forward until stopping resistance is felt. Then tighten capscrews to lock the latch in place. Check for free operation of the lift lever by moving lever from RAISE or TRANSPORT to FLOAT position. Lift lever should just clear rounded position of latch as lever is moved into FLOAT position.
- Slide cover into place and install it with self tapping screws. Screw ball onto lift lever.

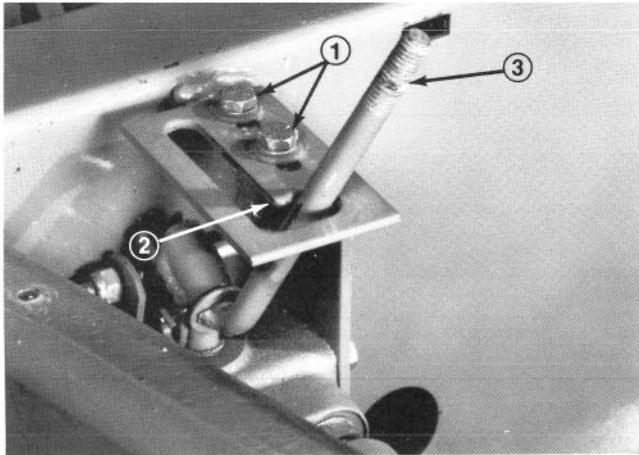


Figure 62

- Capscrews
- Rounded tab
- Lift lever

## REPLACING HYDRAULIC OIL FILTER

The hydraulic oil filter keeps the hydraulic system relatively free of contaminants and must be serviced at regular intervals. **Initially, change filter after first ten hours of engine operation, and thereafter, after every 125 hours of operation or yearly, whichever comes first.** Use TORO oil filter, Part No. 67-8110, as a replacement.

- Clean area where hydraulic oil filter mounts. Remove filter from base (Fig. 63) and clean filter mounting surface.

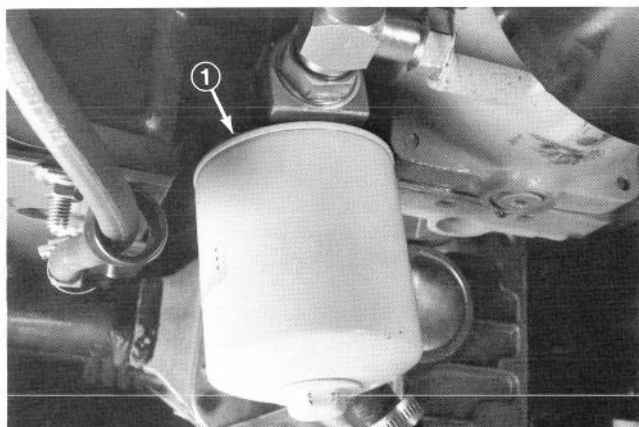


Figure 63

- Hydraulic oil filter

- Lubricate filter gasket with proper viscosity and type oil. Then fill filter using the same oil.
- Install filter by hand until gasket contacts mounting head. Then rotate an additional 1/2 turn.
- Start engine and check for hydraulic oil leaks. Allow engine to run for about two minutes so any air in the system is purged (removed).
- Shut engine off and check level of hydraulic system; refer to Check Hydraulic System Oil, page 18.

## CHANGING HYDRAULIC SYSTEM OIL

The hydraulic system oil must be changed after every 250 hours of operation or seasonally, whichever comes first. The hydraulic system is designed to operate on any high quality detergent oil having the American Petroleum Institute—APO—“service classification” SF/CC or CD. Oil viscosity—weight—must be selected according to anticipated ambient temperature for the season in which product will be used.

Temperature/viscosity recommendations are:

Expected Ambient Temperature	Recommended Viscosity and Type
(Extreme) over 90 F	SAE 30, Type SF/CC or CD engine oil.
(Normal) 40-100 F	SAE 10W-30 or 10W-40, Type SF/CC or CD engine oil.
(Cool—Spring/Fall) 30-50 F	SAE 5W-30, Type SF/CC or CD engine oil.
(Winter) Below 30 F	Type “F” or “FA” ATF Automatic Transmission Fluid.


**Note:** Do not mix engine oil and automatic transmission fluid or hydraulic system component damage may result. When changing fluids, also change transmission filter. **DO NOT USE DEXRON II ATF.**

**Note:** Fluid to operate the power steering is supplied by the hydraulic system transmission charge pump. Cold weather start-up may result in “stiff” operation of the steering until the hydraulic system has warmed up. Using proper weight hydraulic oil in system minimizes this condition.

# HYDRAULIC SYSTEM MAINTENANCE


The axle housing acts as the reservoir for the system. The transmission and axle housing are shipped from the factory with approximately 5 quarts (4.7 L) of SAE 10W-30 engine oil. However, check level of transmission oil before engine is first started and daily thereafter.

1. Start engine, park machine on a level surface, lower implement to the shop floor, set the parking brake, and shut engine off. Block the two rear wheels.
2. Jack up both sides of front axle and support it with jack stands.
3. Clean area around hydraulic oil filter and remove filter.
4. Remove drain plug from fitting between axle housing and oil filter and allow oil to flow into drain pan (Fig. 64).

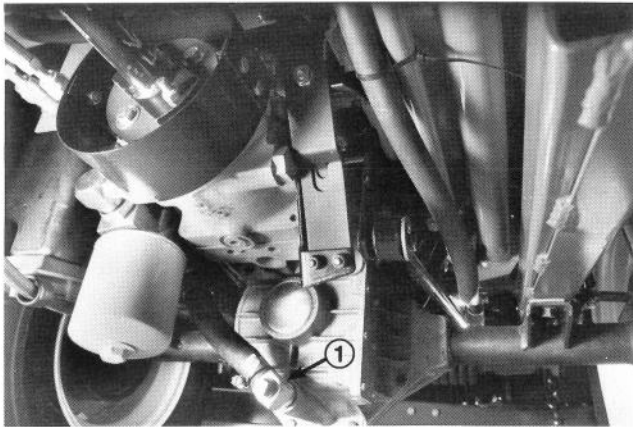

**Figure 64**  
1. Drain plug

5. Install new filter; refer to steps 1-2 in Replacing Hydraulic Oil Filter, page 36, for proper procedures.
6. Install drain plug in fitting between axle housing and oil filter (Fig. 64).
7. Remove dipstick from axle filler tube (Fig. 65) and fill axle to proper level with correct type and viscosity oil recommended for expected ambient temperature conditions; refer to table above.
8. Start and run the engine at idle speed for about two minutes and turn the steering wheel lock to lock to purge air trapped in the system. Shut the engine off.
9. Leave machine set for two additional minutes, then remove dipstick and check oil level in axle (Fig. 65). If level is low, add oil until level matches groove in dipstick (Fig. 65). If level is too high, remove drain plug (Fig. 64) and drain oil until oil level matches groove in dipstick.

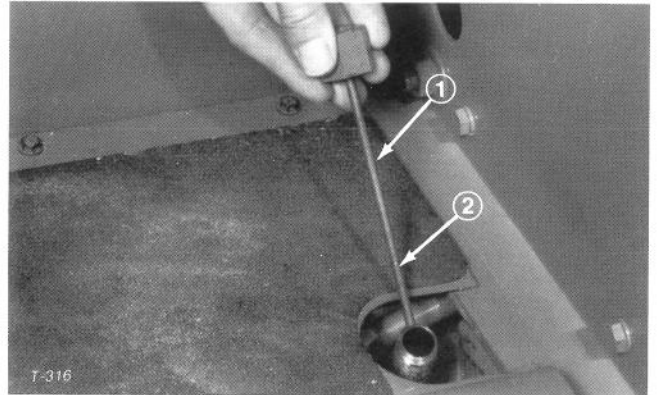


**Figure 65**  
1. Dipstick      2. Groove

## REAR AXLE MAINTENANCE

### CHANGING REAR AXLE LUBRICANT

After every 500 hours of operation the oil in the rear axle must be changed.

1. Position machine on a level surface.
2. Clean area around the (3) drain plugs, (1) on each end and (1) in the center (Fig. 66).
3. Remove plugs allowing oil to drain into drain pans.
4. After oil is drained, apply thread locking compound on drain plug threads and reinstall in axle.
5. Fill axle with lubricant; refer to Check Rear Axle, page 19.

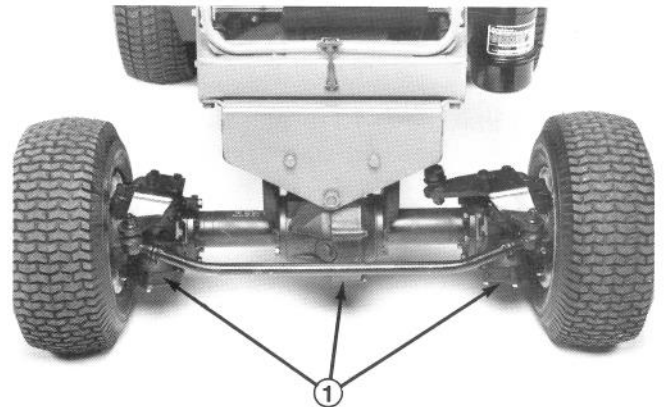

**Figure 66**  
1. Drain Plugs

# IDENTIFICATION AND ORDERING

## MODEL AND SERIAL NUMBERS

The Groundsmaster 322-D 4 Wheel Drive has two identification numbers: a model number and a serial number. These numbers are stamped into a plate located on front bulkhead left of seat (Fig. 67). In any correspondence concerning the unit, supply the model and serial numbers to ensure correct information and replacement parts are obtained.

To order replacement parts from an authorized TORO Distributor, supply the following information:

1. Model and serial numbers.
2. Part number, description, and quantity of parts desired.

**Note:** Do not order by reference number if a parts catalog is being used; use the part number.

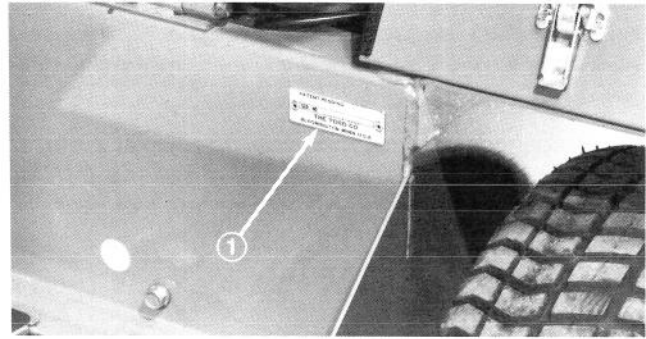


Figure 67

1. Traction unit model and serial number

## PREPARATION FOR SEASONAL STORAGE

### Traction Unit

1. Thoroughly clean the traction unit, cutting unit and the engine, paying special attention to these areas:
  - radiator screen
  - underneath the cutting unit
  - under the cutting unit belt covers
  - counterbalance springs
  - P.T.O Shaft Assembly
  - all grease fittings and pivot points
2. Check the tire pressure. Inflate all traction unit tires to 12 psi (83 kPa).
3. Remove, sharpen, and balance the cutting unit's blades. Reinstall the blades and torque the blade fasteners to specifications.
4. Check all fasteners for looseness; tighten as necessary.
5. Grease or oil all grease fittings and pivot points. Wipe up any excess lubricant.
6. Ensure that the P.T.O. belt remains in the disengaged position so that the P.T.O. belt does not take a "set."
7. Lightly sand and use touch-up paint on painted areas that are scratched, chipped, or rusted. Repair any dents in the metal body.
8. Service the battery and cables as follows:
  - a. Remove the battery terminals from the battery posts.
  - b. Clean the battery, terminals, and posts with a wire brush and baking soda solution.

- c. Coat the cable terminals and battery posts with Grafo 112X skin-over grease (Toro Part No. 505-47) or petroleum jelly to prevent corrosion.
- d. Slowly recharge the battery every 60 days for 24 hours to prevent lead sulfation of the battery.

### Engine

1. Drain the engine oil from the oil pan and replace the drain plug.
2. Remove and discard the oil filter. Install a new oil filter.
3. Refill oil pan with 3.7 quarts (3.5 L) of SAE 10W-30 motor oil. Use API classification SF/CC or CD oil.
4. Start the engine and run at idle speed for approximately two minutes.
5. Stop the engine.
6. Thoroughly drain all fuel from the fuel tank, lines, fuel pump filter, and the fuel filter/water separator assembly.
7. Flush the fuel tank with fresh, clean diesel fuel.
8. Resecure all fuel system fittings.
9. Thoroughly clean and service the air cleaner assembly.
10. Seal the air cleaner inlet and the exhaust outlet with weatherproof tape.
11. Check anti-freeze protection and add as needed for expected minimum temperature in your area.

# SERVICE INTERVAL CHART

Date								
Hour Meter Reading								
Service Interval	↓	DAILY	10	50	100	150	200	250
Check Interlock System	Daily							
Check Engine Oil Level	Daily							
Check Transmission Oil Level	Daily							
Check Radiator and Coolant (more often when conditions are dirty)	Daily							
Drain Fuel Filter/Water Separator	Daily							
Replace Hydraulic Oil Filter (Initial)	10							
Tighten Front Wheel Nuts (Initial)	2 & 10							
Change Engine Oil Filter (Initial)	50							
Change Engine Oil (more often when conditions are dirty)	50							
Check Traction Linkage Adj.	50							
Check Brakes and Lubricate Cables	50							
Check Tire Pressure (12 psi - 83 kPa)	50							
Lubricate Grease Fittings	50							
Service Air Cleaner (Dust Cup & Baffle) (more often when conditions are dirty)	50							
Check Battery	50							
Check PTO Drive Belt	50							
Check Rear Axle Lubricant	50							
Change Engine Oil Filter (more often when conditions are dirty)	100							
Check Engine Fan Belt and Alternator	100							
Change Transmission Filter	125							
Clean Muffler of Carbon	250							
Tighten Front Wheel Nuts	250							
Service Air Cleaner (Filter)	250							
Change Transmission Oil and Filter	250							
Check Rear Wheel Toe-In	250							
Replace Fuel Filter	400							
Replace Fuel Pump Filter	400							
Check Fuel Lines and Connections	400							
Drain and Clean Fuel Tank	400							
Pack Rear Wheel Bearings	500							
Change Rear Axle Lubricant	500							
Replace all Interlock Switches (2 years)	1000							
Drain and Flush Cooling System (2 years)	1000							

# The Toro Promise

## A LIMITED WARRANTY

*The Toro Company promises to repair your Model 30795 TORO GROUNDMASTER® MOWER, and its originally purchased cutting unit, if defective in materials or workmanship. The following time periods from the date of purchase apply:*

**Model 30795 . . . . . Two Years or 1500 operational hours,  
whichever comes first.**

*The costs of parts, labor and transportation are included.*

If you feel your TORO product is defective and wish to rely on The Toro Promise, the following procedure is recommended.

1. Contact your Authorized TORO Distributor or Commercial Dealer (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO Distributor or Commercial Dealer will advise you on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor or Commercial Dealer will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without an extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write:

TORO Commercial Products Service Department  
8111 Lyndale Avenue South  
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Distributor or Commercial Dealer is the purchaser's sole remedy for any defect.

**THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.**

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper condition is the responsibility of the owner.

All warranty repairs reimbursable under the Toro Promise must be performed by an Authorized TORO Commercial Dealer or Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor or Commercial Dealer are not reimbursable under the Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty. This warranty shall be declared void if the owner removes, disconnects, or in any way alters the operation of the products hour meter.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.